




AD Series Accessory Mounting Kit Asembly/Installation Instructions

The following page(s) cover the installation of various Rail Adapter Kits used on the new ASCO AD Series Shelving Kits.

RKFSVLHD "Rail Sys, AD Series, Left Hand Door"
RKFSVLWB "Rail Sys, AD Series, Long Wheel Base"
RKFSVXLWB "Rail Sys, AD Series, Xtra-Long Wheel Base"

RKABRK2 "Adapter, Rail Kit, Brkts, Dbl"

W/U: 17A "Catalog File, 6-Shelf"

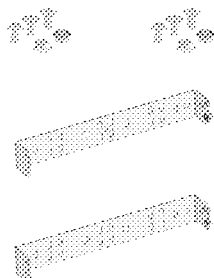


BEFORE YOU START!

ALL FASTENERS USED IN THE ASSEMBLY AND INSTALLATION OF THIS PRODUCT SHOULD BE TIGHTENED TO THE SPECIFIED TORQUE. THE USE OF NON-STANDARD FASTENERS AND/OR DEVIATING FROM THE FASTENERS SPECIFIED IN THE INSTRUCTION (S) MAY VOID YOUR PRODUCT WARRANTY!


YOU WILL NEED THE FOLLOWING TOOLS IN ORDER TO COMPLETE THIS JOB.

7/16" End Wrench, Ratchet w/7/16" Socket, Torque Wrench

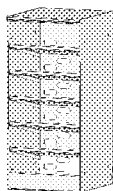

17A

Attach both End Panel Mounting Weldments (BKABRK2) to the 17A with fasteners supplied with the kit. Note, the upper weldment will use existing holes, while the lower weldment will require marking and drilling (2) 9/32" dia. thru mounting holes in the side wall of the unit. Then attach assembly to the AD Shelf End Panel in desired location. See photo's below for details on mounting weldments to shelf end panel.

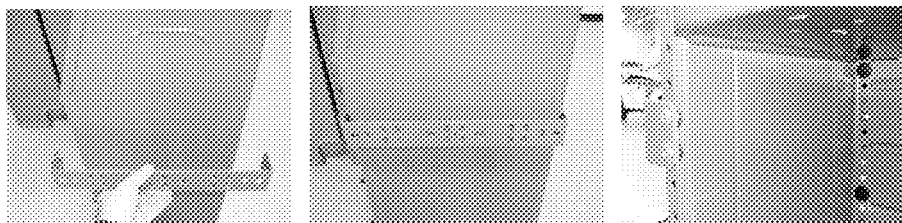

YOUR INSTALLATION IS NOW COMPLETE! STOW THIS COPY IN THE VEHICLE FOR FUTURE REFERENCE!