

**ADRIAN STEEL®**

Cargo Management Solutions for Commercial Vehicles

SWIVEL HOOK BAR, 2

PRODUCT WEIGHT

1.80 LBS

WIDTH X DEPTH X HEIGHT

10" X 6" X 3"


CAPACITY

15 LBS

COLOR

GRAY

CATALOG NUMBER

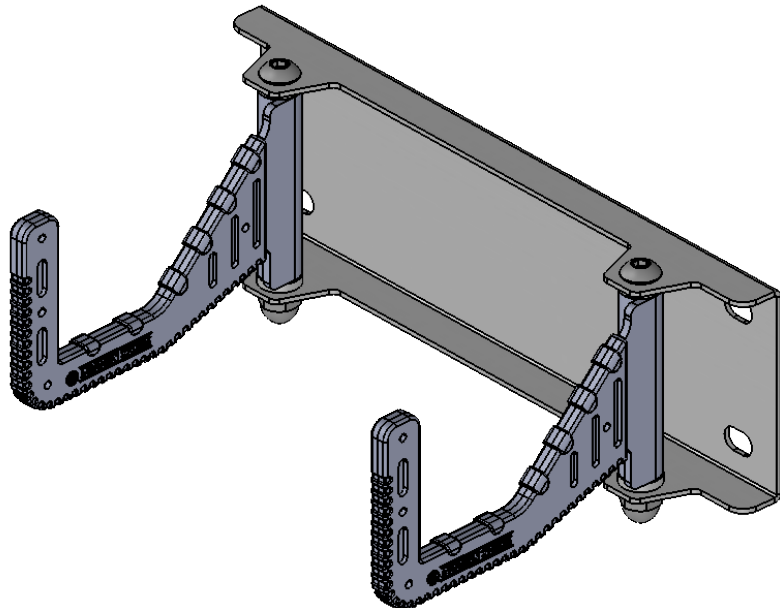SHB2

PRODUCT FEATURES

This sturdy 2-hook system attaches to any end panels with the next generation shelving for reliable storage in any vehicle. Designed for versatility, it keeps tools, gear, and essentials within easy reach. When not being used hooks can swing inside bracket to keep system compact. Simple to install and built to last, it's a practical solution for keeping items organized on the road.


INSTR.
NUMBER : **INSSHB2**

PG: **1** REV: **A**

PART
NUMBER : **SHB2**

PART :
DESC. : SWIVEL HOOK BAR, 2, BLK

**NOTE: THIS INSTRUCTION IS
VALID FOR THE FOLLOWING
KITS:
- SHB2**

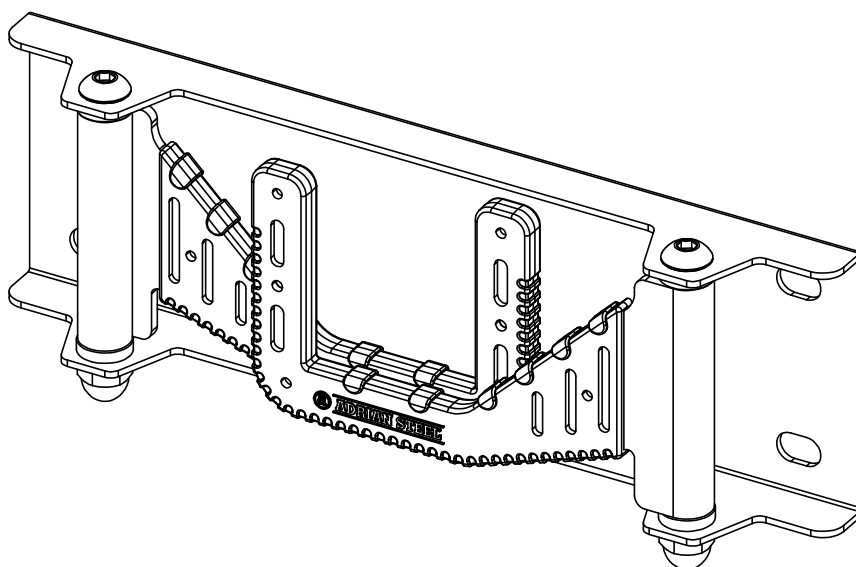

TOOLS NEEDED:

- 1/2 IN SOCKET OR WRENCH
- WHITE OR LIGHT COLORED MARKER

GET TO KNOW THE VEHICLE - AT THE BEGINNING OF ANY INSTALLATION, CHECK THE LOCATION OF THE FUEL TANK, FUEL LINES, BRAKE LINES, HIGH VOLTAGE BATTERIES AND WIRING HARNESSES TO AVOID INJURY OR PROPERTY DAMAGE FROM TOOL CONTACT.

SEAL ALL EXTERIOR HOLES - ALL INSTALLATION HOLES SHOULD BE SEALED WITH BUTYL TAPE OR SILICON TO PREVENT WATER AND EXHAUST GASES FROM ENTERING THE VEHICLE.

CONTROL DRILL DEPTH - TO AVOID DAMAGE TO THE VEHICLE, USE A DRILL STOP OR CLEARED STEP BIT WHEN DRILLING INSTALLATION HOLES.

ALWAYS ADD PRIMER - WHEN ADDING INSTALLATION HOLES BE SURE TO USE A SELF-ETCHING PRIMER TO PREVENT CORROSION, FASTENER FAILURE AND INJURY.

MOUNTING POINTS MUST HAVE METAL-TO-METAL CONTACT - USE PROVIDED MOUNTING SPACERS TO ACCOMMODATE FOR VEHICLE FEATURES, CARPET OR SUBFLOORS.

PROVIDE CLEARANCE FOR SPACERS - IF THE INSTALLATION VEHICLE CONTAINS A CARPET OR SUBFLOOR, USE A 1-3/16" DIAMETER CARPET CUTTER (P/N: 31183-0) AT ALL MOUNTING LOCATIONS TO OPEN UP ROOM FOR SPACERS.


CHECK SPACER ORIENTATION - BE SURE THAT THE INDENT IN THE SPACER COVERS THE PLUSNUT HEAD; THIS ENSURES THE MOST METAL-TO-METAL CONTACT AND REDUCES VIBRATION.

PLUSNUT INSTALLATION - A PLUSNUT GUN IS RECOMMENDED FOR PLUSNUT INSTALLATION FOR ITS PRODUCTION SPEED. HOWEVER, A PLUSNUT SETTING TOOL CAN ALSO BE USED (P/N: 22200-0).


THRU-BOLT CLEARANCE - WHEN USING A THRU-BOLT AT ANY MOUNTING LOCATION, BE SURE THAT YOUR HOLE HAS 1/16" CLEARANCE.

FASTENERS USED

BAG REFERENCE: BAGPEPACCMNT4

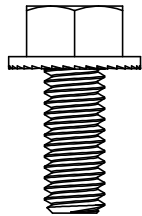

FAS0438
SCREW, HFLNG 5/16-
18 X .75, ZP
QTY: 4

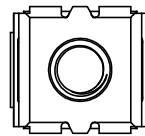


FAS0915
SNAP-IN NUT, 0.028 -
0.056"
QTY: 4

INTENTIONALLY LEFT BLANK


STEP 1 - MARKING SEIRED MOUNTING LOCATION

Step 1.1
LOCATE DESIRED
MOUNTING
LOCATION FOR
SHB2

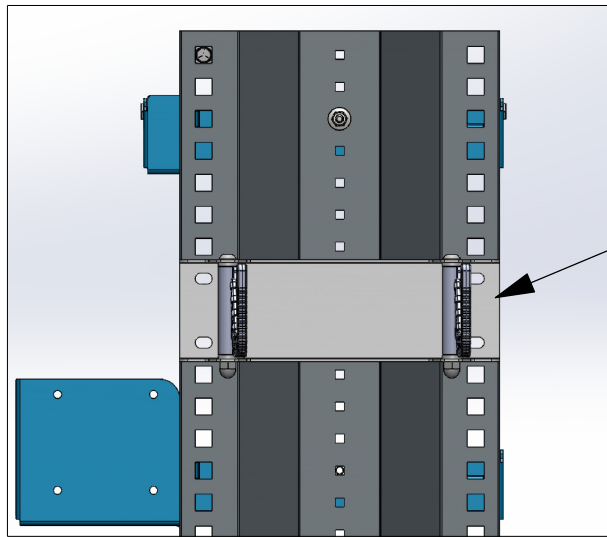


Step 1.1

Step 1.2
USE A WHITE OR
LIGHT COLORED
MARKER OR
PAINT MARKER
TO MARK THE
FOUR
MOUNTING
LOCATIONS

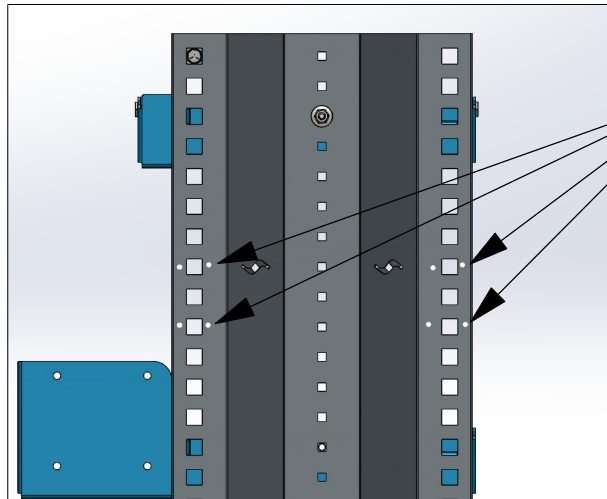


Step 1.2

Step 1.3
INSERT FAS0915
(4 PLACES)
INTO MARKED
LOCATIONS

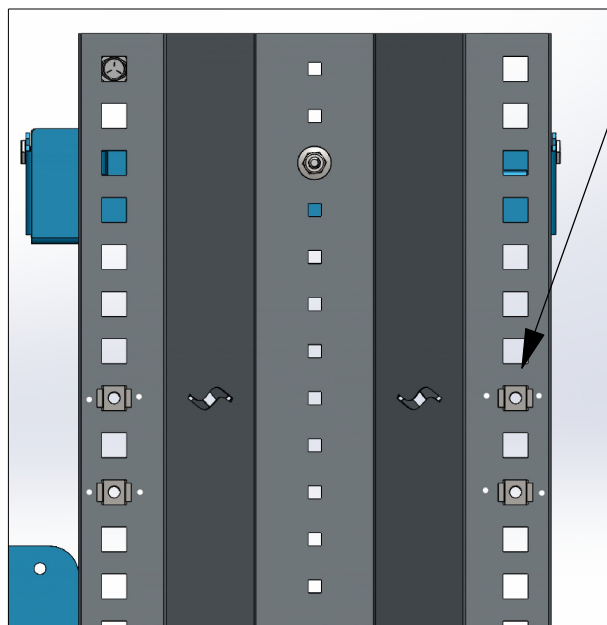


Step 1.3

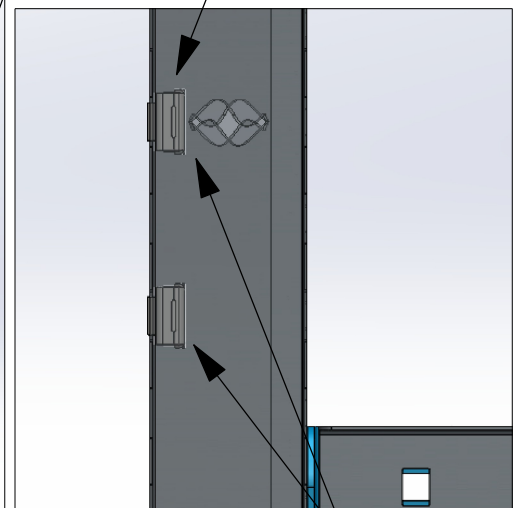


ENSURE PROTRUDED PART OF CLIP IS INSIDE END PANEL

STEP 2 - MOUNTING SHB2

Step 2.1
HOLD SHB2
AGAINST
MOUNTING
HOLES AND
HAND TIGHTEN
FAS0438 INTO
FAS0915
(4 PLACES)

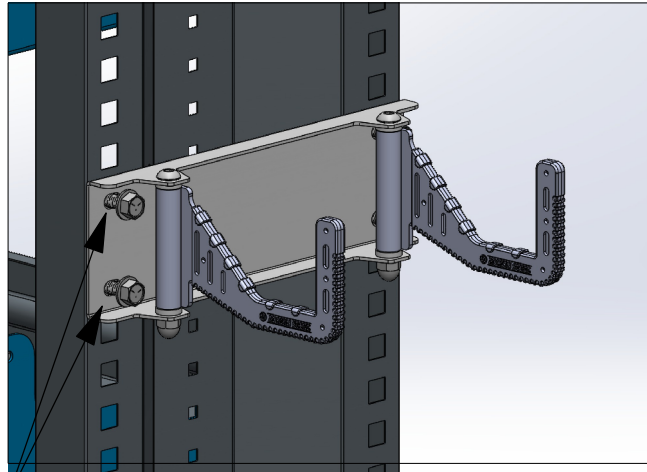


Step 2.1

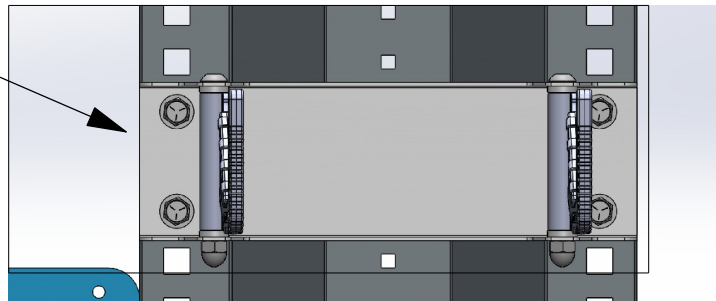**STEP 3 - FINAL STEPS**

Step 3.1
FULLY TIGHTEN
FAS0438
(4 PLACES)
1/2 WRENCH OR
SOCKET

CHECK TO
MAKE SURE
BRACKET IS
SECURELY
FASTENED TO
END PANEL.

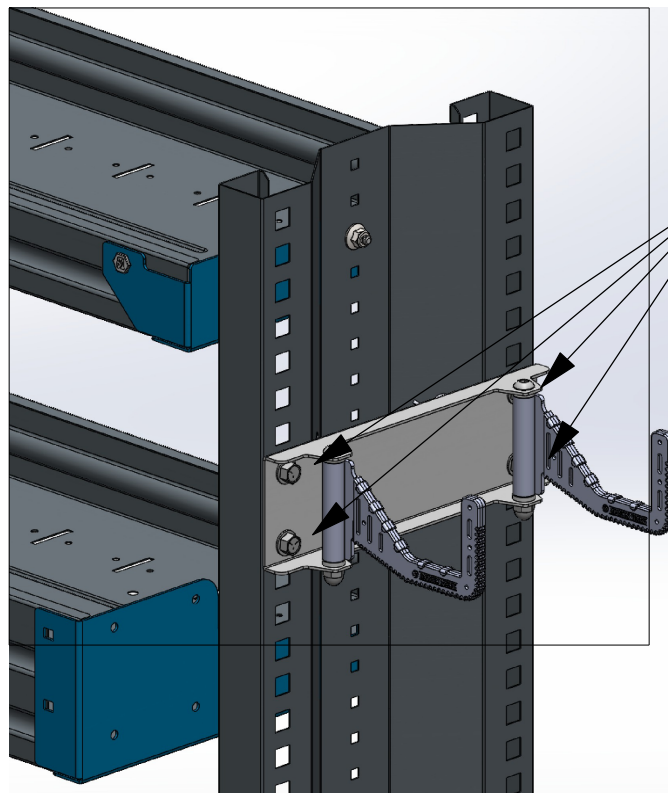

Step 3.1

INSTALLATION IS COMPLETE