




Full Size Pick Up Truck Rack Assembly – Installation Instructions

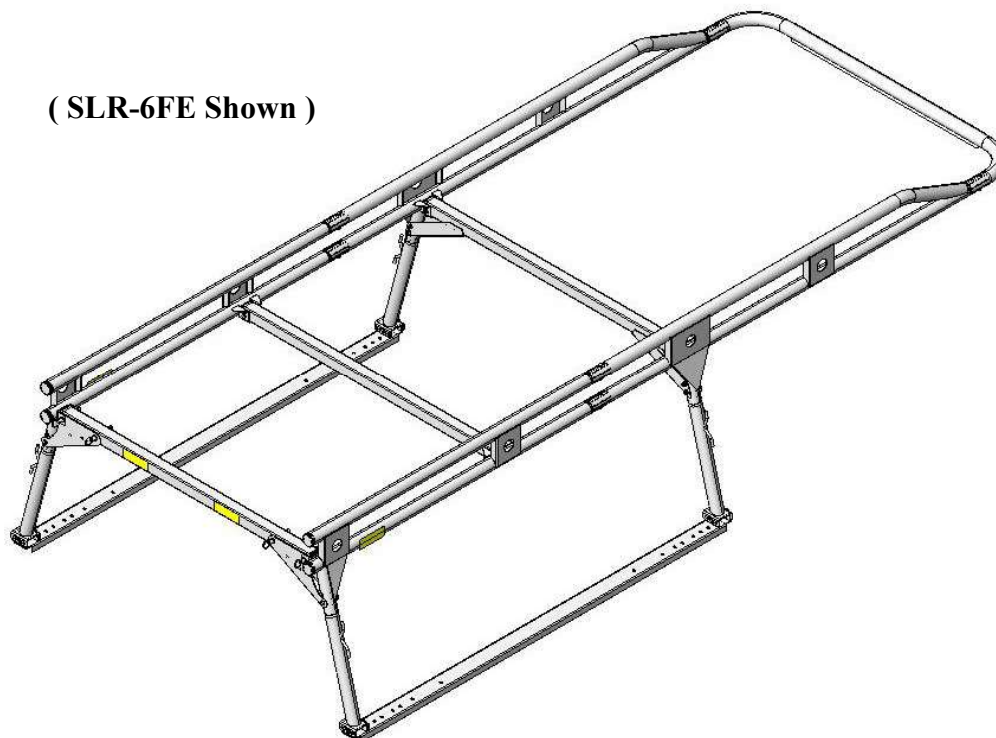

(SLR-6FE Shown)

RACKS AVAILABLE:

For 2001 & Newer
Full Size Pick Up Trucks

(Excluding: Ford SUPER DUTY
Ram 2500/3500
GMC/SILVERADO 2500/3500)

RACKS AVAILABLE:

For 2001 & Newer
Ram 2500/3500
GMC/SILVERADO 2500/3500

RACKS AVAILABLE:

For 2001 & Newer
Full Size Pick Up Trucks

Ford SUPER DUTY
Pick Up Trucks Only

Model No.	Used On
SLR-6FR	6' BED REGULAR CAB
SLR-8FR	8' BED REGULAR CAB
SLR-6FE	6' BED EXTENDED CAB
SLR-8FE	8' BED EXTENDED CAB

Model No.	Used On
SLR-6FRP	6' BED REGULAR CAB P
SLR-8FRP	8' BED REGULAR CAB P
SLR-6FEP	6' BED EXTENDED CAB P
SLR-8FEP	8' BED EXTENDED CAB P

Model No.	Used On
SLR-6FRS	6' BED REGULAR CAB
SLR-8FRS	8' BED REGULAR CAB
SLR-6FES	6' BED EXTENDED CAB
SLR-8FES	8' BED EXTENDED CAB



ADRIAN STEEL®

VAN AND PICKUP EQUIPMENT

LOAD RUNNER Ladder Rack

BEFORE YOU START!

IMPORTANT INSTALLATION STEPS ARE DENOTED USING A STOP SIGN. THESE STEPS MUST BE PERFORMED AS SPECIFIED IN ORDER TO ENSURE A PROPER INSTALLATION AND MUST BE FOLLOWED IN ORDER TO MAINTAIN YOUR PRODUCT WARRANTY!



CRITICAL INFORMATION PERTAINING TO USER AND/OR VEHICLE SAFETY IS DENOTED USING A CAUTION SIGN. SAFETY ITEMS MUST BE STRICTLY ADHERED TO IN ORDER TO ENSURE A SAFE WORKING ENVIRONMENT!



YOU WILL NEED THE FOLLOWING TOOLS IN ORDER TO COMPLETE THIS JOB.

1/2" & 9/16" COMBINATION END WRENCHS
DRILL MOTOR, 1/2" DRILL BIT WITH 1/2" DEEP STOP, SAFETY GLASSES
RATCHET WRENCH, WITH 1/2" & 9/16" SOCKET, w/ MISC. EXTENSIONS
FOOT POUND TORQUE WRENCH (Recommended)
10" DRIFT PUNCH (Used in Aligning Bolt Holes in Tube Sections)
STEEL HAMMER AND/OR RUBBER Mallet

ALL FASTENERS USED IN THE ASSEMBLY AND INSTALLATION OF THIS PRODUCT SHOULD BE TIGHTENED TO THE SPECIFIED TORQUE AS LISTED WITH EACH FASTENER CALLOUT BOX.



THE USE OF AIR OR ELECTRIC IMPACT TOOLS FOR THE ASSEMBLY OF FASTENERS IS NOT RECOMMENDED AND COULD CAUSE FASTENER FAILURE!



WARNING



THE USE OF DRILLS WITH INTEGRAL DRILL STOPS ALONG WITH PROPER INSPECTION FOR GAS TANK, GAS LINES, BRAKE LINES AND ELECTRICAL LINES PRIOR TO DRILLING ANY MOUNTING HOLES IS STRONGLY RECOMMENDED TO ENSURE THAT VEHICLE DAMAGE IS AVOIDED!



THE USE OF NON-STANDARD FASTENERS AND/OR DEVIATING FROM THE FASTENERS SPECIFIED IN THE INSTRUCTION (S) MAY VOID YOUR PRODUCT WARRANTY!


ALL DRILLED HOLES IN THE VEHICLE SHOULD HAVE THE RAW METAL EDGES SEALED WITH A SELF-ETCHING PRIMER TO RESIST CORROSION AND POTENTIAL FASTENER POINT FAILURE!



LOAD RUNNER Ladder Rack

BAGFDF150

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	BAG0406-A	4" X 6" 3MIL AUTOBAG	1
2	FAS0164	WASHER,FLAT,SAE,5/16,ALUM	12
3	FAS0090	NUT,NYLON INSERT LOCK, 5/16-18, ZI	4

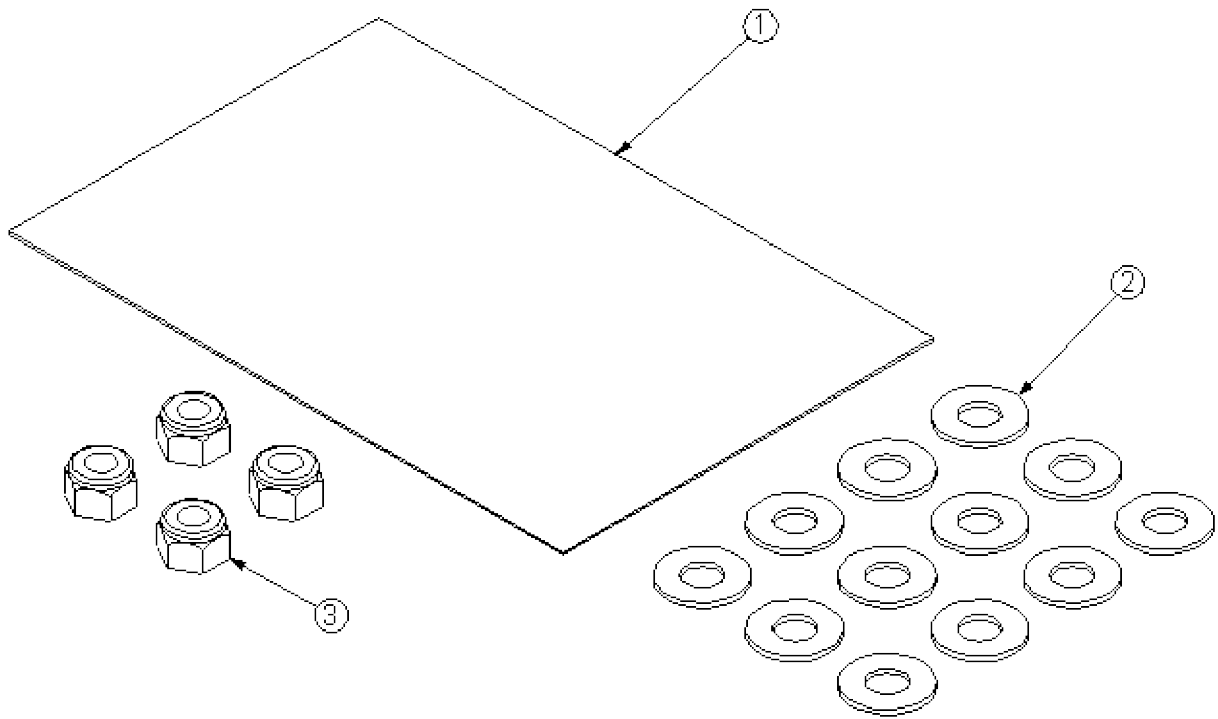




LOAD RUNNER Ladder Rack

BAG26561-0

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	BAG0709-A	7" X 9" 3MIL AUTOBAG	1
2	FAS0110	NUT,HEX NYLK 3/8-16 SS W	4
3	FAS0245	WASHER, FLAT, 5/16 HRD, ZN	60
4	FAS0248	NUT, NYLON INSERT LOCK, 5/16-18 SST	30
5	26618-0	SILICONE SEALANT	1
6	FAS0242	SCREW, HEX HD, 5/16-18X1.50 SS	8
7	FAS0243	SCREW, HEX HD, 5/16-18X2.50 SS	8
8	FAS0244	SCREW, HEX HD, 5/16-18X3.00 SS, GRADE 5	14
9	FAS0246	WASHER, FLAT, HRD, ZN	8
10	FAS0247	SCREW, HEX HD, 3/8-18X3.5 SS, GRADE 5	4
11	26611-0	RING PIN ASSY	4
12	26612-0	RING PIN CIRCLE COTTER	4
13	05586-0	BUTYL TAPE, T224 (1) FT ROLL	1
14	FAS0830	Screw, Hex Hd, 5/16-18 X 1.25 SS	8

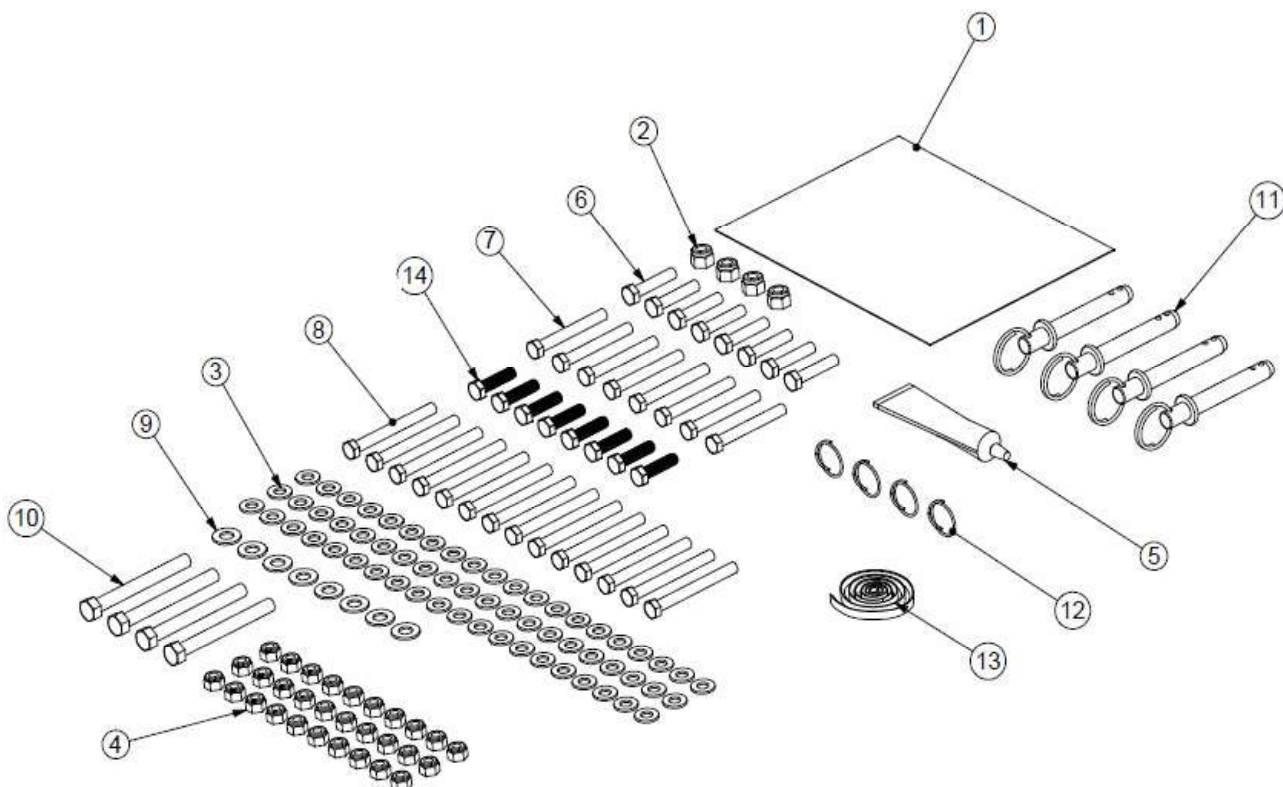




LOAD RUNNER Ladder Rack

BAG26610-0

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	BAG0507-A	4" X 6" 3MIL AUTOBAG	1
2	26610-0	WASHER,FLAT,SAE,5/16,ALUM	6
3	26609	NUT,NYLON INSERT LOCK, 5/16-18, ZI	4
4	26570-0	BED RAIL BRACKET SPACER	4

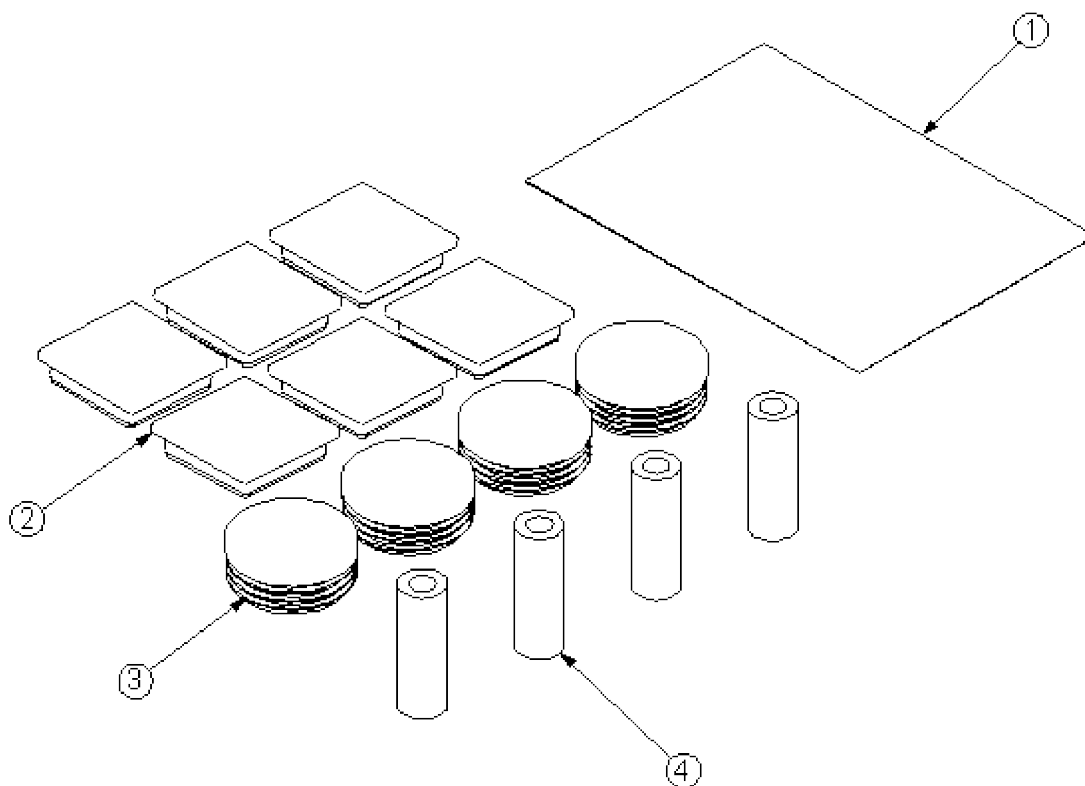







ADRIAN STEEL®

VAN AND PICKUP EQUIPMENT


LOAD RUNNER Ladder Rack

STEP – 01

Attach Left/Right Rear Truss to Left/Right Front Truss

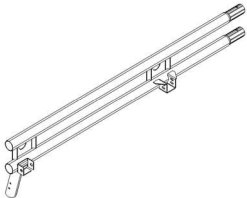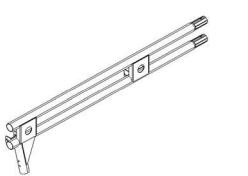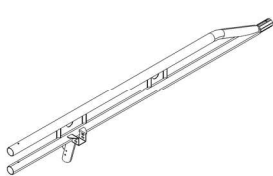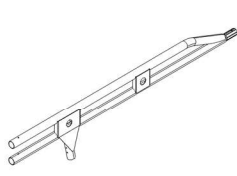 26593-0 TRUSS ASSY REAR LFT 6' BED	 26594-0 TRUSS ASSY REAR RGHT 6' BED	 26580-0 TRUSS ASSY FRNT LFT EXTENDED CAB	 26582-0 TRUSS ASSY FRNT RGHT EXTENDED CAB	 05586-0 BUTYL TAPE, T224 1FT ROLL
 FAS0243 BOLT, HEX HD, 5/16-18UNC X 2.50" (4) REQUIRED	 FAS0245 WASHER, FLAT, HD ZN, 1/4" ID (4) REQUIRED	 FAS0248 NUT, NYLON LOCK, 5/16-18UNC (4) REQUIRED 25 FT-LBS TORQUE	 26618-0 SILICON SEALANT (1) OZ TUBE AS REQUIRED	

First apply a thin 1/4" bead of SEALANT (include) fully around the front of all four "swages" between hole and end on both of the REAR TRUSSES, then spread the SEALANT back evenly, see figure below for details. Next slide the LEFT-REAR TRUSS and the LEFT-FRONT TRUSS sections together. Once both fastener bolt holes are in the upper and lower tubes are aligned, secure and fasten as shown below, tighten to 25 FT-LBS. Repeat for the RIGHT REAR TRUSS and the RIGHT FRONT TRUSS sections. Add 1/2" of butyl tape to each end of all fasteners.

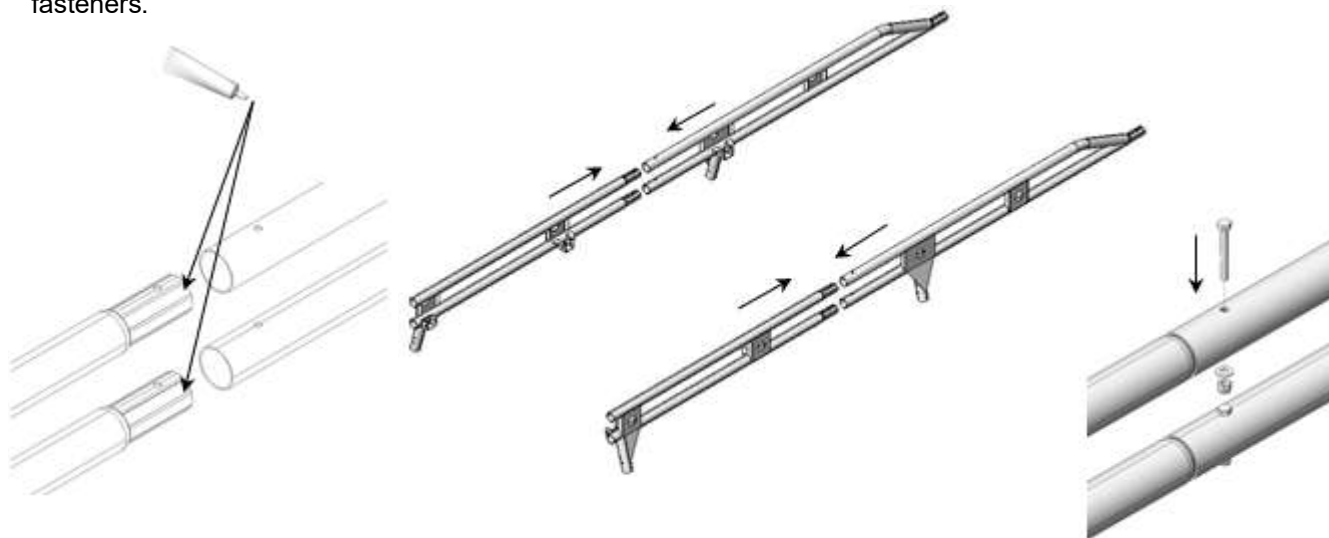

GENERIC PICTURE—MAY NOT LOOK LIKE YOUR FASTENER. MOUNTING SCREW WITH WASHERS AND BUTYL TAPE BEFORE INSTALLATION (LEFT) AND WHAT IT SHOULD LOOK LIKE AFTER INSTALLATION (RIGHT).



NOTE:

The rear trusses might need to be "tapped" into the front trusses. Use a rubber mallet, or place a piece of wood across tube ends for protection, if using a steel hammer. Use a 10" drift punch to aid in aligning the bolt through the holes.






ADRIAN STEEL COMPANY • 906 JAMES ST. • ADRIAN, MI. 49221 • (517) 265-6194

**ADRIAN STEEL®**

VAN AND PICKUP EQUIPMENT


LOAD RUNNER Ladder Rack

STEP – 02**PLASTIC (SQUARE/ROUND) PLUG INSTALLATION**

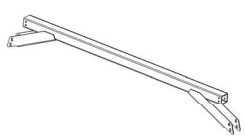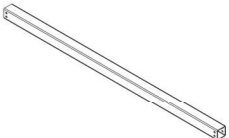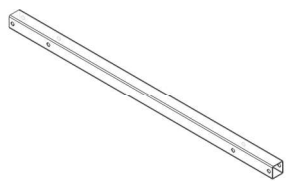 26593-0 26594-0 TRUSS ASSY REAR LFT/RGH 6' BED	 26609-0 PLUG, ROUND, 2" DIAMETER (4) REQUIRED	 26610-0 PLUG, SQUARE, 2" (6) REQUIRED
 26573-0 CROSSBAR ASSY, FRONT	 26574-0 CROSSBAR ASSY, MIDDLE	 26578-0 CROSSBAR ASSY, REAR

To finish the FRONT/REAR TRUSS assemblies you must insert the round plastic PLUGS into the back ends of the REAR TRUSS tubes. These plugs must be fully seated, gently tap into place with a rubber mallet.


Before the CROSSBARS can be assembled, you must insert the square plastic PLUGS into the crossbar tube ends. The plugs must be fully seated by, gently tapping into place with a rubber mallet.

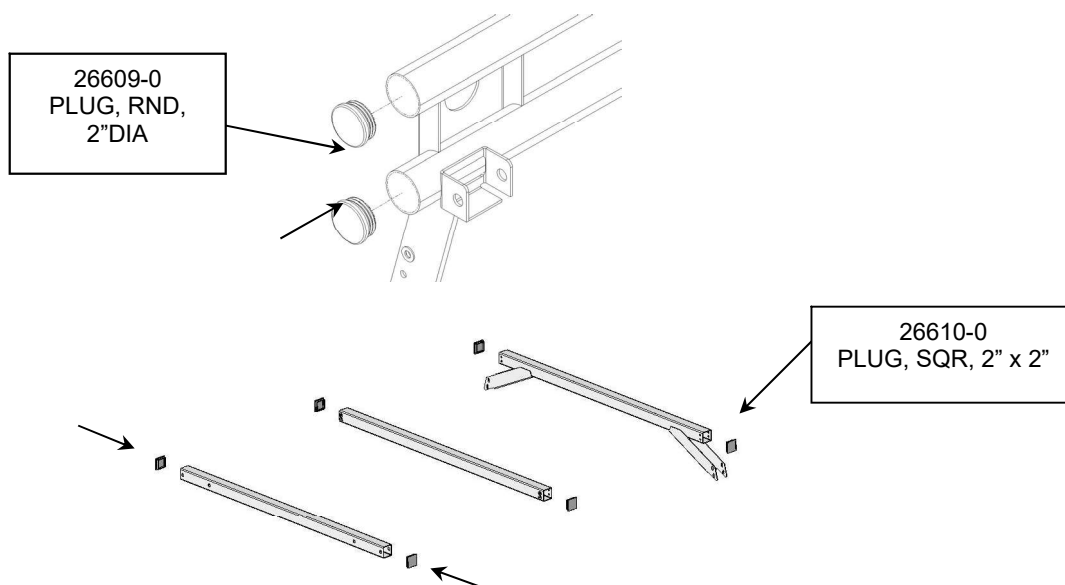


**ADRIAN STEEL®**

VAN AND PICKUP EQUIPMENT

LOAD RUNNER Ladder Rack

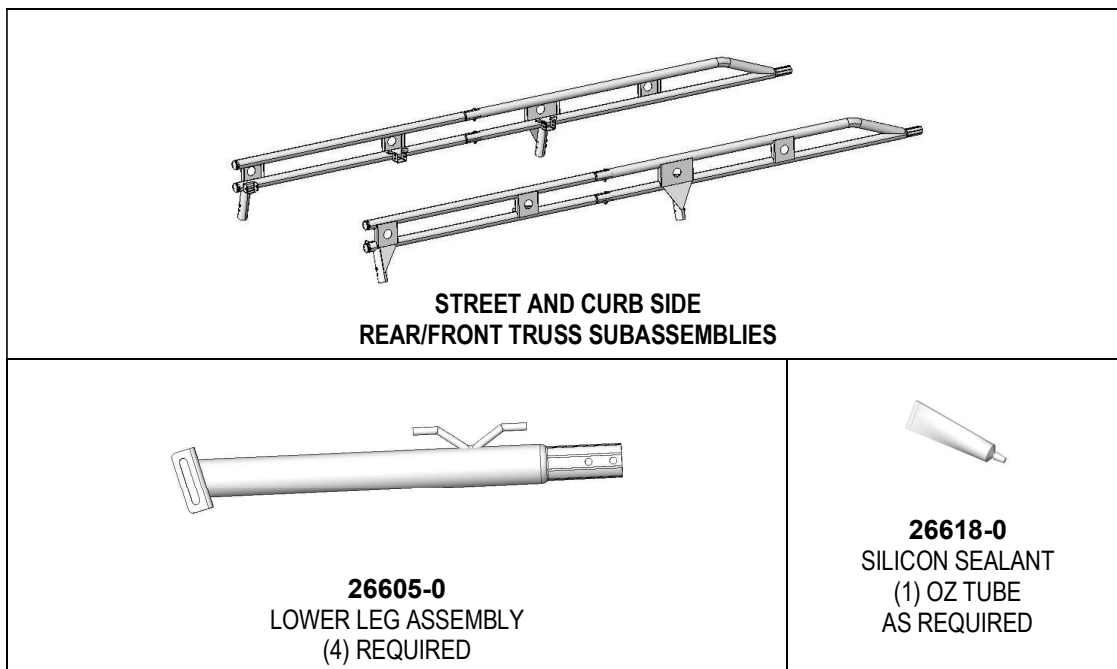STEP – 03**SUPPORT LEGS INTO REAR/FRONT TRUSS SUBASSEMBLIES**

Apply (2) ¼" beads of SILICONE sealant fully around the "swage" on each LOWER LEG ASSY just above each pierced hole. Then spread the sealant down evenly over the "swaged" area only. Now insert the LOWER LEG ASSY into the REAR/FRONT TRUSS keeping the "rope hook" to the outside. These legs will fit tight and might need to be tapped into place. Use a 10" drift pin punch to aid in aligning the bolt holes in the LOWER LEG ASSY with the through holes in the REAR/FRONT TRUSS subassemblies.

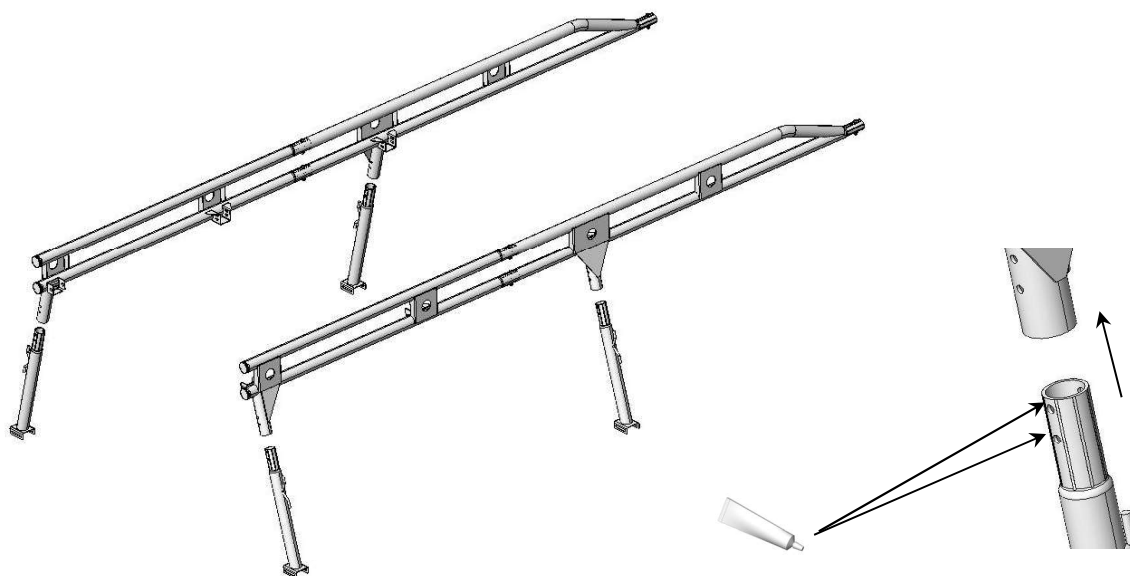


**ADRIAN STEEL®**




VAN AND PICKUP EQUIPMENT

LOAD RUNNER Ladder Rack

STEP – 04**FRONT CROSSBAR to the REAR/FRONT TRUSS Subassemblies.**

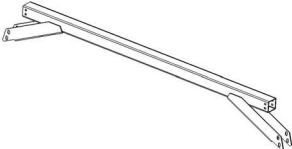 26573-0 CROSSBAR ASSY, FRONT	 FAS0244 BOLT, HEX HD, 5/16-18UNC X 3.00" lg (8) REQUIRED	 FAS0245 WASHER, FLAT, HRD ZN, 5/16" ID (16) REQUIRED	 FAS0248 NUT, NYLON LOCK, 5/16-18UNC (8) REQUIRED 25 FT-LBS TORQUE	 05586-0 BUTYL TAPE, T224 1FT ROLL
---	---	--	--	--

Assemble the FRONT CROSSBAR ASSY to the Street and Curb Side REAR/FRONT TRUSS subassemblies. Fasten it "loosely" using the fasteners as shown above, DO NOT TIGHTEN to final torque. Repeat for opposite REAR/FRONT TRUSS subassembly. Add ½" of butyl tape to each end of all fasteners.

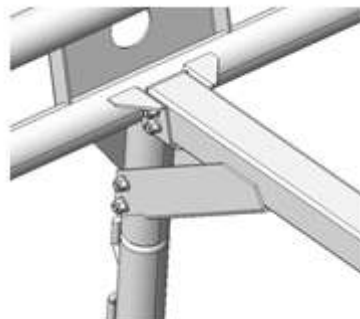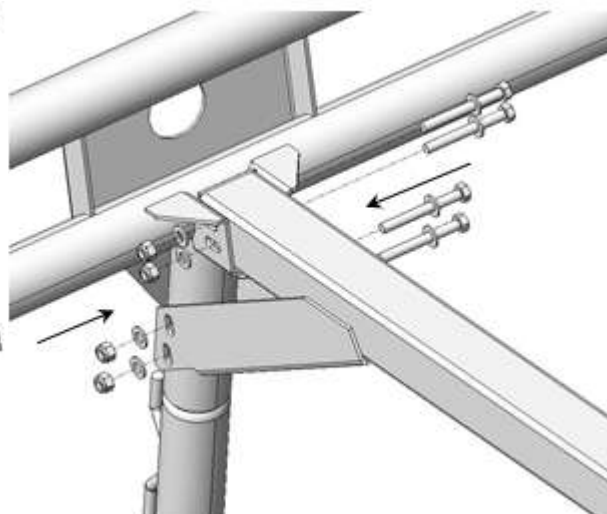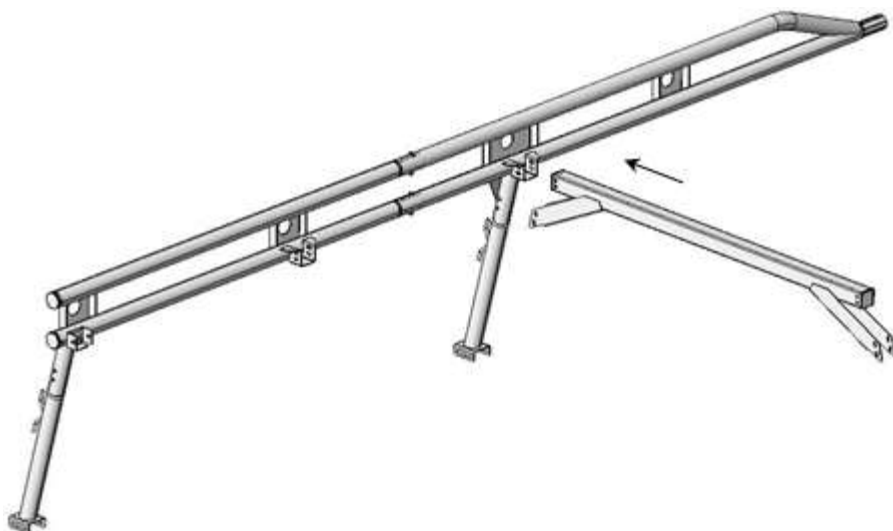

GENERIC PICTURE—MAY NOT
LOOK LIKE YOUR FASTENER.
MOUNTING SCREW WITH
WASHERS AND BUTYL TAPE
BEFORE INSTALLATION (LEFT)
AND WHAT IT SHOULD LOOK
LIKE AFTER INSTALLATION
(RIGHT).




**ADRIAN STEEL®**


VAN AND PICKUP EQUIPMENT

LOAD RUNNER Ladder Rack

STEP – 05**FRONT CROSSTUBE INSTALLATION**

					
26572-0 CROSSTUBE, FRONT	FAS0243 BOLT, HEX HD, 5/16-18UNC X 2.50" lg (2) REQUIRED	FAS0245 WASHER, FLAT, HRD ZN, 5/16" ID (2) REQUIRED	FAS0248 NUT, NYLON LOCK, 5/16-18UNC (2) REQUIRED 25 FT-LBS TORQUE	26618-0 SILICON SEALANT OZ TUBE AS REQUIRED	05586-0 BUTYL TAPE, T224 1FT ROLL

First apply a ¼" bead of SILICONE SEALANT fully around the front of both "swages" on the LEFT & RIGHT TRUSS subassemblies between hole and end of tube. Then spread the SEALANT back evenly over the "swaged" areas only. Now slide the FRONT CROSSTUBE into the TRUSS subassemblies. If required, use a rubber mallet to tap into place. Once the through bolt holes are aligned secure in place with the fasteners shown above, tighten to 25 FT-LBS torque. Add ½" of butyl tape to each end of all fasteners.

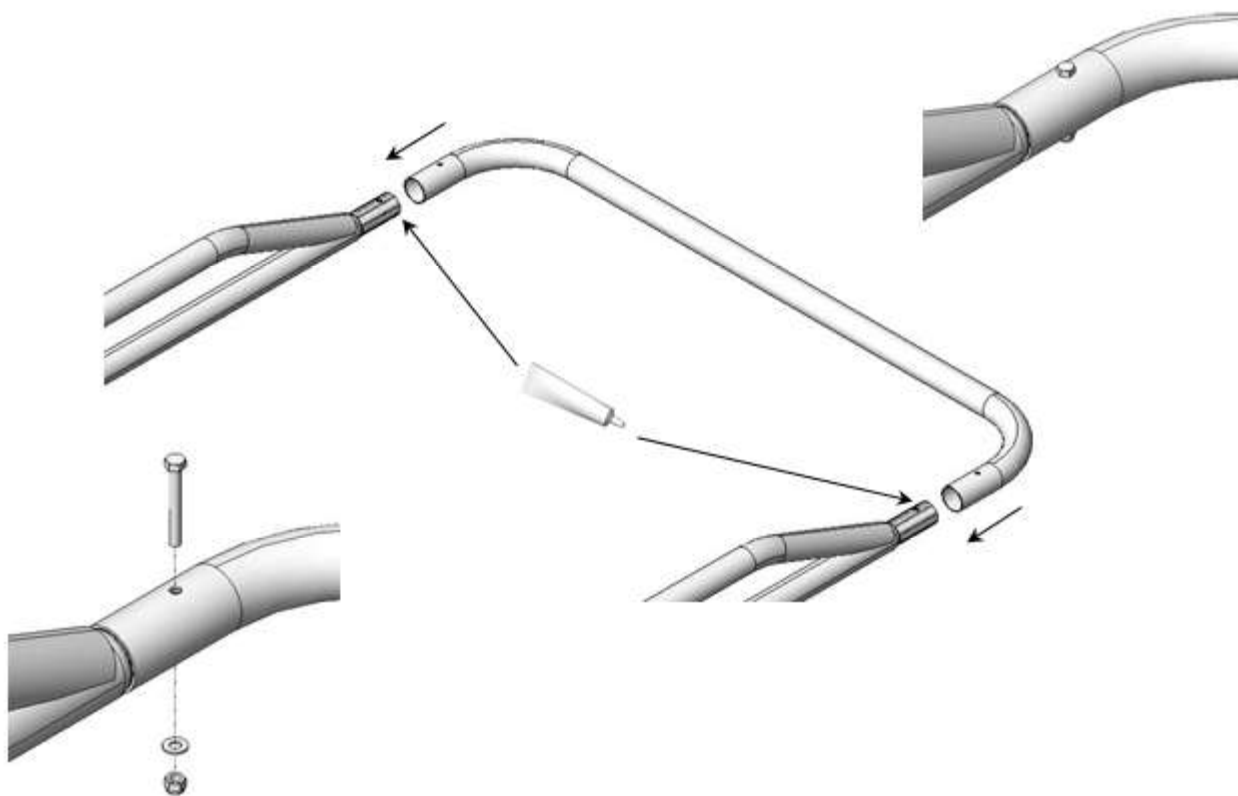

GENERIC PICTURE—MAY NOT LOOK LIKE YOUR FASTENER. MOUNTING SCREW WITH WASHERS AND BUTYL TAPE BEFORE INSTALLATION (LEFT) AND WHAT IT SHOULD LOOK LIKE AFTER INSTALLATION (RIGHT).




ADRIAN STEEL COMPANY • 906 JAMES ST. • ADRIAN, MI. 49221 • (517) 265-6194






STEP – 06

MIDDLE CROSSBAR INSTALLATION

 26574-0 CROSSBAR ASSY, MIDDLE	 FAS0244 BOLT, HEX HD, 5/16-18UNC X 3.00" lg (4) REQUIRED	 FAS0245 WASHER, FLAT, HRD ZN, 5/16" ID (8) REQUIRED	 FAS0248 NUT, NYLON LOCK, 5/16-18UNC (4) REQUIRED 25 FT-LBS TORQUE	 05586-0 BUTYL TAPE, T224 1FT ROLL
--	---	---	--	---

Now assemble the MIDDLE CROSSBAR to the STREET & CURB SIDE TRUSS subassemblies. Fasten it "loosely" using the fasteners as shown above, DO NOT TIGHTEN to final torque. Add ½" of butyl tape to each end of all fasteners.

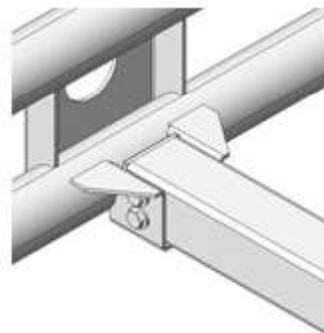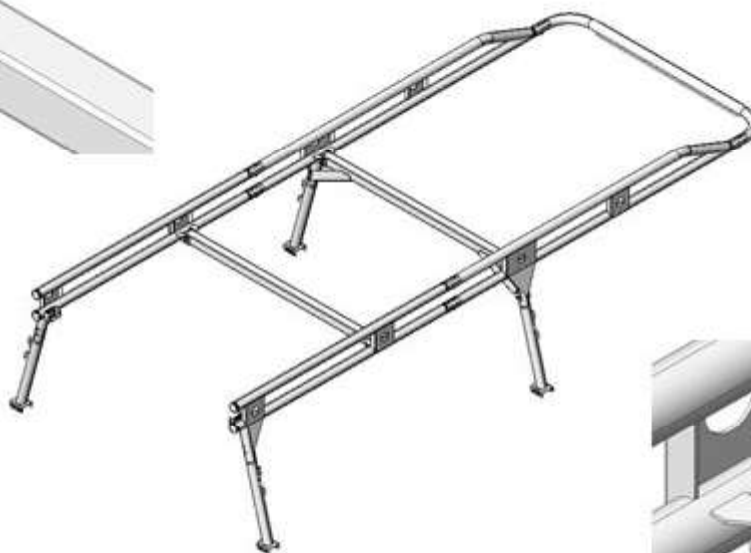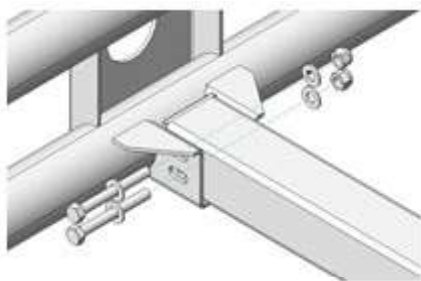



GENERIC PICTURE—MAY NOT LOOK LIKE YOUR FASTENER. MOUNTING SCREW WITH WASHERS AND BUTYL TAPE BEFORE INSTALLATION (LEFT) AND WHAT IT SHOULD LOOK LIKE AFTER INSTALLATION (RIGHT).






STEP – 07

REAR GUSSET ASSY INSTALLATION

 FAS0245 WASHER, FLAT, HRD ZN, 5/16" ID (8) REQUIRED	 FAS0248 NUT, NYLON LOCK, 5/16-18UNC (4) REQUIRED 25 FT-LBS TORQUE	 05586-0 BUTYL TAPE, T224 1FT ROLL
 26602-0 CROSSBAR BRACKET, REAR (2) REQUIRED	 FAS0243 BOLT, HEX HD, 5/16-18UNC X 2.5" lg (2) REQUIRED	 FAS0244 BOLT, HEX HD, 5/16-18UNC X 3.00" lg (2) REQUIRED

Next position one REAR CROSSBAR BRACKET as shown below and secure to the REAR/FRONT TRUSS subassembly using the fasteners shown above. Tighten the upper fastener (FAS0243) securing the rear LOWER LEG ASSEMBLY to the REAR/FRONT TRUSS subassembly to 25 FT-LBS torque. Tighten the remaining fastener (FAS0244), but allow the REAR CROSSBAR BRACKET to pivot freely. Add ½" of butyl tape to each end of all fasteners.

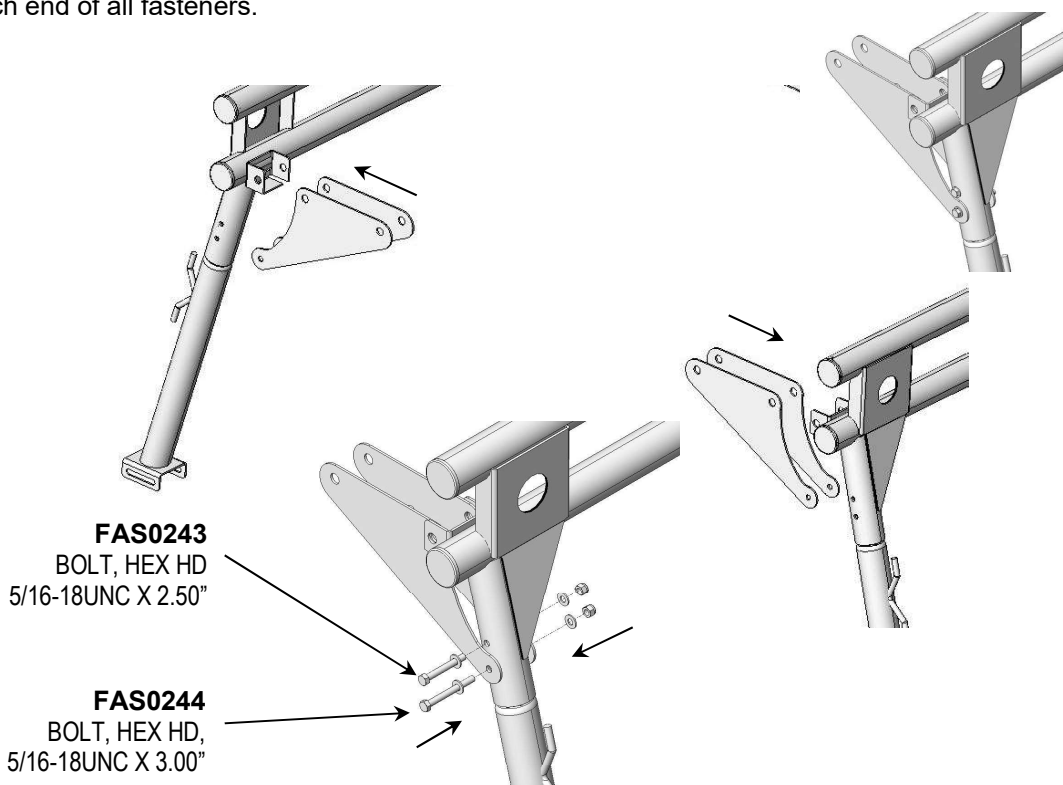

**ADRIAN STEEL®**

VAN AND PICKUP EQUIPMENT

LOAD RUNNER Ladder Rack


STEP – 08**REAR CROSSBAR INSTALLATION**

 26578-0 CROSSBAR ASSY, REAR	 26611-0 RING PIN ASSY (4) REQUIRED	 26612-0 RING PIN CIRCLE COTTER SS (4) REQUIRED
--	--	---

Set the REAR CROSSBAR into the REAR/FRONT TRUSSES and CROSSBAR BRACKET as shown in figure below. Insert a RING PIN into all four holes going through the CROSSBAR BRACKET and secure in place by “looping” the RING PIN CIRCLE COTTER through the hole in the RING PIN as shown in lower right view shown below.

NOTE:

These RING PINS and REAR CROSSBARS can be removed for loading and unloading tall payloads, but they should be installed before the truck is in motion.

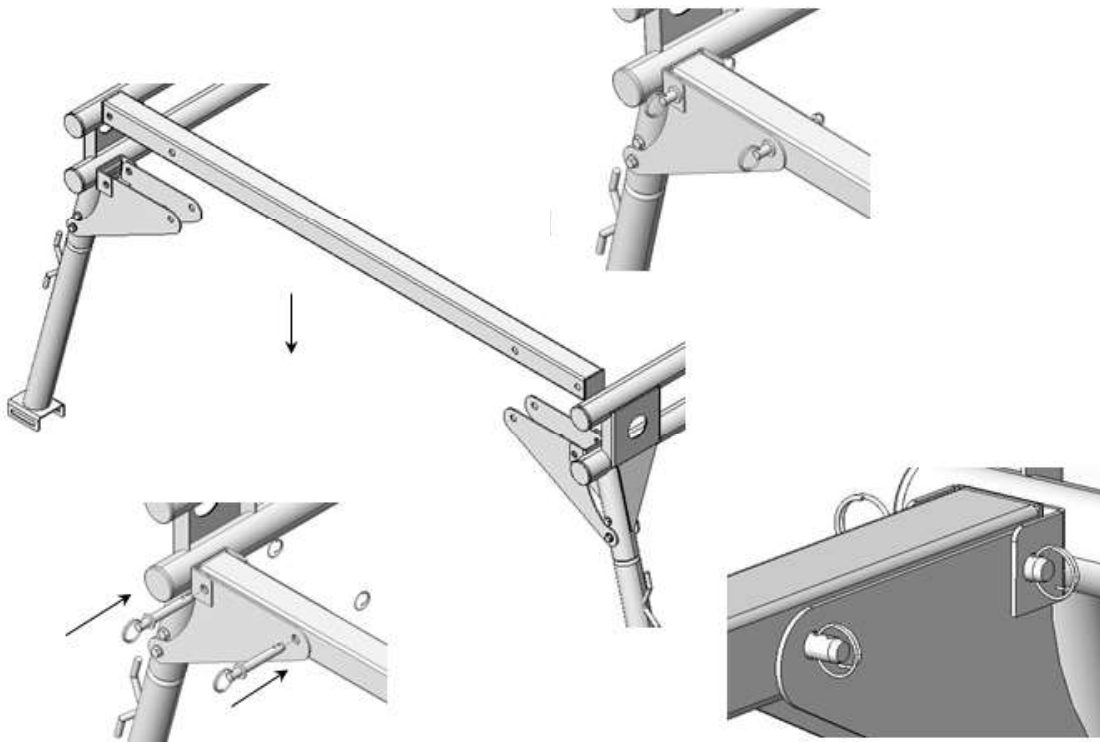

GENERIC PICTURE—MAY NOT LOOK LIKE YOUR FASTENER. MOUNTING SCREW WITH WASHERS AND BUTYL TAPE BEFORE INSTALLATION (LEFT) AND WHAT IT SHOULD LOOK LIKE AFTER INSTALLATION (RIGHT).




ADRIAN, MI. 49221 • (517) 265-6194

**ADRIAN STEEL®**


VAN AND PICKUP EQUIPMENT

LOAD RUNNER Ladder Rack

STEP - 09**AIR DEFLECTOR "SPOILER" INSTALLATION**

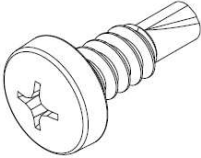 27231-0 LOAD RUNNER SPOILER	 FAS0360 SCREW, ST, THP #14-10X .75 SS (4) REQUIRED	 FAS0123 WASHER, LOCK, EXT, 1/4" ID (4) REQUIRED
--	---	--

Position the SPOILER against the FRONT CROSSTUBE as shown below. Be sure the spoiler is centered and the front surface is orientated as shown in the lower view below. Using the spoiler as a template drill (4) 3/16" diameter holes in the front of the FRONT CROSSTUBE. Secure the SPOILER to the FRONT CROSSTUBE with the fasteners listed above. Note apply some SILICONE SEALANT to the fastener threads prior to installation and final tightening.

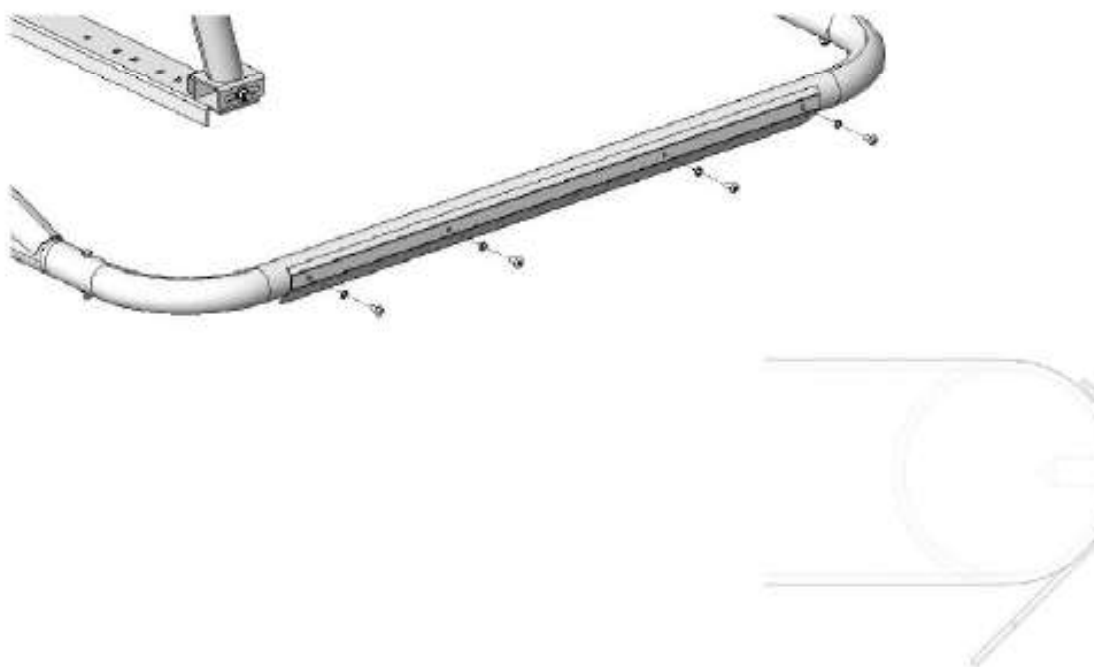



ADRIAN STEEL®
VAN AND PICKUP EQUIPMENT

LOAD RUNNER Ladder Rack


INSTALLATION

NOW RACK ASSEMBLY IS COMPLETE, PLEASE READ THE FOLLOWING STEPS CAREFULLY FOR A PROPER INSTALLATION!

INSTALL STEP 01

APPLY FOAM STRIP TO BED RAILS


Start at one end of each BED RAIL, sticking the FOAM TAPE along the bottom side of each BED RAIL. As you go, keep the FOAM TAPE straight and even. Cut the FOAM TAPE to length and trim off any excess if necessary. Note: Flanges wrap inside of bed rail.

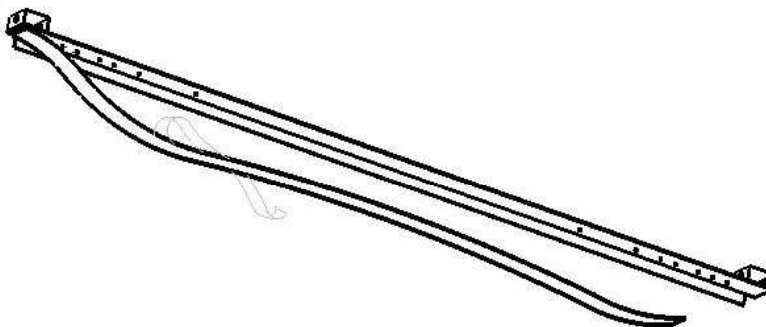

INSTALL STEP 02

POSITION BED RAIL ON TRUCK BED

Set a BED RAIL onto each side of your truck bed positioning the BED RAIL against the side and setting it as far rearward as possible. Rail will need a hole drilled for a FAS0242 5/16 bolt at 35 1/2" from the rear and 1 1/4" from the inside edge for mounting, see figure below.

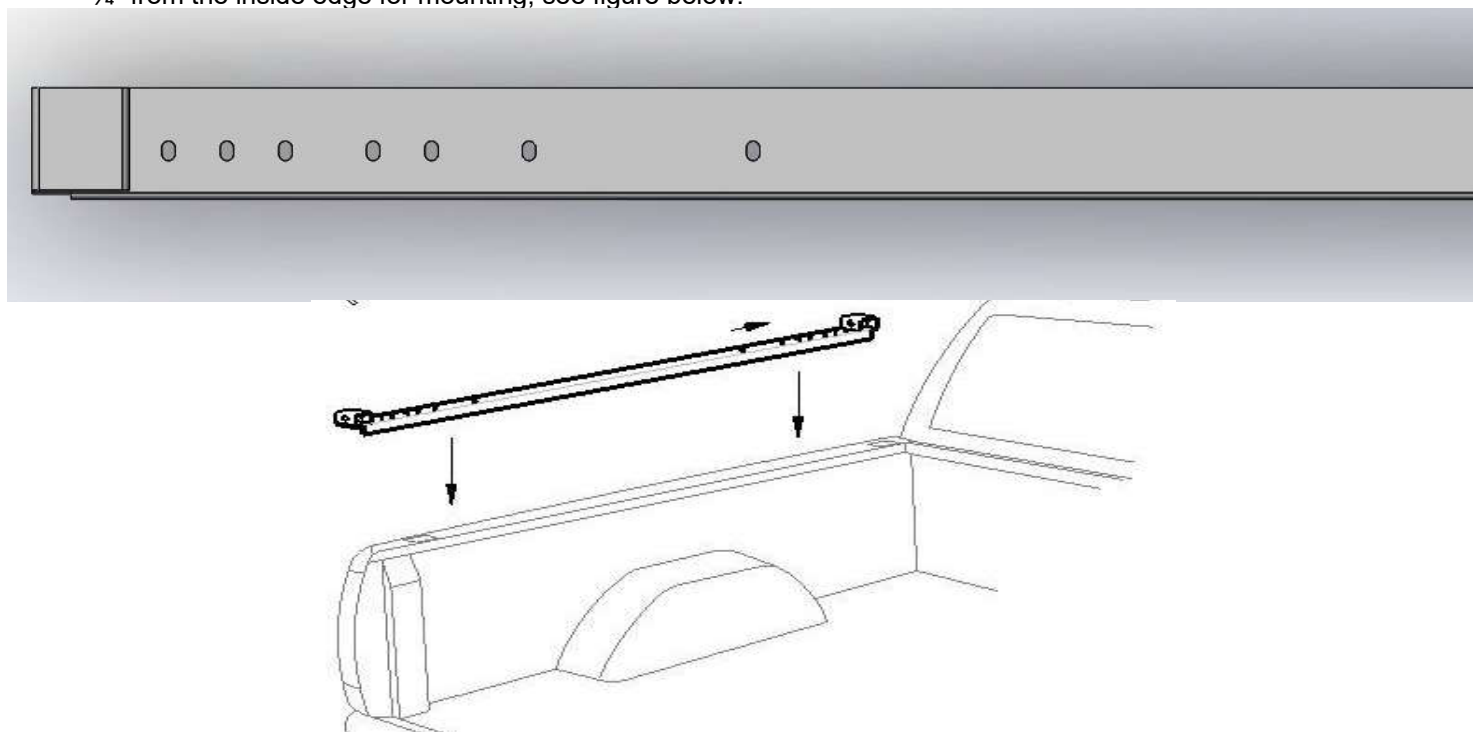

ADRIAN STEEL COMPANY • 906 JAMES ST. • ADRIAN, MI. 49221 • (517) 265-6194

**ADRIAN STEEL®**

VAN AND PICKUP EQUIPMENT

LOAD RUNNER Ladder Rack


INSTALL STEP 03**DRILL BED RAIL MOUNTING HOLES IN TRUCK BED**

Select a slot in the BED RAIL closest to the “Bed Rail Bracket”, located at each end of the BED RAIL, and a slot furthest from each bed rail bracket. There will be a total of 4 holes used in each bed rail.


IMPORTANT:

Be sure the selected slots will allow room after drilling for fasteners and tool access in the truck bed.

Remove the BED RAIL and cut a slit in each previously selected slot. Replace the BED RAIL to mark the truck bed through each slot you have selected. Remove the BED RAIL and drill a 11/32” diameter hole through each marked location. Be sure to clean-up any burrs or debris from drilling.

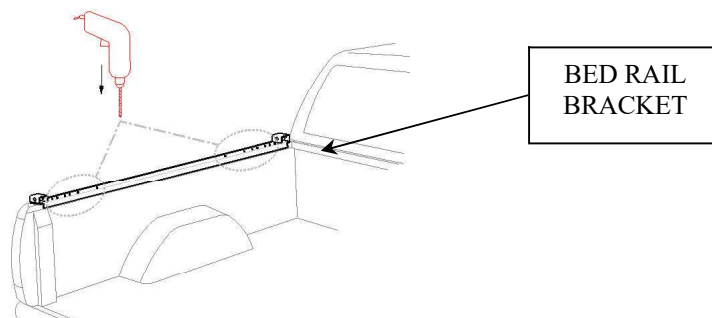**INSTALL STEP 04A****FASTEN BED RAIL TO TRUCK BED**


NOTE: For Installation on a Nissan Titan, skip to Step 4B

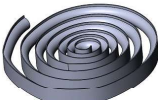 26565-0 BED RAIL ASSY, 6' BED (2) REQUIRED	 FAS0242 BOLT, HEX HD, 5/16-18UNC X 1.5" lg (8) REQUIRED	 FAS0245 WASHER, FLAT, HRD ZN, 5/16" ID (8) REQUIRED	 FAS0248 NUT, NYLON LOCK, 5/16-18UNC (8) REQUIRED 25 FT-LBS TORQUE	 FAS0164 WASHER, FLAT, SAE, 5/16, ALUM (8) REQUIRED	 05586-0 BUTYL TAPE, T224 1FT ROLL
--	---	---	---	--	---

Set the BED RAILS back onto the truck. Align the slots with the holes previously drilled. Now attach each BED RAIL to the truck as shown below, using the fasteners specified and tighten to 25 FT-LBS. Add ½” of butyl tape to each end of all fasteners.




GENERIC PICTURE—MAY NOT LOOK LIKE YOUR FASTENER. MOUNTING SCREW WITH WASHERS AND BUTYL TAPE BEFORE INSTALLATION (LEFT) AND WHAT IT SHOULD LOOK LIKE AFTER INSTALLATION (RIGHT).

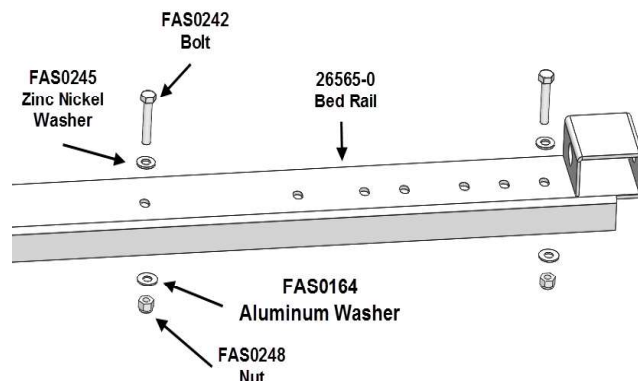



INSTALL STEP 04B

FASTEN BED RAIL TO NISSAN TITAN

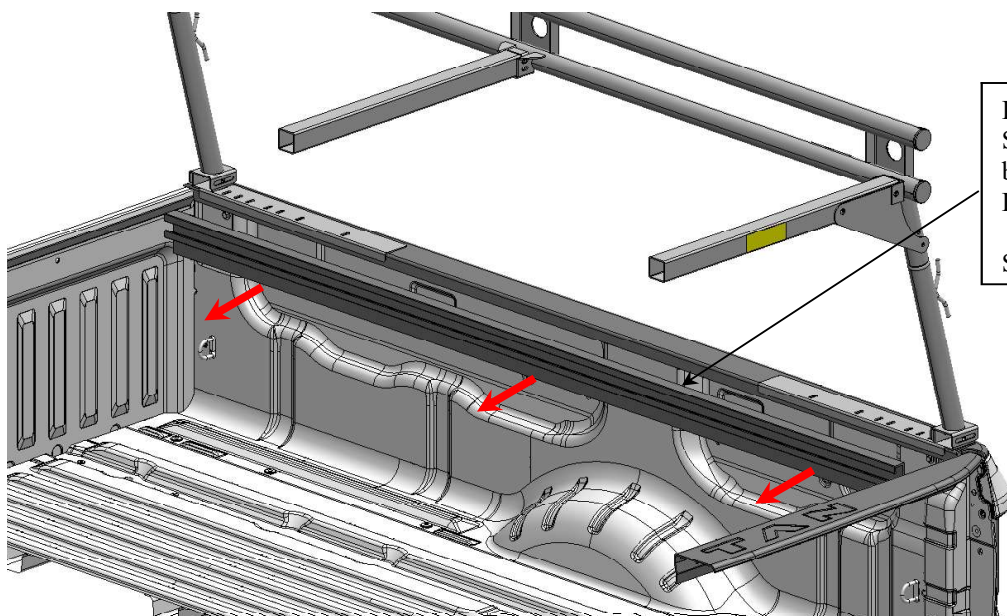

If equipped with Nissan's UTILI-TRACK System, These rails along the side of the bed will need to be removed for Loadrunner installation.


Save all rails and fasteners.

 26565-0 BED RAIL ASSY, 6' BED (2) REQUIRED	 FAS0830 BOLT, HEX HD, 5/16-18UNC X 1.25" (8) REQUIRED	 FAS0245 WASHER, FLAT, HRD ZN, 5/16" ID (8) REQUIRED	 FAS0248 NUT, NYLON LOCK, 5/16-18UNC (8) REQUIRED 25 FT-LBS TORQUE	 FAS0164 WASHER, FLAT, SAE, 5/16, ALUM (8) REQUIRED	 05586-0 BUTYL TAPE, T224 1FT ROLL
---	--	---	---	---	---

Set the BED RAILS back onto the truck. Align the slots with the holes previously drilled. Now attach each BED RAIL to the truck as shown below, using the fasteners specified and tighten to 25 FT-LBS. Add ½" of butyl tape to each end of all fasteners. Lastly, re-install Nissan's UTILI-TRACK if previously removed.



GENERIC PICTURE—MAY NOT LOOK LIKE YOUR FASTENER. MOUNTING SCREW WITH WASHERS AND BUTYL TAPE BEFORE INSTALLATION (LEFT) AND WHAT IT SHOULD LOOK LIKE AFTER INSTALLATION (RIGHT).

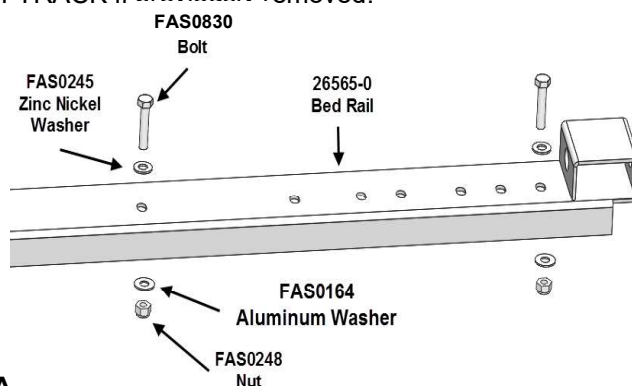



INSTALL STEP 05

INSTALL LADDER RACK ONTO TRUCK


Now it is time to set your rack onto the truck.

CAUTION:


TO PREVENT DAMAGE & INJURY, BE SURE THE TRUCK IS PARKED ON A FLAT AND LEVEL SURFACE AND YOU HAVE AT LEAST (4) PEOPLE TO LIFT THE RACK AND SET IT ONTO THE TRUCK. IT WORKS BEST TO HAVE (1) PERSON PER LOWER LEG ASSY WHEN LIFTING RACK.

NOTE:

It is suggested to protect the cab roof with a blanket or similar item to reduce the chance of damaging the roof during installation.

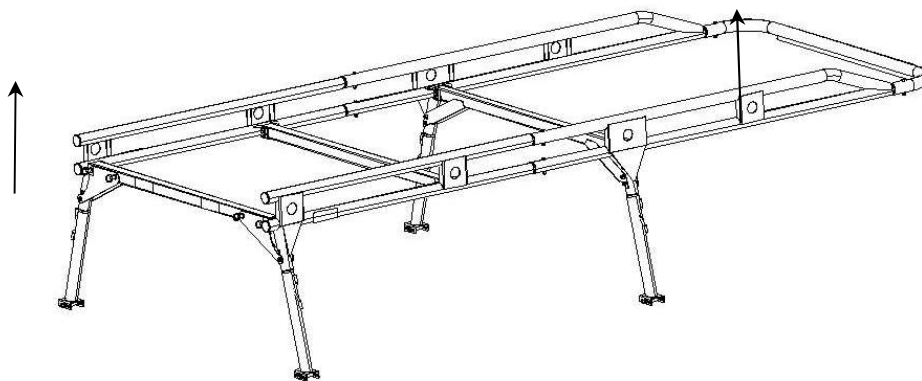

Carefully set the rack onto the truck fitting the LOWER LEGS over the “bed rail brackets” on the BED RAILS then center the rack side to side on each LOWER LEG.

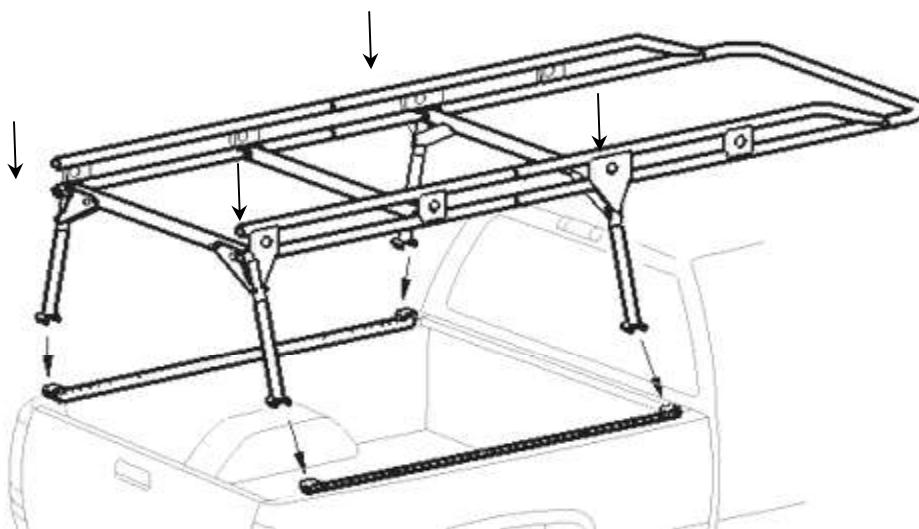





INSTALL STEP 06

FASTEN RACK TO BEDRAIL

 26570-0 INSERT SPACER (4) REQUIRED	 FAS0246 WASHER, FLAT, HDR ZN, 3/8" ID (8) REQUIRED	 FAS0247 BOLT, HEX HD, 3/8-16UNC X 3.50" lg (4) REQUIRED	 FAS0249 NUT, NYLON LOCK, 3/8-16UNC 45 FT-LBS TORQUE	 05586-0 BUTYL TAPE, T224 1FT ROLL
--	--	--	---	---

Using caution not to move the rack off the bed rail brackets, secure the ladder rack to the BED RAILS by inserting the fasteners shown through BOTH the LOWER LEG ASSY bracket and the bed rail bracket (w/spacer INSERT SPACER inside). After all the bolts, flat washers, and nylon lock nuts have been installed, tighten to 45 FT-LBS. Add ½" of butyl tape to each end of all fasteners.

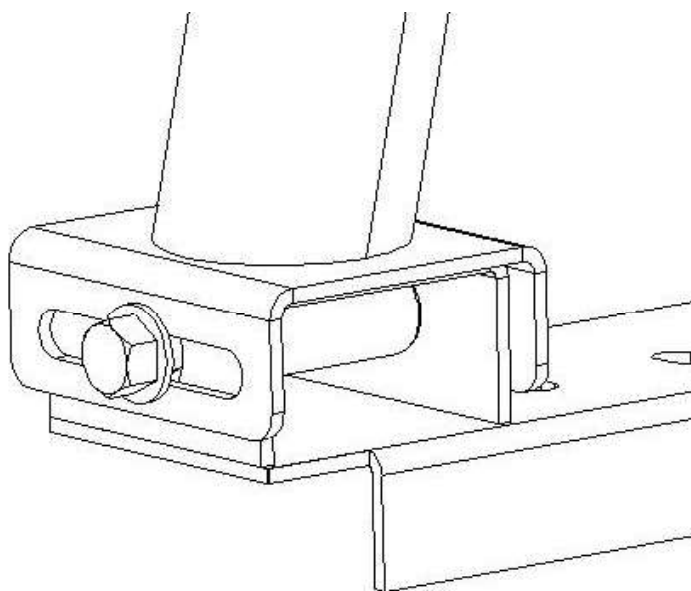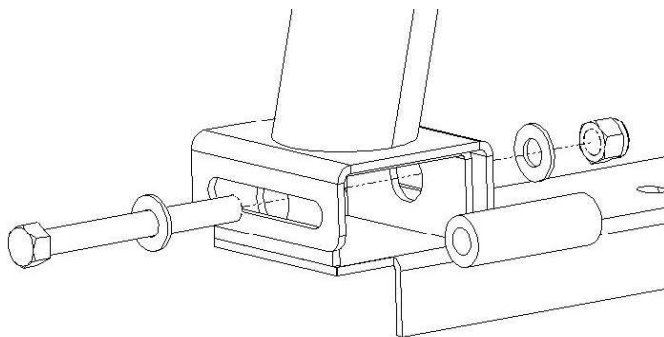


**ADRIAN STEEL®**

VAN AND PICKUP EQUIPMENT


LOAD RUNNER Ladder Rack

INSTALL STEP 07**FINAL TIGHTENING OF FASTENERS**

Tighten all 8 fasteners on the FRONT CROSSBAR/FRONT/REAR TRUSS Subassembly and all 4 fasteners on the MIDDLE CROSSBAR/FRONT/REAR TRUSS Subassembly to 25 FT-LBS torque on both the Curb and Street Side.

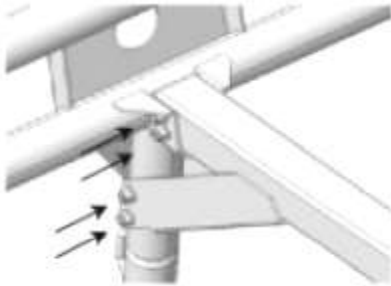

FRONT CROSSBAR/FRONT/REAR TRUSS Subassembly

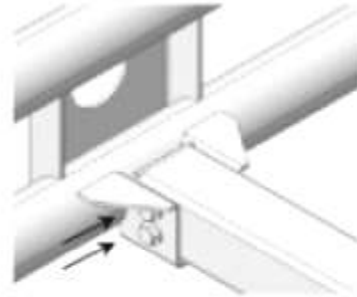

MIDDLE CROSSBAR/FRONT/REAR TRUSS Subassembly



GENERIC PICTURE—MAY NOT LOOK LIKE YOUR FASTENER. MOUNTING SCREW WITH WASHERS AND BUTYL TAPE BEFORE INSTALLATION (LEFT) AND WHAT IT SHOULD LOOK LIKE AFTER INSTALLATION (RIGHT).

**STOP**

DOUBLE-CHECK ALL FASTENER LOCATIONS TO BE SURE THAT ALL FASTENERS ARE TIGHTENED TO SPECIFICATIONS!

STOP

YOUR INSTALLATION IS NOW COMPLETE! STOW THIS COPY IN THE VEHICLE FOR FUTURE REFERENCE!

TOO MUCH WEIGHT WILL GREATLY REDUCE THE STABILITY OF YOUR VEHICLE. WEIGHT CARRIED ON AN OVERHEAD RACK WILL SIGNIFICANTLY INCREASE THE VEHICLE'S TENDANCY TO "OVERTURN"!



ADRIAN STEEL CO. MAKES NO REPRESENTATION OR WARRANTY AS TO THE AMOUNT OF WEIGHT THAT CAN BE CARRIED SAFELY BY OR WITHOUT DAMAGING THE BODY OF YOUR VEHICLE. FOR GUIDANCE, WE RECOMMEND THAT YOU CONSULT YOUR VEHICLE MANUFACTURER AS TO THE AMOUNT OF WEIGHT THAT CAN BE CARRIED.

DO NOT OPERATE YOUR VEHICLE WITH THE REAR CROSSBAR REMOVED!



ADRIAN STEEL®

Cargo Management Solutions for Commercial Vehicles

ADDITIONAL WEIGHT CARRIED ABOVE THE FLOOR OF THE TRUCK BED (FOR EXAMPLE ON A LADDER RACK) WILL INCREASE THE TENDENCY OF THE VEHICLE TO OVERTURN. CONSULT YOUR VEHICLE MANUFACTURER FOR THEIR RECOMMENDED RATING. ALWAYS KEEP HEAVY LOADS AS LOW AS POSSIBLE AND CENTERED ON THE VEHICLE. PERIODICALLY CHECK FOR BOLT TIGHTNESS, RETIGHTEN ALL BOLTS AFTER FIRST USE.



FOR TECHNICAL SUPPORT CALL:

1-800-677-2726

ASK FOR CUSTOMER CARE DEPT.

HOURS: Monday-Friday 8:00 A.M. to 5:00 P.M. (EASTERN)


Introduction / Comments:

This load runner is manufactured for install fitment on extended cab Silverado pick-up trucks, with a 5.8' bed.


Note:

It is advised that all fasteners used in this assembly and installation should be checked for tightness at the following intervals: @ 2-weeks and again @ 6-weeks of operation. This preventive maintenance step must be completed to ensure your Product gives you long service life.

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	68852-B	REAR SLR-5.8FC KIT, BLK	1
2	26613-0	LOADRUNNER KIT, WELDMENT	1

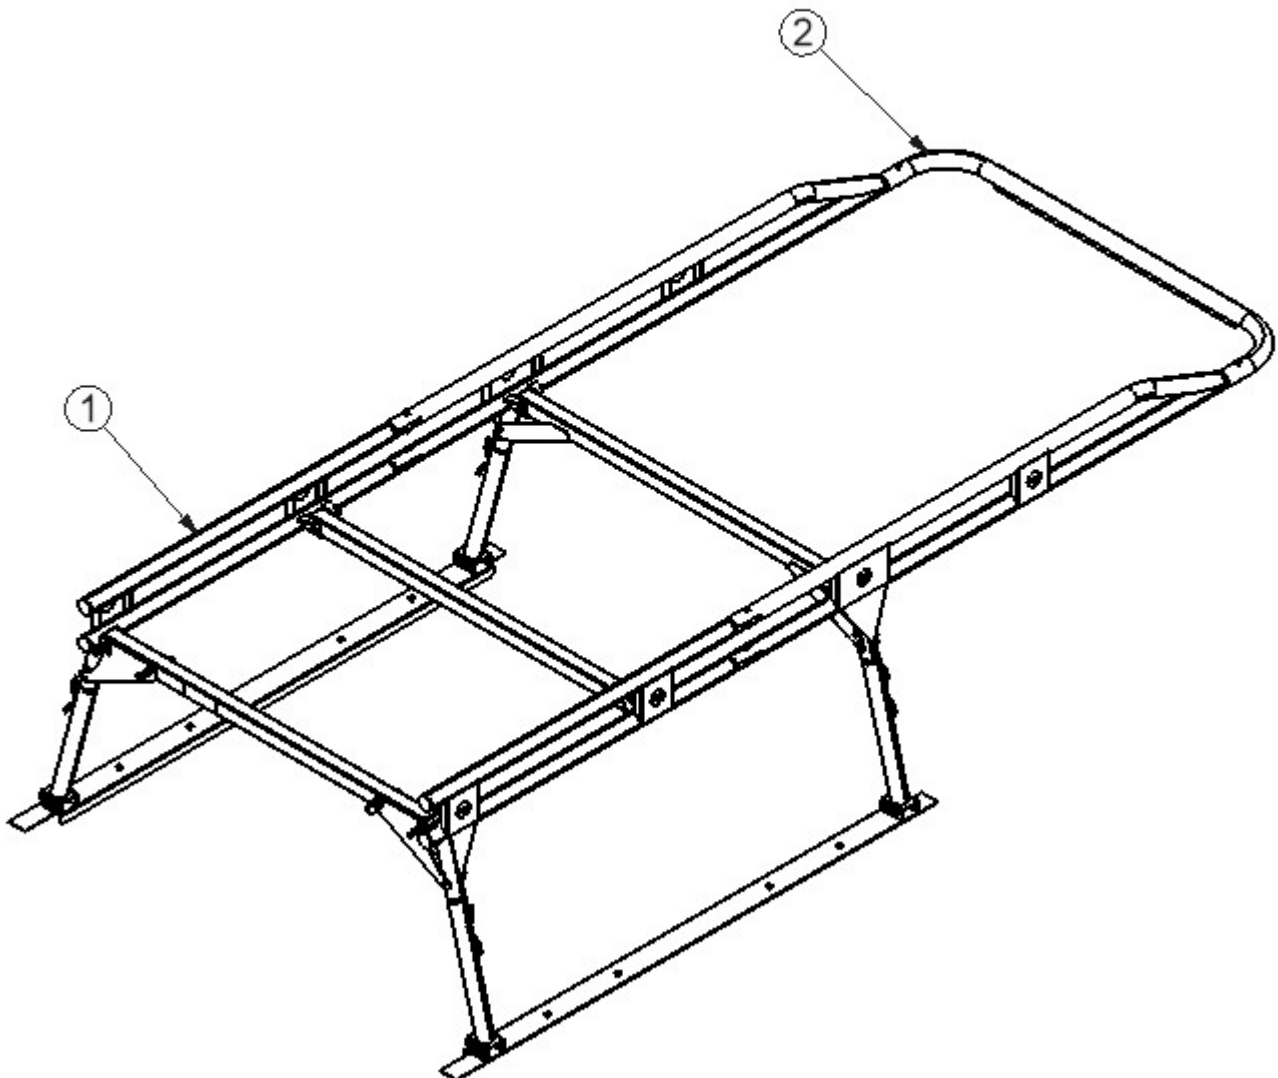

- PRECAUTIONS -

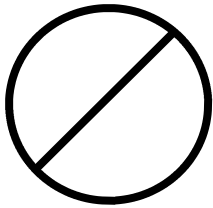

CAUTION
THE USE OF AIR IMPACT TOOLS CAN
OVER-TORQUE FASTENERS AND
CAUSE FASTENER FAILURE!




CAUTION
ALL INSTALLATION HOLES SHOULD BE SEALED
WITH SILICON OR BUTYL SEALANT TO PREVENT
EXHAUST FUMES FROM ENTERING THE VEHICLE!



DANGER
INSPECT FOR FUEL TANK, FUEL LINES, BRAKE LINES, HIGH
VOLTAGE BATTERIES AND ELECTRICAL LINES PRIOR TO
DRILLING TO AVOID DAMAGING CRITICAL VEHICLE SYSTEMS
OR INJURY TO INSTALLER DURING INSTALLATION PROCESS!



CAUTION
TO AVOID DAMAGING THE VEHICLE ALWAYS USE DRILL
STOPS WHEN DRILLING ANY INSTALLATION HOLES!
ADRIAN AVAILABLE PART #'S 31119-0 (3/8" X 1/2"
DEEP), 31121-0 (1/2" x 1/2" DEEP)

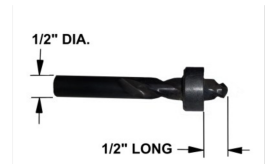

- IMPORTANT WARRANTY REQUIREMENTS -

1. SUBSTITUTING ADRIAN STEEL SPECIFIED FASTENERS FOR ASSEMBLY AND/OR INSTALLATION WILL VOID YOUR PRODUCT WARRANTY.
2. ALL HOLES DRILLED INTO VEHICLE SHOULD HAVE THE RAW METAL EDGES SEALED WITH A SELF-ETCHING PRIMER TO RESIST CORROSION AND POTENTIAL FASTENER POINT FAILURE.
3. ALL FASTENERS USED IN THE INSTALLATION OF THIS PRODUCT SHOULD BE TIGHTENED TO THE TORQUE(S) SPECIFIED IN THESE INSTRUCTIONS.
4. THESE INSTRUCTIONS SHOULD BE KEPT WITH THE VEHICLE.

THE BASIC TOOLS NEEDED FOR MOST INSTALLATIONS



DRILL

DRILL BIT WITH
STOP

RATCHET, SOCKETS
AND/OR WRENCHES


SCREWDRIVERS

MEASURING TAPE

ADDITIONAL TOOLS MAY BE NEEDED FOR THIS INSTALLATION AND THEY WILL BE IDENTIFIED IN THE STEPS THAT FOLLOW.

**Installation and/or Assembly Fasteners
BAG63310**



ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	BAG0709-A	7" x 9" 3MIL AUTOBAG	1
2	FAS0387	SCREW,HH 5/16-18X3.25 SS	4
3	FAS0552	Washer, Flat, 5/16, SST	46
4	59269	SPACER, STAINLESS STEEL	4
5	FAS0248	Nut, Nylon Insert Lock, 5/16-18 SST	28
6	FAS0427	SCREW,HH 5/16-18X2.75 SS	8
7	FAS0426	SCREW,HH 5/16-18X2.25 SS	6
8	FAS0436	SCREW,HH 5/16/18X0.75 SS	2
9	30892-0	CAP PLUG, RND 1.750 BLK	2
10	37516-0	Cap/Plug 1-1/4" Tube	2
11	05586-0	Butyl Tape, T224 -1/2"X 1' Roll	2
12	26618-0	Silicone Sealant	1
13	FAS0242	Screw, Hex Hd, 5/16-18x1.50 Stainless Steel	8
14	FAS0164	WASHER,FLAT,SAE,5/16,ALUM	8
15	FAS0123	Washer, Lock, Ext. Tooth, 1/4, NI ZN	3
16	FAS0360	SCREW,ST,THP 14-10X.75 SS	3

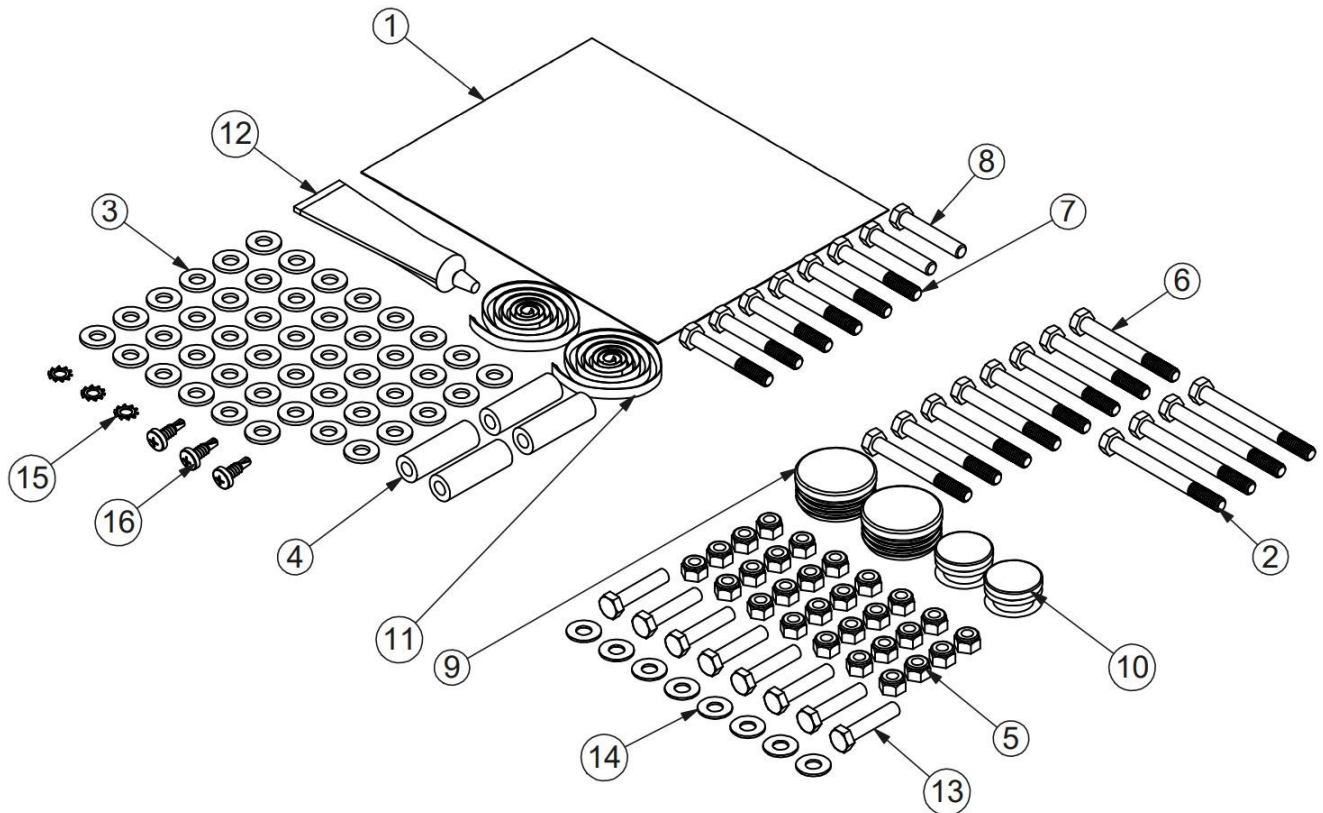

Step 01 Assembling the front half of the load runner.

NOTE: APPLY 05586-0 BUTYL TAPE AROUND BOTH ENDS OF EVERY FASTENER BEFORE TIGHTENING!

- A) Using the silicone sealant 26618-0, run a bead around each inside edge of the 26572 tube before inserting.
- B) Push 26580 and 26582-0 onto the ends of 26572, ensuring both of the holes line up.
- C) Insert each (2) FAS0427 bolt and FAS0552 washer through each of the holes.
- D) Place (1) FAS0552 washer on each (2) bolt and thread (1) FAS0248 lock nut on each (2) bolt and tighten using a 1/2" & 9/16" socket.

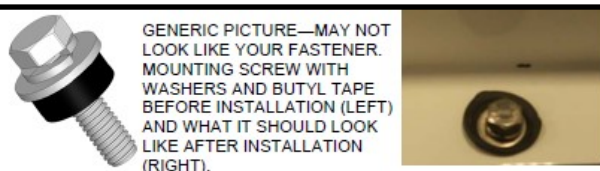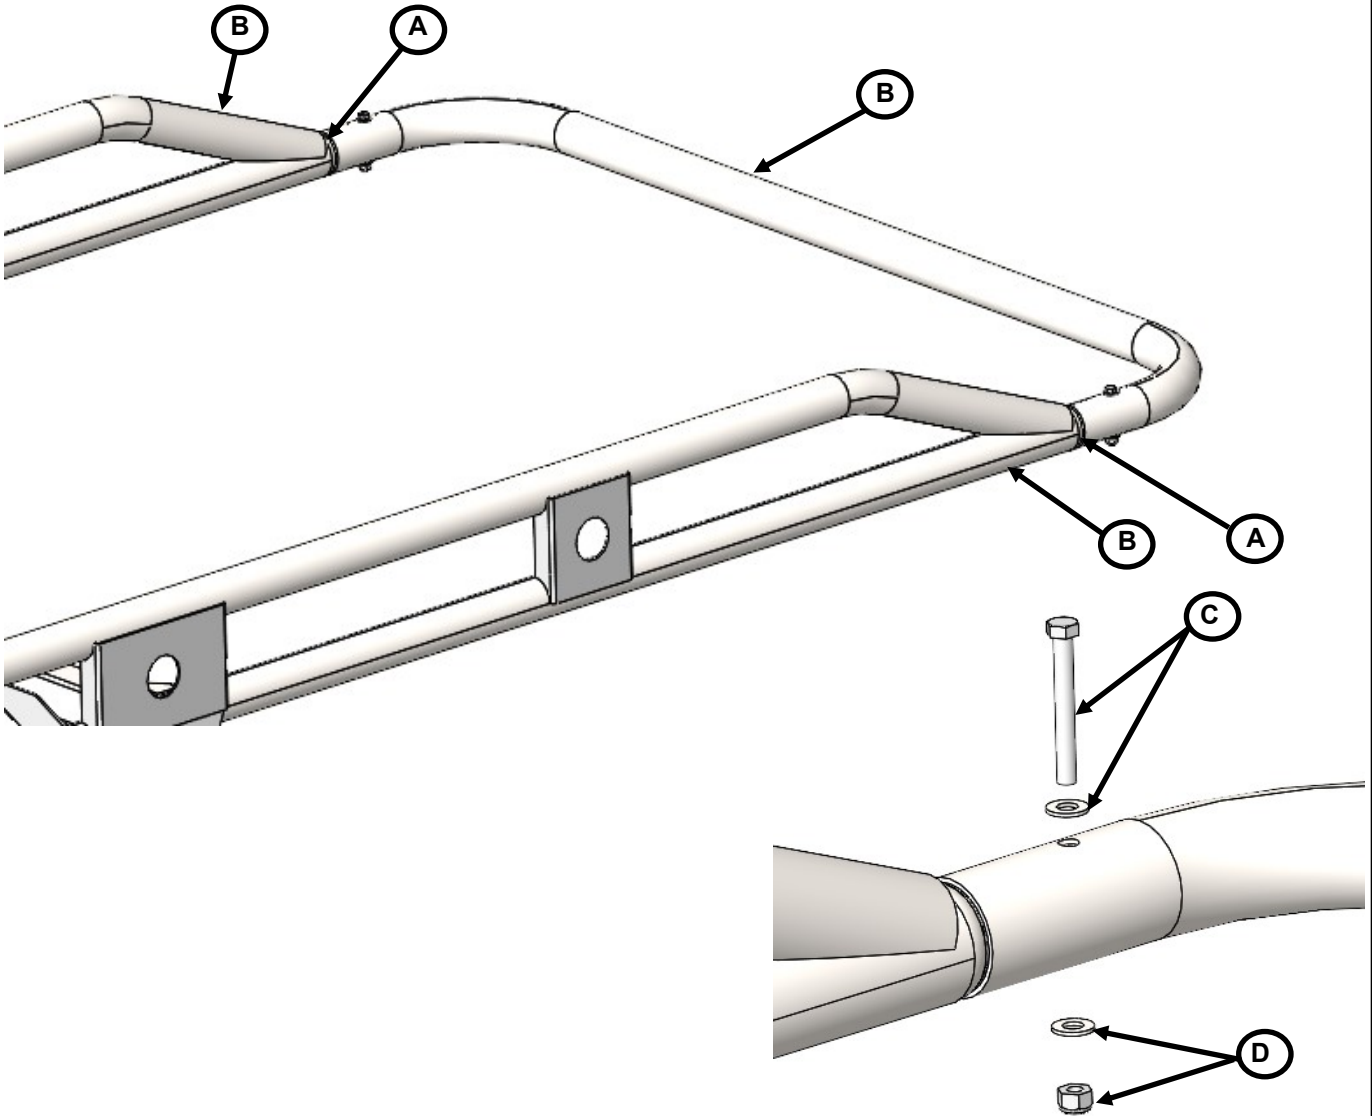


NOTE:
Components may be difficult to be joined together and can be tapped together with a rubber mallet to assist with assembly. For assistance with aligning holes, a 10" drift punch may be used.

Step 02 Assembling the rear half of the load runner.

NOTE: APPLY 05586-0 BUTYL TAPE AROUND BOTH ENDS OF EVERY FASTENER BEFORE TIGHTENING!

- A) Push (4) 26610 square tube plugs into Cross Tubes 26574 and 26578.
- B) Place 26574 Cross tube assembly in front side rail pockets on 69128 and 68851. Place (4) FAS0245 washer on to (4) FAS0244 bolt and put in place.
- C) Place (4) washer FAS0245 and (4) nut FAS0248 onto bolt FAS0244 and tighten.
- D) Place (1) rear cross tube 26577 in rear side pockets on 69128 and 68851.
- E) Position (2) of 26603 on each side of rear tube of 69128 and 68851, lining up the (3) holes. Pin in place by inserting (2) Pin and Ring key 26611 in the upper 2 holes.
- F) Place (1) FAS0552 washer on each (6) bolt and thread (1) FAS0248 lock nut on each (6) bolt and tighten front (2) using a 1/2" & 9/16" socket, leaving
- G) Push (4) 26609 tube plug on rear of each (4) rear facing round tube.

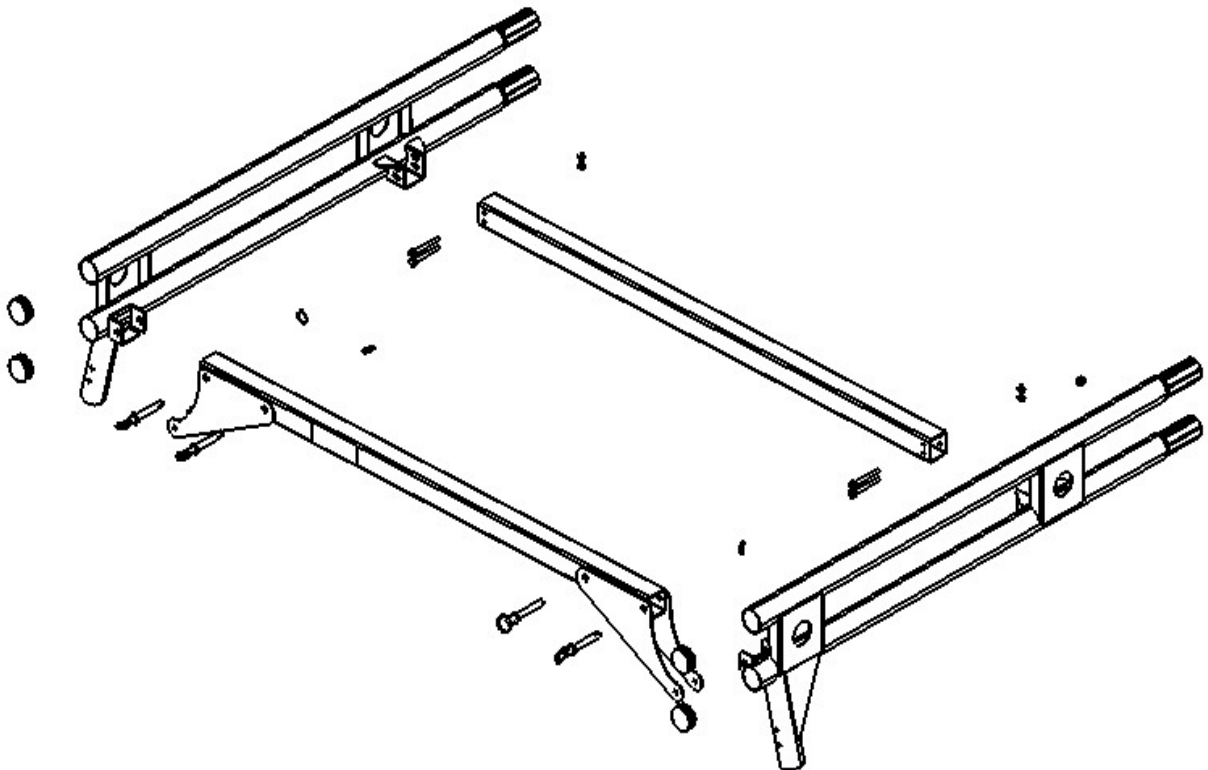

Step 03 Joining the front half and the rear half of the load runner together.

NOTE: APPLY 05586-0 BUTYL TAPE AROUND BOTH ENDS OF EVERY FASTENER BEFORE TIGHTENING!


A) Using the silicone sealant 26618-0, run a bead around the end of both the top and bottom tube of 69128 and 68851 before inserting into 26580 and 26586.

B) Push the front half and rear half of the ladder rack together, ensuring that the

C) Insert each (2) FAS0436 bolt through the holes.

D) Insert each (2) FAS0426 bolt through the holes.

E) Place (1) FAS0552 washer on each (4) bolt and thread (1) FAS0248 lock nut on

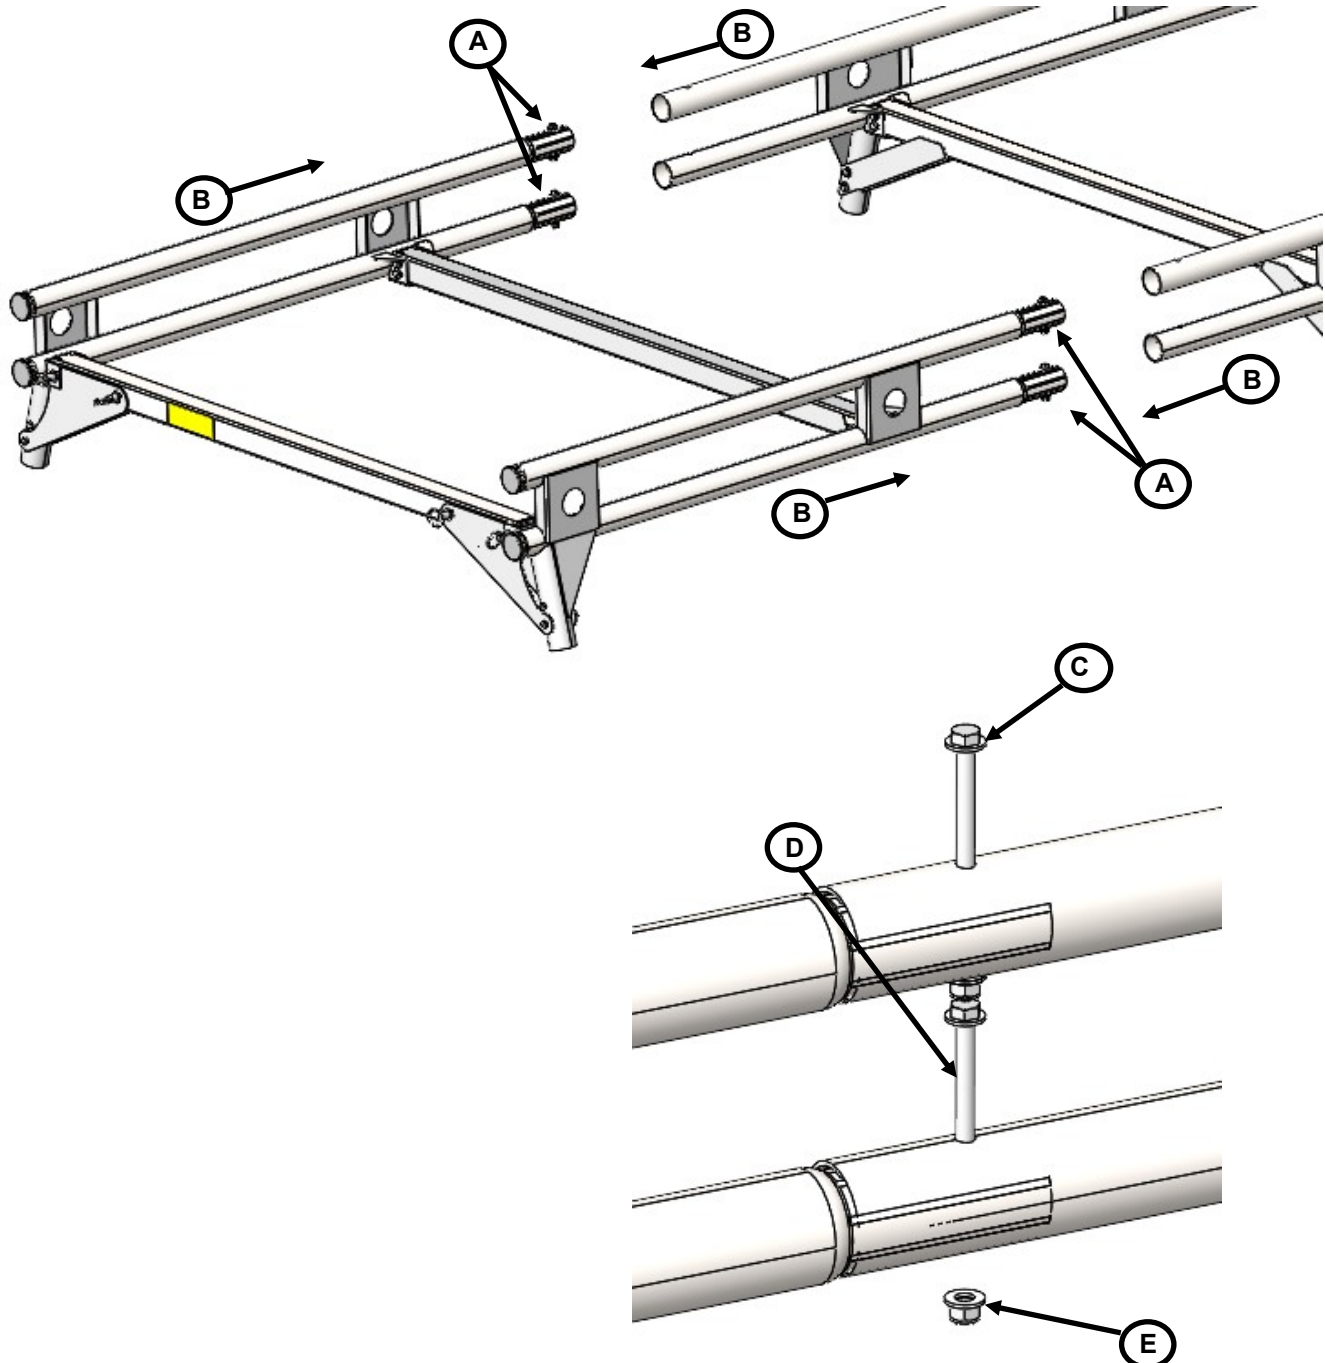

Step 04 Attaching the corner posts to the load runner.

NOTE: APPLY 05586-0 BUTYL TAPE AROUND BOTH ENDS OF EVERY FASTENER BEFORE TIGHTENING!

A) Using the silicone sealant 26618-0, run a bead around the top of the (2) 26606 front tubes and the (2) 26606 rear tubes before inserting.

B) Push (1) 26606 (WITH 1 BOLT HOLE) into 69128 on rear, and (1) 26606 (WITH 1 BOLT HOLE) into 26590 on front, with them angling outwards to steetside and curbside, ensuring all of the holes line up.


C) Push (1) 26606 (WITH 3 BOLT HOLES) into 69128 on rear, and (1) 26606 (WITH 3 BOLT HOLES) into 26590 on front, with them angling outwards to steetside and curbside, ensuring all of the holes line up.

D) Insert each (2) FAS0426 bolt through the holes.

E) Place (1) FAS0552 washer on each (2) FAS0427 bolt.

F) Insert bolts through the bottom hole of each (4) 63286.

G) Place (1) FAS0552 washer on each (4) bolt and thread (1) FAS0248 lock nut on each (4) bolt and tighten using a 1/2" & 9/16" socket. Also, tighten the other (4) fasteners on 63286 from step 2F.

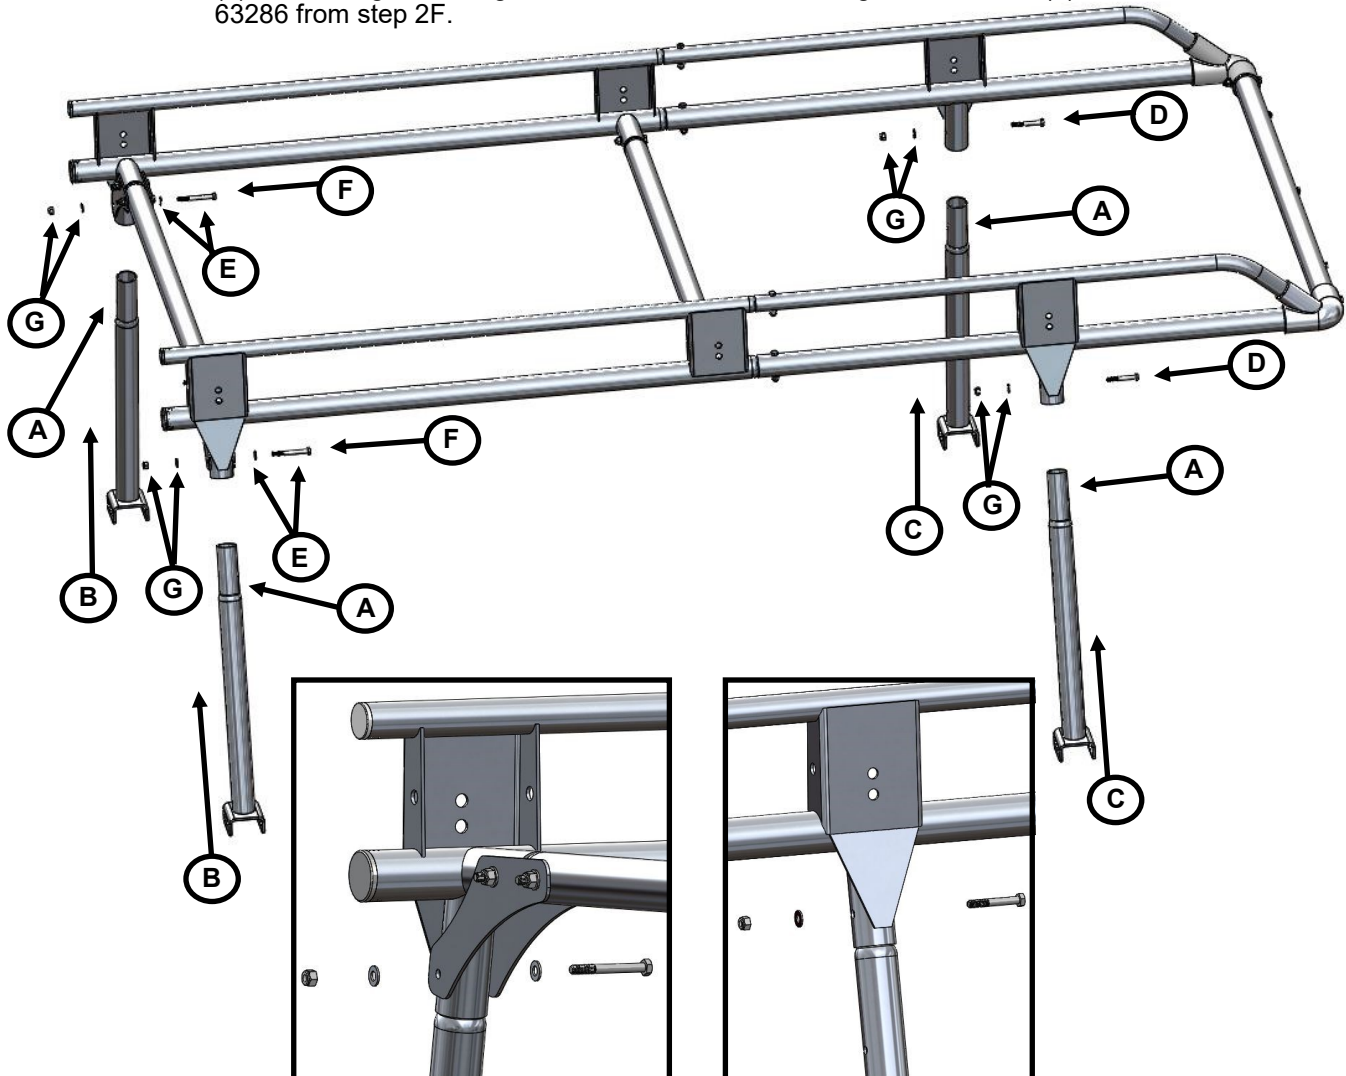

Step 05 Attaching the wind deflector.



NOTE: APPLY 05586-0 BUTYL TAPE AROUND BOTH ENDS OF EVERY FASTENER BEFORE TIGHTENING!

A) Position 27231 against 26572 and centered. The center flat of 27231 should be perpendicular to the ground, with the longer flat towards ground.


B) While holding in place, center punch the (3) hole locations on 27231, set aside, then pilot drill the (3) holes with a 3/16" diameter drill bit on 26572.

C) Place (1) FAS0123 lock tooth washer on each (3) FAS0360 screw.

D) Position 27231 against 26571 with holes lined up in orientation listed in 5A, and tighten each (3) screw using a Phillip's driver.

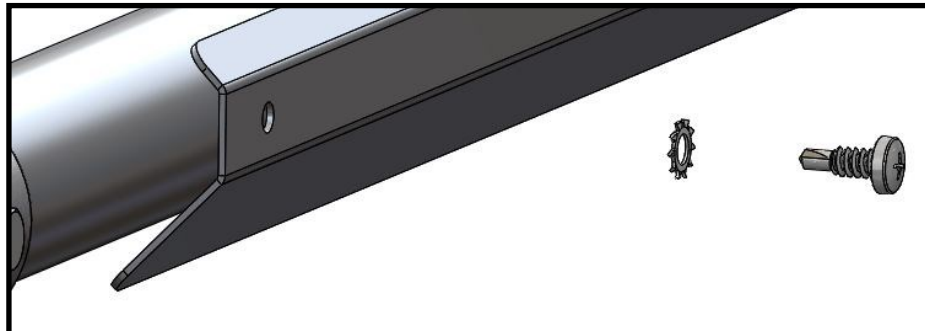
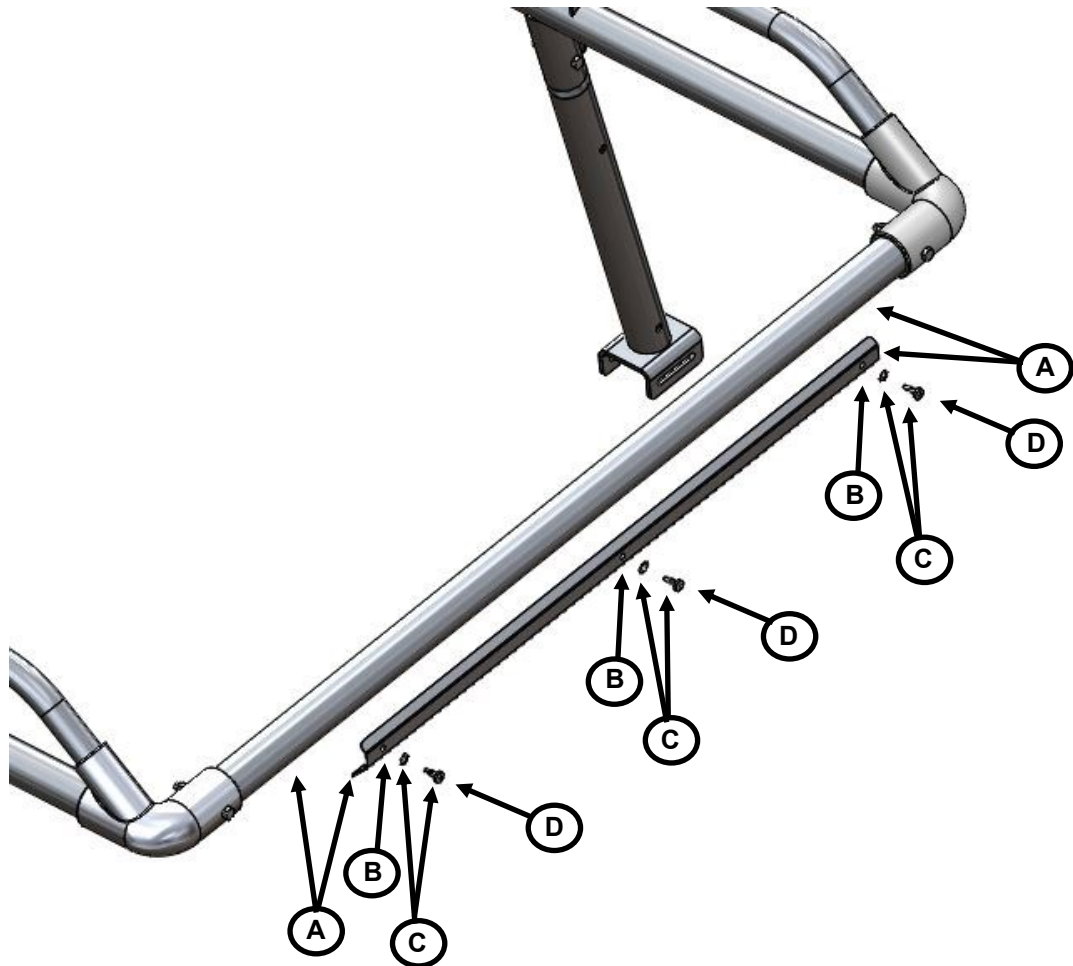


Step 06 Build complete, ensure all fasteners have been tightened.

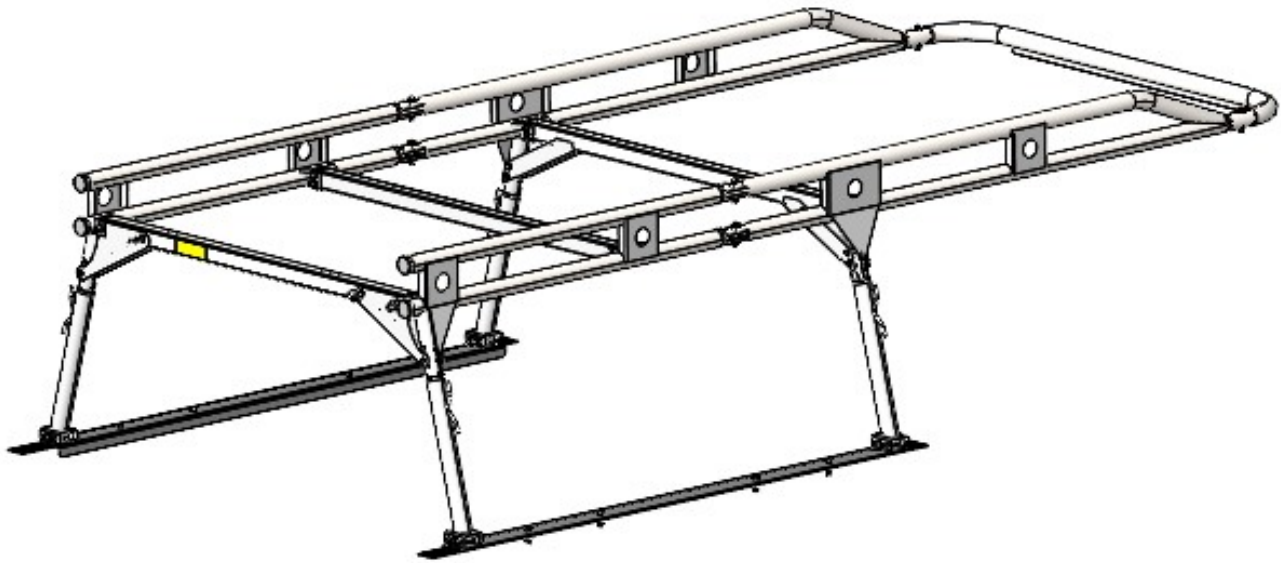



Step 07 Applying a foam strip to each Rail Plate 68849-B (2).

A) Cut (2) strips of foam from the 19157-0 roll, each being 67.5" long.

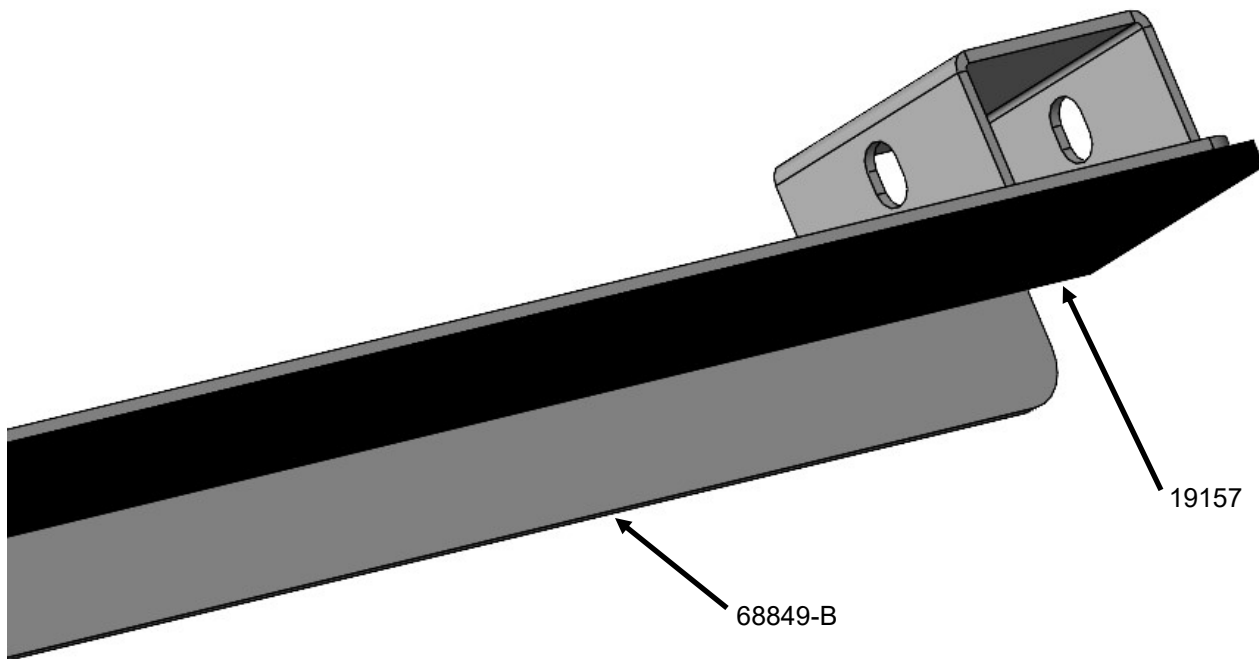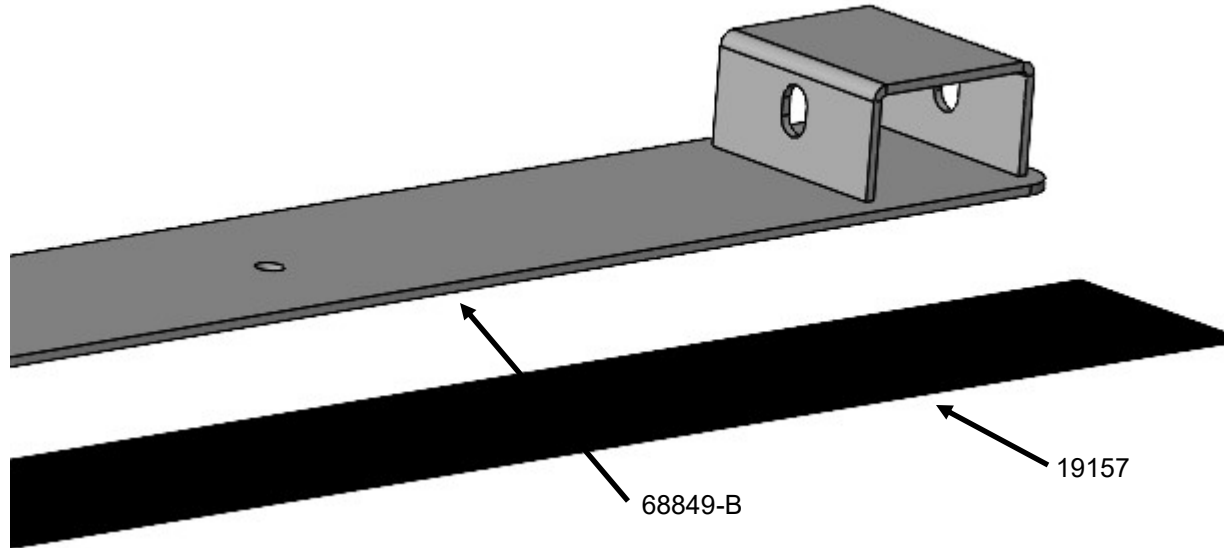


Step 08 Positioning each Rail Plate on the bed rails.

- A) Measuring from the front bed rail inside edge to the front end edge of 68849-B.
Same for both Sides.

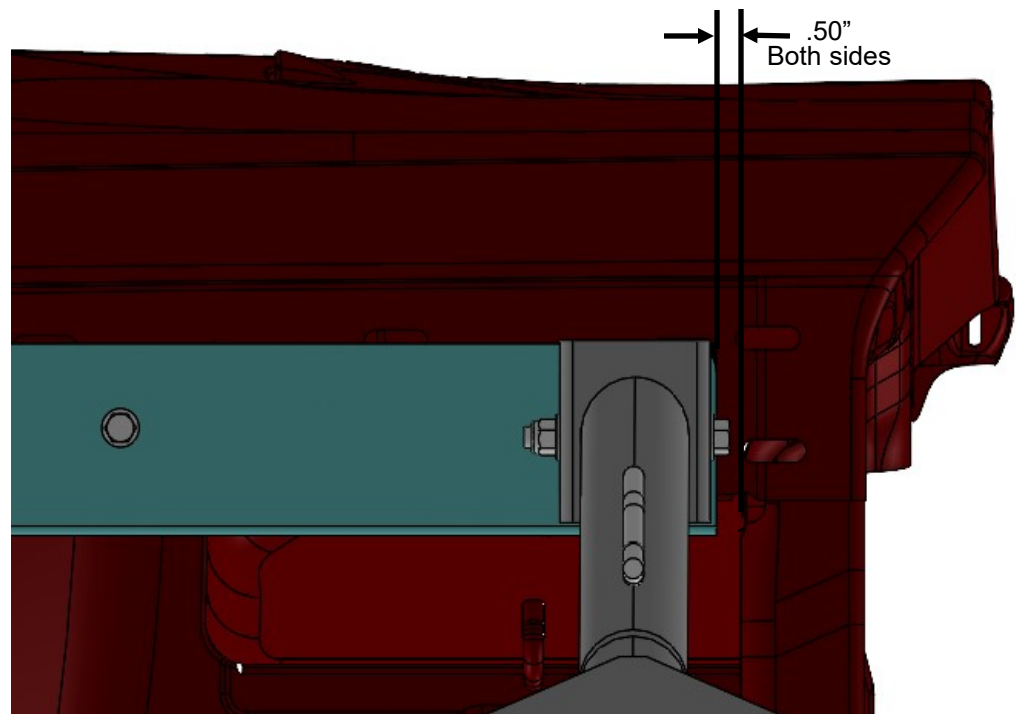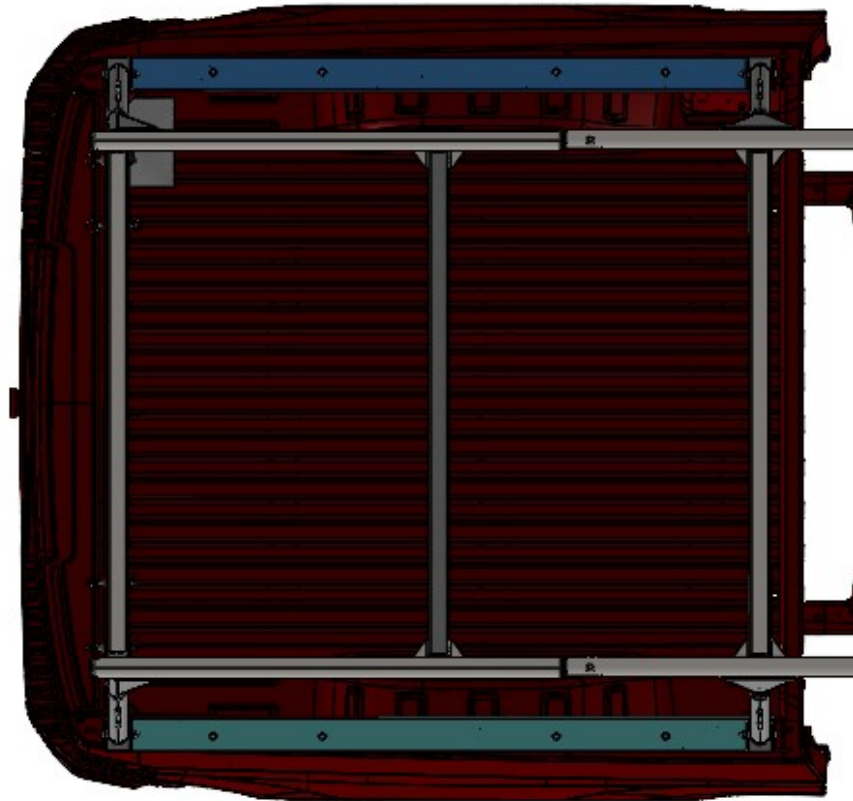

Step 09 Drilling the mounting holes through the bed rails.

A) Using a 21/64" diameter drill bit, drill a thru-hole centered in holes in Rail Mount.


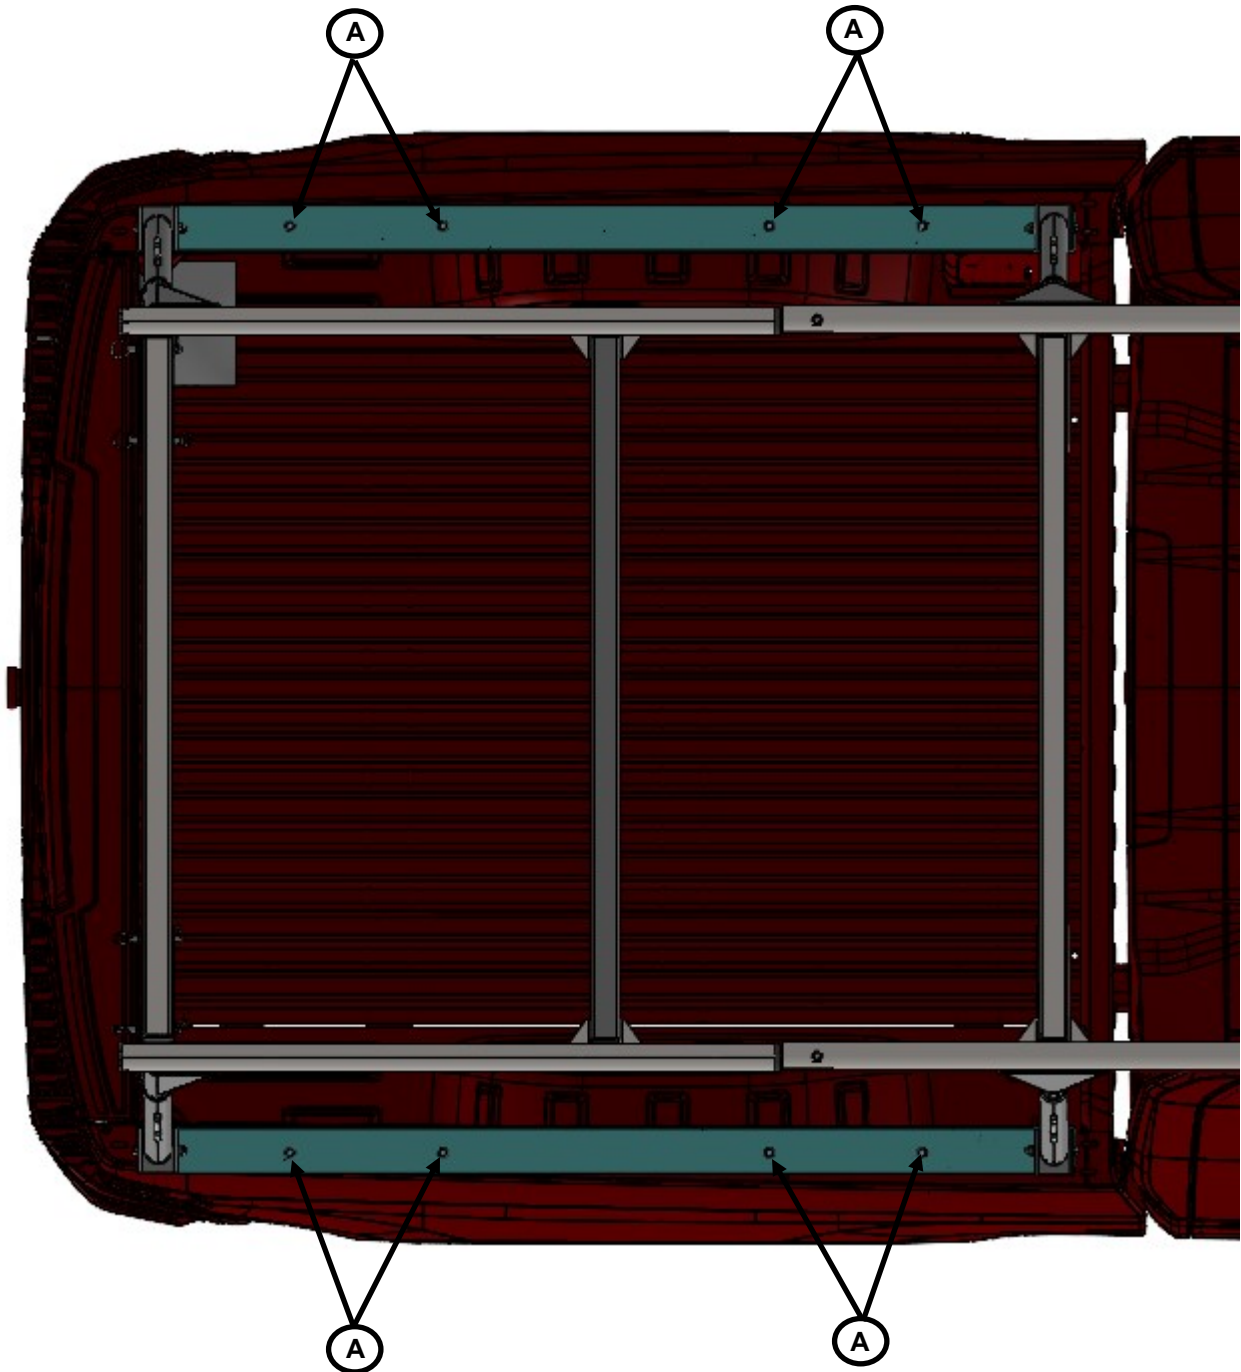


Step 10 Bolting the mounting feet to the bed rails.

A) Place (1) FAS0552 washer on each (8) FAS0242 bolt and insert bolts through the drilled holes.

B) Place (1) FAS0552 washer on each (8) bolt and thread (1) FAS0248 lock nut on each (8) bolt and tighten using a 1/2" & 9/16" socket.



C) Ensure all (2) mounting feet are tightened to the bed rails.

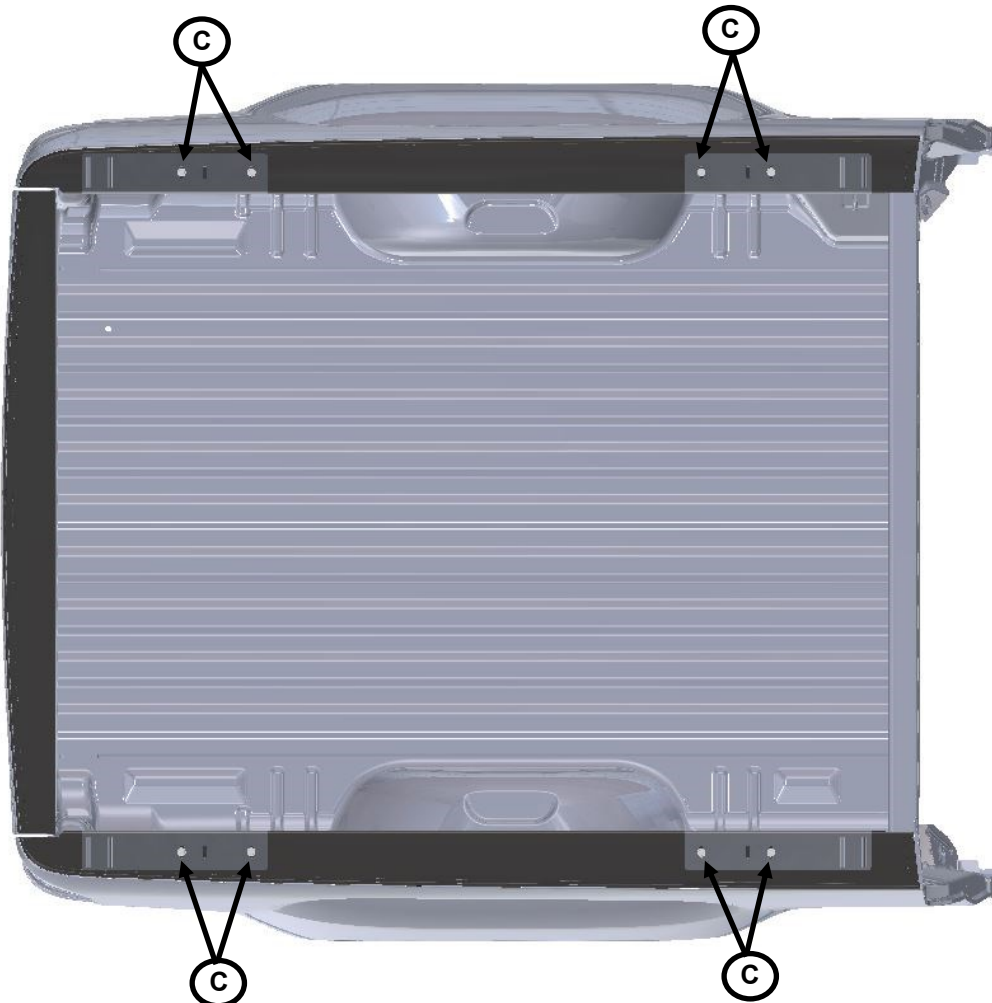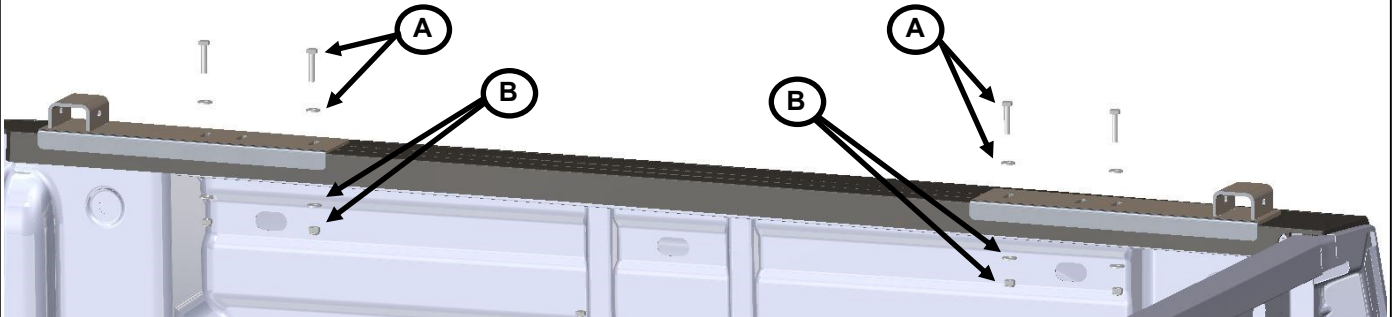


Step 14 Attaching the load runner to the bed.

NOTE: TO ATTACH THE LOAD RUNNER AND PREVENT DAMAGE AND INJURY, PARK ON A FLAT AND LEVEL SURFACE AND HAVE AT LEAST ONE PERSON PER CORNER TO LIFT THE LOAD RUNNER UP TO THE BED RAILS. COVER PAINTED VEHICLE SURFACES TO PREVENT SCRATCHING.

- A) Lower the load runner evenly onto the Rail plates.
- B) Place (1) FAS0552 washer on each (4) FAS0387 bolt.
- C) Position each (4) 59269 spacer in each post foot bracket and insert the bolts
- D) Place (1) FAS0552 washer on each (4) bolt and thread (1) FAS0248 lock nut on each (4) bolt, center the load runner on the truck bed and tighten using a 1/2" & 9/16" socket.
- E) Place 25689-0 Adrian Steel sticker centered on rear cross truss, and (1) warning sticker on each side of 25689-0, as well as on CS and SS rear side trusses.
- F) Ensure all fasteners are tight.

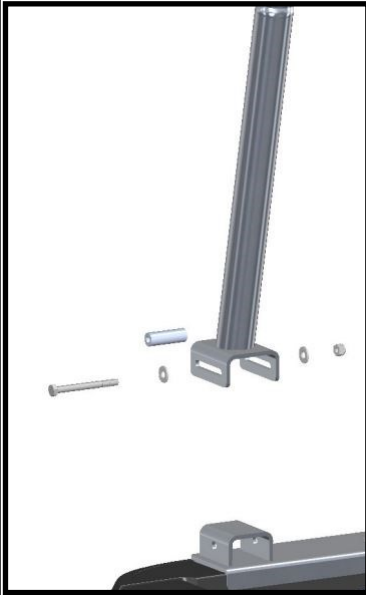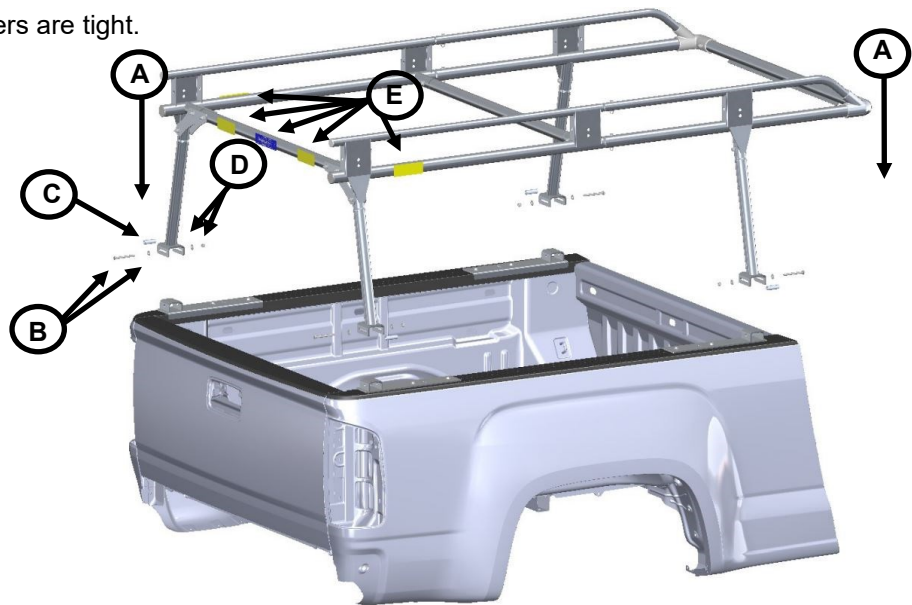

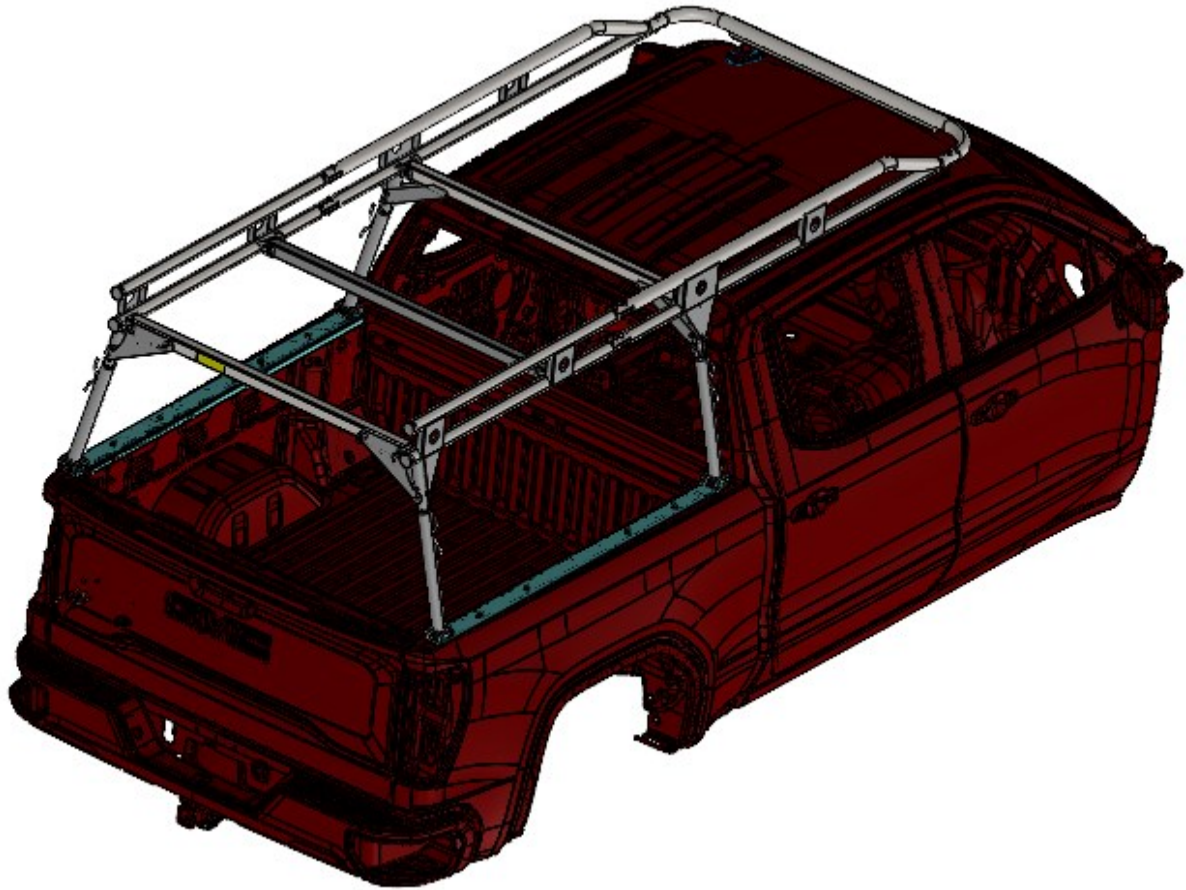

TOO MUCH LOAD WEIGHT CARRIED ON THE LOAD RUNNER WILL GREATLY INCREASE THE CHANCES OF A VEHICLE ROLLOVER! CHECK WITH THE VEHICLE MANUFACTURER FOR LOAD LIMITS!

DOUBLE CHECK ALL FASTENERS LOCATIONS TO BE SURE THAT ALL FASTENERS ARE TIGHTENED TO SPECIFICATIONS.

YOUR INSTALLATION IS NOW COMPLETE!

STOW THIS COPY IN THE VEHICLE FOR FUTURE REFERENCES!

STOW THIS COPY IN THE VEHICLE FOR FUTURE REFERENCES!

ADRIAN STEEL COMPANY IS NOT RESPONSIBLE FOR DAMAGES DUE TO LOAD TYPE OR SIZE CARRIED ON THE LOAD RUNNER.