



PRODUCT WEIGHT
1 lbs

WIDTH x DEPTH x HEIGHT
ALL SPARs

CAPACITY
N/A

COLOR
N/A

CATALOG NUMBER
SPARLHK

PRODUCT FEATURES

THE LOCKING HANDLE KIT IS AN OPTIONAL ACCESSORY FOR ANY OF THE ADRIAN STEEL SPAR, SLIDING PARTITION. THE KIT COMES WITH A MOUNTING PLATE, FASTENERS, AND A LOCKABLE HANDLE THAT REPLACES THE STANDARD HANDLE PROVIDED IN THE PARTITION'S HARDWARE BOX. KEYS FOR THE HANDLE ARE PROVIDED AS WELL.

SEE PAGE 2 FOR THE LIST OF PRODUCTS THIS ACCESSORY WORKS WITH.



CATALOG NUMBER SPARLHK

PRODUCT APPLICATION

This product is designed to be installed onto any of the Adrian Steel sliding partitions.

ACCESSORIES THAT WILL WORK WITH THIS PRODUCT

| <i>CATALOG NUMBER</i> | <i>DESCRIPTION</i> |
|------------------------------|---------------------------------|
| SPARFTH | SLIDING PARTITION, FT HR |
| SPARFTM | SLIDING PARTITION, FT MR |
| SPARSPH | SLIDING PARTITION, SP HR |
| SPARPM | SLIDING PARTITION, PM |

SPECIAL APPLICATION NOTES

Introduction / Comments:

ASSEMBLY INSTALLATION INSTRUCTIONS FOR THE SPARLHK—SLIDING PARTITION, LOCKING HANDLE KIT

Note:

It is advised that all fasteners used in this assembly and installation should be checked for tightness at the following intervals: @ 2-weeks and again @ 6-weeks of operation. This preventive maintenance step must be completed to ensure your Partition gives you long service life.




SPARLHK SLIDING PARTITION, LOCKING HANDLE KIT

PARTS AND TOOLS NEEDED.

Locking Handle-
(1) 30752-0
With Keys

SPARLHK Spacer-
(1) 63082

Fastener Bag-
(1) BAG63060
Has (2) FAS0461
Screw, FHP M5 .8 X
8mm ZP in it only

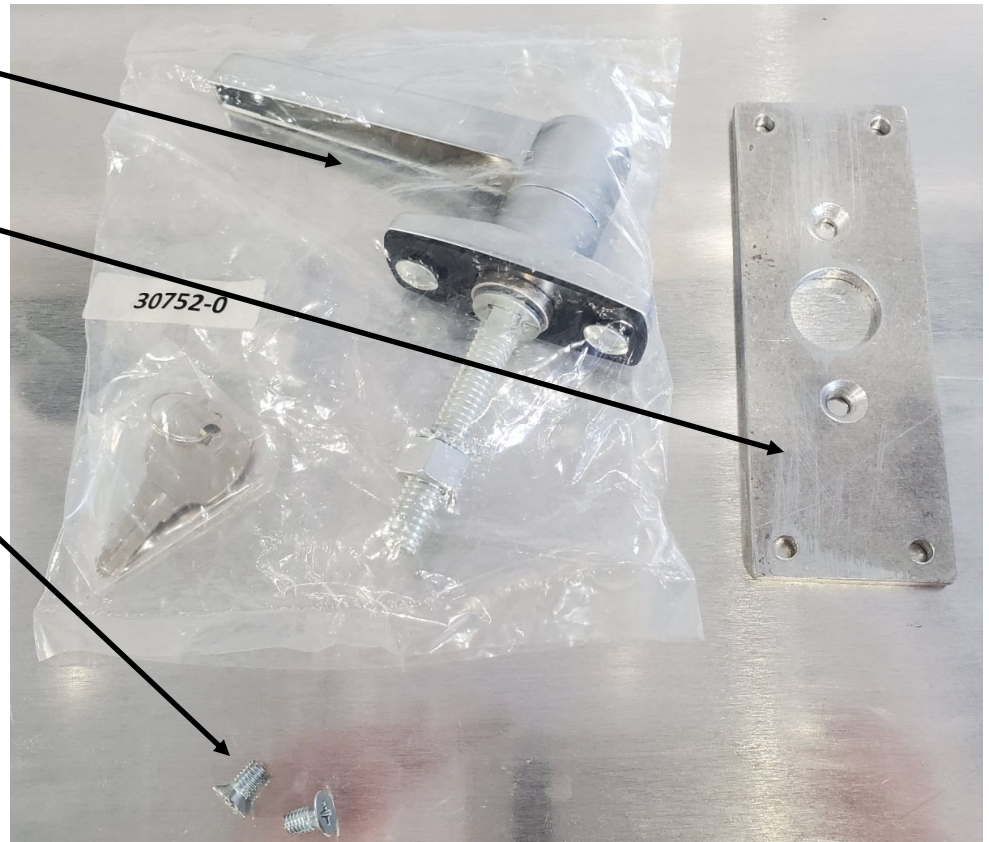

Tools Needed:


3/8 Wrench-

Phillips Head Driver-

1/8 Allen Key-



Step 1: Fasten the locking handle to the mounting spacer using the provided (2) screws. The rubber gasket will go on the side without the chamfered holes and the handle will point toward the cutout on the center hole of the mounting spacer.

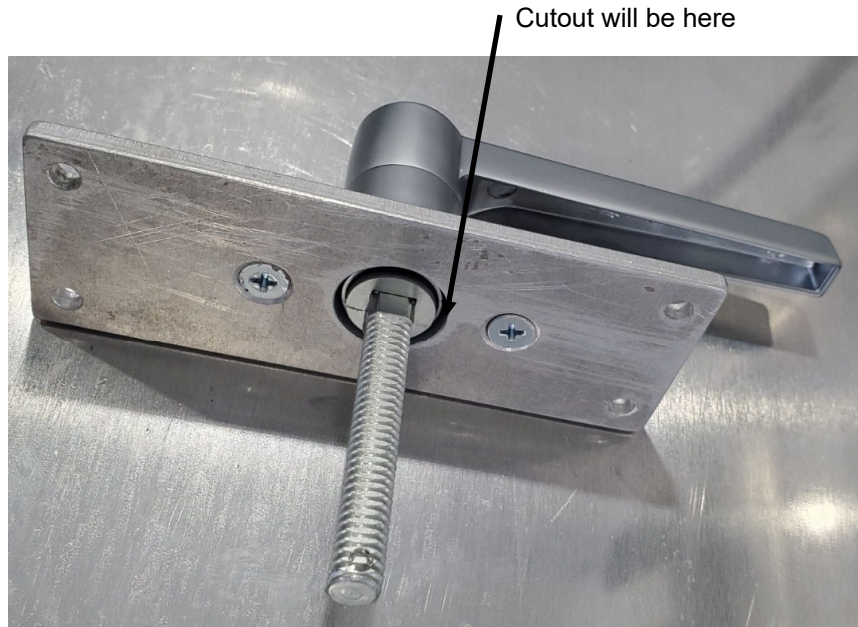


Flat head fasteners will set flat on the back side of the mounting spacer

Step 2: Insert the locking handle through the hole in the door panel with the handle on the cab side of the door. While doing this insert the spacer and latch assembly included the sliding door partition hardware kit. The spacer will be in between the latch assembly and the door.




Cab Side

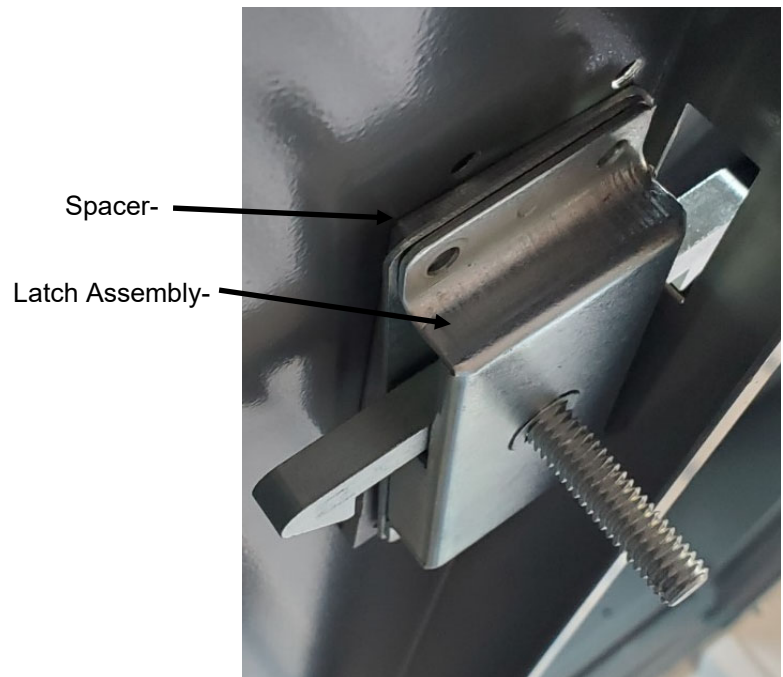

Cargo Side

Step 3: Fasten the handle and latch assembly together using the (4) sets of fasteners included in the sliding door partition fastener bag. Screw heads are on the cab side of the door.

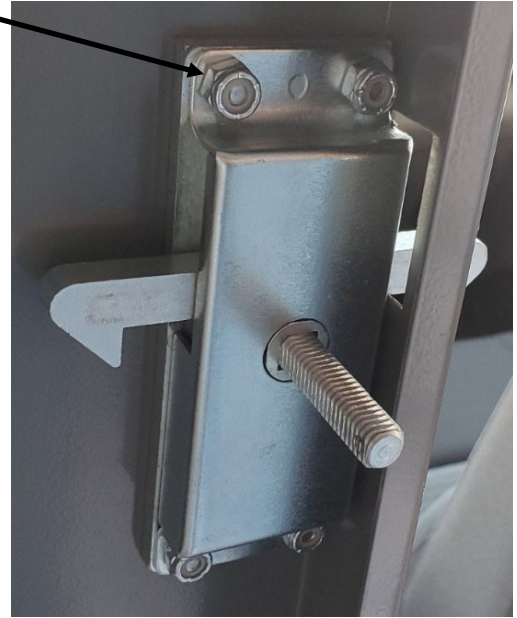

Step 4: Add the (2) spacers from the sliding door partition hardware kit to the threaded shaft and secure the paddle handle in place with the set screw. Paddle handle is in the hardware kit for the partition.

Spacers-
Paddle Handle
Set Screw-



INSTALLATION IS COMPLETE! MAKE SURE THAT ALL FASTENERS HAVE BEEN THIGHTED!