

AD Series Accessory Mounting Kit Assembly/Installation Instructions

The following page(s) cover the installation of various Rail Adapter Kits used on the new ASCO AD Series Shelving Kits.

RKPSV, AD "Rail Sys, AD Series, Left Hand Door"
 RKPSV, WB "Rail Sys, AD Series, Long Wheel Base"
 RKPSV, LB "Rail Sys, AD Series, Xtra-Long Wheel Base"

BRK1AEPs "Accessory Bracket Kit, End Panel"

WU: 43 "Catalog File, 3-Sheet, 12 DX34" Hx6"W"
 (Requires (2) RKABRK2 per install)

BEFORE YOU START

ALL FASTENERS USED IN THE ASSEMBLY AND INSTALLATION OF THIS PRODUCT SHOULD BE TIGHTENED TO THE SPECIFIED TORQUE. THE USE OF NON-STANDARD FASTENERS AND/OR DEVIATING FROM THE FASTENERS SPECIFIED IN THE INSTRUCTION (S) MAY VOID YOUR PRODUCT WARRANTY.

YOU WILL NEED THE FOLLOWING TOOLS IN ORDER TO COMPLETE THIS JOB.

7/16" End Wrench, Ratchet w/7/16" Socket,
 Phillips Screwdriver, Torque Wrench

Attach both End Panel Mounting Weldments (BKABRK2) to the 43 with fasteners supplied with the kit. Note, the upper weldment will use existing holes, while the lower weldment will require marking and drilling (2) 9/32" dia. thru mounting holes in the side wall of the unit. Then attach assembly to the AD Shelf End Panel in desired location. See photo's below for details on mounting weldments to shelf end panel.

43



YOUR INSTALLATION IS NOW COMPLETE! STOW THIS COPY IN
 THE VEHICLE FOR FUTURE REFERENCE!

AD Series Accessory Mounting Kit Assembly/Installation Instructions

WU: ACT3 "Aerosol Can Tray, 3-Hole"
 ACT4 "Aerosol Can Tray, 4-Hole"
 (Requires (2) RKABRK2 per install)

BEFORE YOU START

ALL FASTENERS USED IN THE ASSEMBLY AND INSTALLATION OF THIS PRODUCT SHOULD BE TIGHTENED TO THE SPECIFIED TORQUE. THE USE OF NON-STANDARD FASTENERS AND/OR DEVIATING FROM THE FASTENERS SPECIFIED IN THE INSTRUCTION (S) MAY VOID YOUR PRODUCT WARRANTY.

YOU WILL NEED THE FOLLOWING TOOLS IN ORDER TO COMPLETE THIS JOB.

7/16" End Wrench, Ratchet w/7/16" Socket,
 Phillips Screwdriver, Torque Wrench

Attach both End Panel Mounting Weldments (BKABRK2) to the ACT3 & ACT4 with fasteners supplied with the WRH5 kit. When attaching a accessory to the mounting weldments use existing holes in the accessory, aligning them with holes in the mounting weldments. Then attach assembly to the AD Shelf End Panel in desired location. See photo's below for details on mounting weldments to shelf end panel.

ACT4



YOUR INSTALLATION IS NOW COMPLETE! STOW THIS COPY IN
 THE VEHICLE FOR FUTURE REFERENCE!

**AD Series Accessory
 Mounting Kit Assembly/Installation Instructions**

BRK14EP3 "Accessory Bracket Kit, End Panel"

WU: AGSCH2 "Suction Cup Holder"



BEFORE YOU START

ALL FASTENERS USED IN THE ASSEMBLY AND INSTALLATION OF THIS PRODUCT SHOULD BE TIGHTENED TO THE SPECIFIED TORQUE. THE USE OF NON-STANDARD FASTENERS AND/OR DEVIATING FROM THE FASTENERS SPECIFIED IN THE INSTRUCTION (S) MAY VOID YOUR PRODUCT WARRANTY.

YOU WILL NEED THE FOLLOWING TOOLS IN ORDER TO COMPLETE THIS JOB.

7/16" End Wrench, Ratchet w/7/16" Socket
 Phillips Screwdriver, Torque Wrench



AGSCH2

Attach one End Panel Mounting Weldment (BKA BRK2) to the AGSCH2 with fasteners supplied with the accessory kit. When attaching AGSCH2 to mounting weldment use the upper holes in the AGSCH2, aligning them with holes in the mounting weldment. Then attach assembly to the AD Shelf End Panel in desired location. See photo's below for details on mounting weldment to shelf end panel.



YOUR INSTALLATION IS NOW COMPLETE! STOW THIS COPY IN THE VEHICLE FOR FUTURE REFERENCE!

**AD Series Accessory
 Mounting Kit Assembly/Installation Instructions**

BRK14EP3 "Accessory Bracket Kit, End Panel"

WU: BH4 "Binder Holder, 4-Pocket"
 CBS "Literature Holder, 5-Slot"
 (Requires (2) RKABRK2 per install)



BEFORE YOU START

ALL FASTENERS USED IN THE ASSEMBLY AND INSTALLATION OF THIS PRODUCT SHOULD BE TIGHTENED TO THE SPECIFIED TORQUE. THE USE OF NON-STANDARD FASTENERS AND/OR DEVIATING FROM THE FASTENERS SPECIFIED IN THE INSTRUCTION (S) MAY VOID YOUR PRODUCT WARRANTY.

YOU WILL NEED THE FOLLOWING TOOLS IN ORDER TO COMPLETE THIS JOB.

7/16" End Wrench, Ratchet w/7/16" Socket
 Phillips Screwdriver, Torque Wrench



BH4

CBS

Attach both End Panel Mounting Weldments (BKABRK2) to the WRH5 with fasteners supplied with the WRH5 kit. When attaching WRH5 to mounting weldments use existing holes in the WRH5 aligning them with holes in the mounting weldments. Then attach assembly to the AD Shelf End Panel in desired location. See photo's below for details on mounting weldments to shelf end panel.



YOUR INSTALLATION IS NOW COMPLETE! STOW THIS COPY IN THE VEHICLE FOR FUTURE REFERENCE!

**AD Series Accessory
 Mounting Kit Assembly/Installation Instructions**

BRK1AEP3 "Accessory Bracket Kit, End Panel"

- PA7 "Reflector Flare Kit, 5" (Requires (2) PKABRK2 per install)
- PA8 "Fire Ext. 1A110BC 2.5# (Requires (2) PKABRK2 per install)
- PA9 "First Aid Tray, 11"x4.5"x3.125"
- PA10 "Practice Holder"
- PA11 "Cabinet File Box, 3.75"Dx12"Wx10"H"


BEFORE YOU START:

ALL FASTENERS USED IN THE ASSEMBLY AND INSTALLATION OF THIS PRODUCT SHOULD BE TIGHTENED TO THE SPECIFIED TORQUE. THE USE OF NON-STANDARD FASTENERS AND/OR DEVIATING FROM THE FASTENERS SPECIFIED IN THE INSTRUCTION (S) MAY VOID YOUR PRODUCT WARRANTY.

YOU WILL NEED THE FOLLOWING TOOLS IN ORDER TO COMPLETE THIS JOB.

**7/16" End Wrench, Ratchet w/7/16" Socket,
 Phillips Screwdriver, Torque Wrench**

Attach both End Panel Mounting Weldments (BVAERW2) to the PA7 & PA8 with fasteners supplied with the accessory kit. Please note that only one mounting weldment is required when attaching the PA9, PA10, & PA11 to the mounting weldment use existing holes in the accessory, aligning them with holes in the mounting weldments. Then attach assembly to the AD Shelf/End Panel in desired location. See photo's below for details on mounting weldments to shelf and panel.

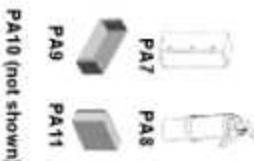

**YOUR INSTALLATION IS NOW COMPLETE! STOW THIS COPY IN
 THE VEHICLE FOR FUTURE REFERENCE!**

**AD Series Accessory
 Mounting Kit Assembly/Installation Instructions**

BRK1AEP3 "Accessory Bracket Kit, End Panel"

- TH30 "Tank Holder, 30# Sgl (Requires (2) PKABRK2 per install)
- TH50 "Tank Holder, 50# Sgl (Requires (2) PKABRK2 per install)

BEFORE YOU START:

ALL FASTENERS USED IN THE ASSEMBLY AND INSTALLATION OF THIS PRODUCT SHOULD BE TIGHTENED TO THE SPECIFIED TORQUE. THE USE OF NON-STANDARD FASTENERS AND/OR DEVIATING FROM THE FASTENERS SPECIFIED IN THE INSTRUCTION (S) MAY VOID YOUR PRODUCT WARRANTY.

YOU WILL NEED THE FOLLOWING TOOLS IN ORDER TO COMPLETE THIS JOB.

**7/16" End Wrench, Ratchet w/7/16" Socket,
 Phillips Screwdriver, Torque Wrench**

Attach both End Panel Mounting Weldments (BVAERW2) to the PA7 & PA8 with fasteners supplied with the accessory kit. Please note that only one mounting weldment is required when attaching the PA9, PA10, & PA11 to the mounting weldment use existing holes in the accessory, aligning them with holes in the mounting weldments. Then attach assembly to the AD Shelf/End Panel in desired location. See photo's below for details on mounting weldments to shelf and panel.



**YOUR INSTALLATION IS NOW COMPLETE! STOW THIS COPY IN
 THE VEHICLE FOR FUTURE REFERENCE!**

BRK1DEPS "Accessory Bracket Kit, End Panel"


- WUJ: UH10 "Utility Hook, 1" Single"
 UH25 "Utility Hook, 2.5" Single"
 UH50 "Utility Hook, 5" Single"
 TA1 "Four Hook Bar"
 TA2 "Hard Hat Holder"

BEFORE YOU START!

ALL FASTENERS USED IN THE ASSEMBLY AND INSTALLATION OF THIS PRODUCT SHOULD BE TIGHTENED TO THE SPECIFIED TORQUE. THE USE OF NON-STANDARD FASTENERS AND/OR DEVIATING FROM THE FASTENERS SPECIFIED IN THE INSTRUCTION (S) MAY VOID YOUR PRODUCT WARRANTY!

YOU WILL NEED THE FOLLOWING TOOLS IN ORDER TO COMPLETE THIS JOB.

*7/16" End Wrench, Ratchet w/7/16" Socket,
 Phillips Screwdriver, Torque Wrench*

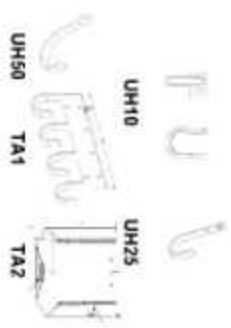

Attach one End Panel Mounting Weldments (BKABRK2) to the accessory kit. When attaching accessory to mounting weldment use existing holes in the accessory, aligning them with holes in the mounting weldments. Then attach assembly to the AD Shelf End Panel in desired location. See photo's below for details on mounting weldments to shelf end panel.



YOUR INSTALLATION IS NOW COMPLETE! STOW THIS COPY IN THE VEHICLE FOR FUTURE REFERENCE

BRK1DEPS "Accessory Bracket Kit, End Panel"


- WUJ: WRH5 "Spool Holder, 8" 5-Bar"
(Requires (2) RKABRK2 per install)

BEFORE YOU START!

ALL FASTENERS USED IN THE ASSEMBLY AND INSTALLATION OF THIS PRODUCT SHOULD BE TIGHTENED TO THE SPECIFIED TORQUE. THE USE OF NON-STANDARD FASTENERS AND/OR DEVIATING FROM THE FASTENERS SPECIFIED IN THE INSTRUCTION (S) MAY VOID YOUR PRODUCT WARRANTY!

YOU WILL NEED THE FOLLOWING TOOLS IN ORDER TO COMPLETE THIS JOB.

9/16" End Wrench, Ratchet w/9/16" socket, Torque Wrench




Attach both End Panel Mounting Weldments (BKABRK2) to the WRH5 with fasteners supplied with the WRH5 kit. When attaching WRH5 to mounting weldments use existing holes in the WRH5 aligning them with holes in the mounting weldments. Then attach assembly to the AD Shelf End Panel in desired location. See photo's below for details on mounting weldments to shelf end panel.



YOUR INSTALLATION IS NOW COMPLETE! STOW THIS COPY IN THE VEHICLE FOR FUTURE REFERENCE!

PART NUMBER	DESCRIPTION	QTY.
FAS0041	SCREW,THP #14-10 X.75 (A)	4
FAS0066	WASHER,LOCK EXT.1/4	4
FAS0055	NUT,HEX FLANGE 1/4-20	4
FAS0061	SCREW,THP 1/4-20X.50 P/G5	4

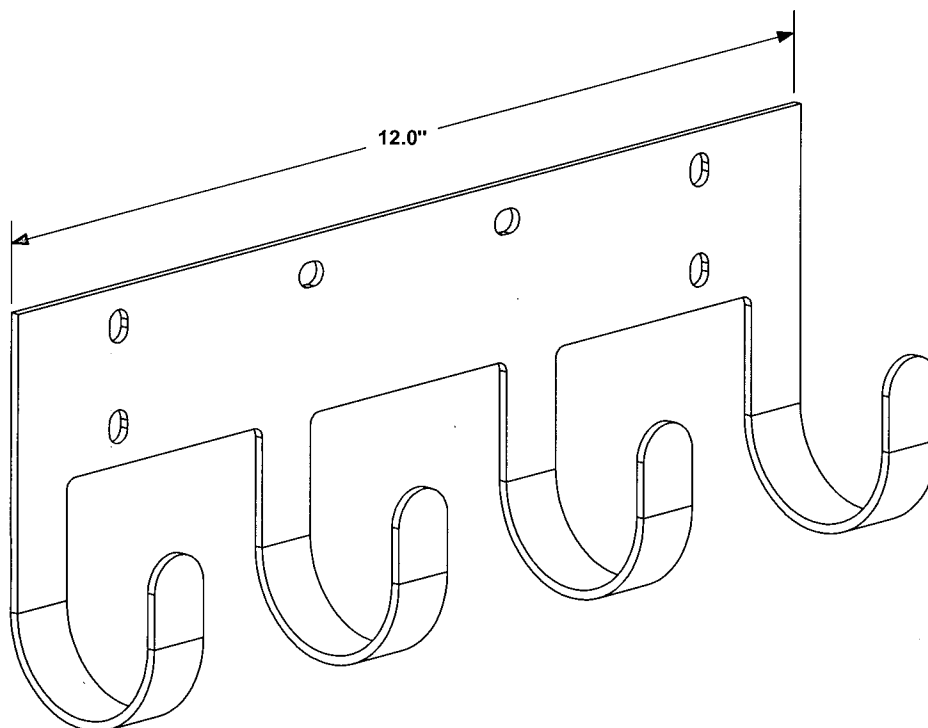

REVISION
LEVEL: **B**

Part
Number: **TA1**

FOR REFERENCE ONLY!

THIS PRODUCT IS SUBJECT TO CHANGE.
ADRIAN STEEL COMPANY RESERVES THE RIGHT TO
CHANGE THE PRODUCT OF IT'S DESIGN WITHOUT
PRIOR NOTICE.

THIS DRAWING IS THE PROPERTY OF ADRIAN STEEL COMPANY
AND IS NOT TO BE USED IN ANY MANNER DETRIMENTAL TO
THE INTERESTS OF ADRIAN STEEL COMPANY.

Shipping Wt. (Lbs.):

1.1892

Coating/Finish:

GrayPwdct

Do Not Scale This Drawing!



ADRIAN STEEL
VAN AND PICKUP EQUIPMENT

906 James St.
Adrian, MI 49221
517.265.6194

Part Description: **FOUR HOOK BAR**

Part
Number: **TA1**

REVISION
LEVEL:

B