


Introduction / Comments:

Nitrogen Tank Holder

Note:

It is advised that all fasteners used in this assembly and installation should be checked for tightness at the following intervals: @ 2-weeks and again @ 6-weeks of operation. This preventive maintenance step must be completed to ensure your Product gives you long service life.

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	09129-G	NITROGEN TANK HOLDER	1
2	HDWTA4	HDW BAG, TA4	1
3	BAG61112	FASTENER BAG FOR TA4	1
4	61109	INS INSTR FOR TA4	1

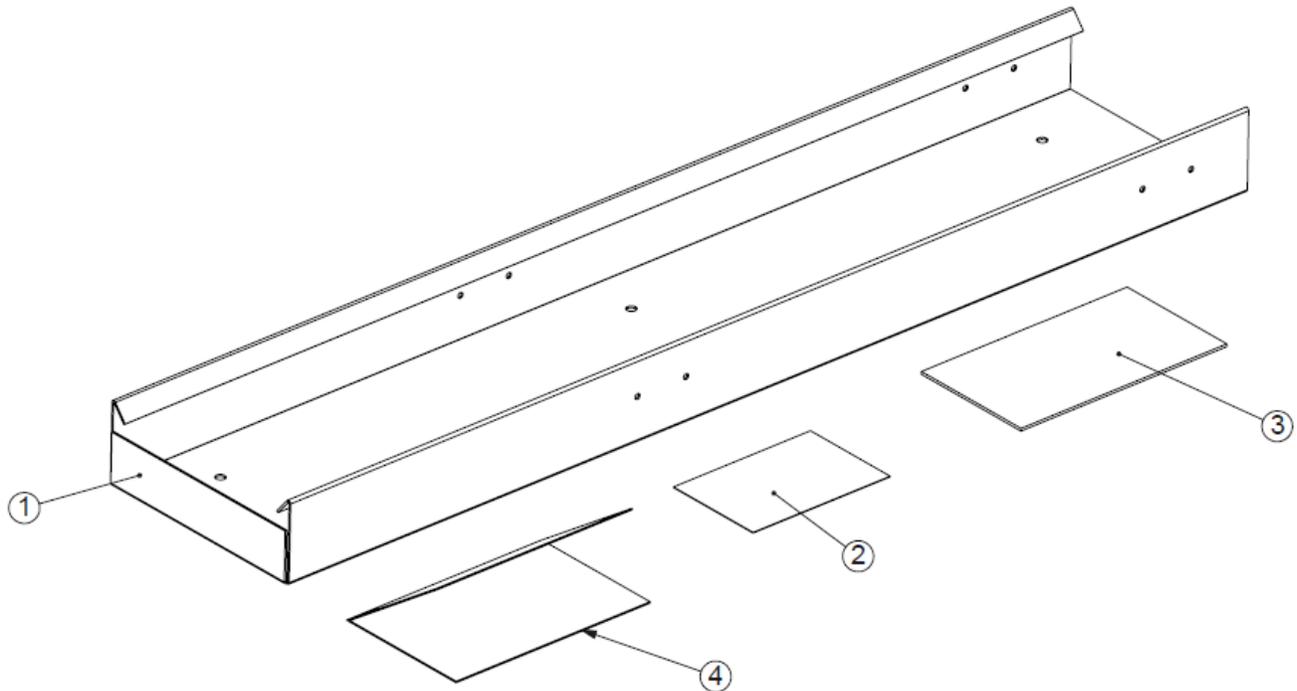

**TA4
Nitrogen Tank Holder**

- PRECAUTIONS -



CAUTION
THE USE OF AIR IMPACT TOOLS CAN
OVER-TORQUE FASTENERS AND
CAUSE FASTENER FAILURE!



CAUTION
ALL INSTALLATION HOLES SHOULD BE SEALED
WITH SILICON OR BUTYL SEALANT TO PREVENT
EXHAUST FUMES FROM ENTERING THE VEHICLE!



DANGER
INSPECT FOR FUEL TANK, FUEL LINES, BRAKE LINES, HIGH
VOLTAGE BATTERIES AND ELECTRICAL LINES PRIOR TO
DRILLING TO AVOID DAMAGING CRITICAL VEHICLE SYSTEMS
OR INJURY TO INSTALLER DURING INSTALLATION PROCESS!



CAUTION
TO AVOID DAMAGING THE VEHICLE ALWAYS USE DRILL
STOPS WHEN DRILLING ANY INSTALLATION HOLES!
ADRIAN AVAILABLE PART #'S 31119-0 (3/8" X 1/2"
DEEP), 31121-0 (1/2" x 1/2" DEEP)



- IMPORTANT WARRANTY REQUIREMENTS -

1. SUBSTITUTING ADRIAN STEEL SPECIFIED FASTENERS FOR ASSEMBLY AND/OR INSTALLATION WILL VOID YOUR PRODUCT WARRANTY.
2. ALL HOLES DRILLED INTO VEHICLE SHOULD HAVE THE RAW METAL EDGES SEALED WITH A SELF-ETCHING PRIMER TO RESIST CORROSION AND POTENTIAL FASTENER POINT FAILURE.
3. ALL FASTENERS USED IN THE INSTALLATION OF THIS PRODUCT SHOULD BE TIGHTENED TO THE TORQUE(S) SPECIFIED IN THESE INSTRUCTIONS.
4. THESE INSTRUCTIONS SHOULD BE KEPT WITH THE VEHICLE.


THE BASIC TOOLS NEEDED FOR MOST INSTALLATIONS



DRILL



DRILL BIT WITH
STOP

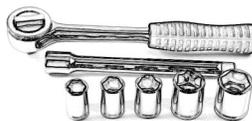

RATCHET, SOCKETS
AND/OR WRENCHES



SCREWDRIVERS




MEASURING TAPE

ADDITIONAL TOOLS MAY BE NEEDED FOR THIS INSTALLATION AND THEY WILL BE IDENTIFIED IN THE STEPS THAT FOLLOW.


**Installation and/or Assembly Fasteners
BAG61112**

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	BAG0509-A	5"X9" 4MIL AUTOBAG	1
2	FAS0018	SCREW,HH SFLNG 1/4-20X.62 ZP	6
3	FAS0055	NUT,HEX NLK FLG 1/4-20 ZP	6

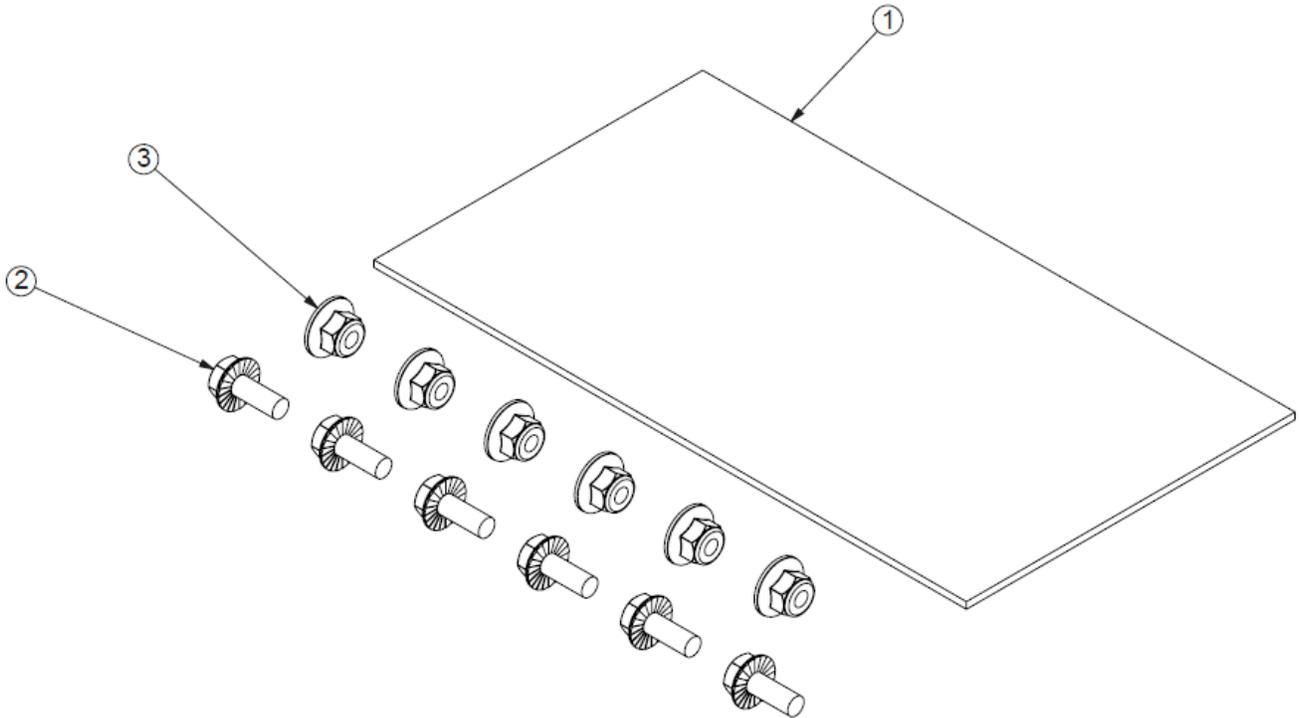


Installation and/or Assembly Fasteners
HDWTA4

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	07723-3	Strap with Crimp Tip	2
2	07723-2	Strap with Buckle	2
3	07723-1	Footman Loop	4
4	BAG0406-A	BAG, 4X6 3MIL	1
5	FAS0002	Screw, Flat Phillips Hd, #8-32x.50	8
6	FAS0013	Nut, Hex Flange, #8-32	8

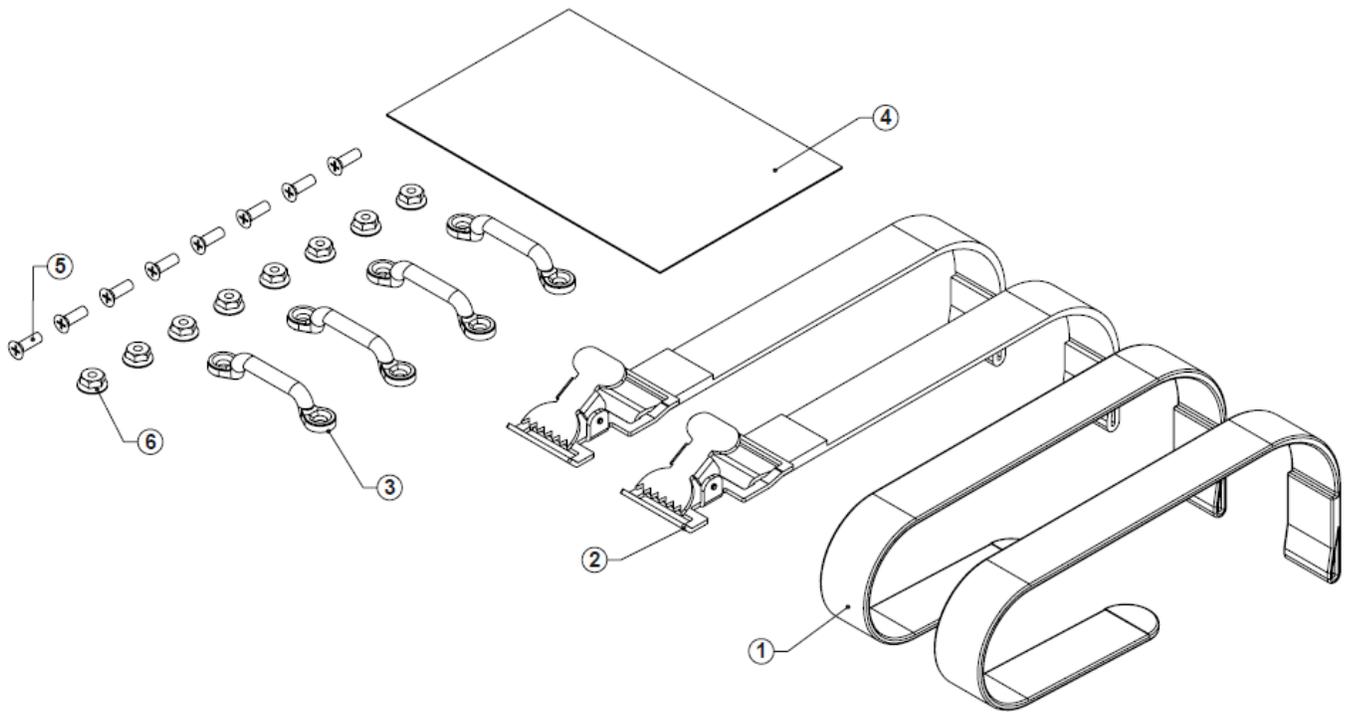

Step 01 Using hardware kit HDWTA4, fasten all footman loops (nylon straps attached) with FAS0002 and FAS0013.

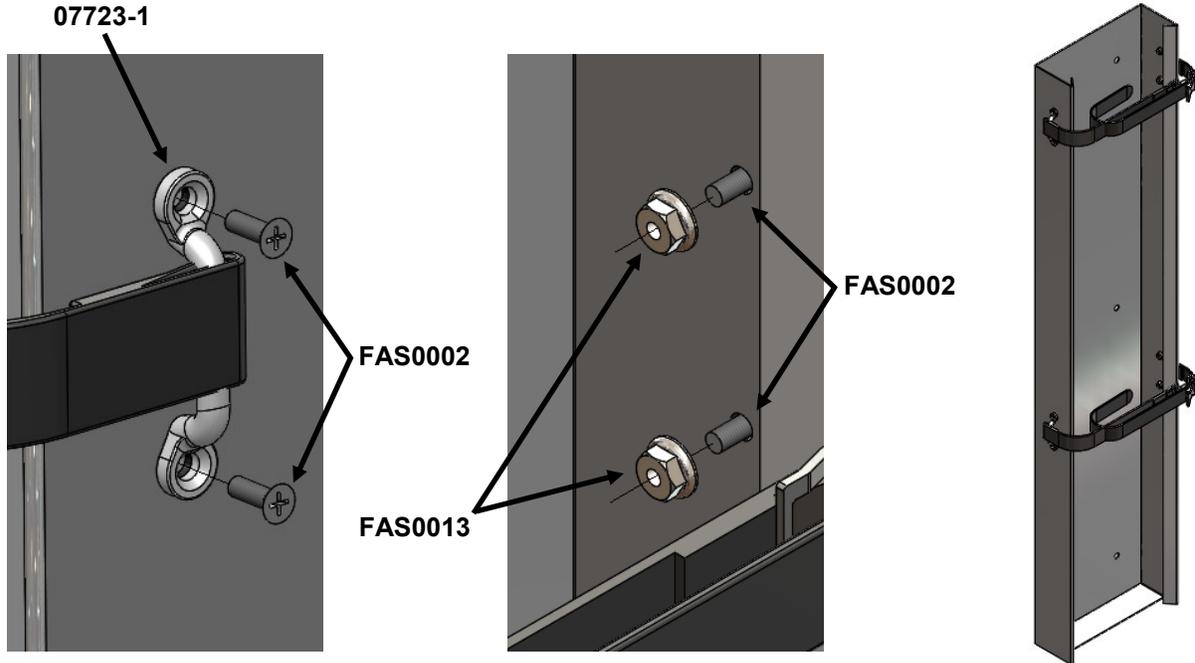

Step 02 Place 09129-G on desired surface such as an end panel. Then, measure and drill holes for 1/4" fasteners. Use BAG61112 to secure TA4 to surface. (Shelving is for reference)

