

INSTR. : 77454

PG: 1

REV: E

BOM FOR 6.5' FORD F-150

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	TSK78M23W	TOP, SIDE KIT,78",M,23,W	2
2	TCKFDT1BM23	TOP, BD CLOSE KIT, F-150	1
3	TRK7823W	TOP, ROOF KIT,78",23,W	1
4	TMLHK	Topper Mechanical Lock Hatch Kit	1
5	TEKGMT1K	HDW KIT, CAM, F-150, W/ ADPTR	1

PART : TFKFDT178KM23W

DESC. : ASM INS, TFK KM23W / JM23W & 26W

NOTE: THESE INSTRUCTIONS ARE VALID FOR ALL TFK FULL BARN DOOR TOPPER KITS.

INSTRUCTIONS SHOWS F-150 6.5' BODY DURING INSTALLATION

* E-LOCK VERSION SWAP TMLHK WITH TELH09

FASTENER AND HOLE COUNTS MAY BE DIFFERENT BETWEEN TOPPER KITS.

E-LOCK VERSIONS:
SWAP M WITH E IN PART NUMBER
EXAMPLE: TFKFDT178KM23W BECOMES TFKFDT178KE23W

TOOLS NEEDED:

- 11/32" DRILL BIT

- 1/2" WRENCH & SOCKET

- 7/16" WRENCH & SOCKET

- 10mm SOCKET

- 8mm SOCKET

- 4mm ALLEN

- 3/16" ALLEN

- 5/32" ALLEN

- DRIVE RATCHET / IMPACT

- SCISSORS

- TAPE MEASURE

- ALIGNMENT PUNCH

- ROLLER

- T40 TORX BIT

- PLUSNUT TOOL OR GUN

INSTR.
NUMBER : **77454**

PG:
2

REV:
E

PART
NUMBER : **TFKFDL166KM23W**


PART • ASM INS, TFK _____ KM23W /
DESC. • JM23W & 26W

E-LOCK VERSIONS:
SWAP M WITH E IN PART NUMBER
EXAMPLE: TFKFDT166KM23W
BECOMES TFKFDT166KE23W

BOM FOR 5.5' FORD LIGHTNING

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	TSK66M23W	TOP, SIDE KIT, 66", M, 23, W	2
2	TCKFDT1BM23	TOP, BD CLOSE KIT, F-150	1
3	TRK6623W	TOP, ROOF KIT, 66", 23, W	1
4	TMLHK	Topper Mechanical Lock Hatch Kit	1
5	TEKFDL1K	HDW KIT, CAM, F-150, W/ ADPTR	1

*** E-LOCK VERSION SWAP TMLHK WITH TELH04**

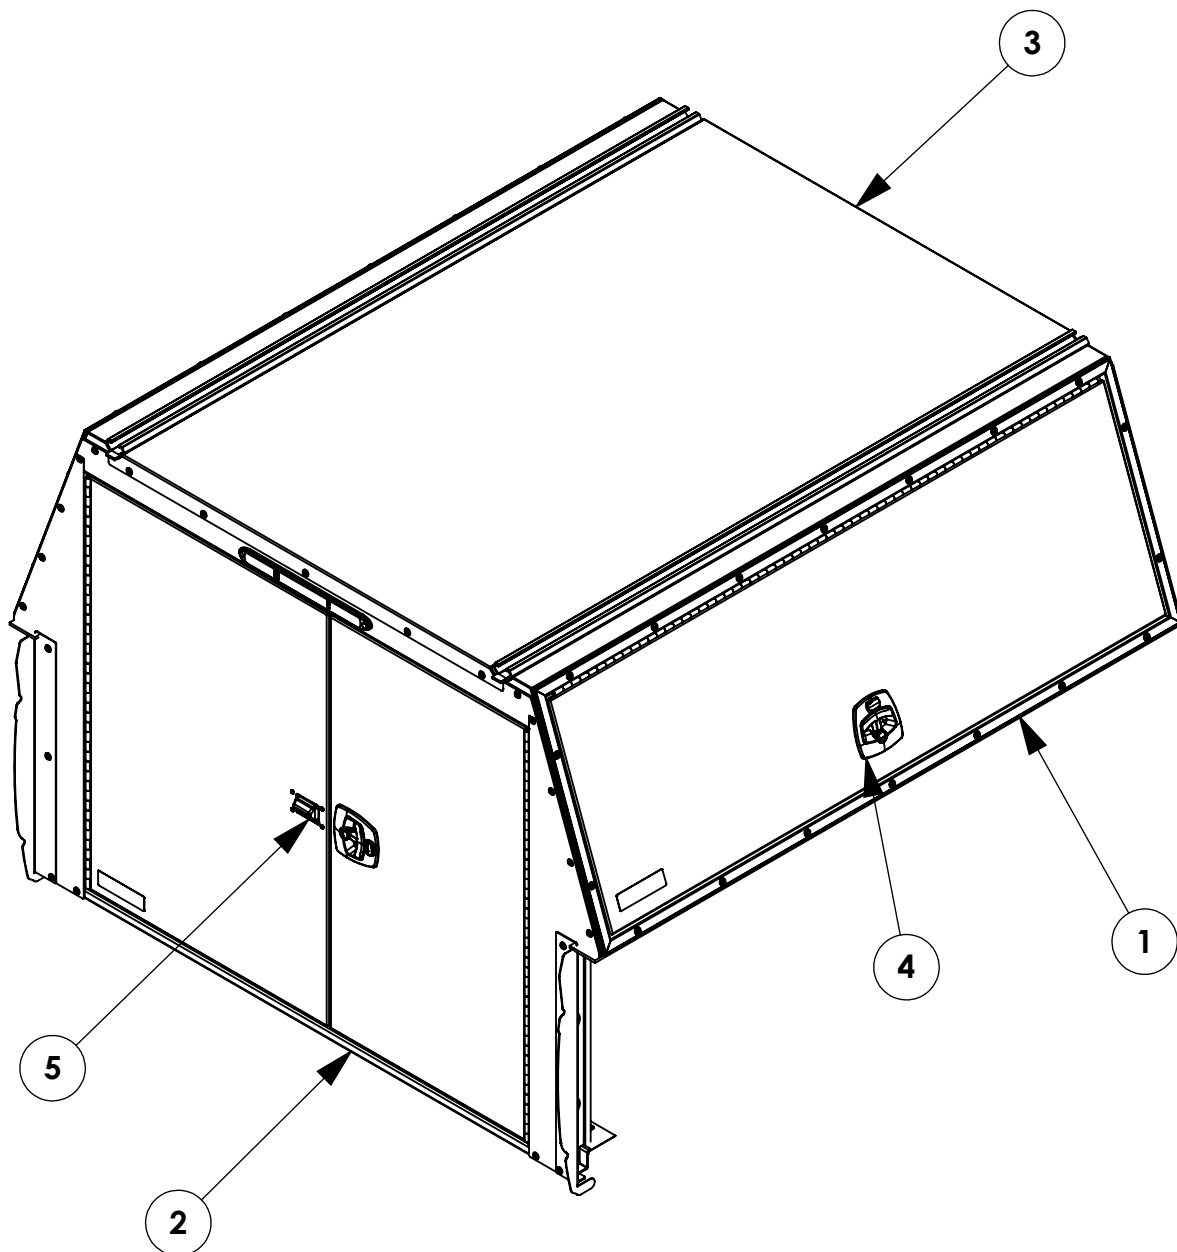

INSTR. : 77454

PG: 3

REV: E

PART : TFKFDT166KM23W

PART • ASM INS, TFK_____KM23W /

DESC. • JM23W & 26W

E-LOCK VERSIONS:
SWAP M WITH E IN PART NUMBER
EXAMPLE: TFKFDT166KM23W
BECOMES TFKFDT166KE23W

BOM FOR 5.5' FOR F-150 ICE & HYBRID

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	TSK66M23W	TOP, SIDE KIT,66",M,23,W	2
2	TCKFDT1BM23	TOP, BD CLOSE KIT, F-150	1
3	TRK6623W	TOP, ROOF KIT,66",23,W	1
4	TMLHK	Topper Mechanical Lock Hatch Kit	1
5	TEKFDT1K	HDW KIT, CAM, F-150, W/ ADPTR	1

* E-LOCK VERSION SWAP TMLHK WITH TELH04

The diagram shows an exploded view of a truck camper assembly. Callout 1 points to the side kit (TSK66M23W) on the right side. Callout 2 points to the top/bottom close kit (TCKFDT1BM23) at the front. Callout 3 points to the roof kit (TRK6623W) on the top. Callout 4 points to the topper mechanical lock hatch kit (TMLHK) on the front door. Callout 5 points to the hardware kit (TEKFDT1K) on the front door.

INSTR. : 77454
NUMBER

PG: 4

REV: E

PART : TFKFDT196KM23W
NUMBER


PART • ASM INS, TFK_____KM23W /
DESC. • JM23W & 26W

E-LOCK VERSIONS:
SWAP M WITH E IN PART NUMBER
EXAMPLE: TFKFDT196KM23W
BECOMES TFKFDT196KE23W

BOM FOR 8.0' FORD F-150

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	TSK96M23W	TOP, SIDE KIT,96",M,23,W	2
2	TCKFDT1BM23	TOP, BD CLOSE KIT, F-150	1
3	TRK9623W	TOP, ROOF KIT,96",23,W	1
4	TMLHK	Topper Mechanical Lock Hatch Kit	1
5	TEKFDT1K	HDW KIT, CAM, F-150, W/ ADPTR	1

*** E-LOCK VERSION SWAP TMLHK WITH TELH10**

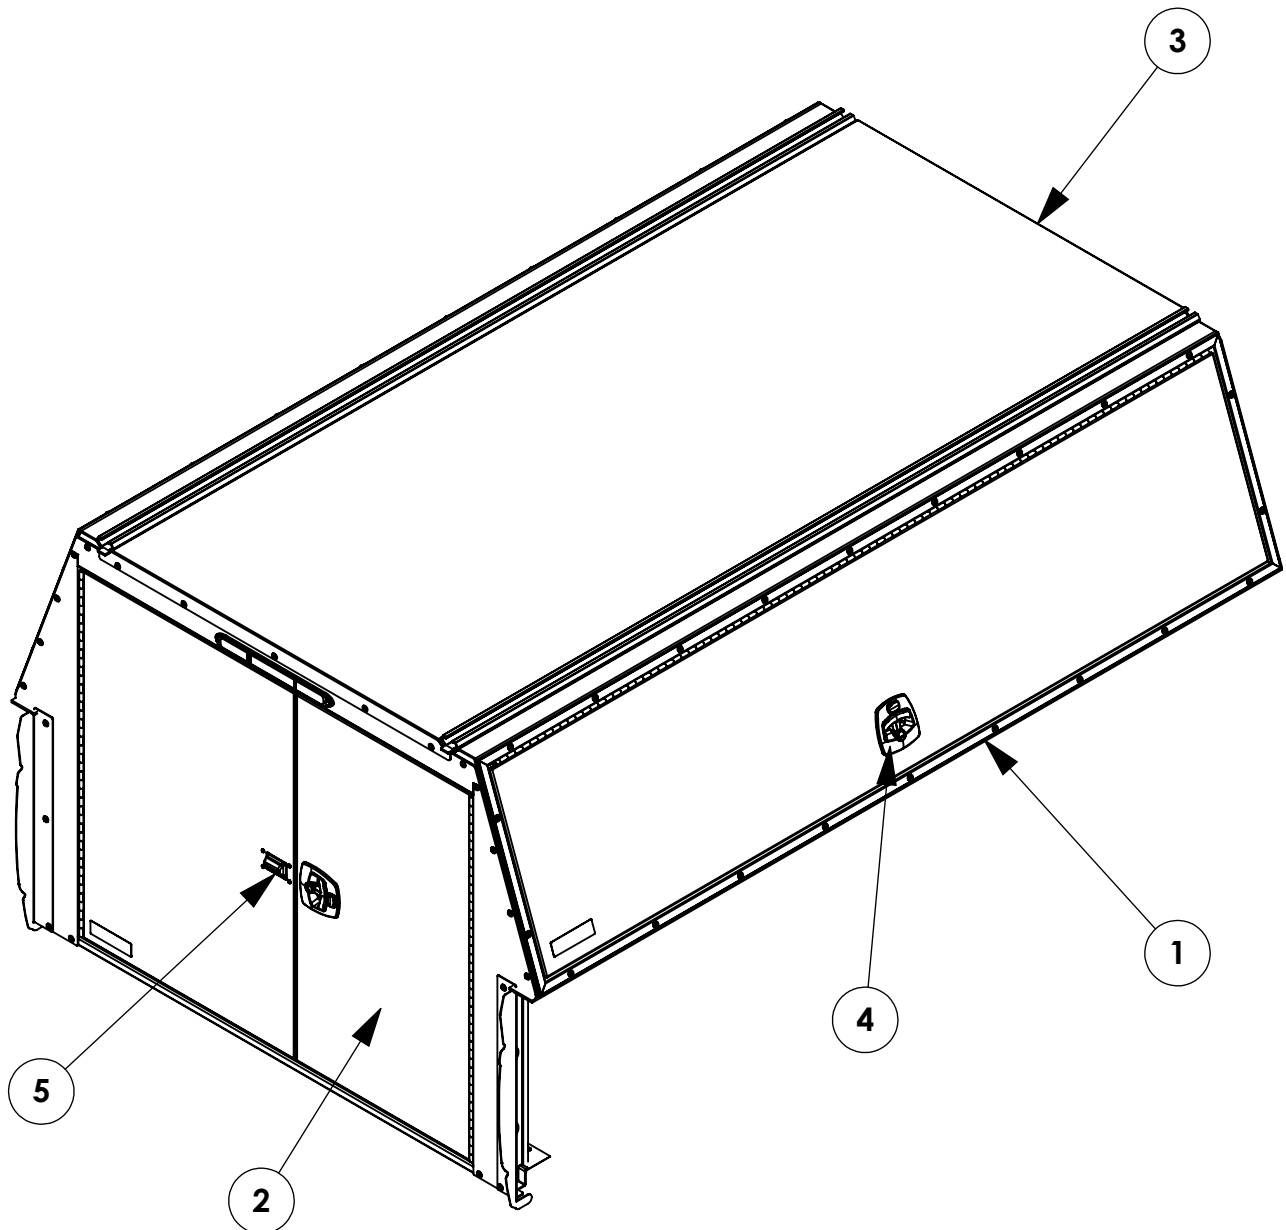

INSTR. NUMBER	: 77454	PG: 5	REV: E
PART NUMBER	• TFKFDT280JM26W • TFKFDT280KM26W		
PART DESC.	• ASM INS, TFK_____KM23W / • JM23W & 26W		

E-LOCK VERSIONS:
SWAP M WITH E IN PART NUMBER
EXAMPLE: TFKFDT280JM26W
BECOMES TFKFDT280JE26W

BOM FOR 6.8' FORD F-250


TFKFDT280KM26W

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	TSK80M26W	TOP, SIDE KIT,80",M,26,W	2
2	TRK8026W	TOP, ROOF KIT,80",26,W	1
3	TCKFDT2BM26	TOP, BD CLOSE KIT, F-250	1
4	TMLHK	Topper Mechanical Lock Hatch Kit	1
5	TEKFDT2J	HDW KIT, CAMERA, F250 ANALOG	1

TFKFDT280KM26W

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	TSK80M26W	TOP, SIDE KIT,80",M,26,W	2
2	TRK8026W	TOP, ROOF KIT,80",26,W	1
3	TCKFDT2BM26	TOP, BD CLOSE KIT, F-250	1
4	TMLHK	Topper Mechanical Lock Hatch Kit	1
5	TEKFDT2K	HDW KIT, CAM, F-250, W/ ADPTR	1

*** E-LOCK VERSION SWAP TMLHK WITH TELH05**

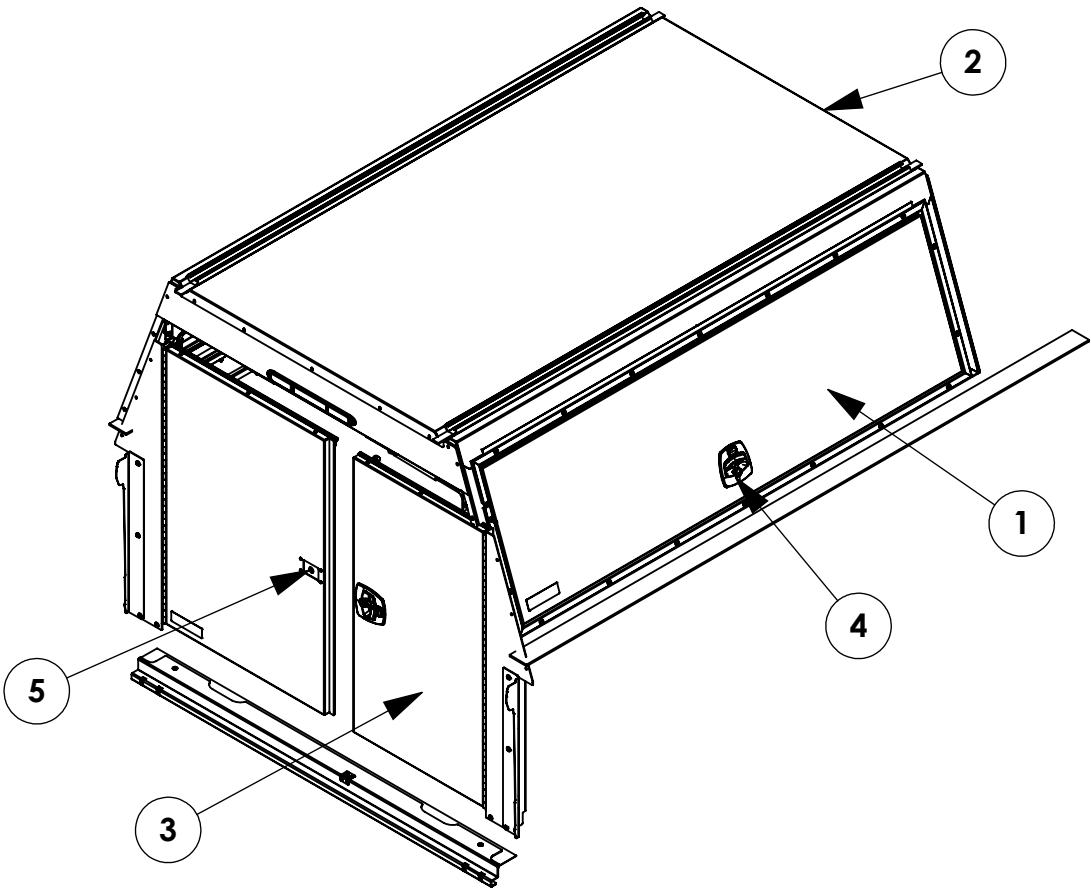

INSTR. : 77454
NUMBER

PG: 6
REV: E

PART • TFKFDT296JM26W
NUMBER • TFKFDT296KM26W

PART • ASM INS, TFK _____ KM23W /
DESC. • JM23W & 26W

E-LOCK VERSIONS:
SWAP M WITH E IN PART NUMBER
EXAMPLE: TFKFDT296JM26W
BECOMES TFKFDT296JE26W

BOM FOR 8' FORD F-250


TFKFDT296JM26W

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	TSK96M26W	TOP, SIDE KIT,96",M,26,W	2
2	TRK9623W	TOP, ROOF KIT,96",23,W	1
3	TCKFDT2BM26	TOP, BD CLOSE KIT, F-250	1
4	TMLHK	Topper Mechanical Lock Hatch Kit	1
5	TEKFDT2J	HDW KIT, CAMERA, F250 ANALOG	1

TFKFDT296KM26W

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	TSK96M26W	TOP, SIDE KIT,96",M,26,W	2
2	TRK9623W	TOP, ROOF KIT,96",23,W	1
3	TCKFDT2BM26	TOP, BD CLOSE KIT, F-250	1
4	TMLHK	Topper Mechanical Lock Hatch Kit	1
5	TEKFDT2K	HDW KIT, CAM, F-250, W/ ADPTR	1

*** E-LOCK VERSION SWAP TMLHK WITH TELH06**

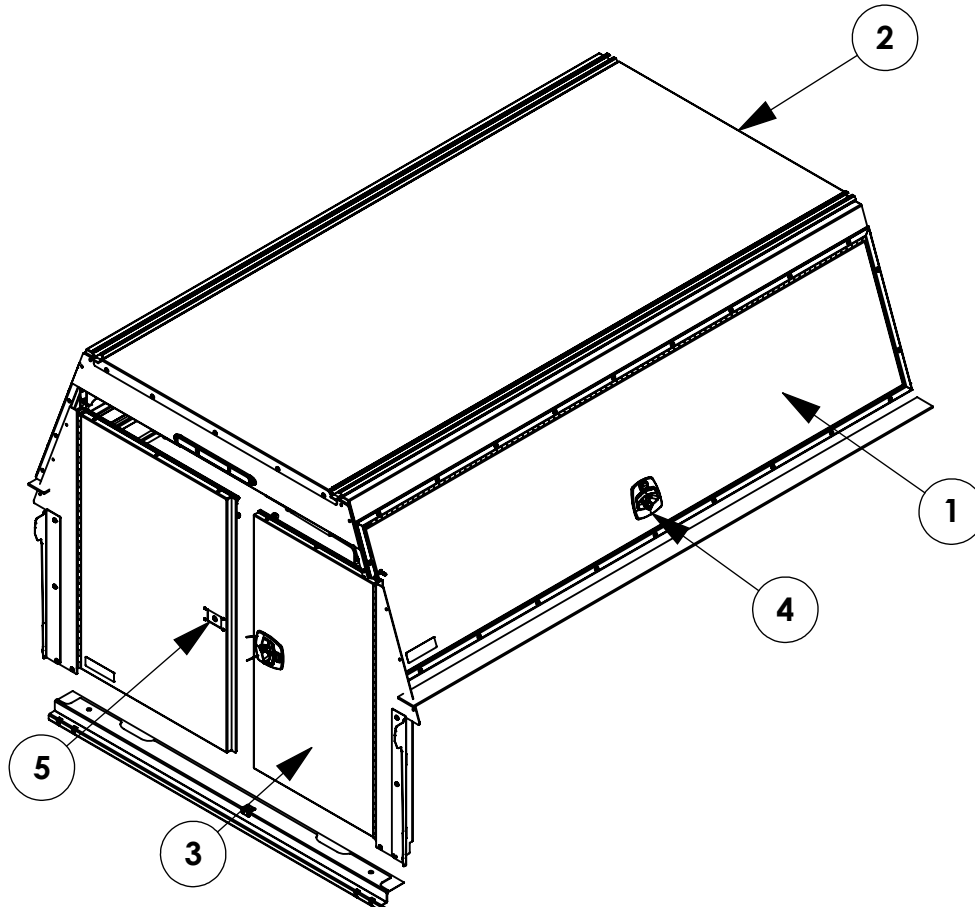

INSTR.
NUMBER : **77454**

PG:
7

REV:
E

PART
NUMBER : **TFKCOL160KM23W**


PART • ASM INS, TFK_____KM23W /
DESC. • JM23W & 26W

E-LOCK VERSIONS:
SWAP M WITH E IN PART NUMBER
EXAMPLE: TFKCOL160KM23W
BECOMES TFKCOL160KE26W

BOM FOR CHEVROLET COLORADO

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	TSKCOL60M23W	TOP, SIDE KIT,60",M,23,W	2
2	TRK6123W	TOP, ROOF KIT,61",23,W	1
3	TCKCOL1BM23	OP, BD CLOSE KIT, COLORADO	1
4	TMLHK	Topper Mechanical Lock Hatch Kit	1
5	TEKCOL1K	HDW KIT, CAM, COLORADO	1

*** E-LOCK VERSION SWAP TMLHK WITH TELH04**

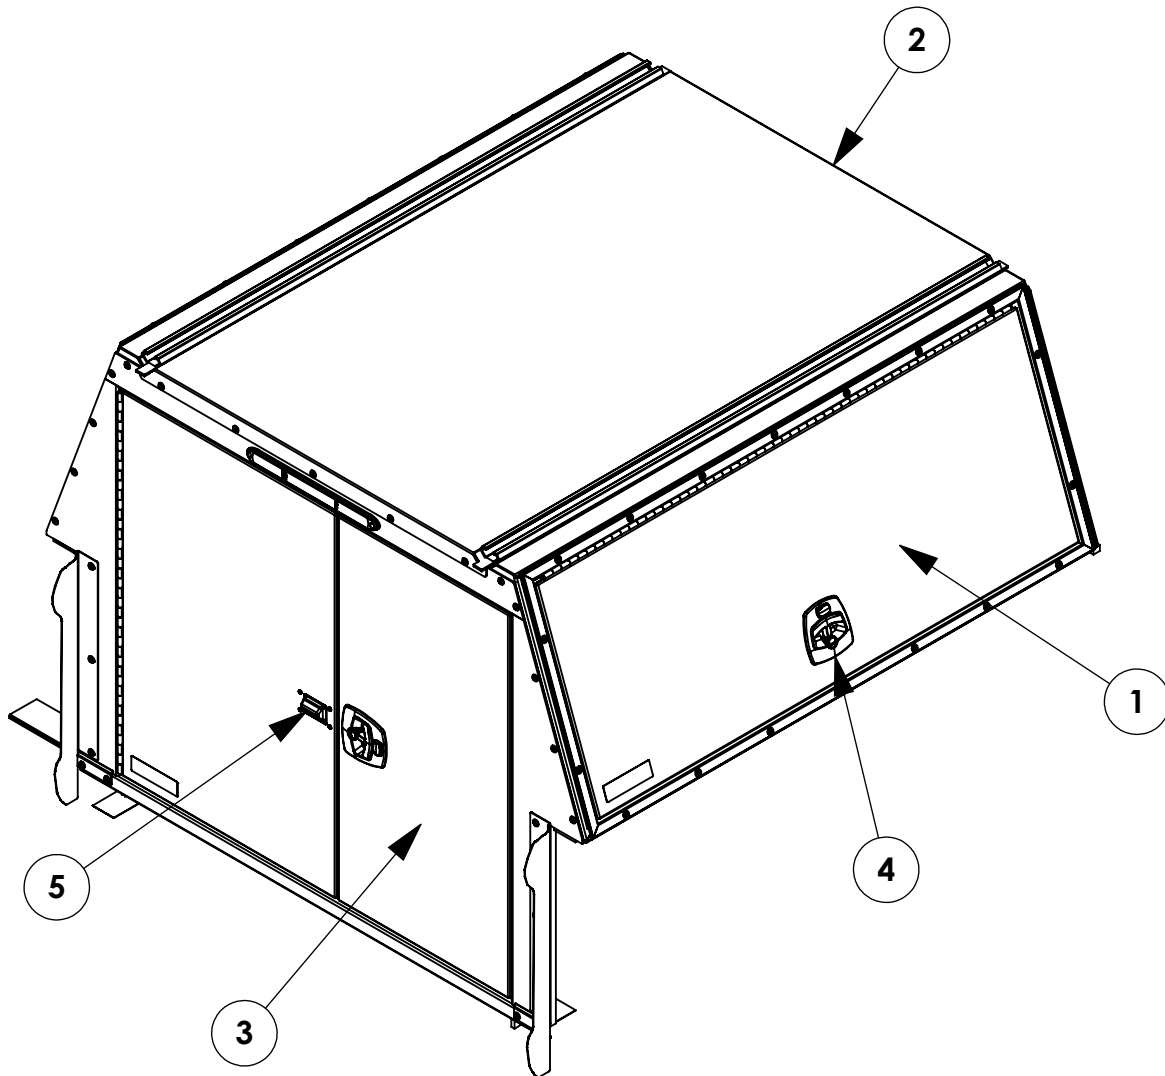

INSTR.
NUMBER : **77454**

PG:
8

REV:
E

PART
NUMBER : **TFKGMT178KM23W**


PART • ASM INS, TFK_____KM23W /
DESC. • JM23W & 26W

**E-LOCK VERSIONS:
SWAP M WITH E IN PART NUMBER
EXAMPLE: TFKGMT178KM23W
BECOMES TFKGMT178KE23W**

BOM FOR 6.5' CHEVROLET SILVERADO 1500

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	TSK78M23W	TOP, SIDE KIT,78",M,23,W	2
2	TCKGMT1BM23	TOP, BD CLOSE KIT, F-150	1
3	TRK7823W	TOP, ROOF KIT,78",23,W	1
4	TEKFDT1K	HDW KIT, CAM, F-150, W/ ADPTR	1
5	TMLHK	TOPPER MECHANICAL LOCK HATCH KIT	1

*** E-LOCK VERSION SWAP TMLHK WITH TELH05**

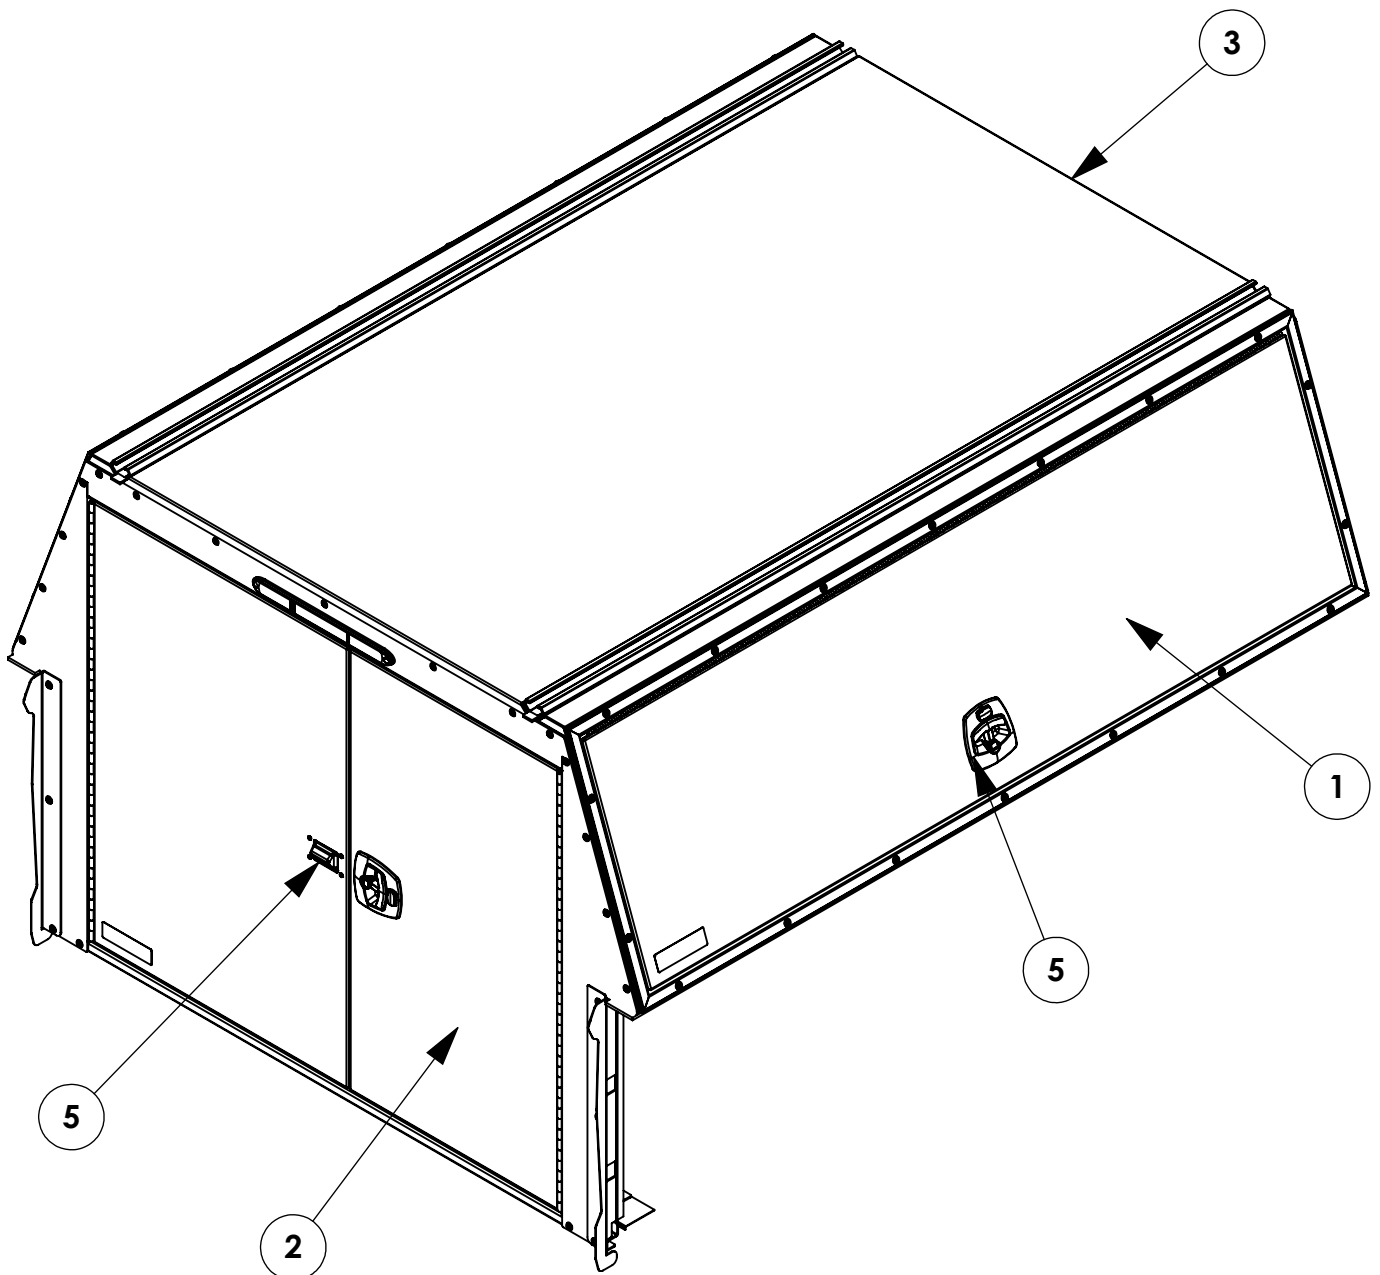

INSTR.
NUMBER : **77454**

PG:
9

REV:
E

PART
NUMBER : **TFKGMT196KM23W**


PART • ASM INS, TFK_____KM23W /
DESC. • JM23W & 26W

E-LOCK VERSIONS:
SWAP M WITH E IN PART NUMBER
EXAMPLE: TFKGMT196KM23W
BECOMES TFKGMT196KE23W

BOM FOR 8.0' CHEVROLET SILVERADO 1500

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	TSK96M23W	TOP, SIDE KIT,96",M,23,W	2
2	TCKGMT1BM23	TOP, BD CLOSE KIT, F-150	1
3	TRK9623W	TOP, ROOF KIT,96",23,W	1
4	TEKFDT1K	HDW KIT, CAM, F-150, W/ ADPTR	1
5	TMLHK	Topper Mechanical Lock Hatch Kit	1

*** E-LOCK VERSION SWAP TMLHK WITH TELH10**

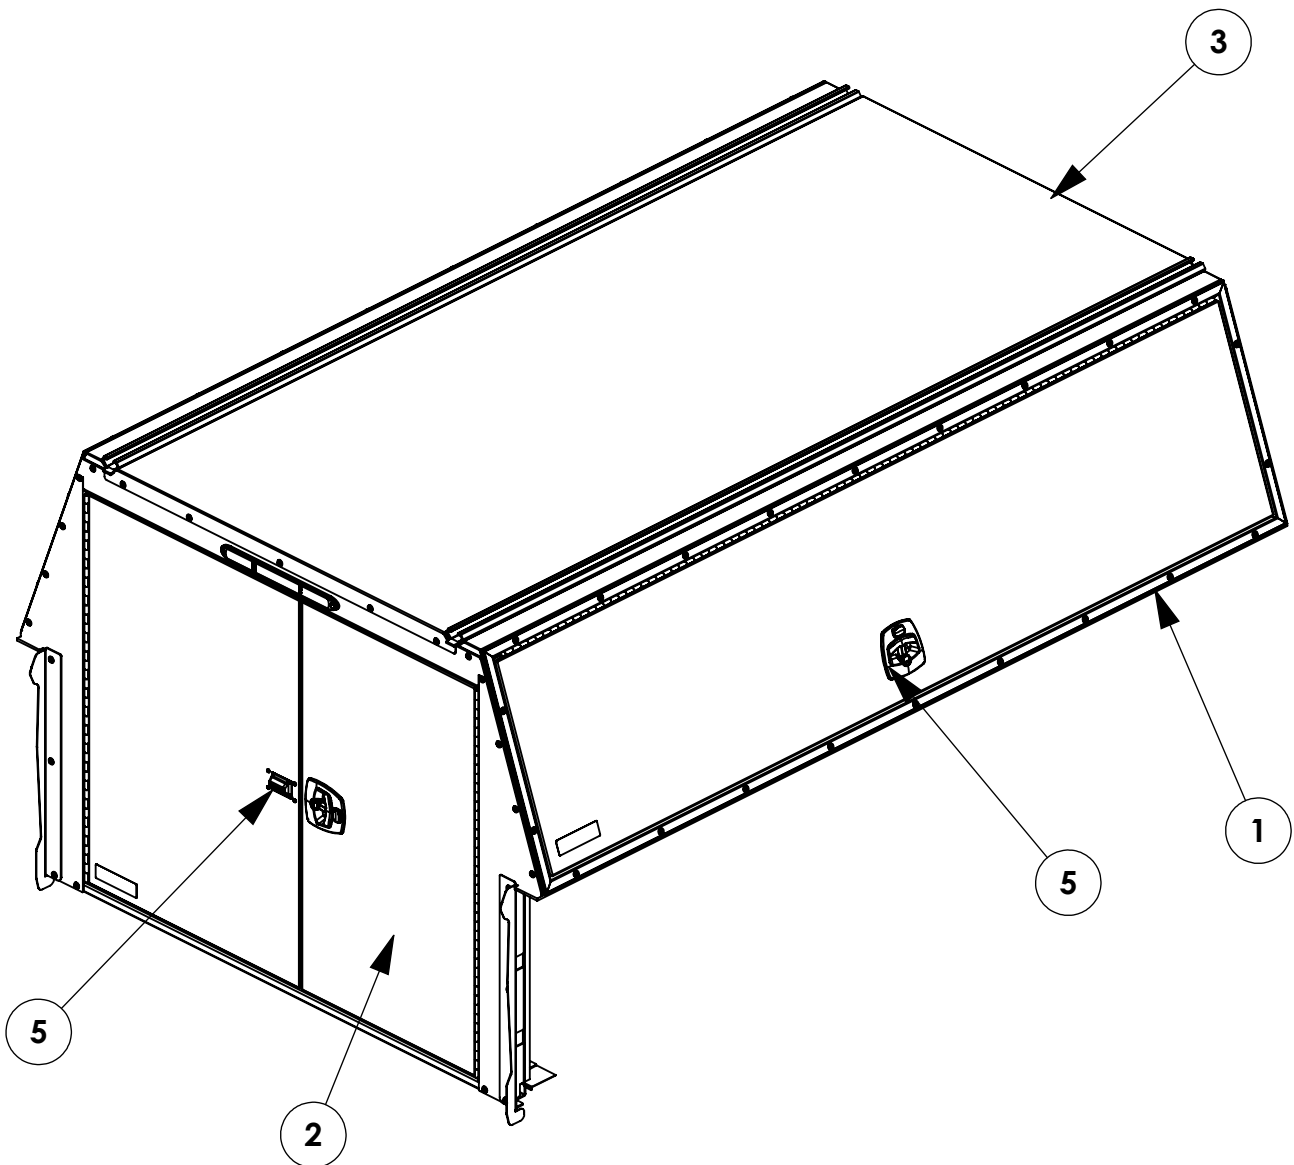


INSTR. NUMBER	: 77454	PG: 10	REV: E
PART NUMBER	: TFKGMT280KM26W		
PART • ASM INS, TFK_____KM23W / DESC. • JM23W & 26W			

E-LOCK VERSIONS:
SWAP M WITH E IN PART NUMBER
EXAMPLE: TFKGMT280KM23W
BECOMES TFKGMT280E23W

BOM FOR 6.7' CHEVROLET SILVERADO 2500

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	TSK80M26W	TOP, SIDE KIT,80",M,26,W	2
2	TCKGMT2BM26	TOP, BD CLOSE KIT, 2500	1
3	TRK8026W	TOP, ROOF KIT,80",26,W	1
4	TMLHK	TOPPER MECHANICAL LOCK HATCH KIT	1
5	TEKGMT1K	HDW KIT, CAM, F-150, W/ ADPTR	1

* E-LOCK VERSION SWAP TMLHK WITH TELH05

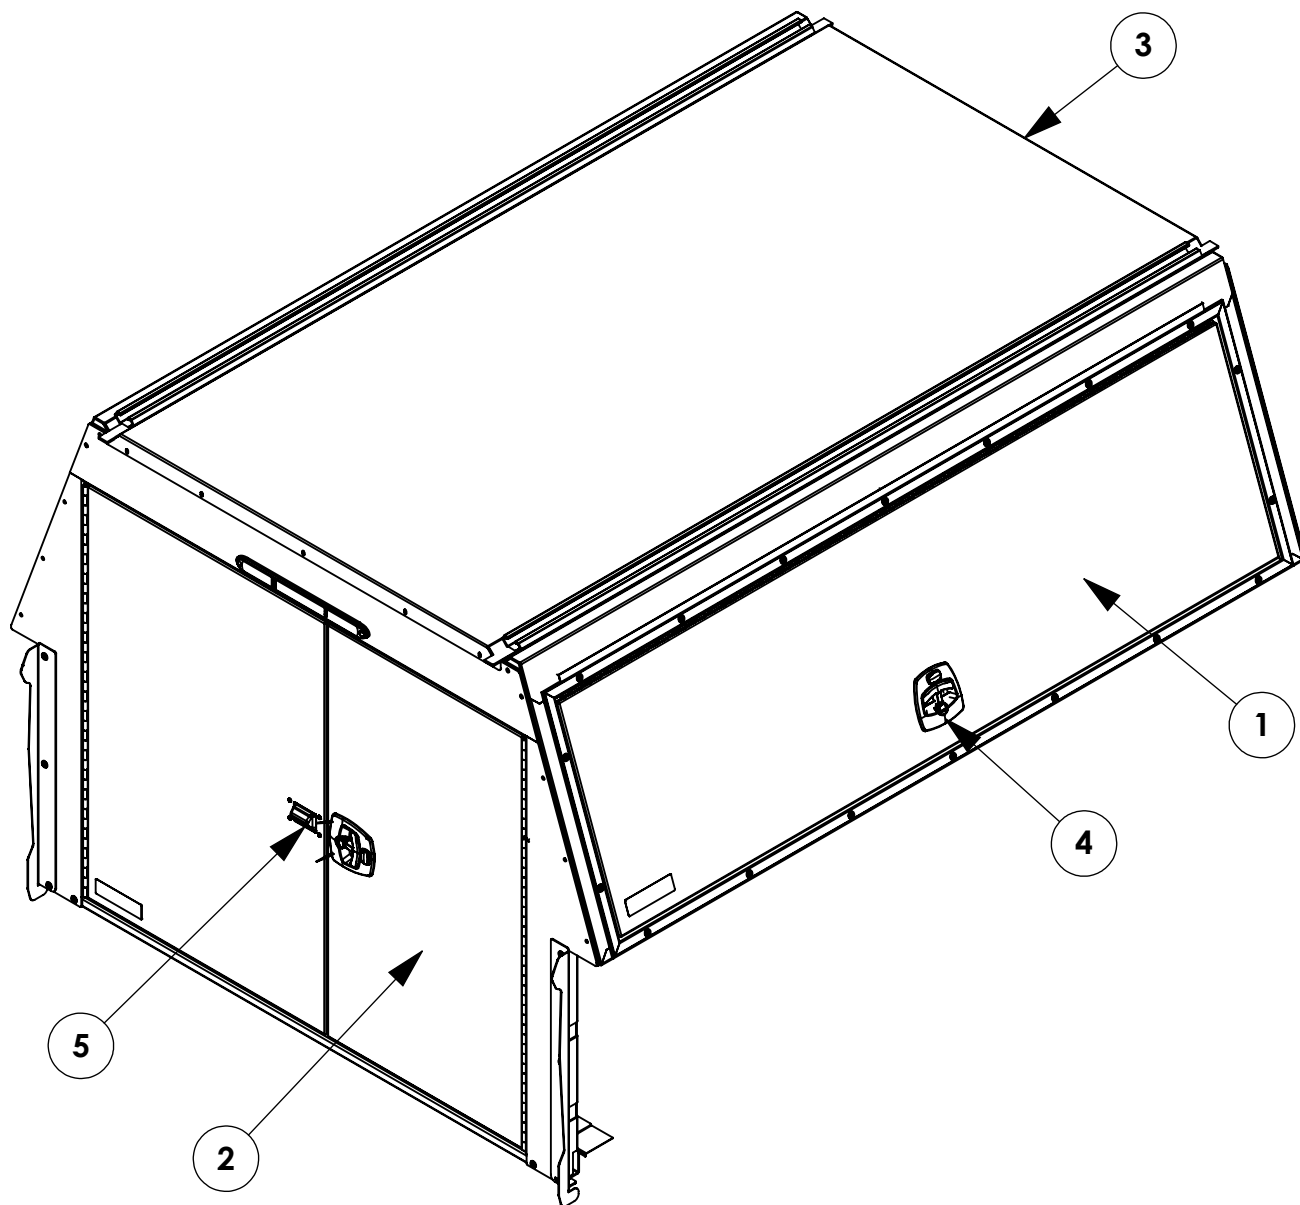

INSTR.
NUMBER : **77454**

PG:
11

REV:
E

PART
NUMBER : **TFKGMT296KM23W**


PART :
DESC. : ASM INS, TFK_____KM23W /
JM23W & 26W

E-LOCK VERSIONS:
SWAP M WITH E IN PART NUMBER
EXAMPLE: TFKGMT296KM23W
BECOMES TFKGMT296KE23W

BOM FOR 8.0' CHEVROLET SILVERADO 2500

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	TSK96M26W	TOP, SIDE KIT,96",M,26,W	2
2	TRK9623W	TOP, ROOF KIT,96",23,W	1
3	TCKGMT2BM26	TOP, BD CLOSE KIT, SILV 2500	1
4	TMLHK	TOPPER MECHANICAL LOCK HATCH KIT	1
5	TEKGMT1K	HDW KIT, CAM, F-150, W/ ADPTR	1

*** E-LOCK VERSION SWAP TMLHK WITH TELH10**

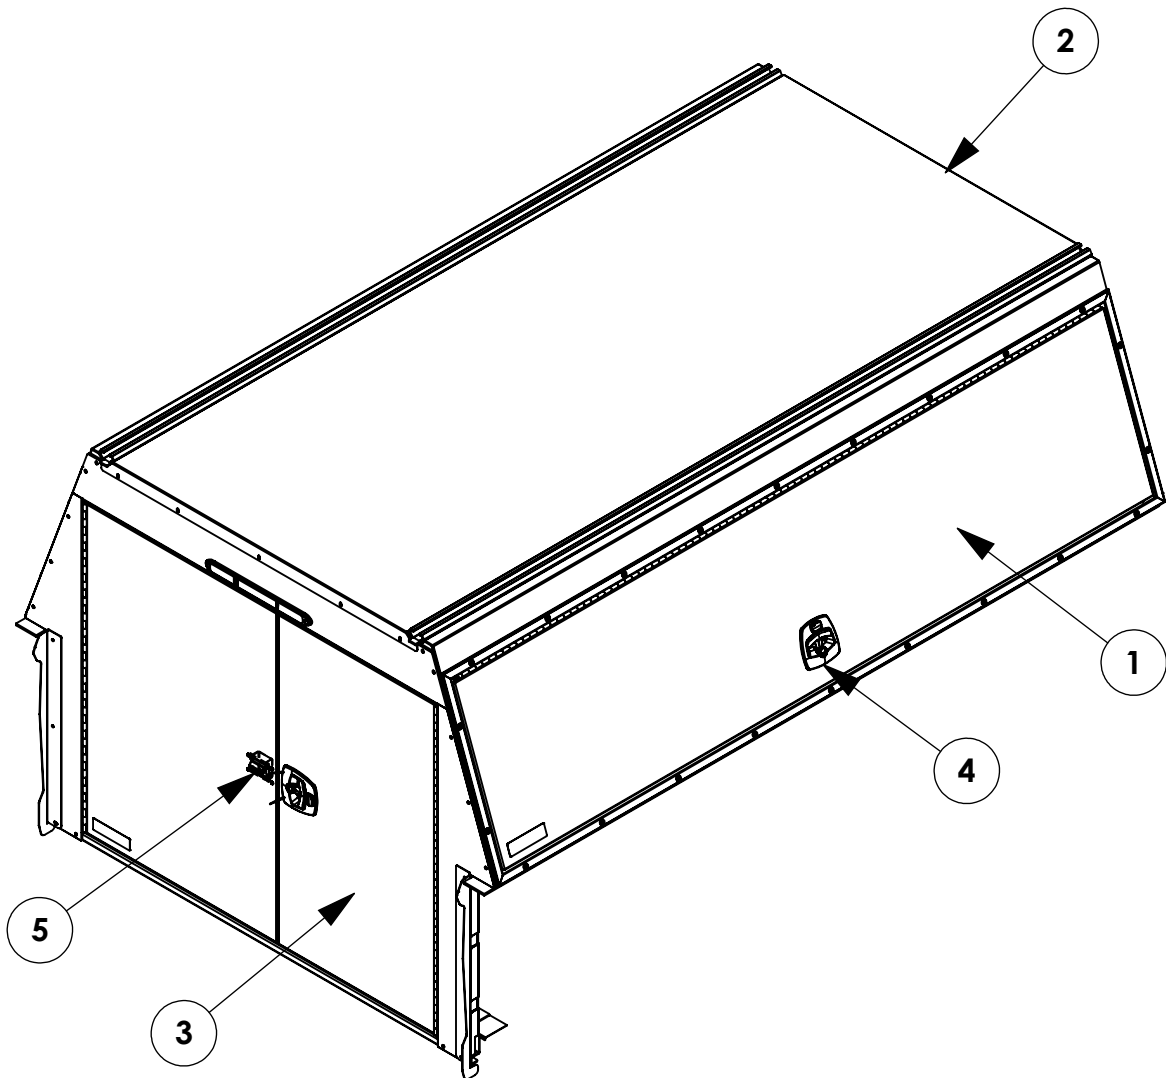

INSTR.
NUMBER : **77454**

PG:
12

REV:
E

PART
NUMBER : **TFKRAM167KM23W**


PART • ASM INS, TFK _____ KM23W /
DESC. • JM23W & 26W

E-LOCK VERSIONS:
SWAP M WITH E IN PART NUMBER
EXAMPLE: TFKRAM167KM23W
BECOMES TFKRAM167KE23W

BOM FOR 5.7' RAM1500

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	TSK66M23W	TOP, SIDE KIT,66",M,23,W	2
2	TRK6623W	TOP, ROOF KIT,66",23,W	1
3	TCKRAM1BM23	TOP, BD CLOSE KIT, F-150	1
4	TMLHK	Topper Mechanical Lock Hatch Kit	1
5	TEKRAM1K	HDW KIT, CAM, RAM 1500	1

*** E-LOCK VERSION SWAP TMLHK WITH TELH10**

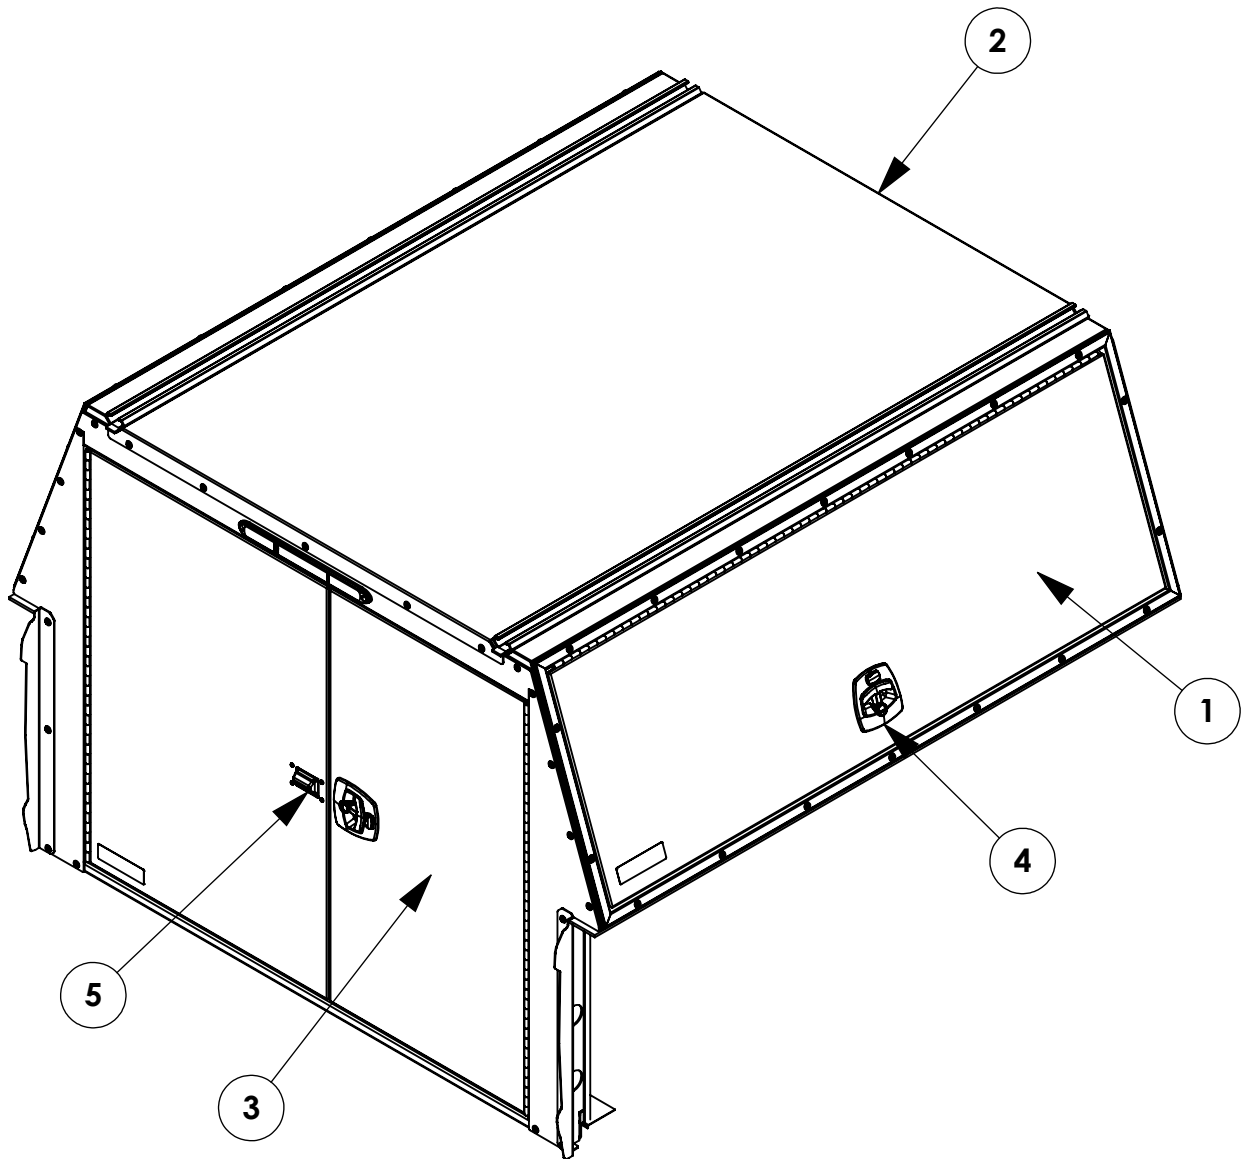

INSTR.
NUMBER : **77454**

PG:
13

REV:
E

PART
NUMBER : **TFKRAM175KM23W**


PART • ASM INS, TFK _____ KM23W /
DESC. • JM23W & 26W

E-LOCK VERSIONS:
SWAP M WITH E IN PART NUMBER
EXAMPLE: TFKRAM175KM23W
BECOMES TFKRAM175KE23W

BOM FOR 75" RAM 1500

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	TSK75M23W	TOP, SIDE KIT, 78" RAM	2
2	TRK7523W	TOP, ROOF PANEL KIT, RAM	1
3	TCKRAM1BM23	TOP, BD CLOSE KIT, RAM	1
4	TMLHK	Topper Mechanical Lock Hatch Kit	1
5	TEKRAM1K	HDW KIT, CAM, RAM 1500	1


*** E-LOCK VERSION SWAP TMLHK WITH TELH10**

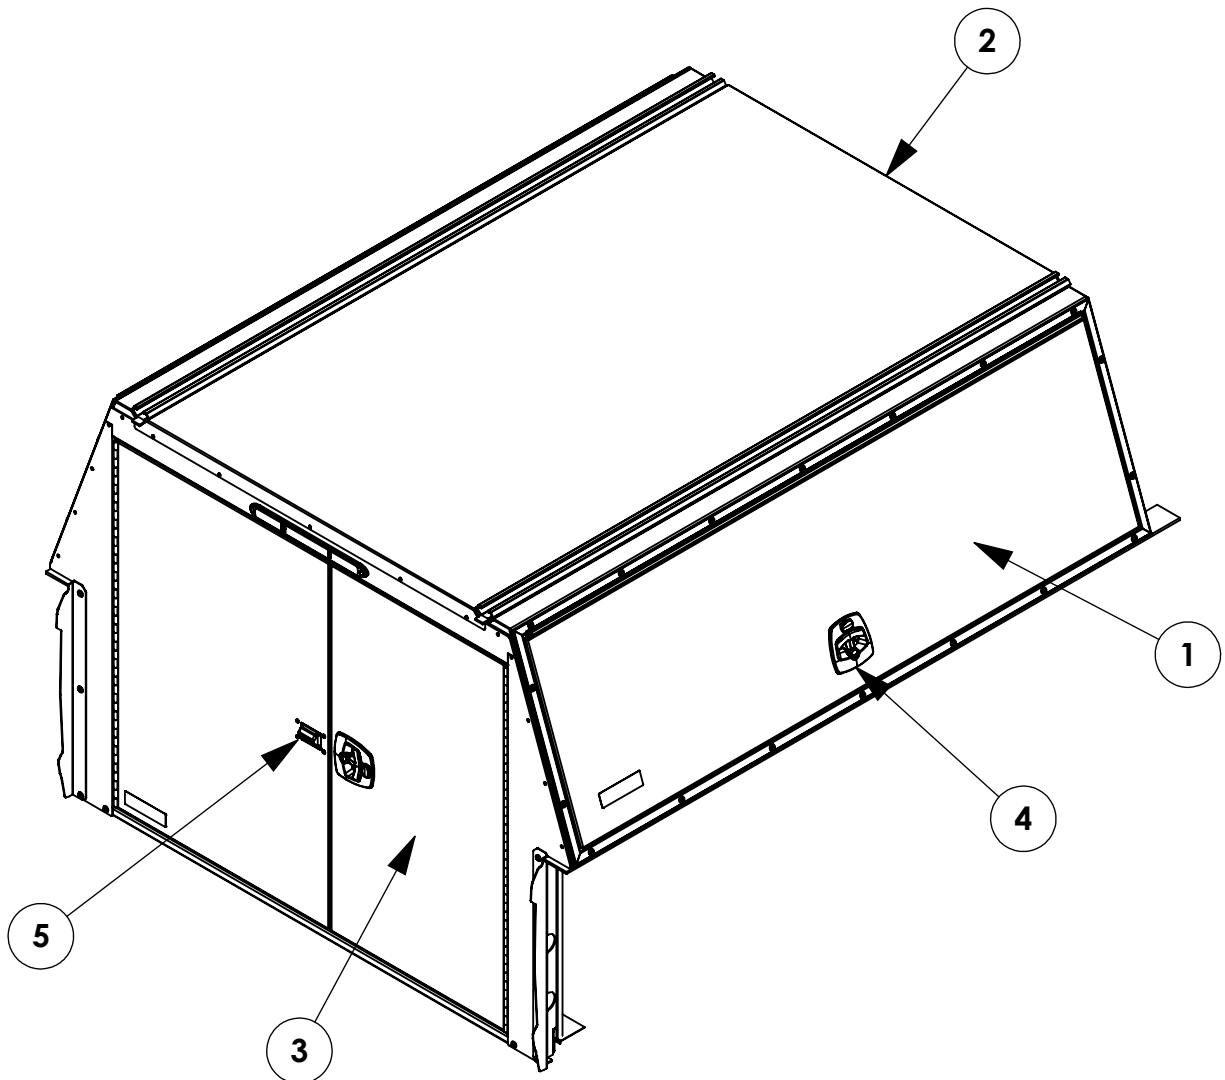

INSTR. : 77454		PG: 14	REV: E	BOM FOR 96" RAM 1500			
PART : TFKRAM196KM23W				ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
PART : ASM INS, TFK_____KM23W / DESC. : JM23W & 26W				1	TSK96M23W	TOP, SIDE KIT,96",M,23,W	2
				2	TRK9623W	TOP, ROOF KIT,96",23,W	1
				3	TCKRAM196BM23	TOP, BD CLOSE KIT, RAM, 8 FT BED	1
				4	TMLHK	Topper Mechanical Lock Hatch Kit	1
				5	TEKRAM1K	HDW KIT, CAM, RAM 1500	1

E-LOCK VERSIONS:
SWAP M WITH E IN PART NUMBER
EXAMPLE: TFKRAM196KM23W
BECOMES TFKRAM196KE23W

*** E-LOCK VERSION SWAP TMLHK WITH TELH03**

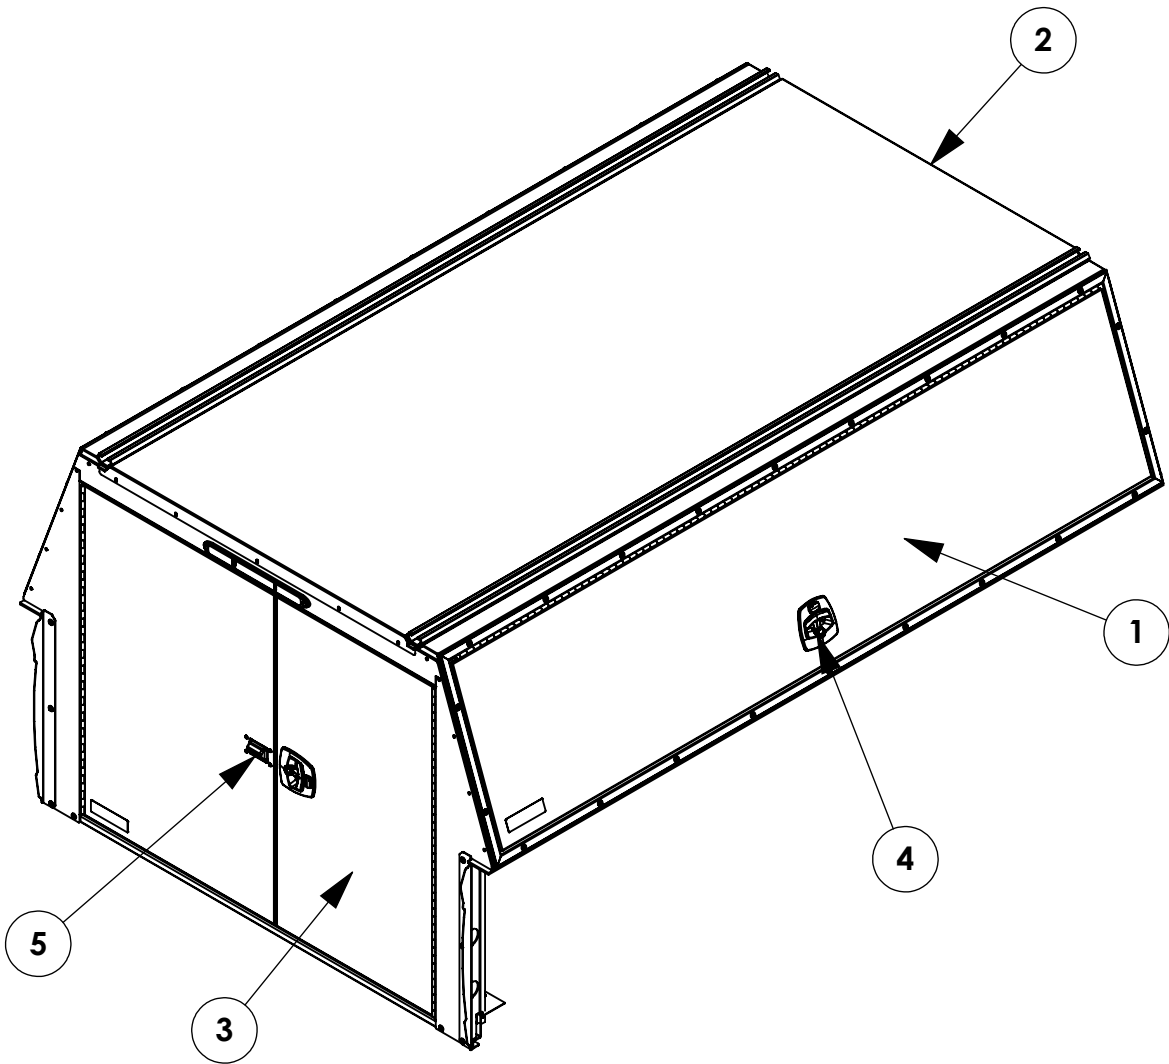

GET TO KNOW THE VEHICLE - AT THE BEGINNING OF ANY INSTALLATION, CHECK THE LOCATION OF THE FUEL TANK, FUEL LINES, BRAKE LINES, HIGH VOLTAGE BATTERIES AND WIRING HARNESSSES TO AVOID INJURY OR PROPERTY DAMAGE FROM TOOL CONTACT.

SEAL ALL EXTERIOR HOLES - ALL INSTALLATION HOLES SHOULD BE SEALED WITH BUTYL TAPE OR SILICON TO PREVENT WATER AND EXHAUST GASES FROM ENTERING THE VEHICLE.

CONTROL DRILL DEPTH - TO AVOID DAMAGE TO THE VEHICLE, USE A DRILL STOP OR CLEARED STEP BIT WHEN DRILLING INSTALLATION HOLES.

ALWAYS ADD PRIMER - WHEN ADDING INSTALLATION HOLES BE SURE TO USE A SELF-ETCHING PRIMER TO PREVENT CORROSION, FASTENER FAILURE AND INJURY.


MOUNTING POINTS MUST HAVE METAL-TO-METAL CONTACT - USE PROVIDED MOUNTING SPACERS TO ACCOMMODATE FOR VEHICLE FEATURES, CARPET OR SUBFLOORS.

PROVIDE CLEARANCE FOR SPACERS - IF THE INSTALLATION VEHICLE CONTAINS A CARPET OR SUBFLOOR, USE A 1-3/16" DIAMETER CARPET CUTTER (P/N: 31183-0) AT ALL MOUNTING LOCATIONS TO OPEN UP ROOM FOR SPACERS.


CHECK SPACER ORIENTATION - BE SURE THAT THE INDENT IN THE SPACER COVERS THE PLUSNUT HEAD; THIS ENSURES THE MOST METAL-TO-METAL CONTACT AND REDUCES VIBRATION.

PLUSNUT INSTALLATION - A PLUSNUT GUN IS RECOMMENDED FOR PLUSNUT INSTALLATION FOR ITS PRODUCTION SPEED. HOWEVER, A PLUSNUT SETTING TOOL CAN ALSO BE USED (P/N: 22200-0).


THRU-BOLT CLEARANCE - WHEN USING A THRU-BOLT AT ANY MOUNTING LOCATION, BE SURE THAT YOUR HOLE HAS 1/16" CLEARANCE.

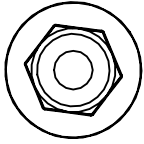FASTENERS USED**BAG REFERENCE: ALL**


FAS0055
1/4-20 ZP
HFLNG NLK NUT
QTY: 29




FAS0062
1/4-20 X 0.75 ZP
THP SCREW
QTY: 9

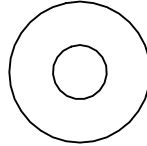


FAS0067
1/4 ZP
FLAT WASHER
QTY: 9

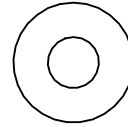


FAS0234
1/4 SST
FLAT WASHER
QTY: 44

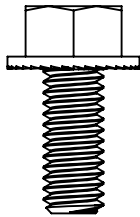


FAS0438
5/16-18 X .75 ZP
HFNLG SCREW
QTY: 20

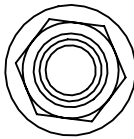

FAS0440
5/16-18 ZP
HFLNG NLK NUT
QTY: 20

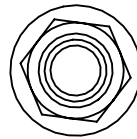


FAS0861
5/16-18 SST
HFLNG NLK NUT
QTY: 4




FAS0917
M5 X .8 ZP
HFLNG NLK NUT
QTY: 8




FAS0918
10-24 ZP
HFLNG NLK NUT
QTY: 4



FAS0919
5/16-18 X 1.25 SST
BHC SCREW
QTY: 12



FAS0920
1/4-20 X 1.0 SST
BHC SCREW
QTY: 44

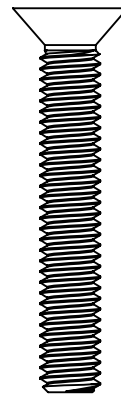


FAS1279
5/16-18 X 2.0 SST
FHT SCREW
QTY: 2


INTENTIONALLY LEFT BLANK

FASTENERS USED


BAG REFERENCE: ALL

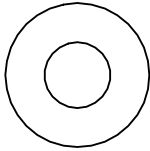


FAS0164
5/16 ALUM
FLAT WASHER
QTY: 8




FAS0242
5/16-18 X 1.5 SST
HH SCREW
QTY: 8




FAS0248
5/16-18 SST
HH NLK NUT
QTY: 8

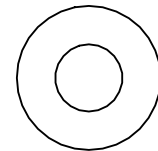

FAS0552
5/16 SST
FLAT WASHER
QTY: 20

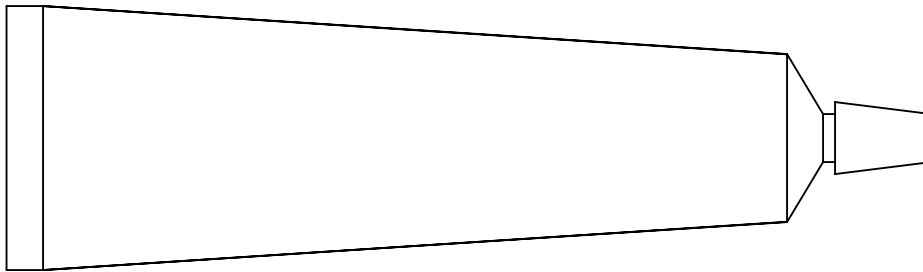


26618-0
1 OZ TUBE
SILICONE
QTY: 2

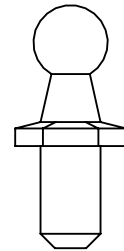


30015-0
THREADED BALL STUD
QTY: 4




FAS0711
1/4-20 BK PH
SPRING CLIP
QTY: 4

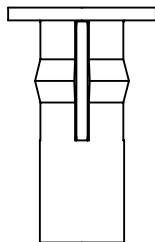

FAS0222
5/16-18 PB WS450
PLUSNUT
QTY: 2



FAS0148
#10 X .50 NI-ZN
PH SELF TAP SCREW
QTY: 1




FAS0066
1/4
EXT TOOTH
LOCK WASHER
QTY: 1


INTENTIONALLY LEFT BLANK

FASTENERS USED


BAG REFERENCE: BAG77939




**30015-0
THREADED BALL STUD
QTY: 4**

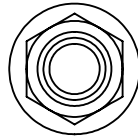


**FAS0861
NUT, HEX NLK FLG,
5/16-18, SS
QTY: 4**




**FAS0920
SCREW, BHCS,
1/4-20X1.0, SS
QTY: 6**

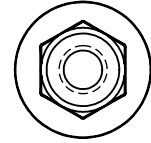


**FAS0055
NUT, HEX NLK FLG,
1/4-20, ZP
QTY: 12**




**FAS0711
SPRING, CLIP,
1/4-20, BK PH
QTY: 4**

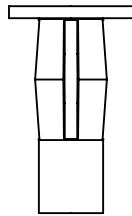


**FAS0052
PLUSNUT,
1/4-20, PB DC
QTY: 2**

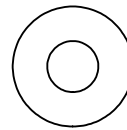


**FAS0234
WASHER, FLAT,
1/4, SST
QTY: 18**



**FS0576
SCREW, BHCS,
1/4-20X.75, SSW
QTY: 10**



**FAS0671
SCRW, HEX HD,
1/4-20X1.25, SS
QTY: 2**



**FAS0672
WASHER, LOCK, SPLIT
1/4, SST
QTY: 6**

INTENTIONALLY LEFT BLANK

PAGE:

22

FASTENERS USED


BAG REFERENCE: BAG76637



**FAS0917
M5 X .8 ZP
HFLNG NLK NUT
QTY: 12**



**FAS0918
10-24 ZP
HFLNG NLK NUT
QTY: 6**

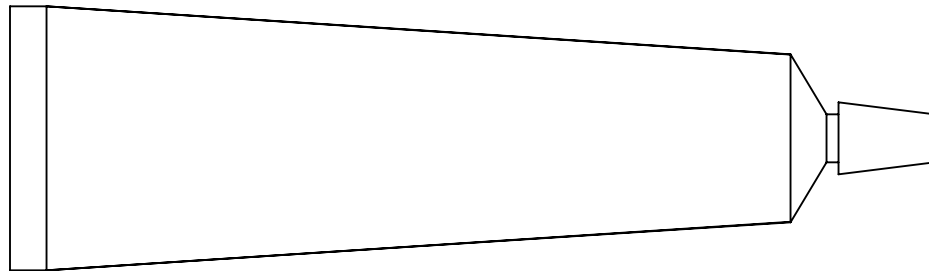

**26618-0
1 OZ TUBE
SILICONE
QTY: 1**



INTENTIONALLY LEFT BLANK

STEP 1 - ASSEMBLE BODY FRAME: SIDES AND CROSSBOWS

Step 1.1
OPEN [x2]
TOPPER SIDE
KITS
[TSK78M23W]

Step 1.2
OPEN TOPPER
ROOF KIT
[TRK7823W]

Step 1.3
FULLY TIGHTEN
FAS0438 AND
FAS0440
(16 PLACES)
1/2" WRENCH
1/2" SOCKET

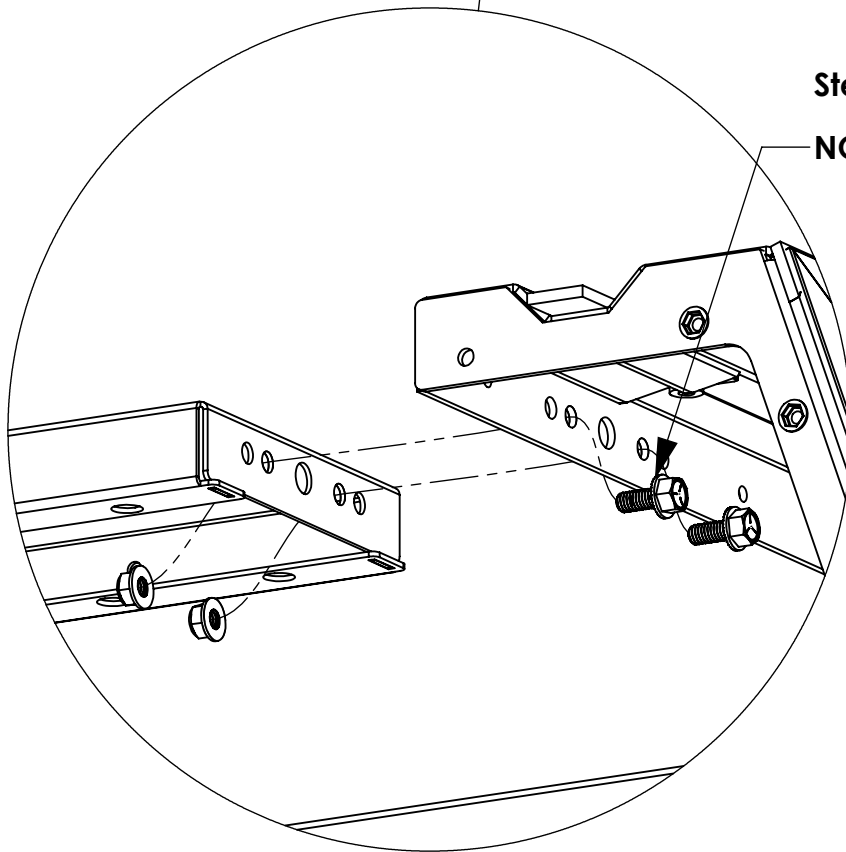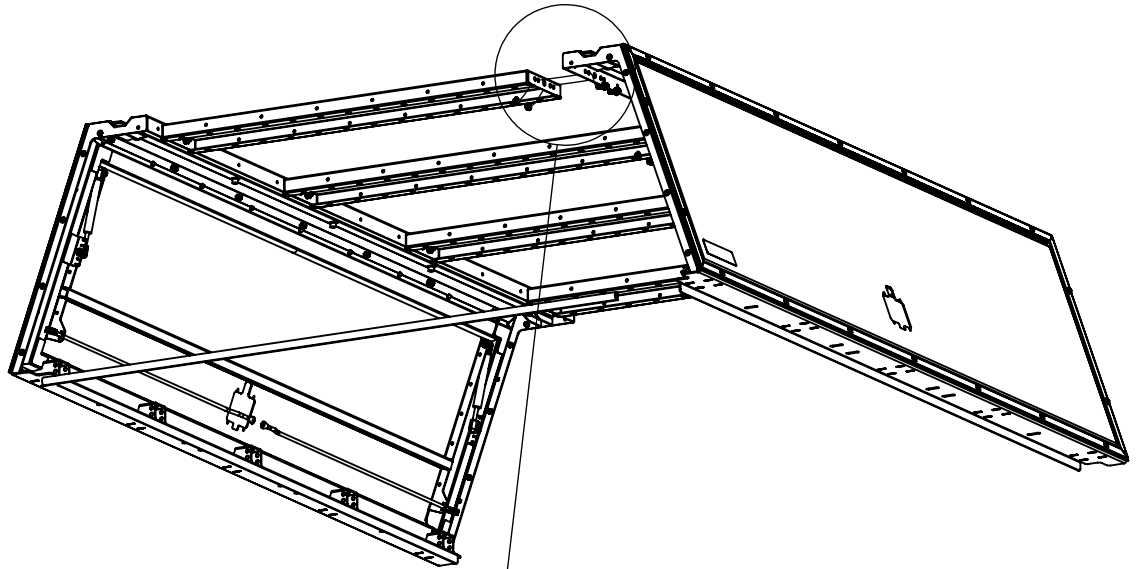

Step 1.3

NOTE: Nut inboard

STEP 2 - ATTACH HARDWARE: SIDE DOOR HANDLES, FRONT & REAR SEALS

Step 2.1
CUT ZIP TIES
THAT ARE
HOLDING
LOCKRODS IN
PLACE

!! CAUTION !!
DOORS MAY
TRY TO OPEN

Step 2.2
ATTACH HANDLE
TO DOOR

FULLY TIGHTEN
FAS0917
(4 PER DOOR)
10mm SOCKET

DO NOT
OVERTIGHTEN

Step 2.3
ATTACH
LOCKRODS TO
HANDLE

FULLY TIGHTEN
FAS0918
(2 PLACES)
8mm SOCKET


DO NOT
OVERTIGHTEN

Step 2.4
ADJUST HANDLE
POINT TO ALIGN
WITH CASTING
LINE ON HANDLE
BODY
(APPROX: 1.0")


FULLY TIGHTEN
4mm ALLEN
(2 PLACES)

Step 2.5
APPLY FOAM
SEALS TO ALL
CORNERS

USE HOLES IN
SEAL TO ALIGN
MATERIAL

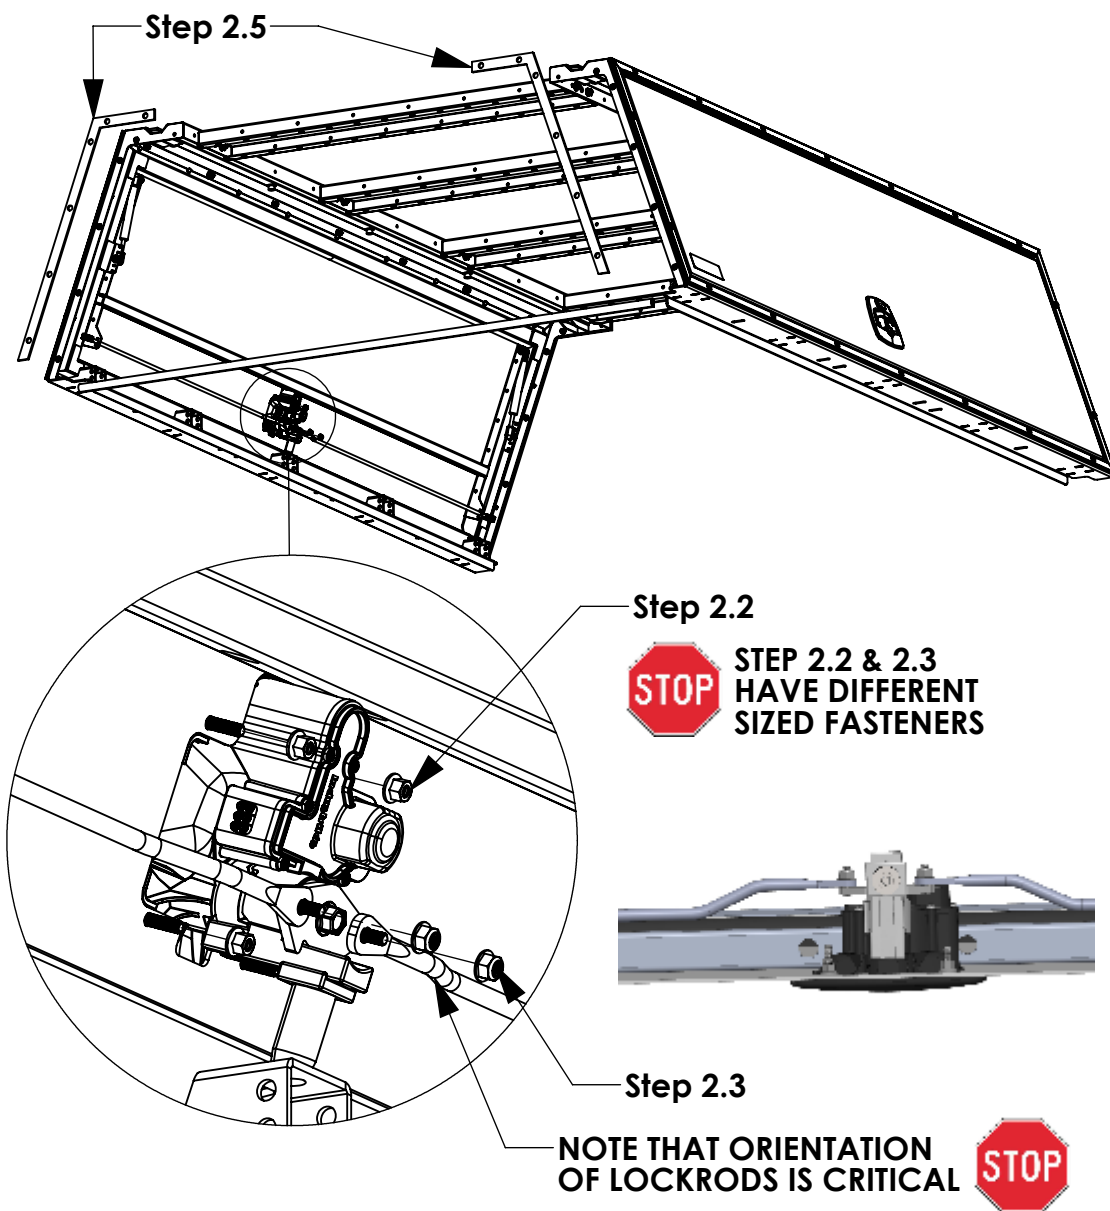

Step 2.1

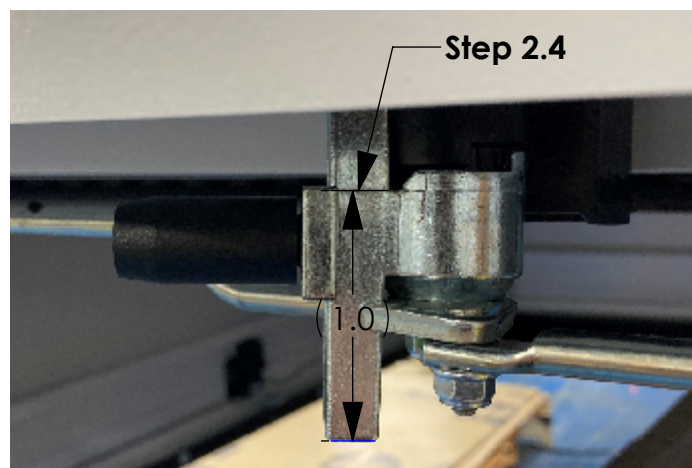

Step 2.4

STEP 3 - ATTACH FRONT PANEL

Step 3.1
OPEN TOPPER
CLOSURE KIT
[TCK78HM23W]


Step 3.2
ATTACH FRONT
PANEL

HAND TIGHTEN
FAS0234,
FAS0920
(10 PLACES)

DO NOT
TIGHTEN UNTIL
AFTER STEP 7

Step 3.3
INSTALL FRONT
BED SEAL BY
PLACING ON
FRONT PANEL
FLANGE
CENTERED
BETWEEN THE
DRIVER AND
PASSENGER SIDE
BED RAILS.


TRIM OFF EXTRA,
IF NECESSARY.

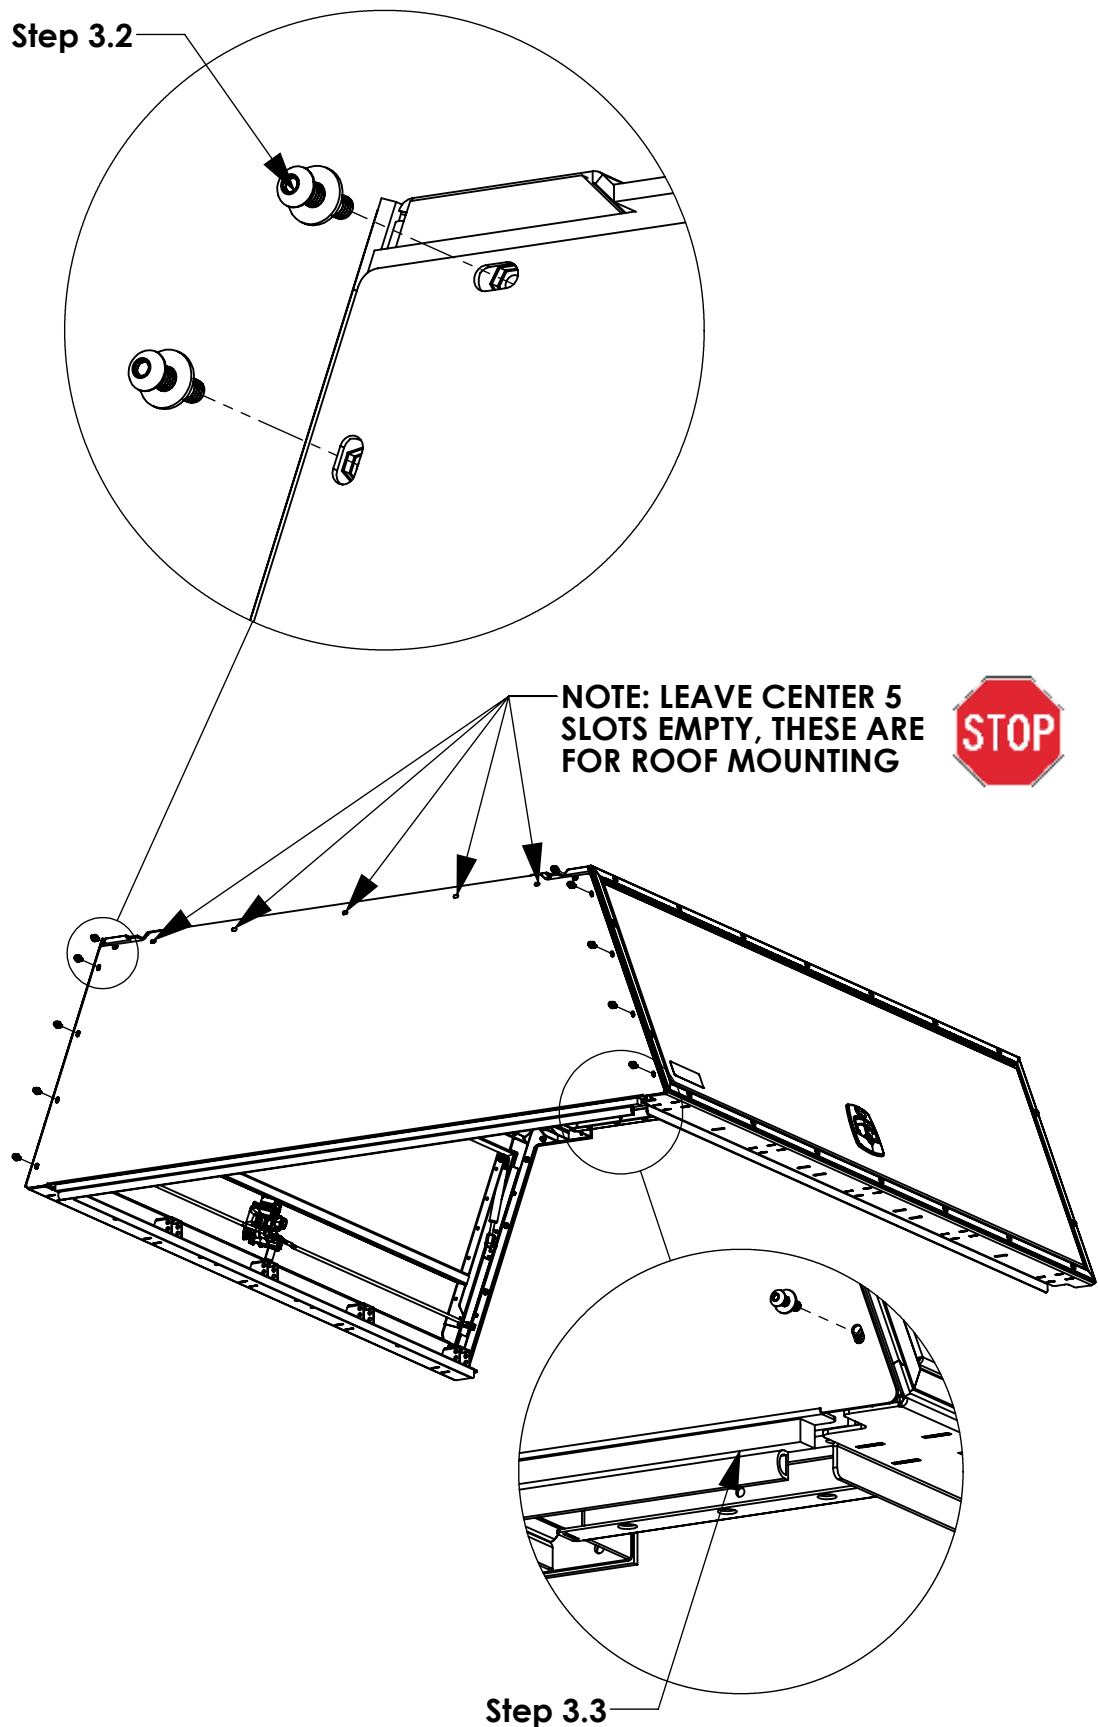


STEP 4 - ATTACH TOP BRACKET ASSEMBLY**Step 4
ATTACH TOP
BRACKET ASSM**

HAND TIGHTEN
FAS0234,
FAS0920
(2 PLACES)
5/32" ALLEN

**NOTE: LEAVE CENTER 5
SLOTS EMPTY, THESE ARE
FOR ROOF MOUNTING**

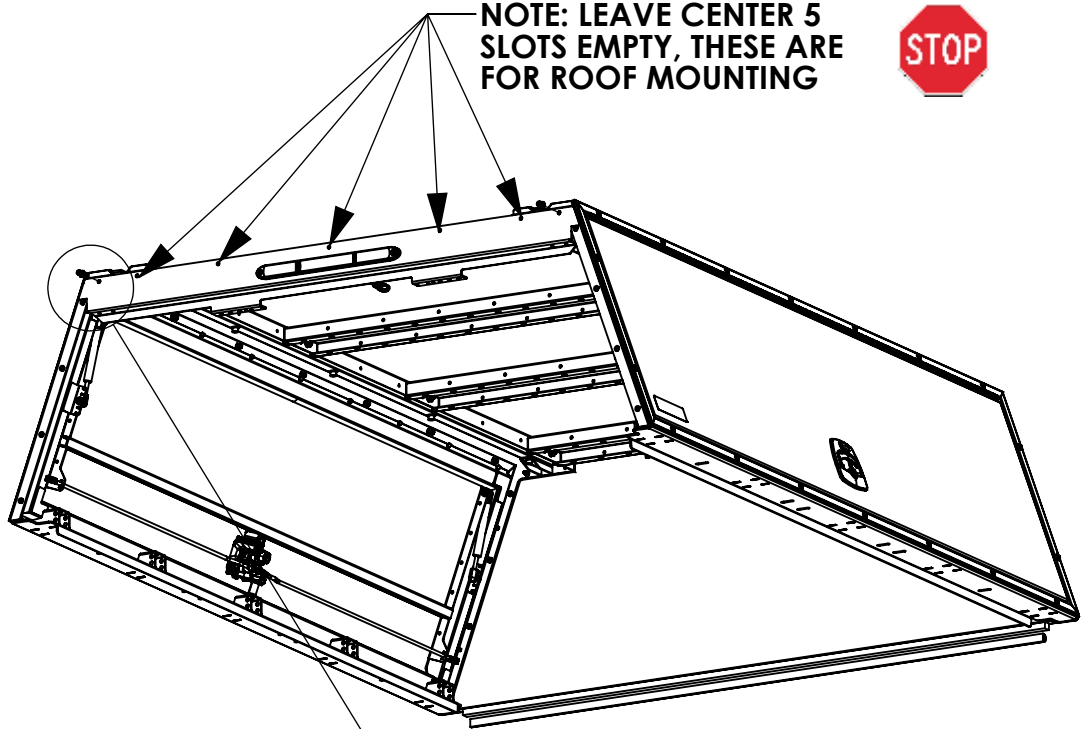


Step 4

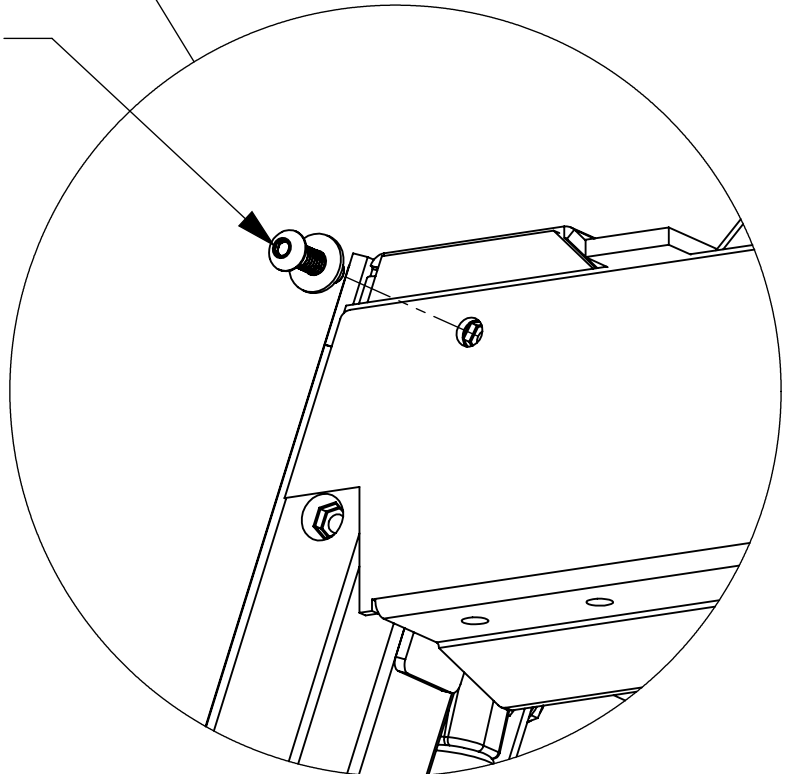

STEP 5 - ATTACH BARN DOOR DS AND PS ASSEMBLIES CONT'D


Step 5.1
ALIGN (2)77757
FOAM AT TOP
OF FLANGE OF
BARN DOOR DS
AND PS
ASSEMBLIES
AND PRESS
FIRMLY TO
ATTACH

NOTE: FOAM
PART NUMBERS
MAY VARY

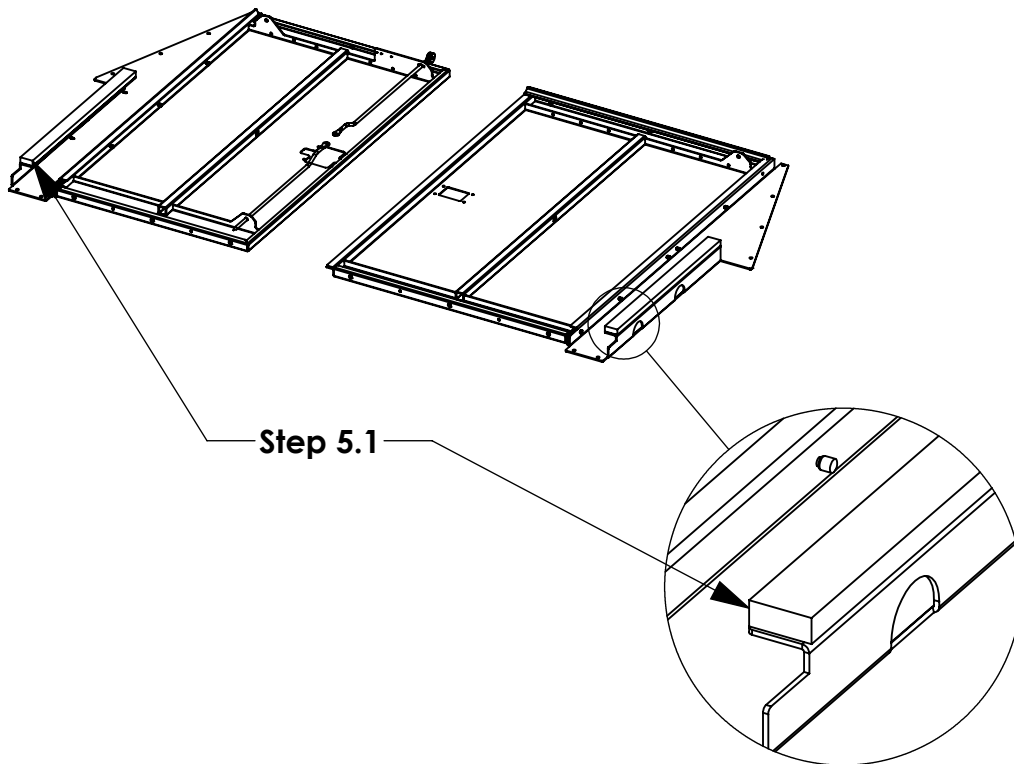

Step 5.1ALT FOR
COLORADO

ALIGN (2)77757
FOAM AT THE
EDGE OF BARN
DOOR (AS
SHOWN) DS AND
PS ASSEMBLIES
AND PRESS
FIRMLY TO
ATTACH


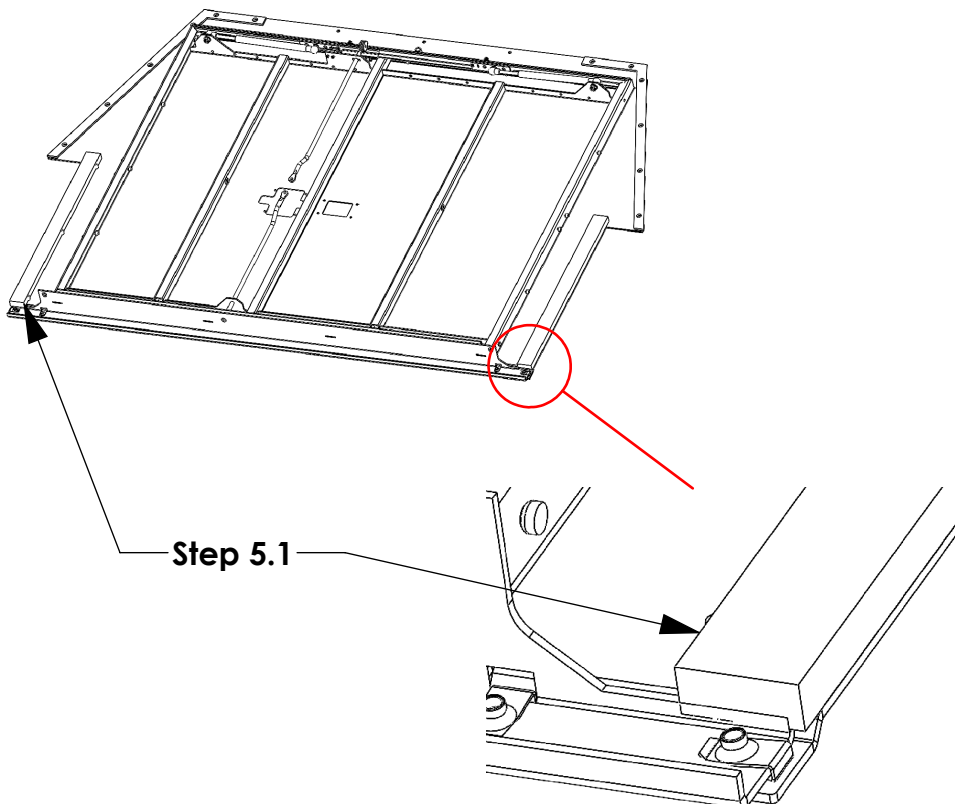


STEP 5 - ATTACH BARN DOOR DS AND PS ASSEMBLIES CONT'D**Step 5.2
ATTACH DS
ASSM**

HAND TIGHTEN
FAS0234,
FAS0920
(4 PLACES)
5/32" ALLEN

**Step 5.3
ATTACH PS
ASSM**

HAND TIGHTEN
FAS0234,
FAS0920
(4 PLACES)
5/32" ALLEN

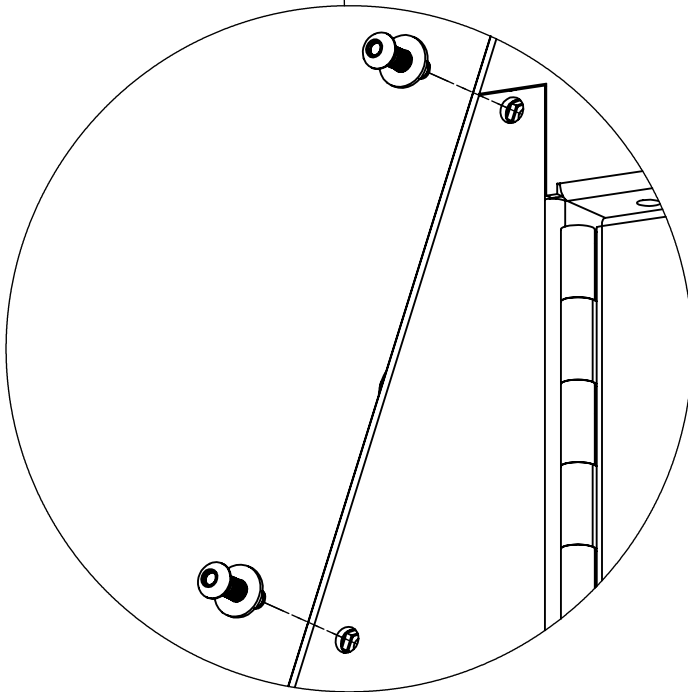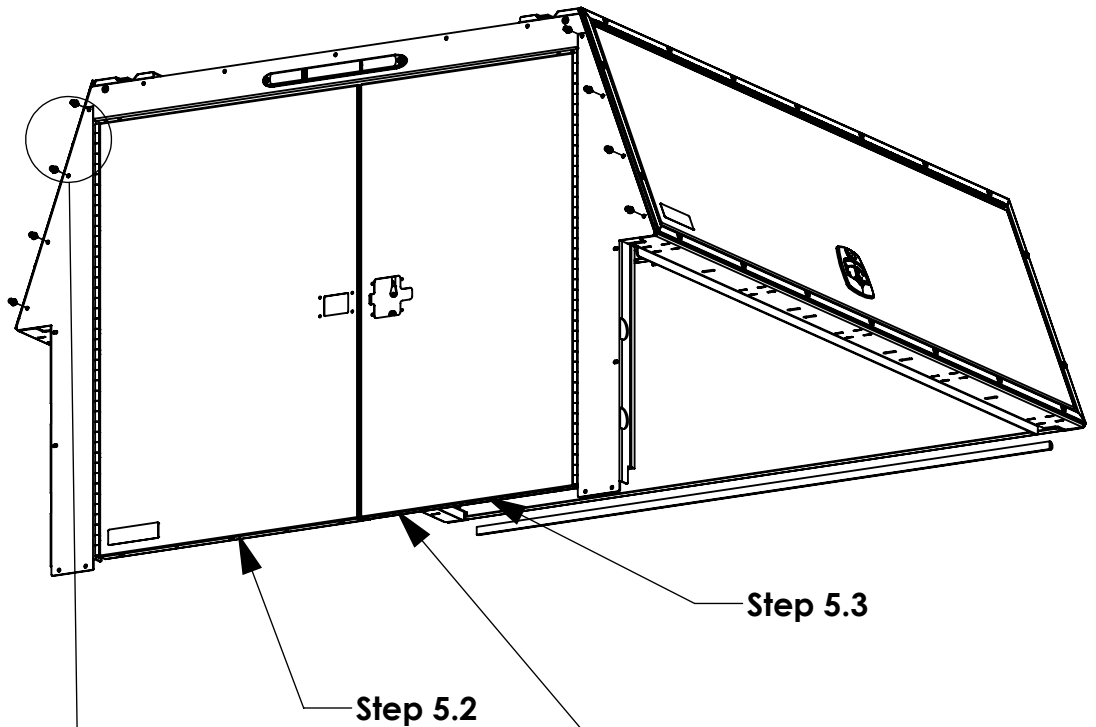


STEP 6 - ATTACH BARN DOOR LOWER BRACKET ASSEMBLY

Step 6.1
TRIM VISIBLE
EXCESS FOAM

Step 6.2
ATTACH
FAS0711 [x4] TO
LOWER BRACKET
ASSM

Step 6.3
ATTACH BARN
DOOR LOWER
BRACKET ASSM,
INSIDE HOLES
ONLY

FULLY TIGHTEN
FAS0234,
FAS0920
(2 PLACES)

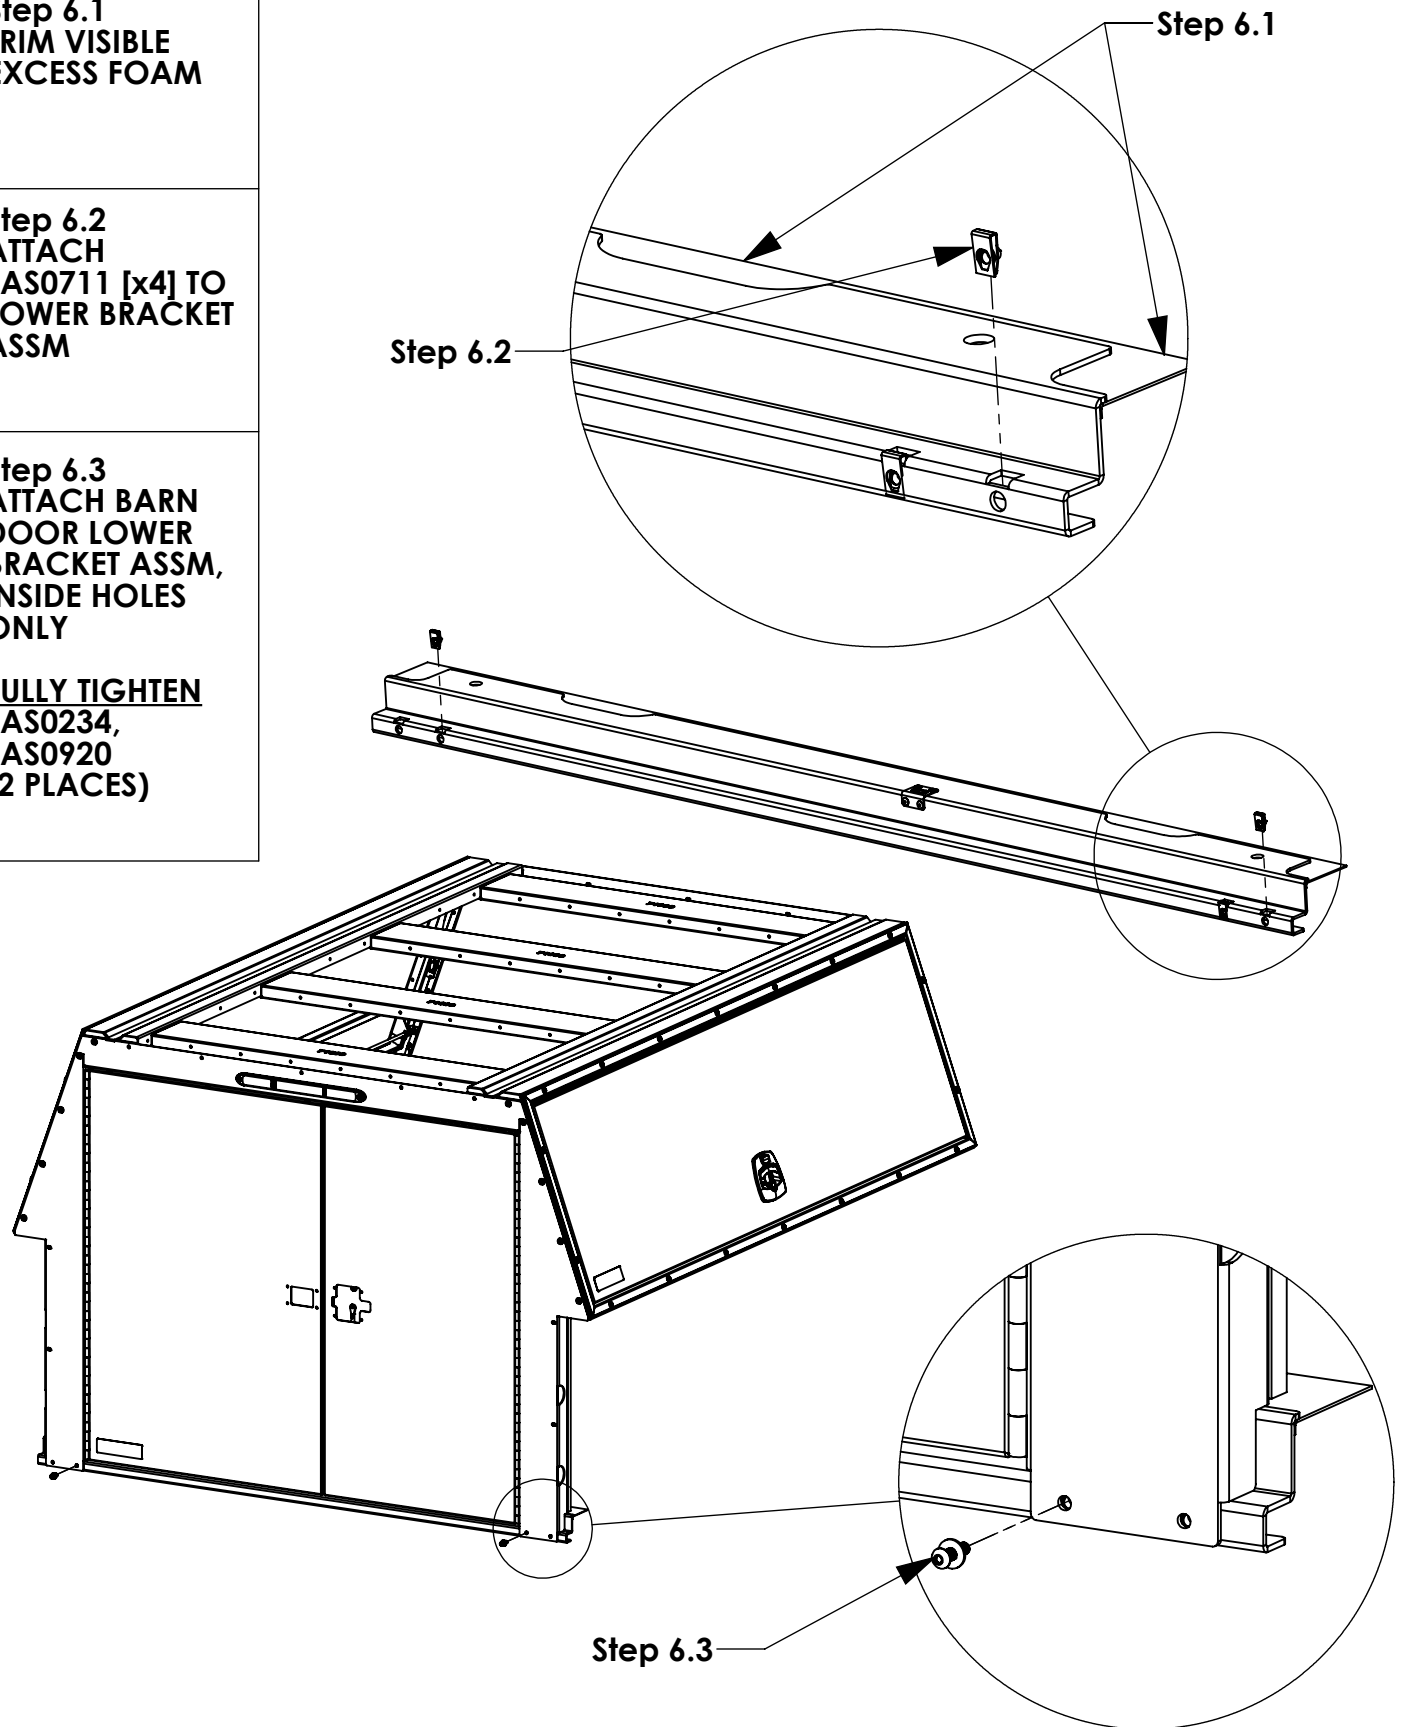


**STEP 6ALT - ATTACH BARN DOOR LOWER BRACKET ASSEMBLY
(ALTERNATE FOR COLORADO)**

**Step 6ALT.1
TRIM VISIBLE
EXCESS FOAM**

**Step 6ALT.2
ATTACH
FAS0711 [x4] TO
LOWER BRACKET
ASSM**

**Step 6ALT.3
ATTACH BARN
DOOR LOWER
BRACKET ASSM**

**FULLY TIGHTEN
FAS0576,
FAS0672, &
FAS0234
(4 PLACES)**

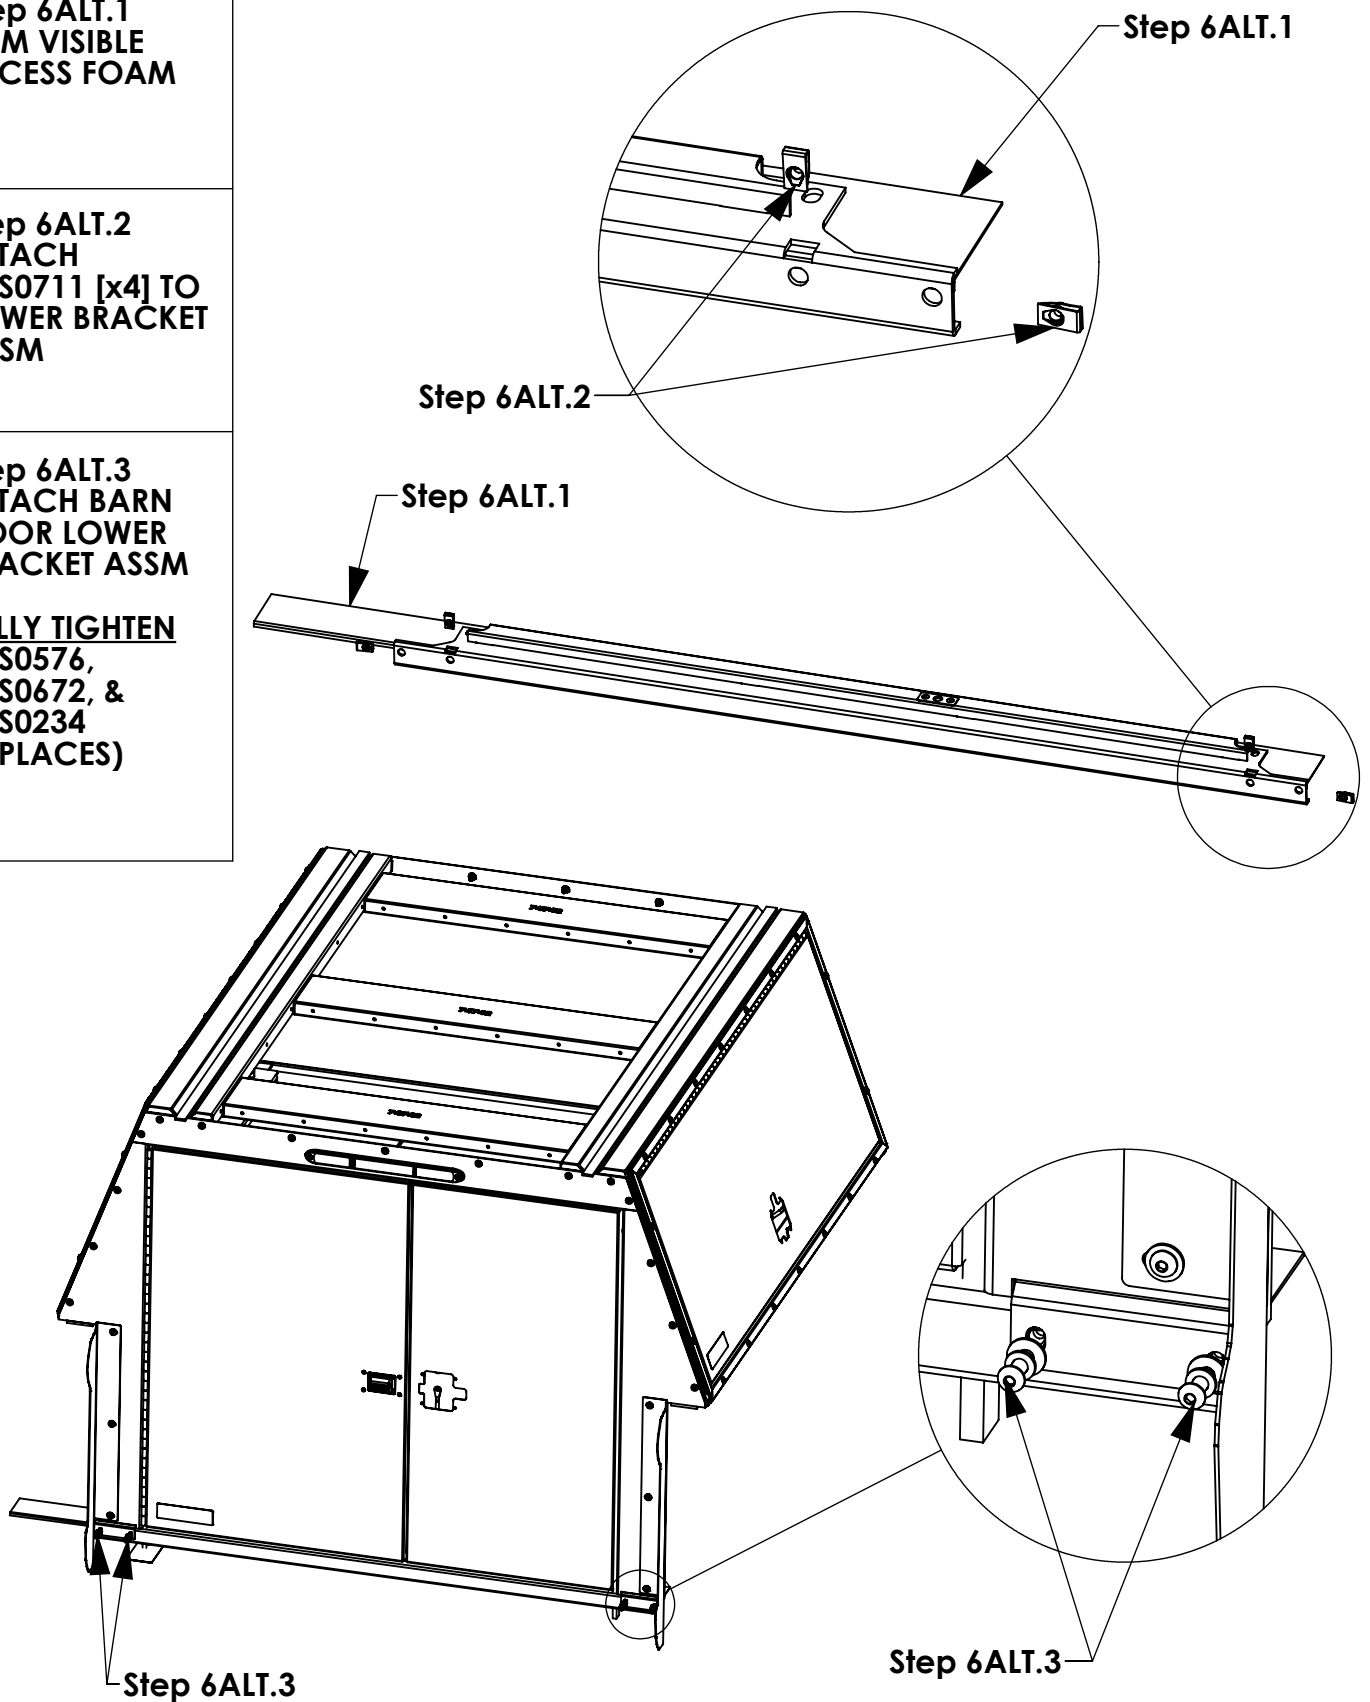

STEP 7 - ATTACH PS AND DS BED FILLER**Step 7.1
ATTACH DS BED
FILLER**

**PUSH INWARD
AND HAND
TIGHTEN**
FAS0234,
FAS0920,
FAS0055

**(3 PLACES)
5/32" ALLEN**



**Step 7.2
ATTACH PS BED
FILLER**

**PUSH INWARD
AND HAND
TIGHTEN**
FAS0234,
FAS0920,
FAS0055

**(3 PLACES)
5/32" ALLEN**

**Step 7.3
ADJUST BARN
DOOR
ASSEMBLIES SO
THAT THE TOPS
OF DOORS ARE
EVEN AND
GO BACK AND
FULLY TIGHTEN
FASTENERS
FROM STEPS 3.2,
4, 5.2, 5.3 AND
6.2**

**(22 PLACES)
5/32" ALLEN**

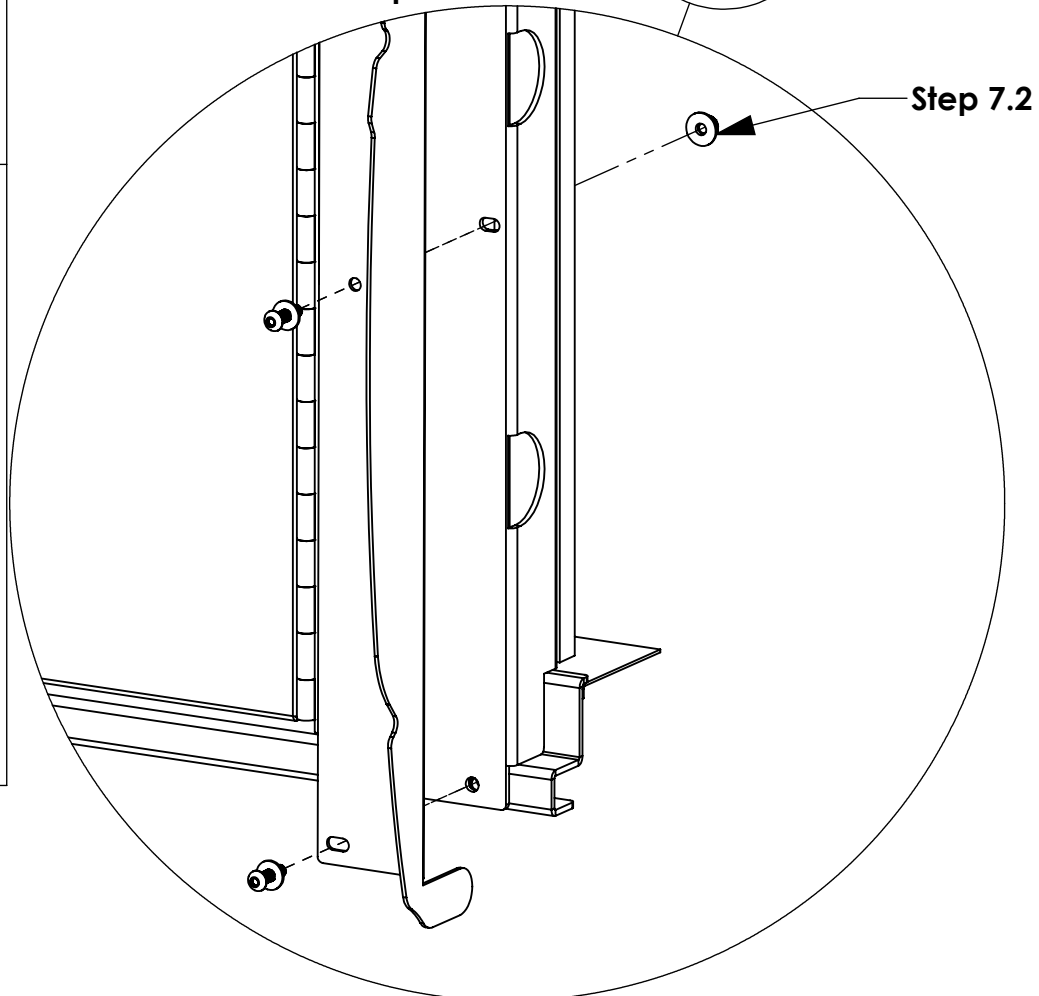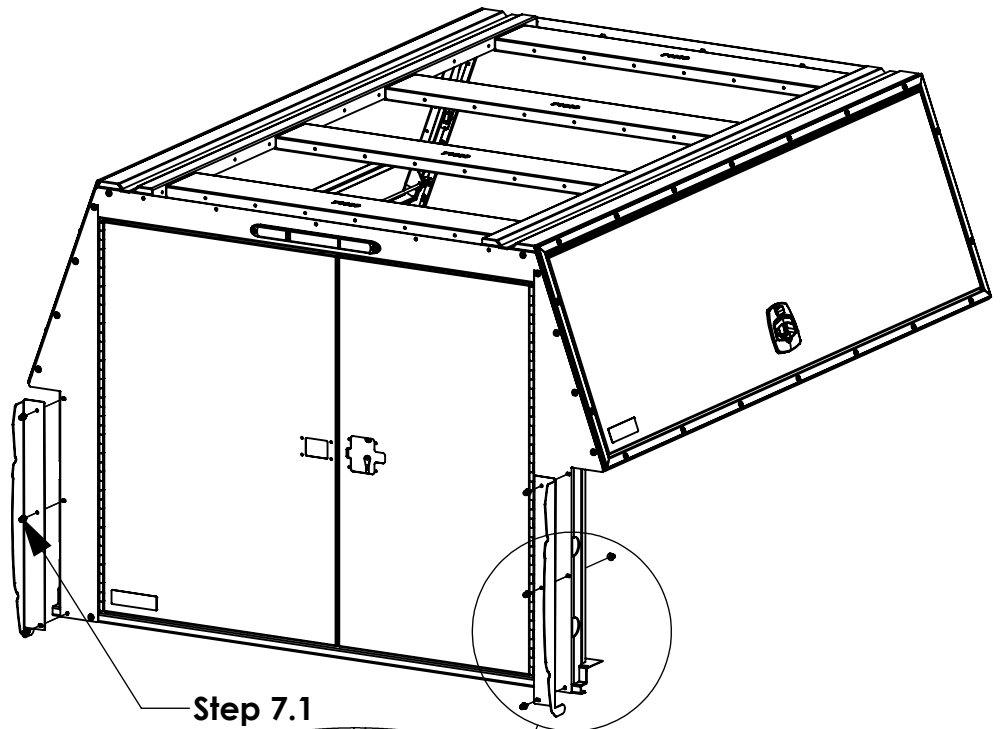

STEP 7ALT - ATTACH PS AND DS BED FILLER (ALTERNATE FOR COLORADO)

Step 7ALT.1 ATTACH DS BED FILLER

PUSH INWARD
AND HAND
TIGHTEN
FAS0234,
FAS0576,
FAS0055

(3 PLACES)
5/32" ALLEN



Step 7ALT.2 ATTACH PS BED FILLER

PUSH INWARD
AND HAND
TIGHTEN
FAS0234,
FAS0576,
FAS0055

(3 PLACES)
5/32" ALLEN

Step 7ALT.3
ADJUST BARN
DOOR
ASSEMBLIES SO
THAT THE TOPS
OF DOORS ARE
EVEN AND
GO BACK AND
FULLY TIGHTEN
FASTENERS
FROM STEPS 3.2,
4, 5.2, 5.3 AND
6.2

(22 PLACES)
5/32" ALLEN

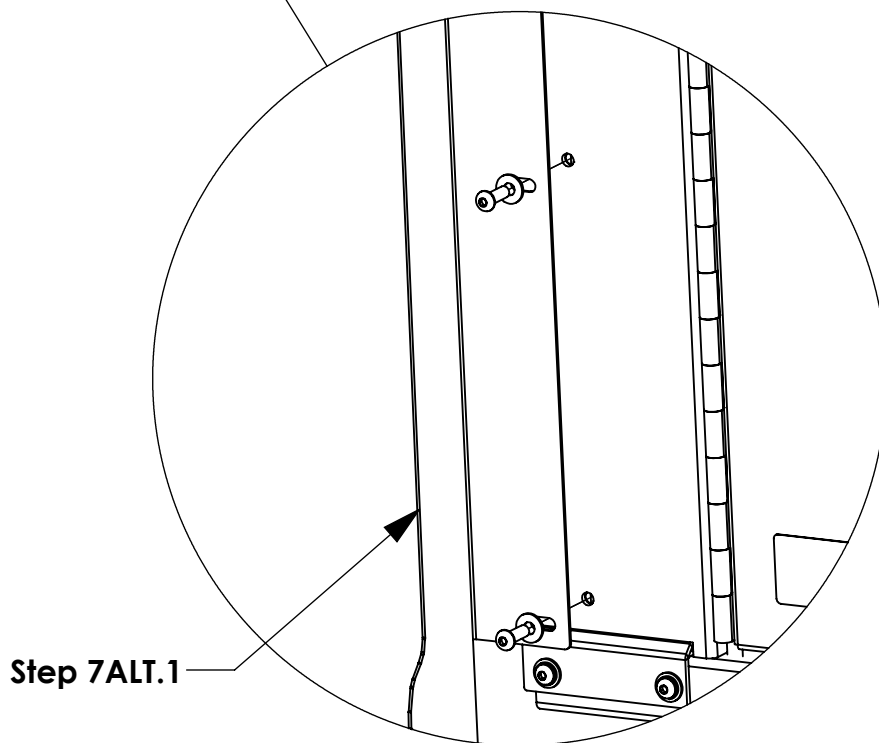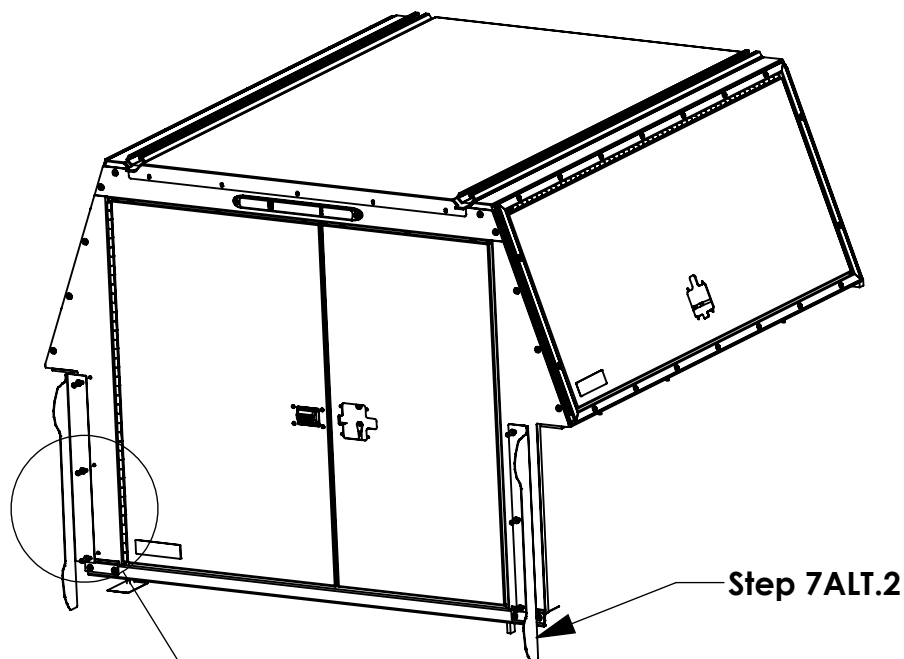

STEP 8 - ATTACH BARN DOOR HANDLE

Step 8.1
CUT ZIP TIES
THAT ARE
HOLDING
LOCKRODS IN
PLACE

!! CAUTION !!
DOORS MAY
TRY TO OPEN

Step 8.2
ATTACH HANDLE
TO DOOR

FULLY TIGHTEN
FAS0917
(4 PER DOOR)
10mm SOCKET

DO NOT
OVERTIGHTEN



Step 8.3
ATTACH
LOCKRODS TO
HANDLE

FULLY TIGHTEN
FAS0918
(2 PLACES)
8mm SOCKET

DO NOT
OVERTIGHTEN

Step 8.4
ADJUST HANDLE
POINT TO ALIGN
WITH CASTING
LINE ON HANDLE
BODY
(APPROX: 1.0")

FULLY TIGHTEN
4mm ALLEN
(2 PLACES)

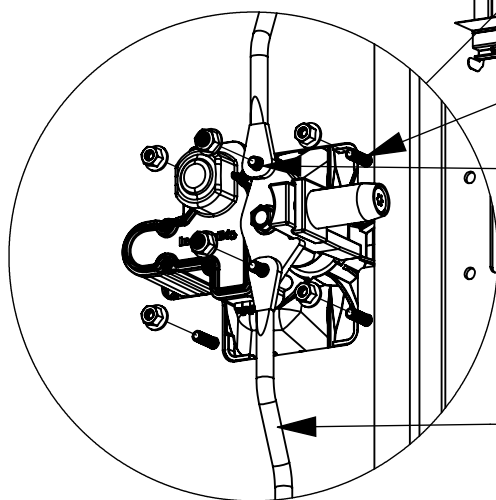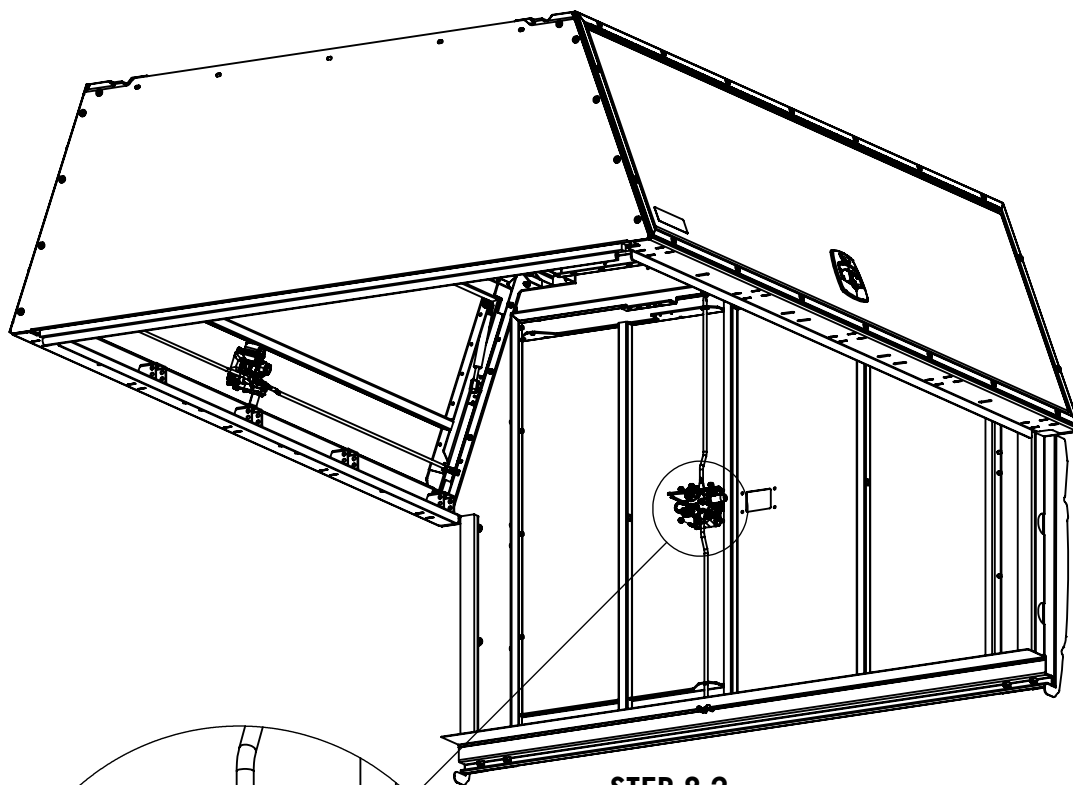

STEP 8.2


STEP 8.3




STEP 8.2 & 8.3
HAVE DIFFERENT
SIZED FASTENERS



NOTE THAT ORIENTATION
OF LOCKRODS IS CRITICAL

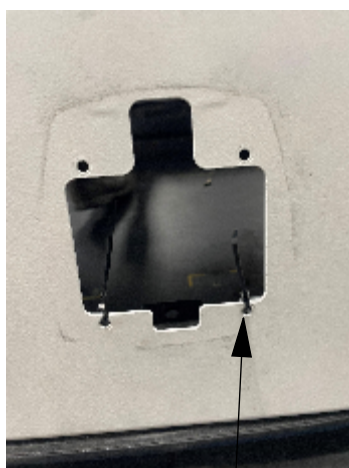

Step 8.1

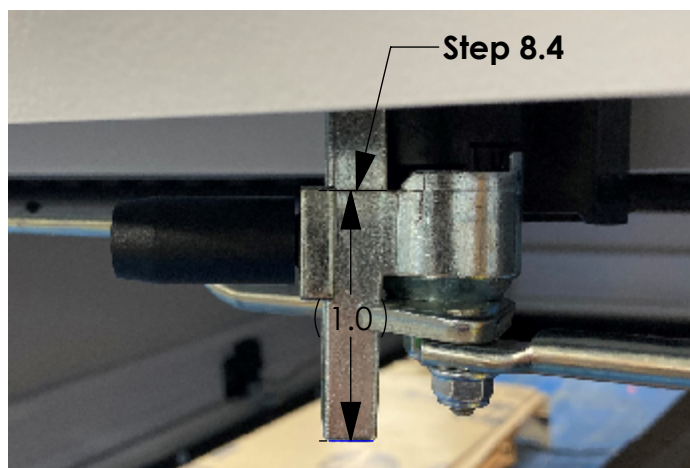

STEP 9 - ATTACH ROOF AND ROOF RAILS

Step 9.1
SET ROOF PANEL
ON TOPPER BODY



**PLEASE NOTE THAT ORDER OF OPERATIONS ON
THESE BUILD STEPS IS CRITICAL TO A PROPER SEAL!**


Step 9.2
ATTACH
MOUNTING RAILS
TO TOPPER BODY.

USE AN
ALIGNMENT
PUNCH TO POKE
THROUGH SEALS


FULLY TIGHTEN
FAS0552,
FAS0919
(10 PLACES)
3/16" ALLEN

Step 9.3
ATTACH ROOF
TO TOPPER
BODY.

FULLY TIGHTEN
FAS0055,
FAS0552,
FAS0920
(10 PLACES)
5/32" ALLEN
7/16" WRENCH

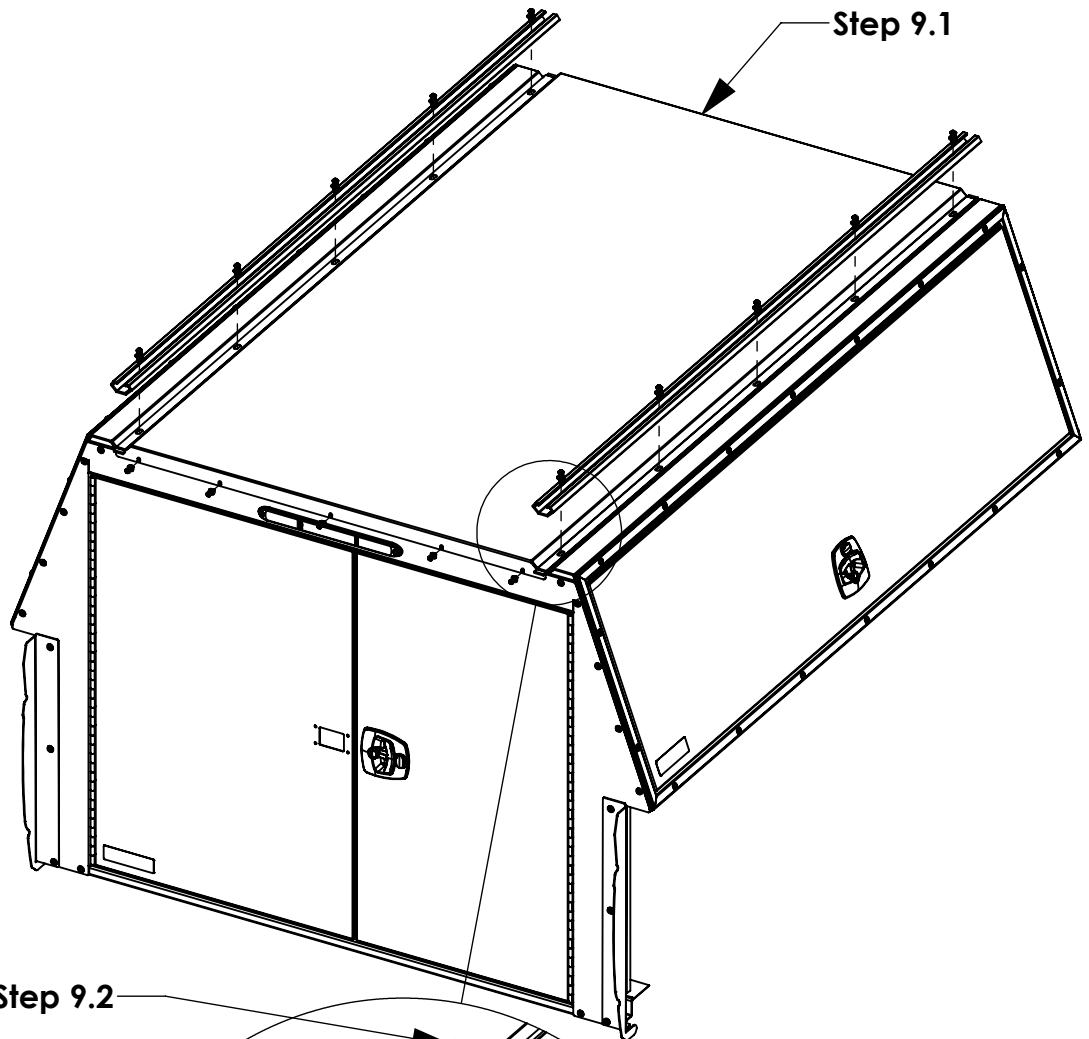


Step 9.2

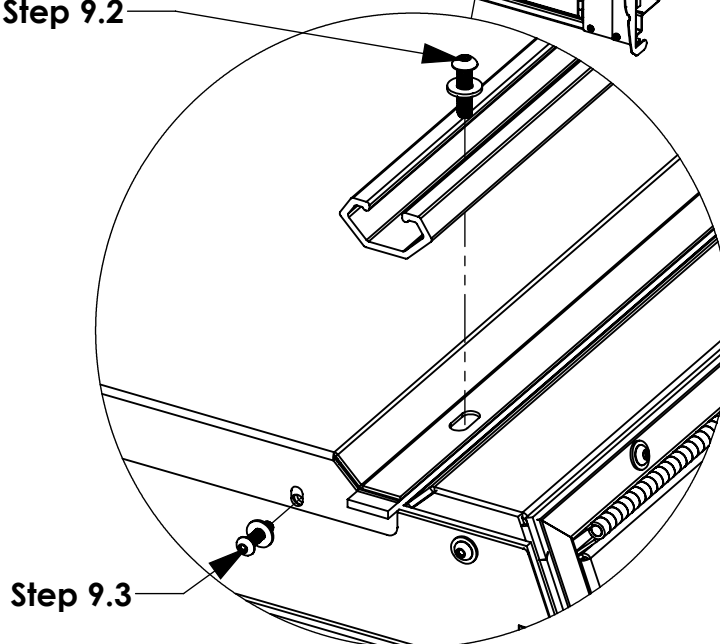



Step 9.3

STEP 10 - SILICONE JOINTS

Step 10
SILICONE ALONG
SEAM AS SHOWN,
BOTH ENDS

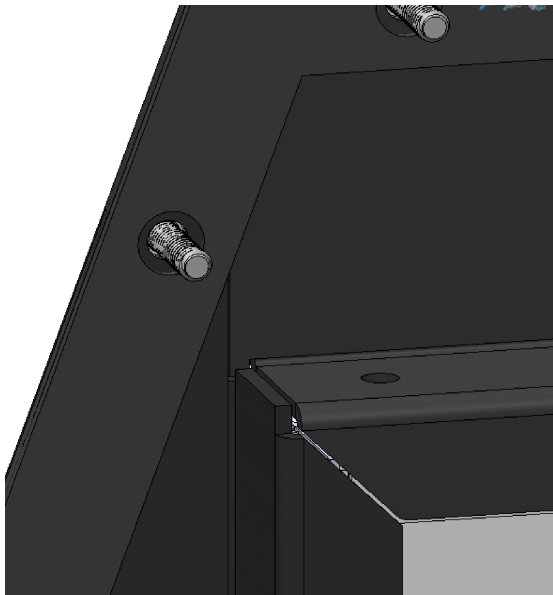

SILICONE

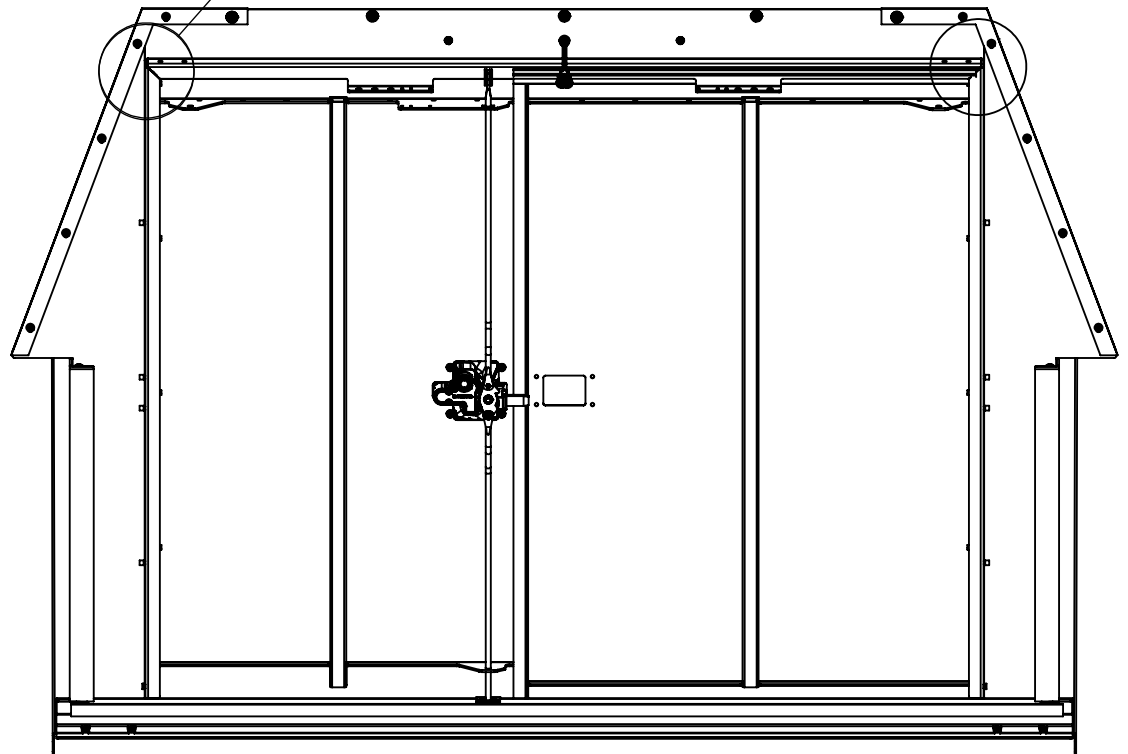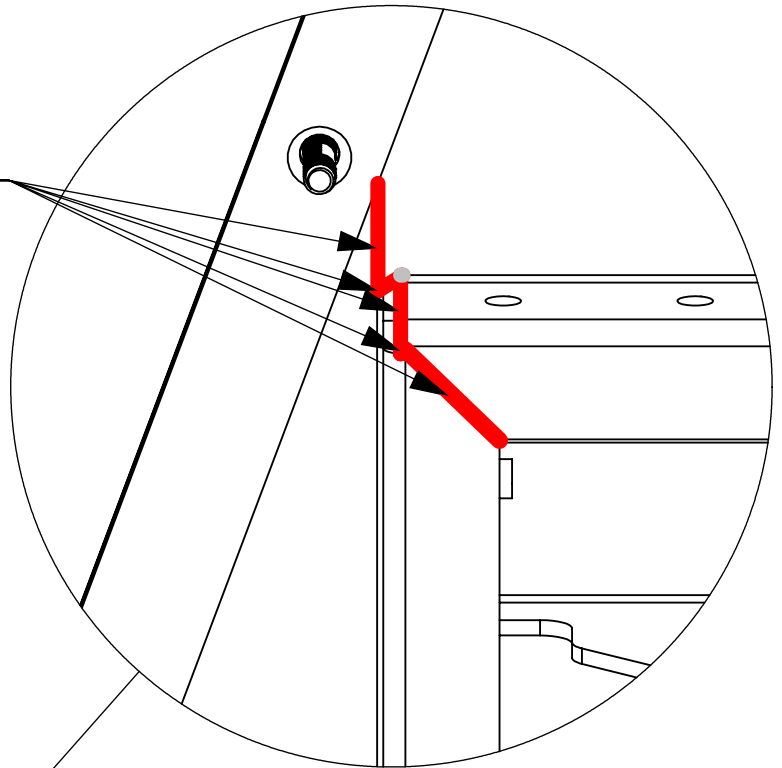


STEP 11 - ATTACH CORNER GUSSETS

Step 11
ATTACH CORNER
GUSSETS, BOTH
ENDS

FULLY TIGHTEN
FAS0920
FAS0234
FAS0055

(6 PLACES)
5/32" ALLEN

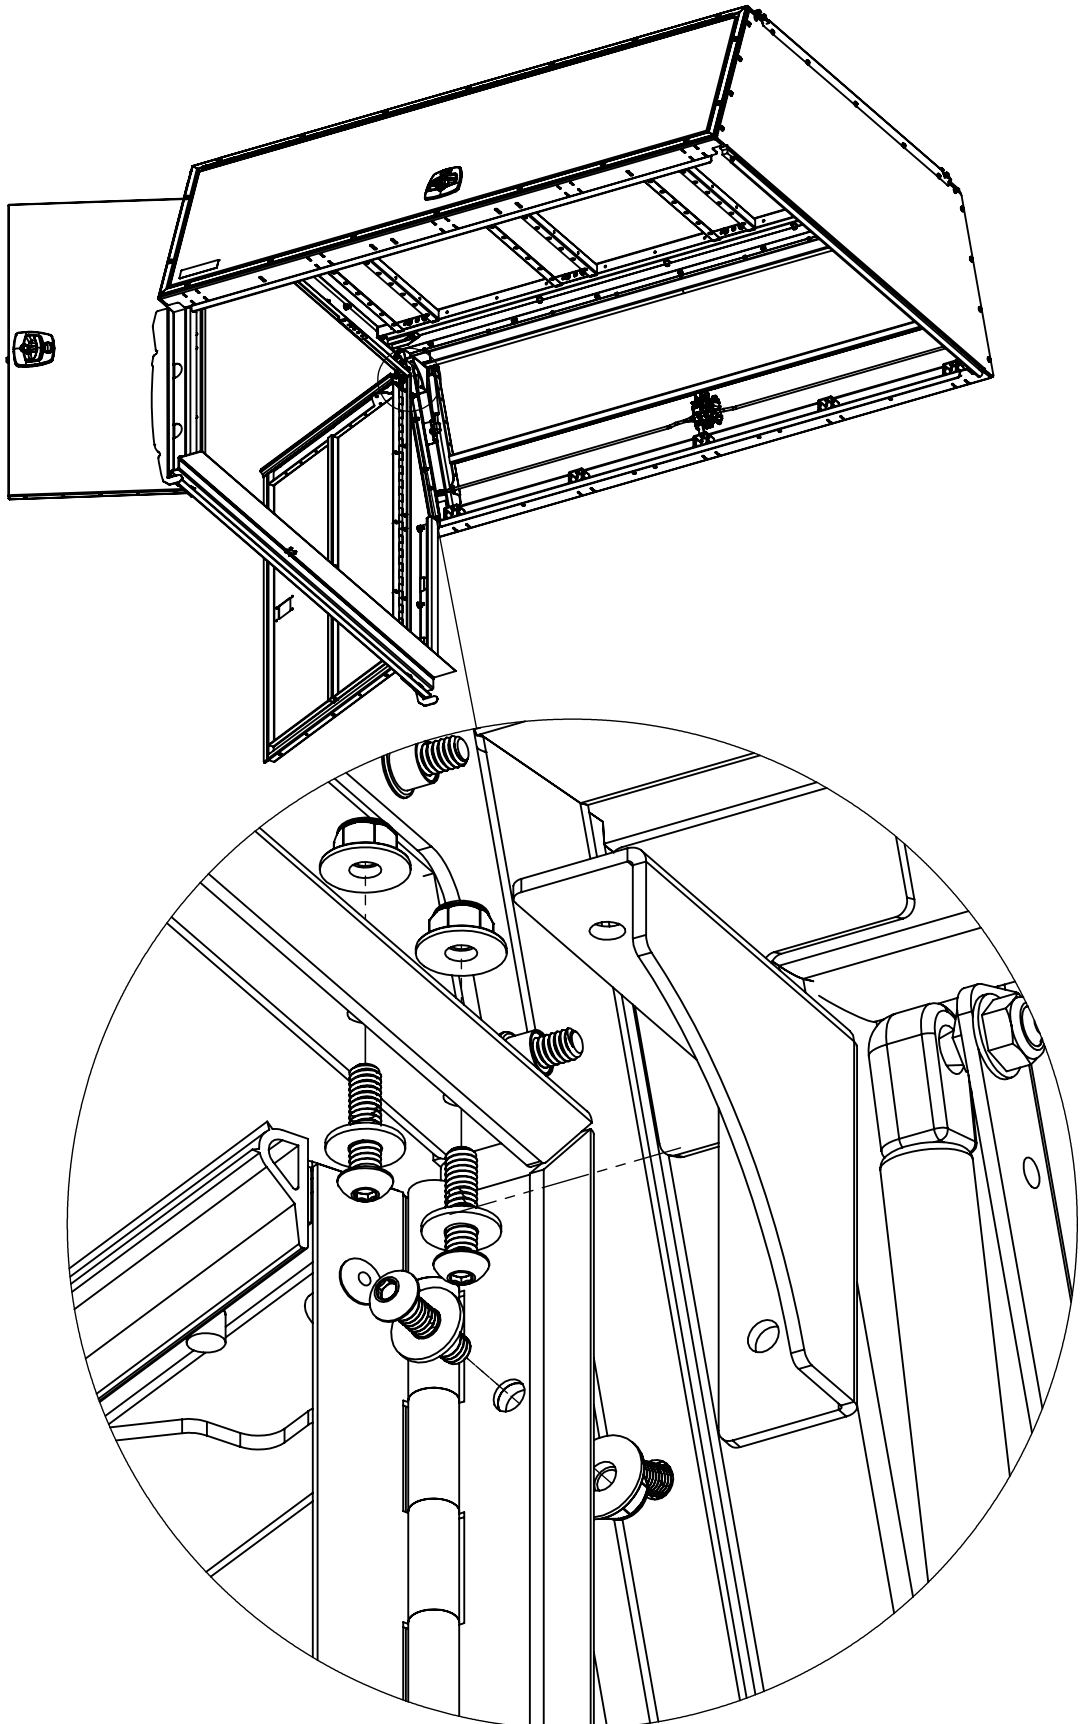


STEP 12 - INSTALL BALL STUDS

Step 12 INSTALL BALL STUDS


FULLY TIGHTEN
30015-0
FAS0861

(4 PLACES)
1/2" WRENCH

***NOTE: MOUNT**
IN CENTER HOLES
FOR FORDS

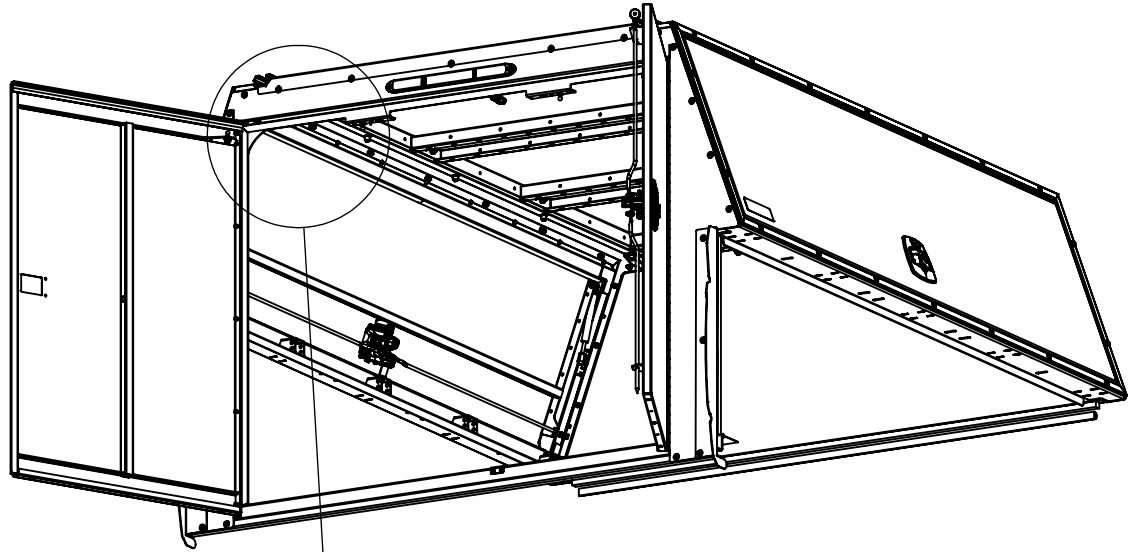


**BALL STUD UPWARD ON DOOR,
DOWNWARD ON FRAME**

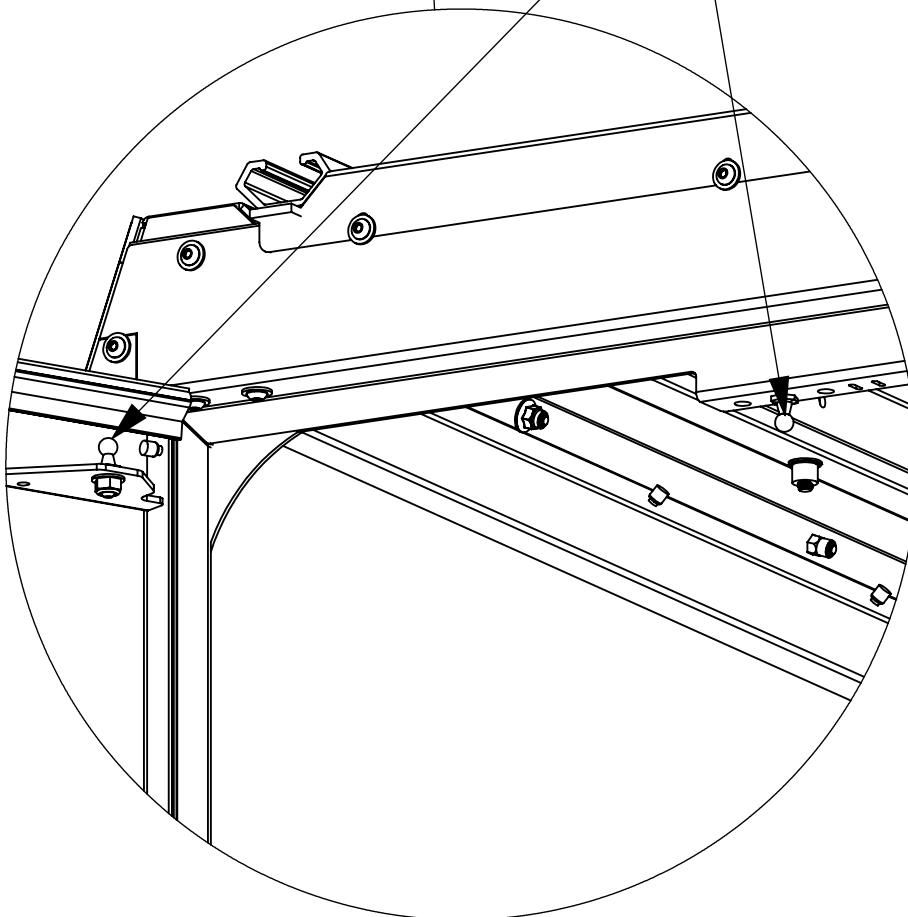


STEP 13 - INSTALL SHOCKS

Step 13 INSTALL SHOCKS

**77108 (20#)
(2 PLACES)**

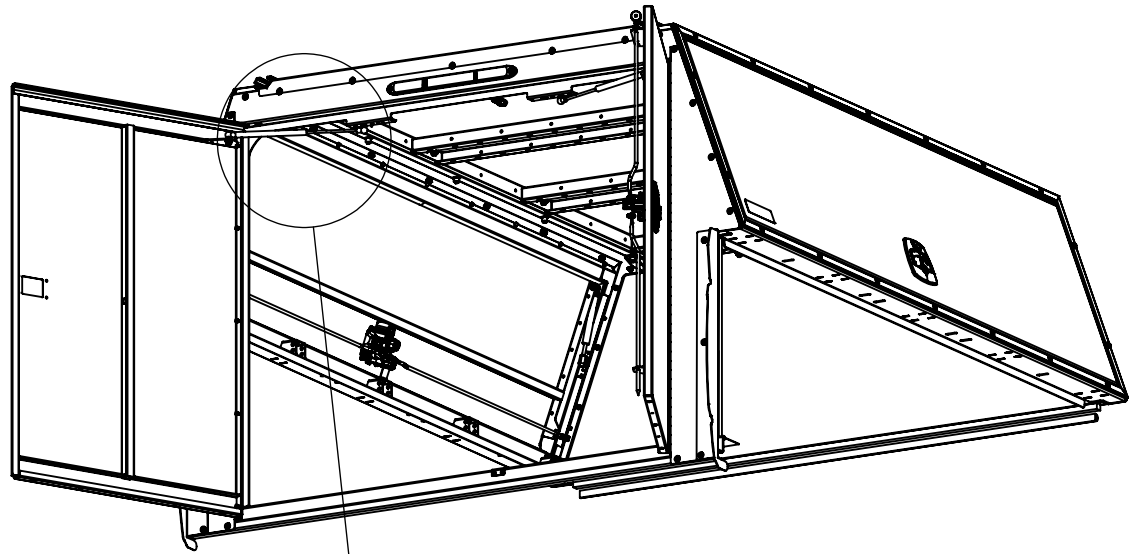

BARREL TO DOOR

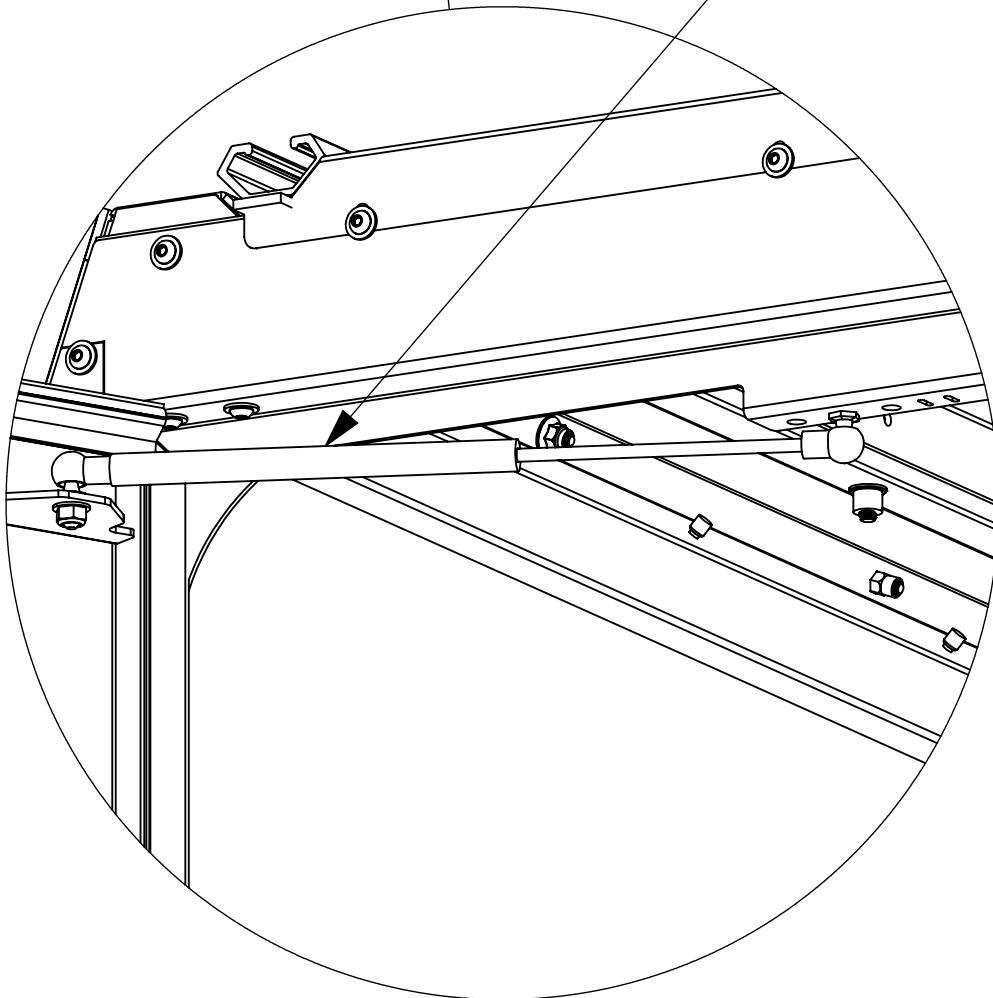


STEP 14 - REMOVE BACKUP CAMERA AND TAILGATE

Step 14.1
REMOVE BACKUP
CAMERA PER
77217
RELOCATION
INSTRUCTIONS
77963

Step 14.2
REMOVE
TAILGATE PER
OEM GUIDLINES



NOTE: CONTACT
CUSTOMER FOR
DISPOSITION OF
REMOVED
TAILGATE

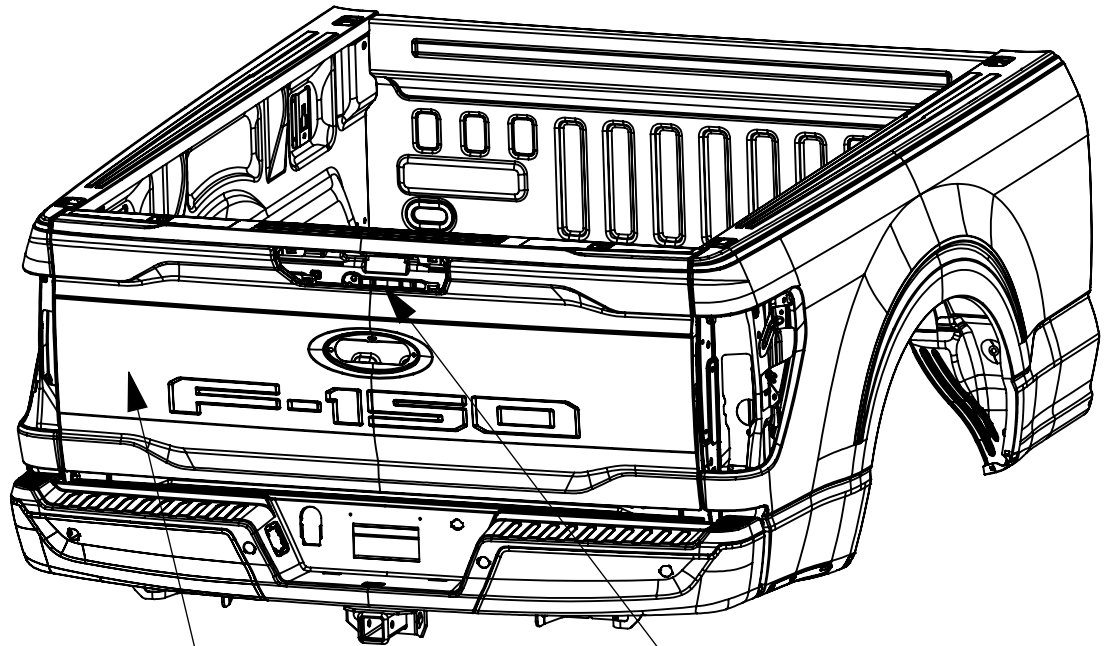

Step 14.1

Step 14.2

STEP 15 - ATTACH SEALS TO TRUCK BED AND TOPPER LOCATION RELATIVE TO FRONT OF TRUCK BED

Step 15.1
INSTALL SIDE BED SEALS. ALIGN TO THE FRONT AND INSIDE EDGES OF THE SIDE BED RAIL TRIM.



DO NOT TRIM EXCESS UNTIL TOPPER IS ON THE TRUCK.

Step 15.2
WHEN PLACING THE TOPPER ON THE TRUCK BED ALIGN THE FRONT PANEL INSIDE FLANGE EDGE AND REFER TO TABLE 1 TO GET OEM SPECIFIC DISTANCE OFF OF THE INSIDE EDGE OF THE BED. CENTER BETWEEN THE DRIVER AND PASSENGER SIDE BED RAIL TRIM.

NOTE: BASED ON DIFFERENT VEHICLE MODEL YEARS AND BED VARIATION, THE TOPPER LOCATION MAY VARY. IT MAY REQUIRE THE INSIDE EDGE FLANGE TO BE PLACED AT THE INSIDE EDGE OF THE BED TO LOCATE TOPPER PROPERLY AT REAR OF VEHICLE.



NOTE: IT IS RECOMMENDED THAT YOU LOAD THE TOPPER ONTO A TRUCKBED WITH ONE OF THE FOLLOWING METHODS:

- HOIST: ATTACH TO THE ROOF RAILS OF THE TOPPER
- FORKLIFT: OPEN THE REAR DOOR AND SET FORKS ON THE ROOF BOWS
- MANUAL: HAVE 1 INDIVIDUAL AT EACH CORNER OF THE TOP AND CARRY OVER THE SIDES OF THE TRUCK. DO NOT SCRATCH THE VEHICLE.

TABLE 1:


VEHICLE PLATFORM	DIST.
F-150	.875"
SILVERADO	0.25"

TOP VIEW

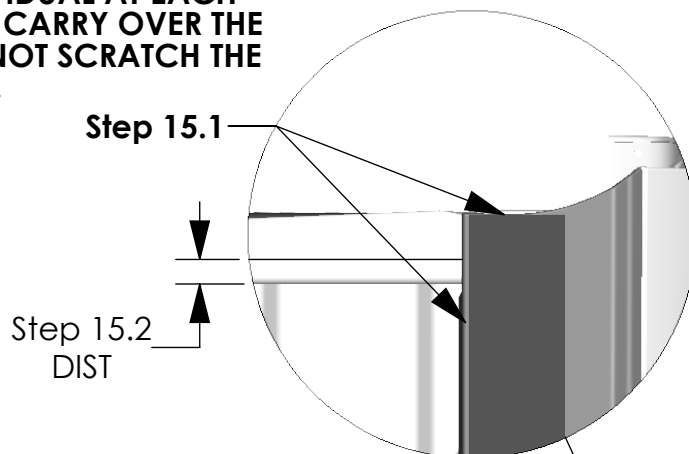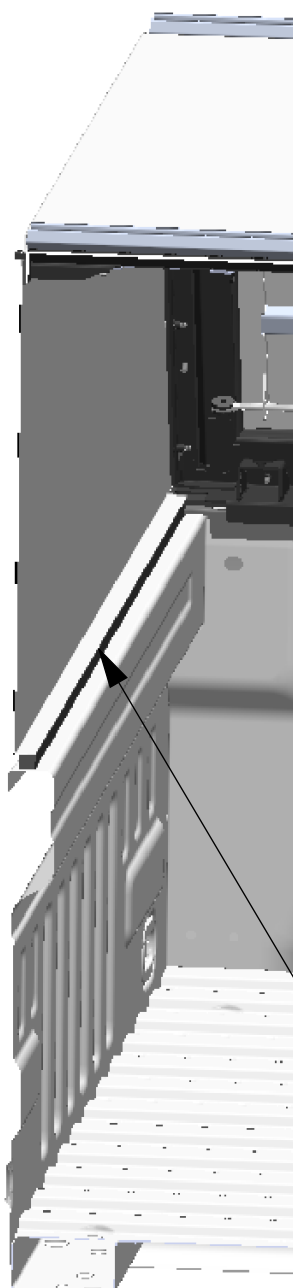

DRIVER'S SIDE

FRONT

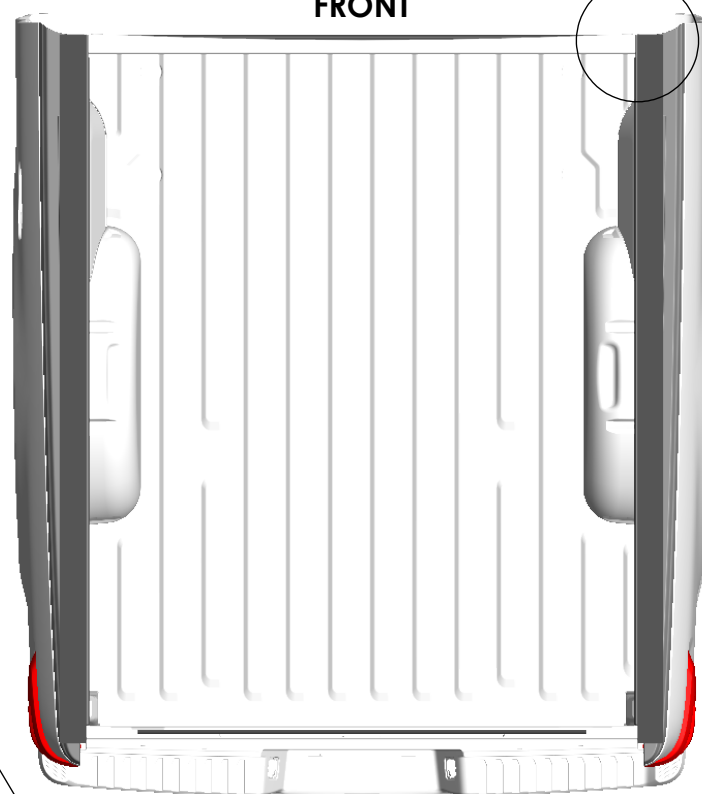

Step 15.2

STEP 15 - ATTACH SEALS TO TRUCK BED AND TOPPER LOCATION RELATIVE TO FRONT OF TRUCK BED


Step 15.3
PLACE 81456
GASKET IN THE
GAP BETWEEN
THE TRUCK BED
AND CAB.




BEFORE
ATTACHING TO
TRUCK BED,
CLEAN AND PREP
AREA. DO NOT
ATTACH TO
PLASTIC TRIM. IF
TRIM IS ON
FRONT OF BED
ATTACH TO CAB.

ONCE AREA IS
PREPARED
CENTER GASKET
ON THE REAR
WINDOW.


MAKE SURE THAT
GASKET HAS FULL
SURFACE
CONTACT SO
ADHESIVE WILL
PROPERLY BOND.

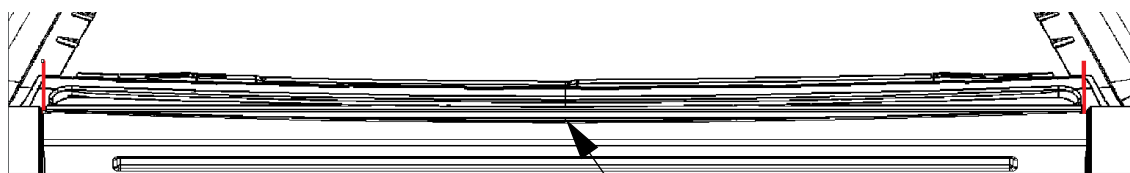

Step 15.3

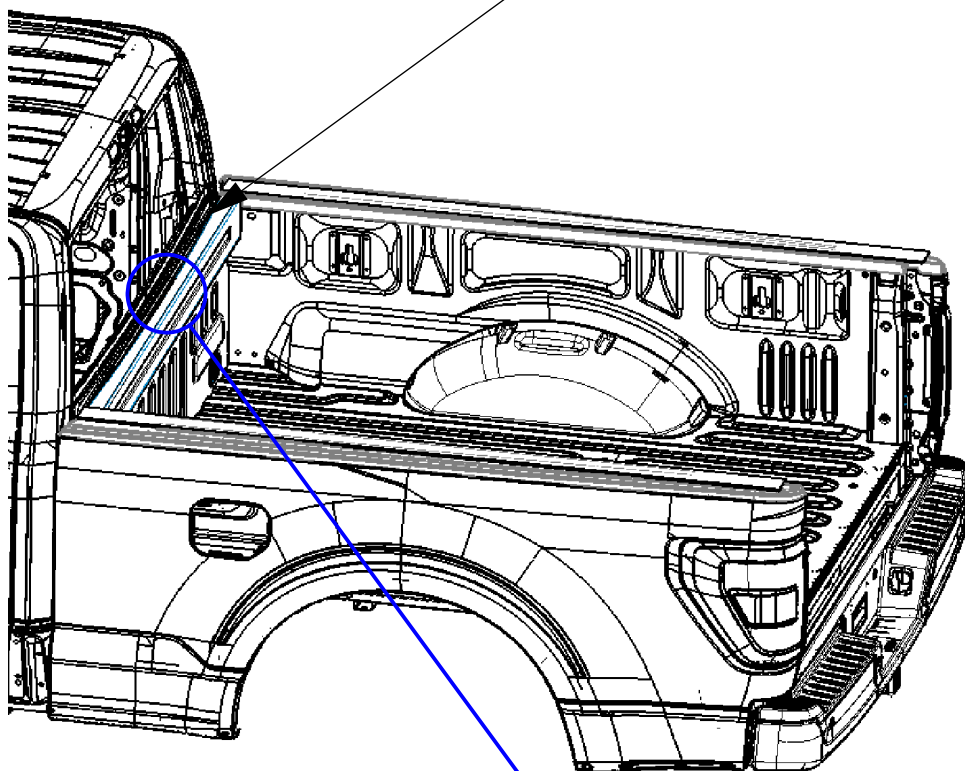

NOTE:
IF TRUCK BED HAS A SPRAY
ON BED LINER, PLACE
GASKET UNDER LINER ON
TRUCK BED

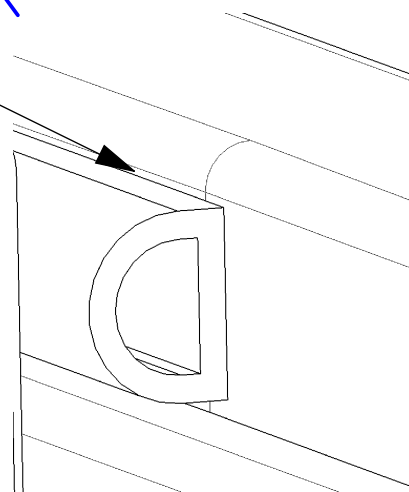

STEP 16 - ATTACH TOPPER TO TRUCK BED. CONT'D ON NEXT PAGE FOR LOCATING INSTRUCTIONS SPECIFIC TO SILVERADO 1500/2500.

Step 16.1
USE THE HOLES IN THE BD LOWER BRACKET ASSM TO MARK FOR PLUS NUTS.



(2 PLACES)
NOTE: YOU WILL HAVE TO REMOVE FOAM FROM THE HOLES.

Step 16.2
MOVE TOPPER REARWARD TO DRILL HOLES FOR PLUSNUTS. SPRAY PAINT HOLES.

1/2" STEP DRILL BIT


Step 16.3
SET PLUSNUTS USING PLUSNUT SETTING TOOL OR AIR POWERED SETTING GUN.

FAS0222


Step 16.4
REPLACE TOPPER TO ORIGINAL LOCATION AND FASTEN TOPPER TO THE TRUCK BED

FULLY TIGHTEN
FAS1279
(2 PLACES)
T40 TORX BIT



FAS0242,
FAS0552 [x2]
FAS0248
(8 PLACES)
1/2" SOCKET
1/2" WRENCH

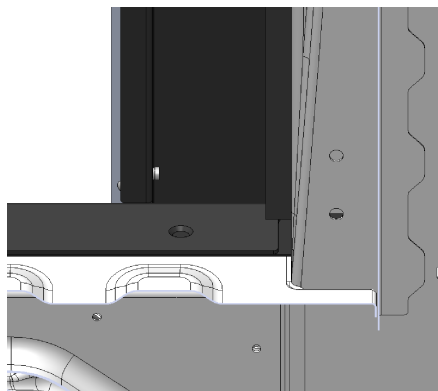

VIEW LOOKING FROM FRONT TO BACK

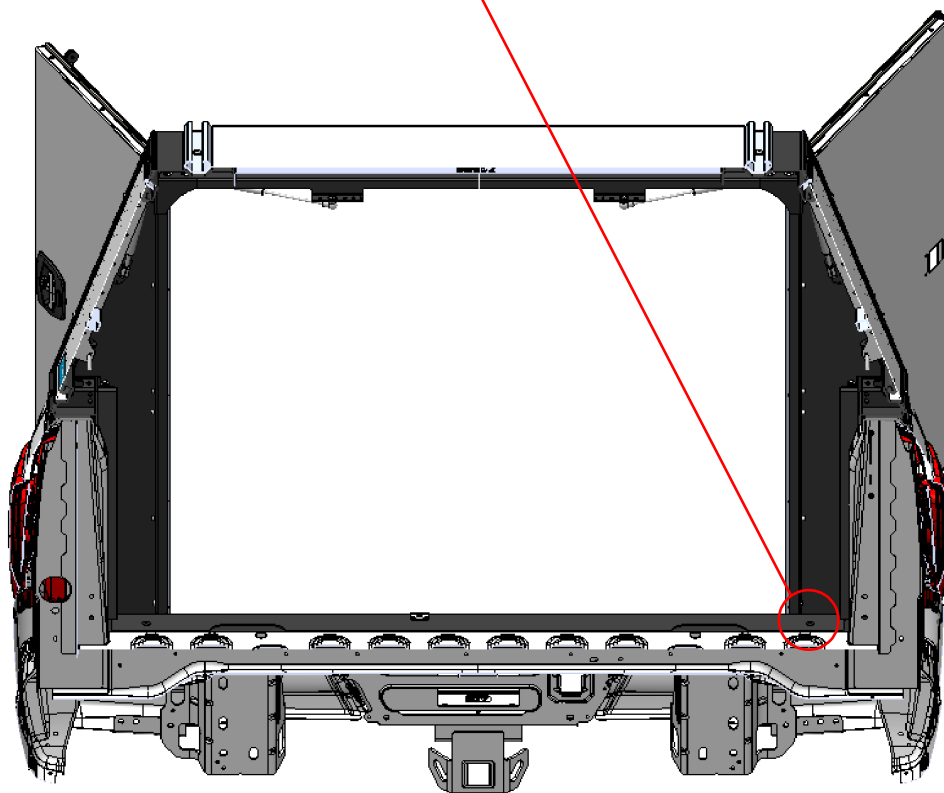

FAS1279

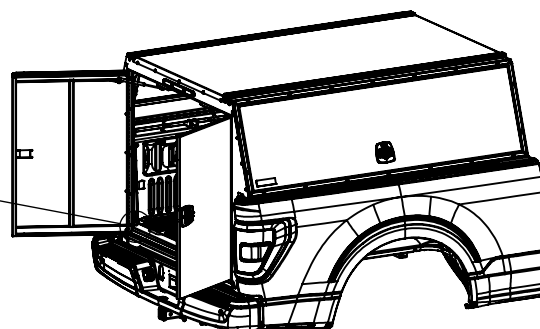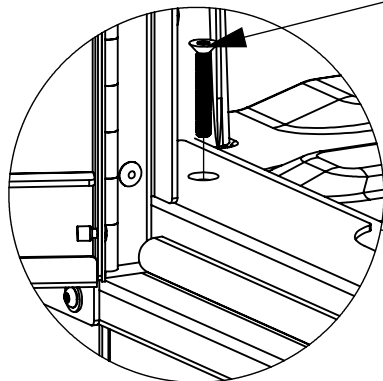

STEP 16 ALT CONT'D - ATTACH TOPPER TO TRUCK BED CONT'D. SPECIFIC TO SILVERADO 1500/2500.

Step 16ALT.5
USE THE HOLES IN
THE BD LOWER
BRACKET ASSM
TO IDENTIFY BED
STRIPS FOR
PLUSNUTS.



**DO NOT MARK.
SEE BELOW**

(2 PLACES)

Step 16ALT.6
TO LOCATE
PLUSNUTS
MEASURE 2"
FROM END OF
PLASTIC BED
INSERT AND
MARK BED.

(2 PLACES)

Step 16ALT.7
REPLACE BD
LOWER BRACKET
ASSM AND
LOCATE
MARKINGS. USE
BRACKET HOLES
TO CENTER
HOLES FROM DS
AND PS.


(2 PLACES)

**TO COMPLETE
INSTALLATION
SEE Steps 16.2,
16.3 AND 16.4.**


Step 16ALT.5



Step 16ALT.6

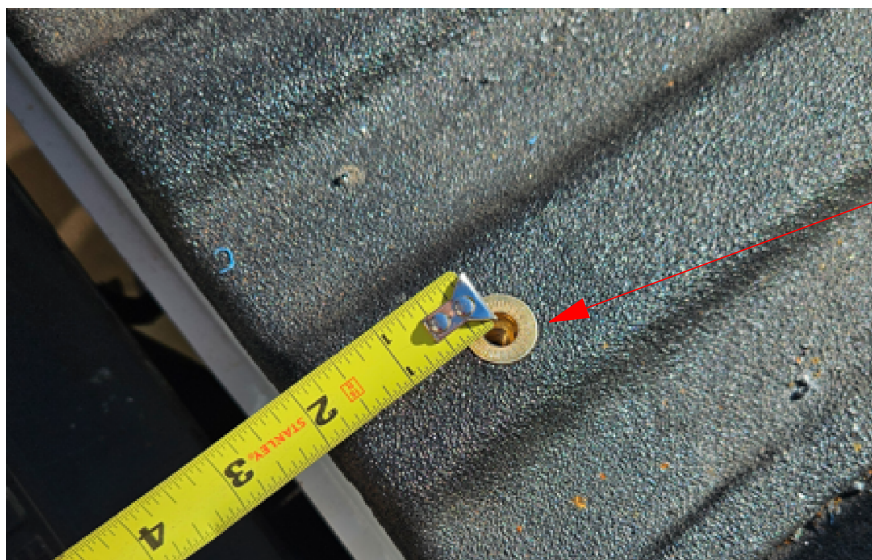

Step 16ALT.6
LOCATION WILL PLACE
PLUSNUT IN CAVITY
UNDERNEATH BED FOR
PROPER SEATING

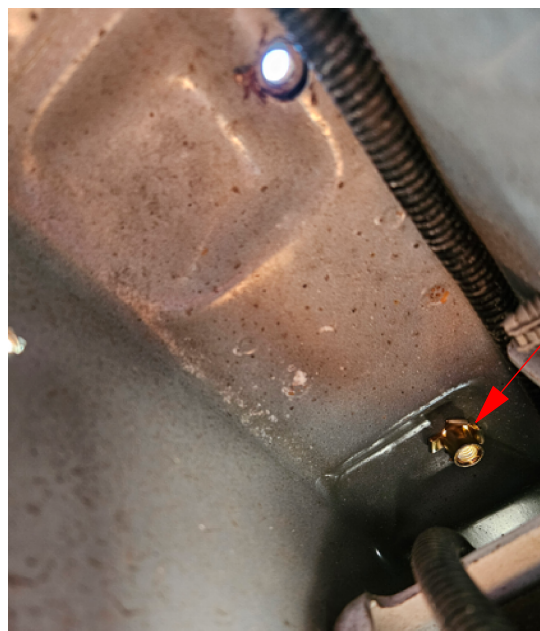

STEP 16 ALT CONT'D - ATTACH TOPPER TO TRUCK BED, CONT'D **(ALTERNATE FOR COLORADO)**

Step 16ALT.8
 USE THE HOLES IN
 THE BD LOWER
 BRACKET ASSM
 TO MARK FOR
 PLUS NUTS.



(2 PLACES)
 NOTE: YOU WILL
 HAVE TO
 REMOVE FOAM
 FROM THE
 HOLES.

Step 16ALT.9
 MOVE TOPPER
 REARWARD TO
 DRILL HOLES FOR
 PLUSNUTS.
 SPRAY PAINT
 HOLES.

**1/2" STEP DRILL
 BIT**


Step 16ALT.10
 SET PLUSNUTS
 USING PLUSNUT
 SETTING TOOL
 OR AIR
 POWERED
 SETTING GUN.

FAS0222



Step 16ALT.11
 REPLACE TOPPER
 TO ORIGINAL
 LOCATION AND
 FASTEN TOPPER
 TO THE TRUCK
 BED

FULLY TIGHTEN
FAS0671
FAS0672
FAS0234
(2 PLACES)


FAS0242,
FAS0552 [x2]
FAS0248
(8 PLACES)
1/2" SOCKET
1/2" WRENCH

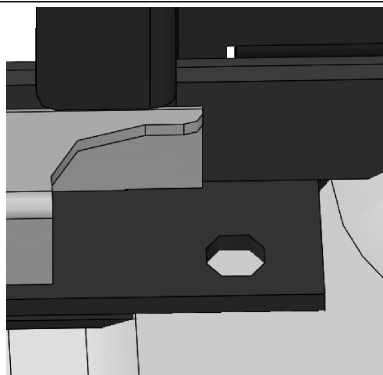

**VIEW LOOKING FROM
 FRONT TO BACK**

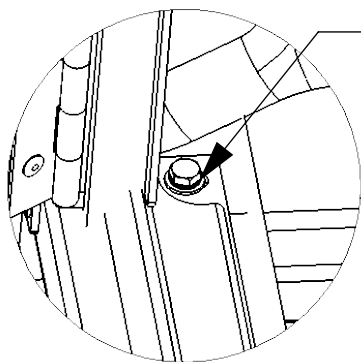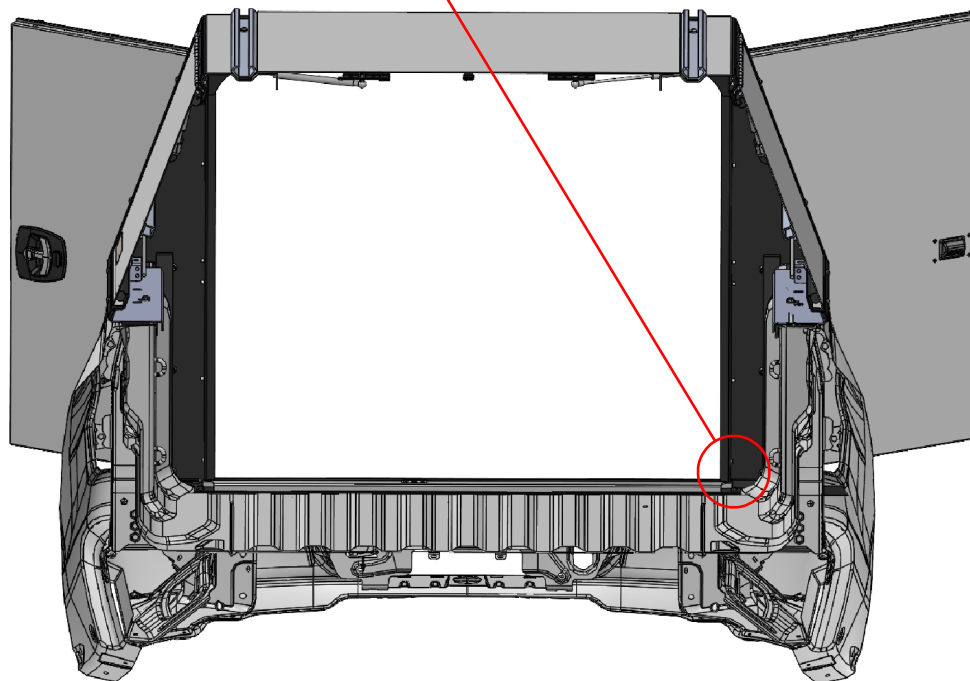

FAS0671
FAS0672
FAS0234

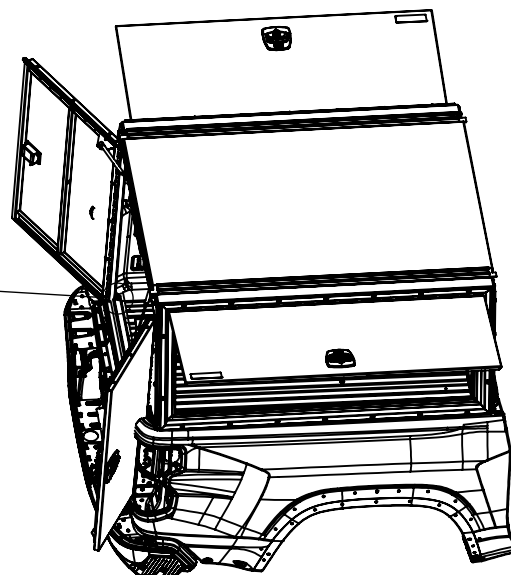

STEP 16 CONT'D - ATTACH TOPPER TO TRUCK BED

NOTE: (FOR 8.0' 26" TALL RAM 1500, 2500, 3500 ONLY) TOPPER MUST BE SOFT INSTALLED TO MARK FOR DRILLING. TOPPER TO BE REMOVED PRIOR TO DRILLING.



Step 16.13
USE HOLES IN THE
BED RAIL TO
MARK AND DRILL
MOUNTING
LOCATIONS. IT IS
NOT NECESSARY
TO REMOVE THE
TOPPER FOR THIS
STEP.

(8 PLACES)
11/32" DRILL BIT





NOTE: IF THESE
HOLES INTERFERE
WITH THE OEM
BODY, DRILL A
NEW HOLE IN THE
BED RAIL +/- 2"
FROM THE
INTERFERENCE.

Step 16.13

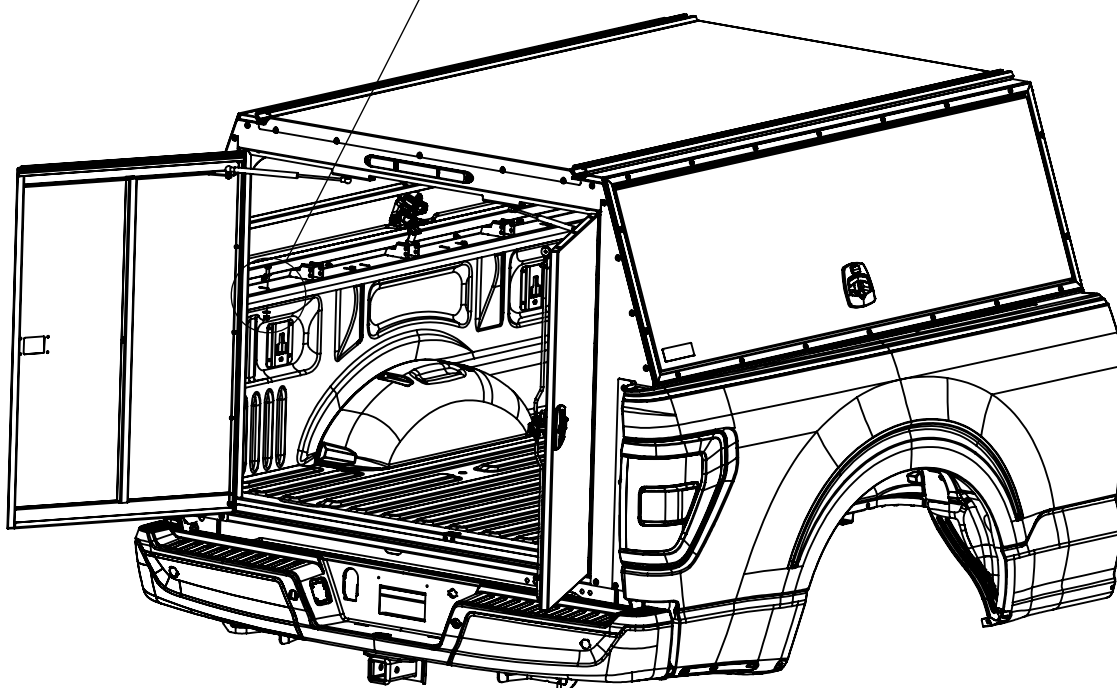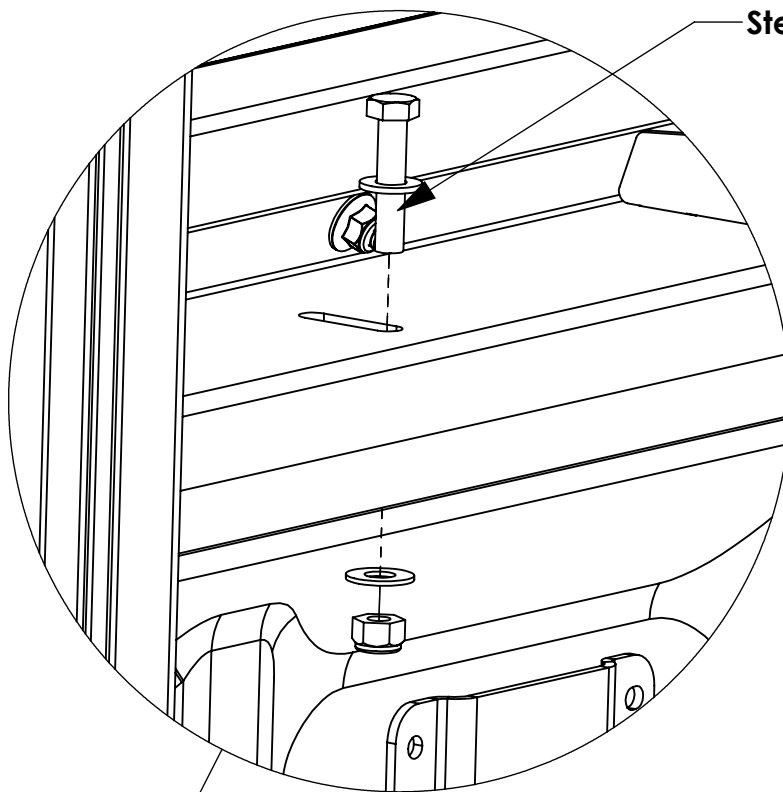

STEP 17 - MAY NEED TO DRILL HOLE IN BED FOR LOCK ROD TO ENGAGE FULLY IN LOWER BRACKET HOLE

Step 17
DRILL OUT TRUCK
BED IF LOWER
BRACKET IS
OVER IT AND
PREVENTING
LOCK ROD FROM
GOING
THROUGH.

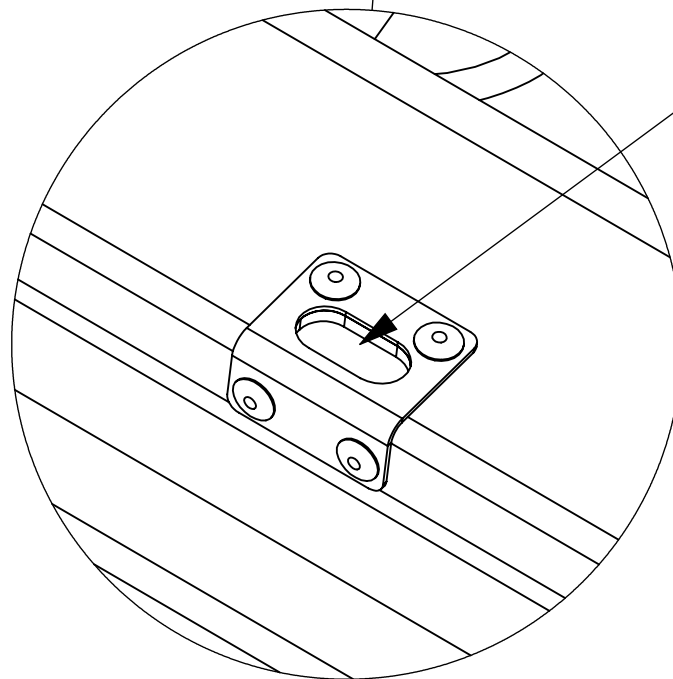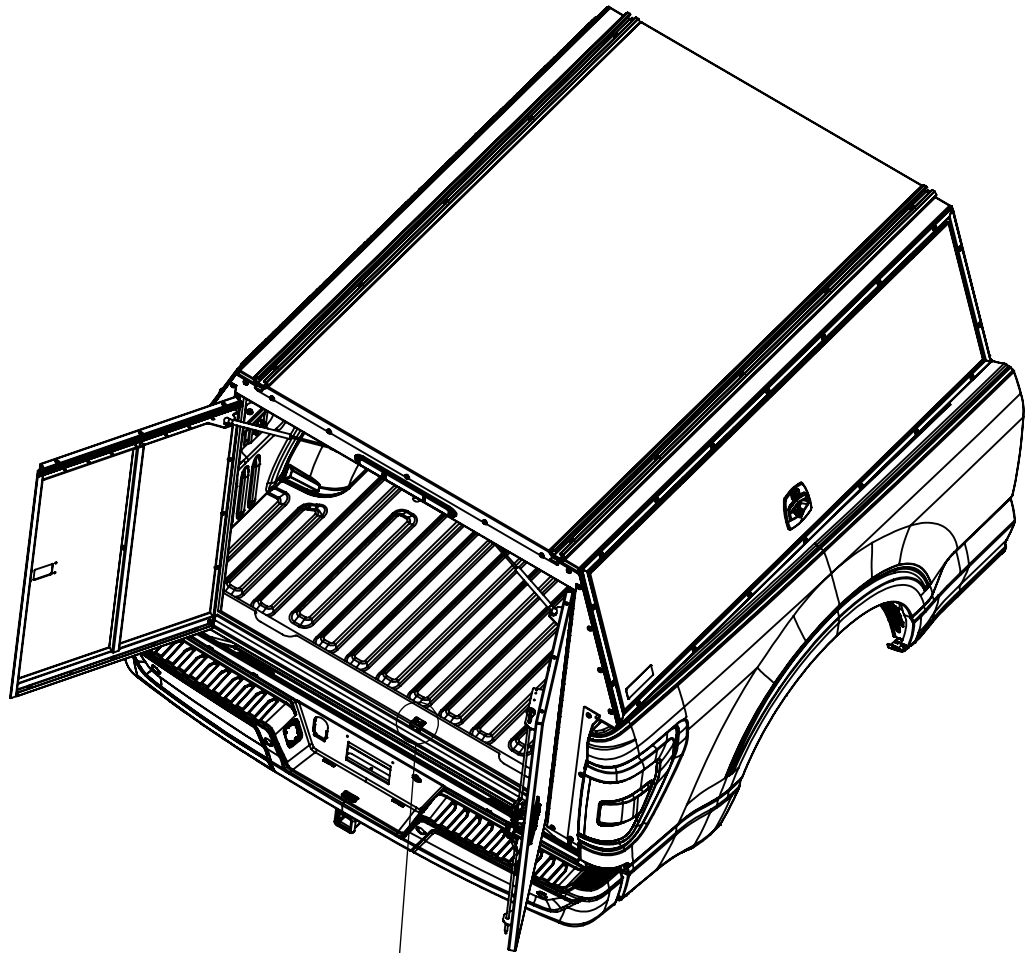

Step 17

STEP 18 - ATTACH FOAM TO INSIDE OF BARN DOORS

Step 18
CLEAN SURFACES
WITH ALCOHOL.
PREP WITH 57392
ADHESIVE
PROMOTER.





APPLY 77586
FOAM STRIP ON
HINGE LEG.
(2 PLACES)



NOTE: FOAM
SHOULD BE AT
THE VERY TOP,
AND EDGE OF
FOAM AGAINST
FLANGE AWAY
FROM BARREL OF
HINGE.



Step 18

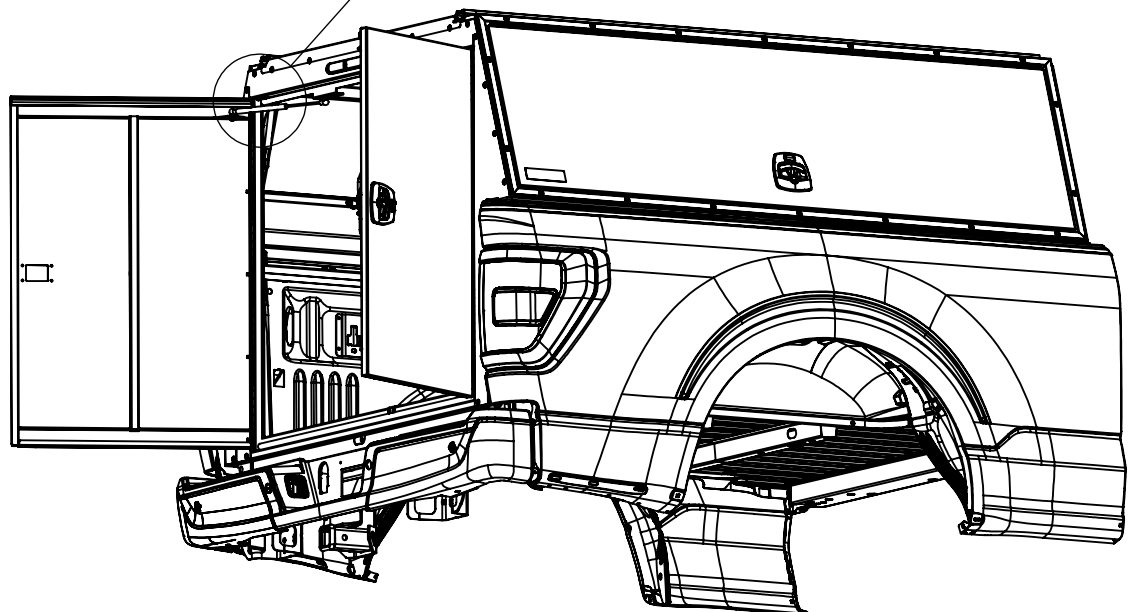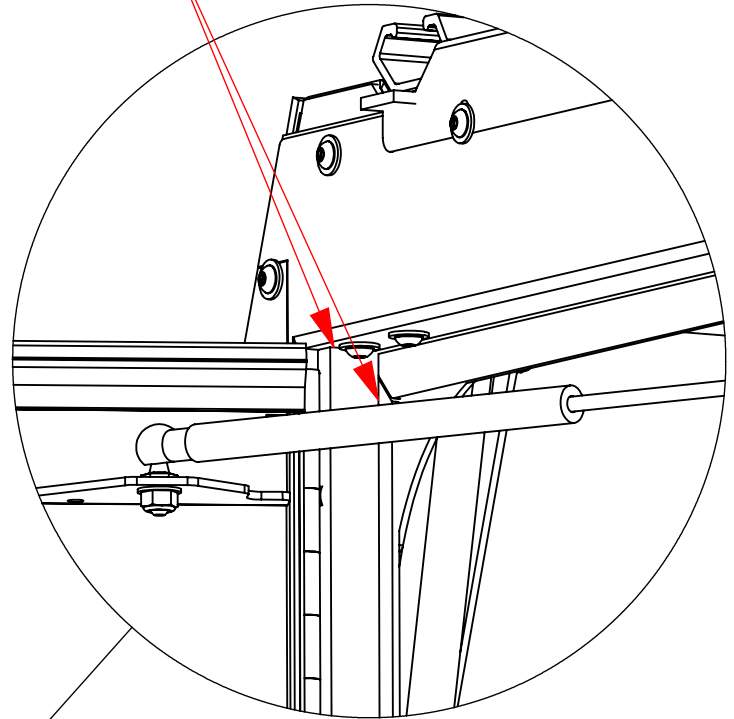

STEP 19 - ATTACH SEAL TO FACE OF BARN DOOR LOWER BRACKET


Step 19
CLEAN SURFACE
WITH ALCOHOL.
PREP WITH 57392
ADHESIVE
PROMOTER.



APPLY 77941
GASKET



NOTE: GASKET
SHOULD BE
CENTERED
BETWEEN FOAM,
AND .75" FROM
TOP OF LOWER
BRACKET.

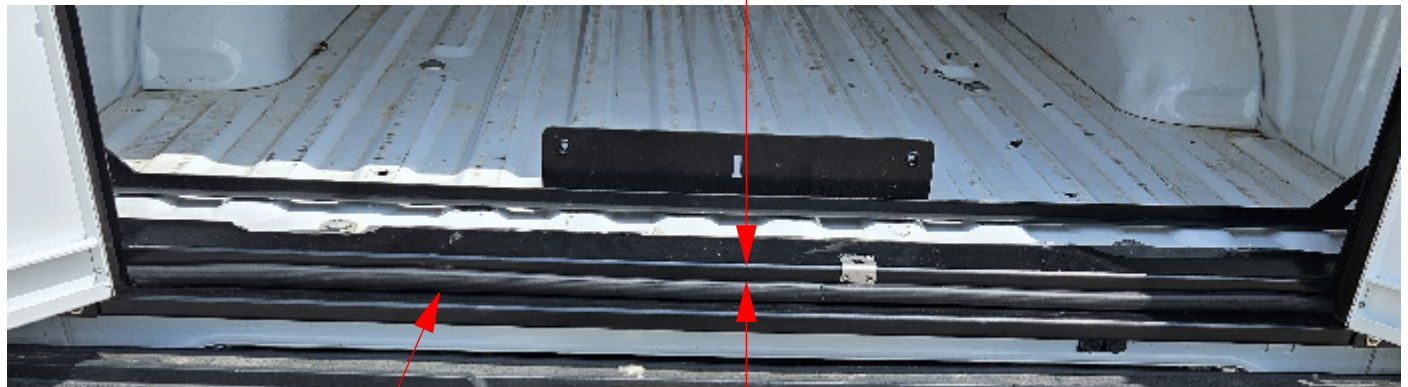

Step 19

**STEP 19 ALT - ATTACH SEAL TO FACE OF BARN DOOR LOWER BRACKET
(ALTERNATE FOR COLORADO)**

**Step 19ALT
CLEAN SURFACE
WITH ALCOHOL.
PREP WITH 57392
ADHESIVE
PROMOTER.**



**APPLY 77941
GASKET**



**NOTE: GASKET
SHOULD BE
CENTERED
BETWEEN FOAM
STRIPS, AND
PRESS UP
AGAINST RISER.**

FOAM STRIPS



Step 19

STEP 20 - APPLY SILICONE TO INSIDE FRONT CORNERS AND INSIDE REAR CORNERS. ADD FOAM TO REAR.

Step 20.1
APPLY A 4" STRIP
OF SILICONE TO
BOTH INSIDE
FRONT CORNERS

Step 20.2
APPLY A 4" STRIP
OF SILICONE TO
BOTH INSIDE
REAR CORNERS


Step 20.3
CUT 75114 IN (2)
6" PIECES AND
PLACE AS
SHOWN AT REAR
OF VEHICLE

(2) PLACES

Step 20.1



Step 20.2

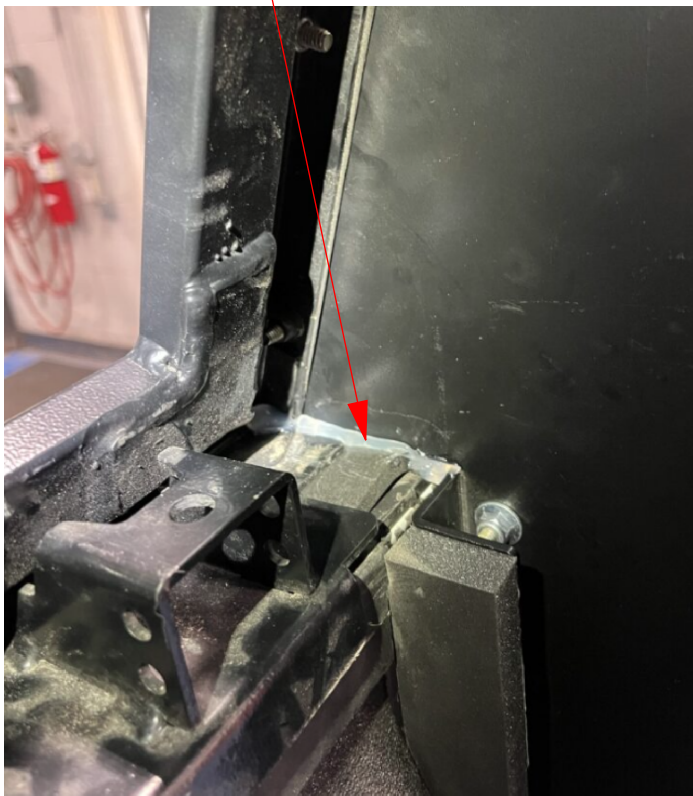



Step 20.3



STEP 21 - APPLY SILICONE TO TOP OF BOTH DOORS ON RIVETS.

Step 21
APPLY SILICONE
TO TOPS OF
DOORS ON
RIVETS
(6 PLACES)

Step 21

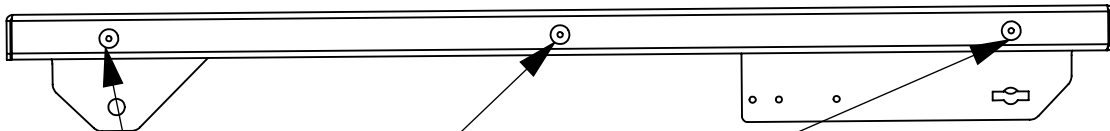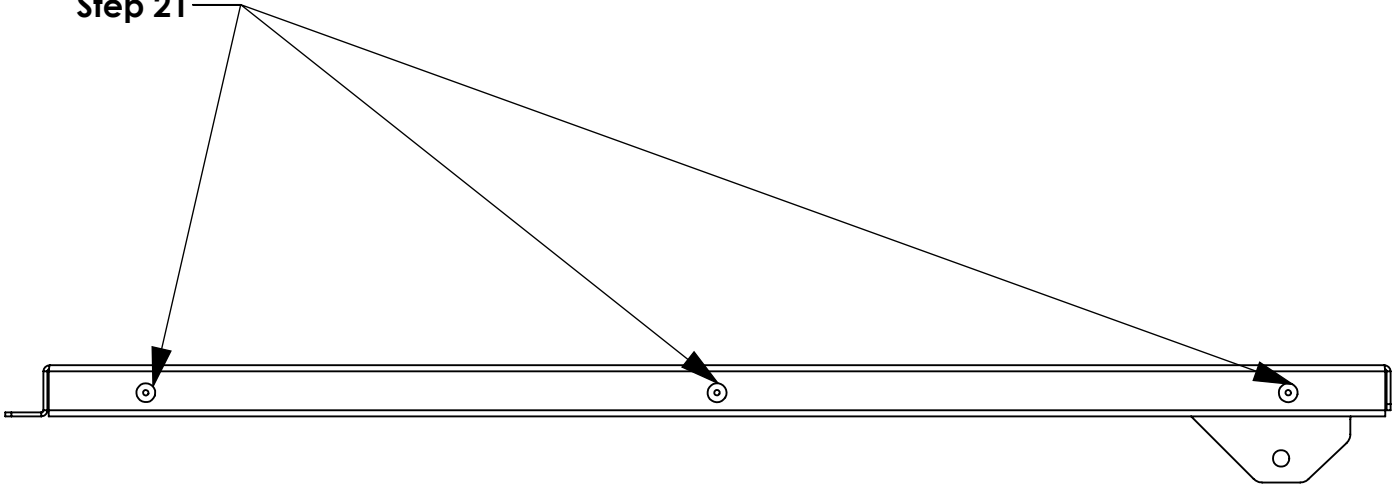

Step 21

STEP 22 - CLOSE DOORS AND ADJUST BED FILLERS.


Step 22.1
CLOSE DOORS
STARTING WITH
DRIVER'S SIDE
FIRST THEN
PASSENGER SIDE.
CONFIRM LOCK
ROD IS ENGAGED
IN HOLE OF
LOWER BRACKET.



NOTE: IF DOOR
DOES NOT LATCH
WITH MINIMAL
EFFORT, CHECK
THAT TOPPER IS
SQUARE AND
CENTERED.

Step 22.2
ADJUST BED
FILLERS OUT TO
MAX WIDTH AND
FULLY TIGHTEN

(6 PLACES)

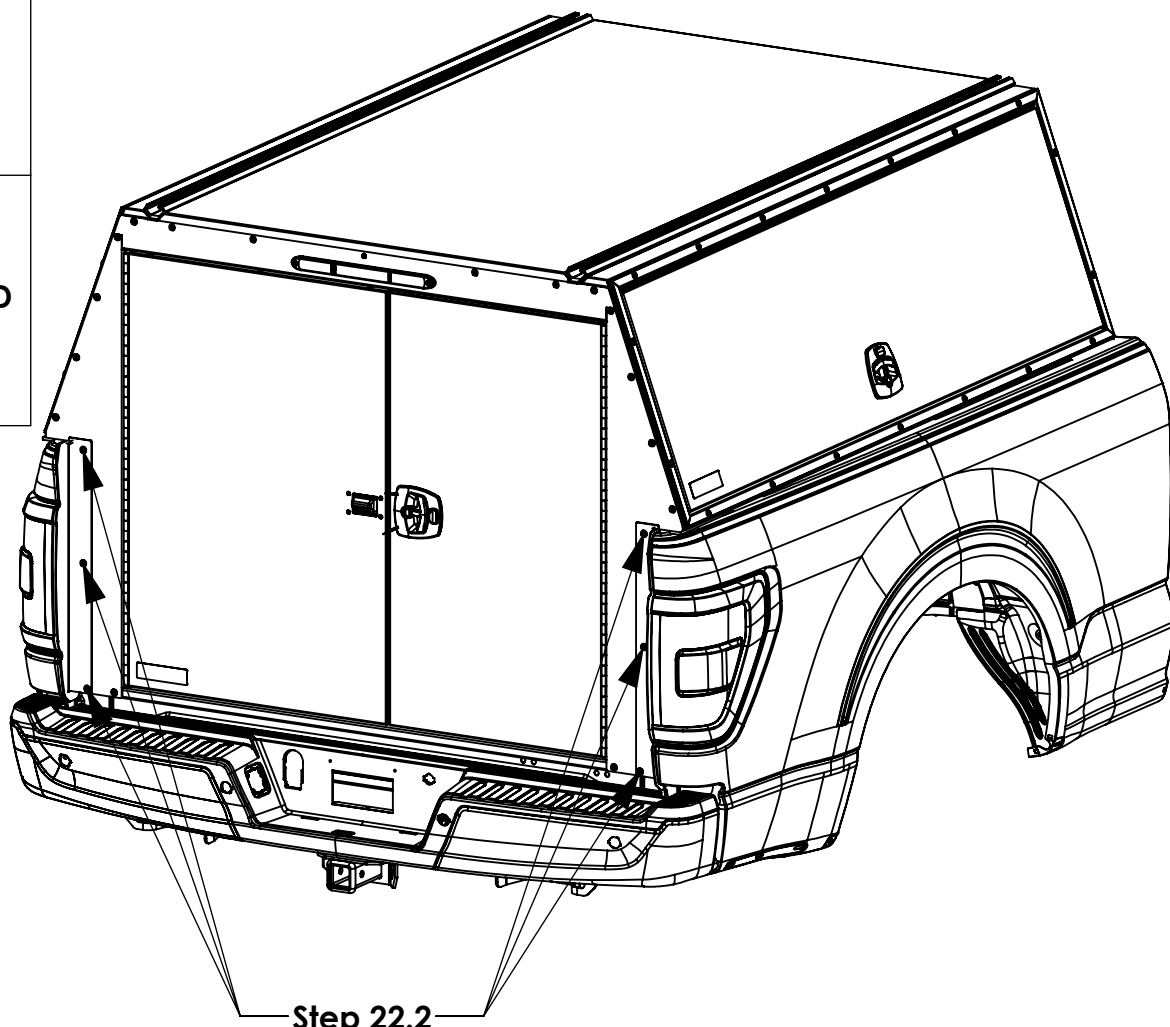


MAKE SURE ALL FASTENERS ARE TIGHTENED!! INSTALLATION IS COMPLETE

Introduction / Comments:

Install Instructions For Brake Light On Topper For F150 (5.5'/6.5' & 8')


Note:

Read all instructions prior to installation. Review the Adrian Steel **GENERAL PRECAUTIONS PAGES (56638)** before attempting installation. Only personnel familiar with using electrical best practices should perform this install. Reference **ELECTRICAL BEST PRACTICES MANUAL (54479)** before attempting installation.

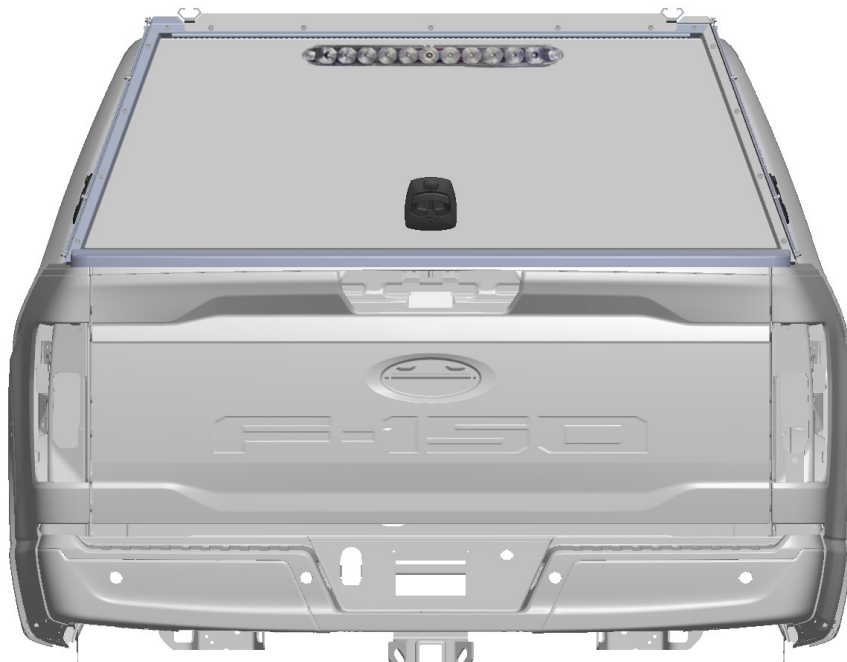


Installation Instructions For Brake Light On Topper For F150 (5.5'/6.5' & 8')

Routing Overview

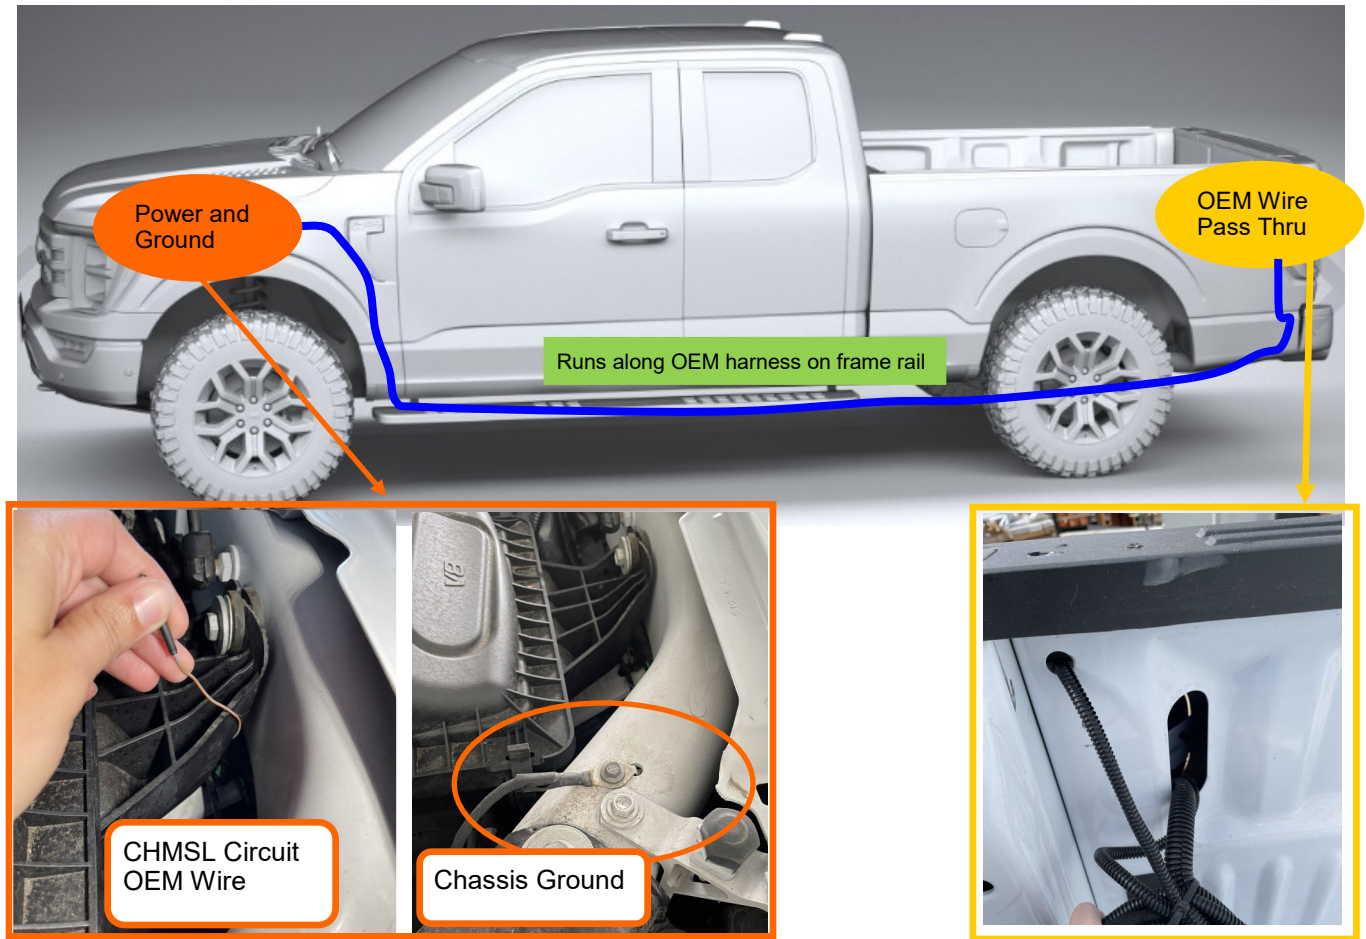

Color	Key - Items
Orange	Power and Ground Location
Blue	Harness Routing
Yellow	Bed Wire Pass Thru

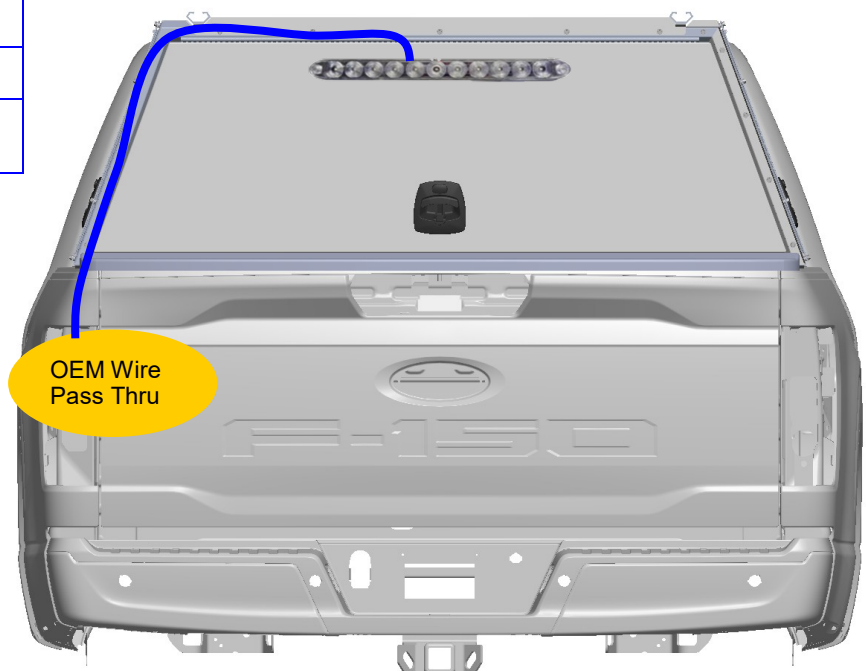



Step 1: Locate the brake light harness 71668.

Remove the fuse from the inline fuse holder until the end of the install.

Step 2: Open the vehicle hood.

Locate the driver's side frame OEM harness. Follow the harness forward of the truck, until you reach the hood shock area.

There will be a small grey/orange wire separate from the OEM harness. It will have a black covering on the end.

*** Please note the Hybrid F150 may have a green/purple wire instead of grey/orange.

This is the OEM CHMSL circuit wire for the brake light.

Strip the wire covering and prepare it to be connected to the brake light harness.

Locate the end of the harness (PN71668) with the ring terminal and butt connector.

Use the butt connector to connect to the OEM CHMSL wire. Use a heat gun to shrink the butt connector once crimped on.



Step 3: Locate the OEM chassis ground located on the frame—forward of the CHMSL circuit.

Secure the ring terminal on the brake light harness to the chassis ground.

Torque the ground to 9Nm (80 in lb).



Excess Wire Under Body



Use if grommet is not available

Bed Pass Thru Grommet

Step 4: Routing (Refer to routing diagrams at the beginning of the instructions)

Route the brake light harness rearward and down the engine compartment to the frame (red dotted line).

Follow the OEM wire harness on the frame rearward to the bumper of the truck.

Continue routing the harness upward in the bed cavity, to the bed wire pass thru.

Drill a hole in the OEM grommet, for the pass thru. If the grommet has a light in place of it, please utilize the round hole that is up and to the right of it.

If installing the interior lighting kit as well as the brake light kit, utilize the larger grommet supplied in the brake light harness bag.

If only installing the brake light harness, utilize the smaller grommet supplied in the brake light harness kit.

Drill (for larger grommet a 1" hole and 0.625" (5/8) hole for the smaller grommet) then route the wire harness through the grommet, to the underbody of the truck.

Silicone after routing through the grommet.

Tuck any excess wiring into the empty cavity underneath the bed frame.

For **REV B** of the harnesses there will be a tek screw and p-clip supplied in the bag. Bundle the excess wire in the cavity using zip ties. Use the tek screw and p-clip to secure the bundle to the frame.

Secure the wiring with zip ties.

DO NOT secure wiring to any brake lines.

Be sure the bundle of wire is secure and will not fall out over time.



Step 5: Routing continued

Continue routing the brake light harness inside the topper, to the light.

The harness should run along the driver's side rear cavity, then across the top cavity to the light. (Red and blue lines shown in pictures)


Be sure to leave extra wire from the brake light to the topper rails before securing. This ensures the wires won't brake when the topper door opens and closes.

Secure harness using stud mount zip ties.

Connect the harness to the light:

Plug the connectors together. Pull connectors lightly to ensure they do not come apart.

Be sure the red wire on the harness connects to the black wire on the light. Then the black wire on the harness connects to the white wire on the light.

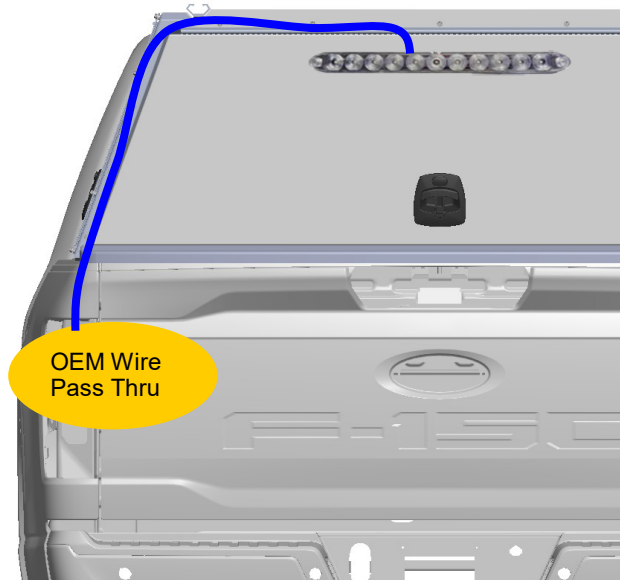

Insert the fuse into the inline-fuse holder on the brake light harness.

The install is now complete.

Check that the brake light comes on when the brake pedal is pushed, then back off once pedal is released.

Introduction / Comments:

Install Instructions For Walk-in Topper Backup Camera For F150

Note:

Read all instructions prior to installation. Review the Adrian Steel **GENERAL PRECAUTIONS PAGES (56638)** before attempting installation. Only personnel familiar with using electrical best practices should perform this install. Reference **ELECTRICAL BEST PRACTICES MANUAL (54479)** before attempting installation.

ATTENTION:

1. The tailgate (removed for walk-in topper installation) will have the OEM camera still installed in the tailgate/end-gate handle. **It is important to use the camera that is installed in the same vehicle – or calibration errors can and will be registered on vehicle diagnostic– which will require a dealer service visit.**
2. Follow OEM back up camera removal instructions and **note the orientation of the camera.**



Install Instructions For Walk-in Topper Digital Backup Camera

Section 1: Table of Contents

Table of Contents:

Page 1: Cover Page/Introduction.....	1
Section 1: TOC & Safety Precautions Information	2
Section 2: Cable Kit Part Identification	3-5
Section 3: Tools Needed.....	6
Section 4: General Vehicle Layout	7
Section 5: General Wiring Diagram	8
Section 6: Application Specifics: F150.....	9
Section 7: General installation	13
Section 8: Routing harness.....	15
Section 9: Testing and Finish.....	20

Safety Precautions Information

These symbols are used in the document to warn installer to make sure there is understanding beyond general precautions used when working on electrical installations.


	ANSI Z535.6-2006 refers to the use of blue when “addresses practices not related to personal injury”.
	Yellow labelling level of personal injury = could result in minor injury.
	Red labelling level of personal injury = could / will result in death.

Section 2: Part Identification:

ASCW-LVDS KIT (77217) Contents (Item Reference Diagram Below):

Item	Description	Quantity	Item	Description	Quantity
1	MAIN HOUSING	1	13	DOUBLE-SIDED 1.25mm GASKET	2
2	CAMERA INSERT PLATE 1A	1	14	15' LVDS EXTENSION HARNESS	1
3	CAMERA INSERT 1A	1	15	MALE TO MALE FAKRA ADAPTER	1
4	CAMERA INSERT PLATE 2A	1	16	BLACK P-CLIPS	2
5	CAMERA INSERT 2A	1	17	8-32 5/8" PHP SCREW	4
6	CAMERA INSERT 3	1	18	8-32 NYLOCK NUTS	4
7	CAMERA INSERT 4	1	19	0.25" FIR TREE CABLE TIE	6
8	CAMERA INSERT 5	1	20	SNAP BUSHING WITH 15.3MM I.D.	1
9	CAMERA INSERT 6	1	21	VHB ADHESIVE CABLE TIE BASE MOUNT	2
10	#6 X 5/16" TRUSS HEAD SCREW	2	22	4" CABLE TIES	2
11	M2 X 6MM PHP SCREW	2	23	8" CABLE TIES	6
12	#8 X 0.5" TAPPING PHP SCREW	6			


PLEASE NOTE:
The **ITEM NUMBER** and the
INSERT NUMBER are different.

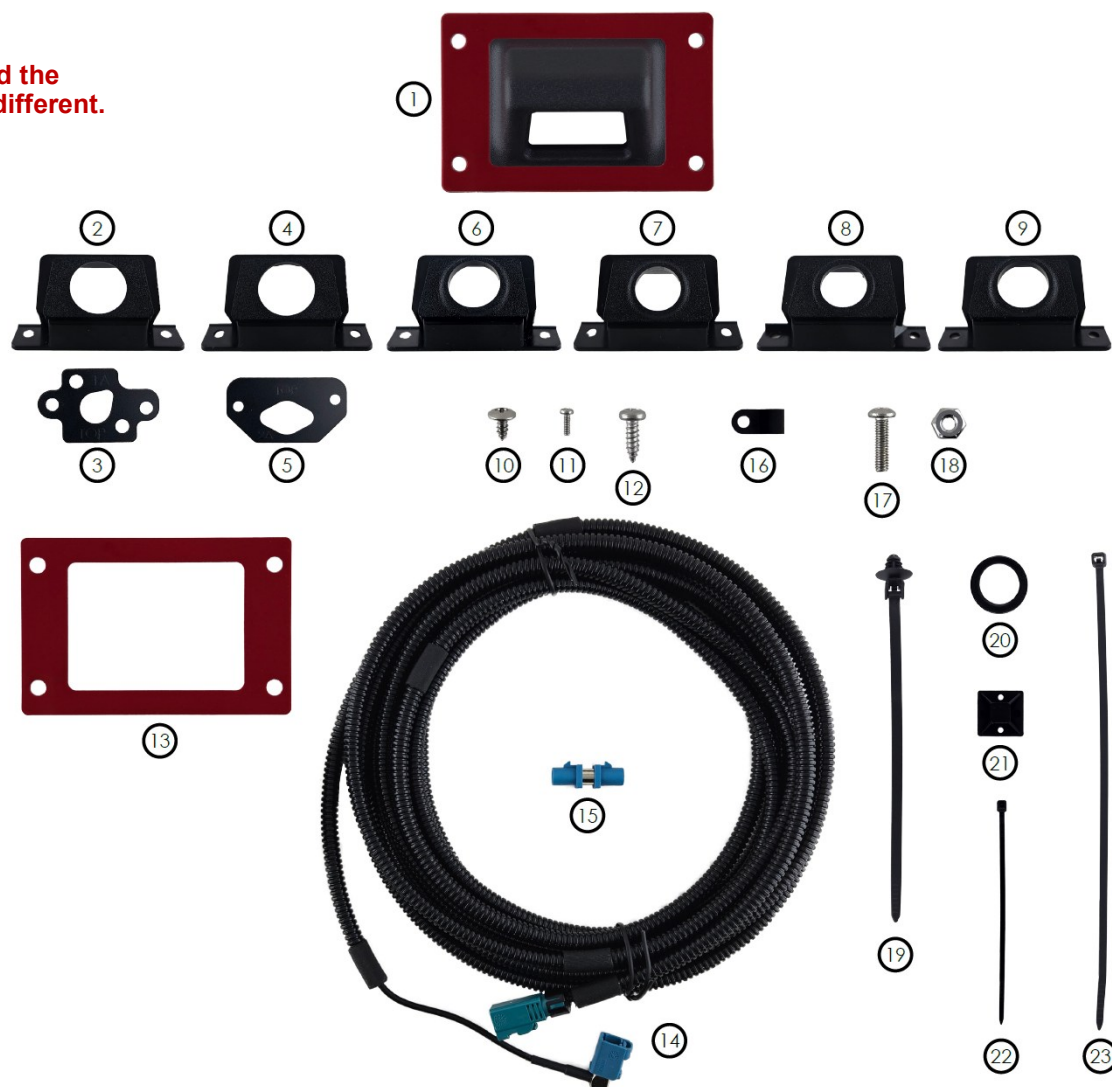

ASCW-LVDS KIT (77217)

Section 2: Part Identification (Continued):

Enclosure Back Plate (77212):

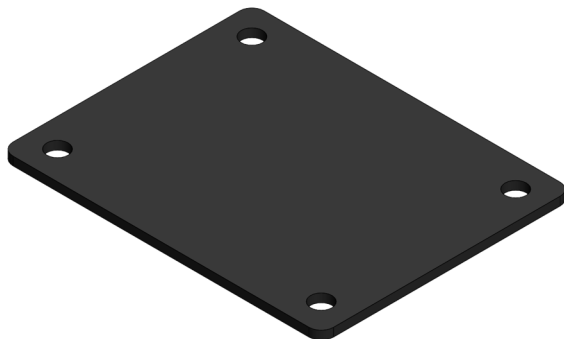

MY 24-25 F-150 and F-150 Hybrid ONLY adapter (77432)



ASCW-LVDS KIT (77432)

Section 2: Part Identification (Continued):

Make	Model	Year	Notes	INSERT
Ford	F-150	2021-2025	With or Without OEM 360	4 (ITEM7 above)
Ford	Super Duty (F-250, F-350)	2023-2025	Digital and Analog Options	4
Ford	Maverick	2023-2025	Digital and Analog Options	4
Chevrolet	Silverado 1500	2023-2025	Digital	1A
Chevrolet	Colorado	2025	Digital	1A

NOTES:

1. There will be several pieces in the kit that are unused. These are for future platforms that will be validated.
2. F-150 MY 21-23 and Lightning will not use the 77432 Adapter.

Section 3: Tools Needed

①



②



③



④



⑤



1. Diagonal Cutters
2. Drill driver
3. 3/4" Hole or Step Drill (Unibit)
4. #2 Phillips head Screwdriver
5. 10mm Nut driver

Section 4: General Vehicle Layout


Rear side of
Adrian Top




Ford F150
[LVDS only]

Notes:


All Options and Trim Levels include digital [LVDS]. F-150 + HYB have a combo connector and therefore need adapter.
Only the Lightning uses the old type Fakra connector (no adapter necessary).

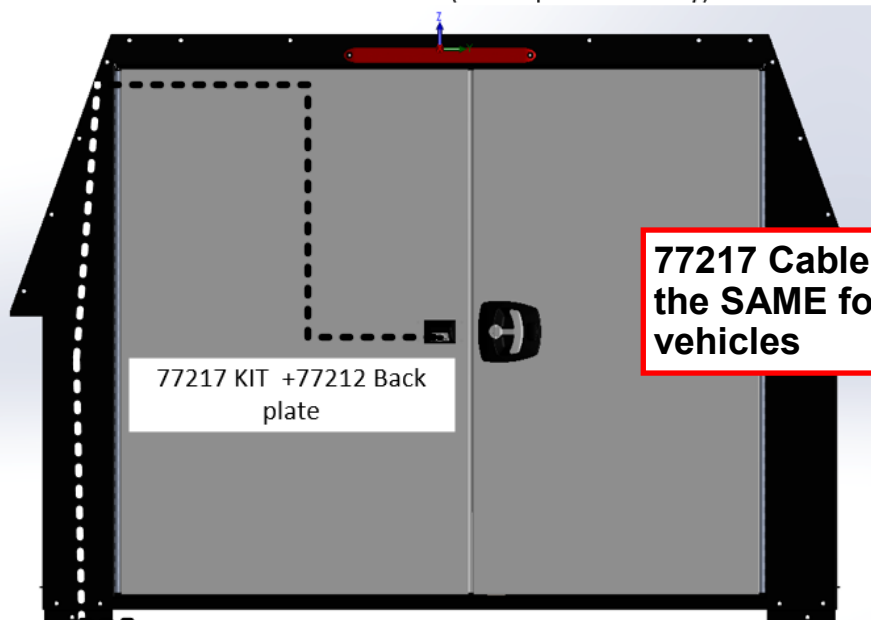

**77217 Cable routing is
the SAME for all
vehicles**

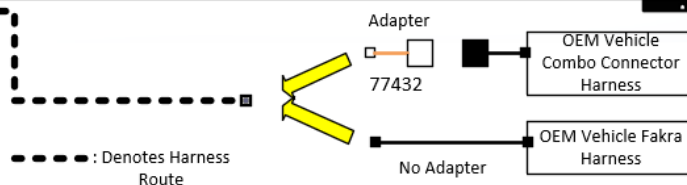

Section 5: General Wiring Diagram

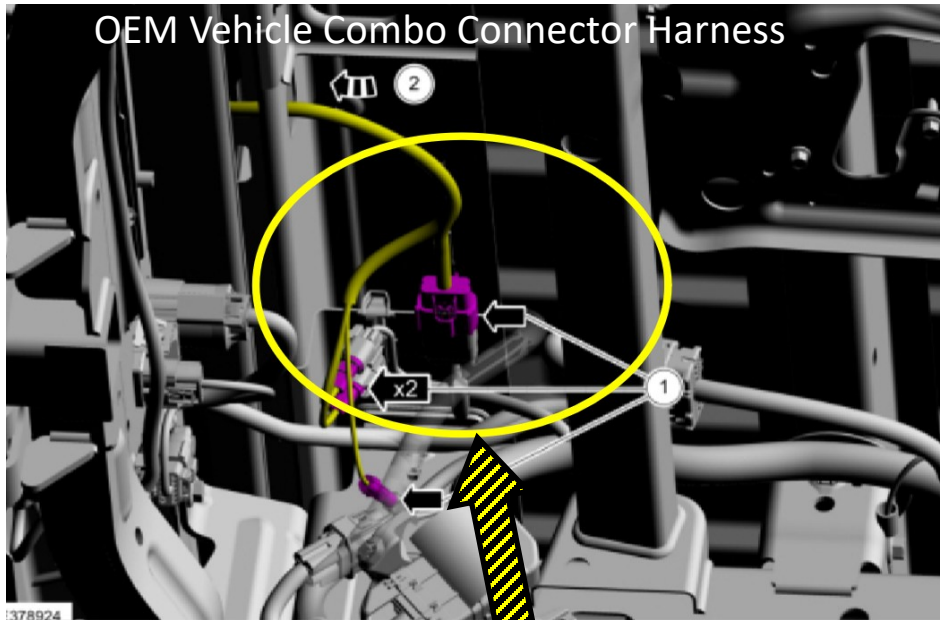


MY 24 & 25 F-150
+ F-150 Hybrid


77432 Adapter



MY 24 & 25 Lightning &
Pre-MY 24 F-150 + Hybrid

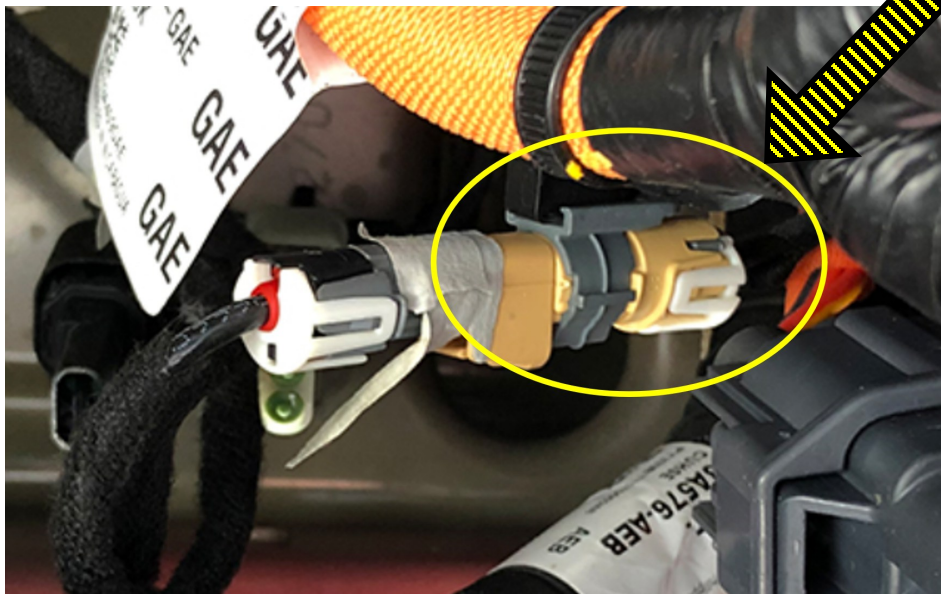

Camera installed in Enclosure
(77432) & Back cover (77212)

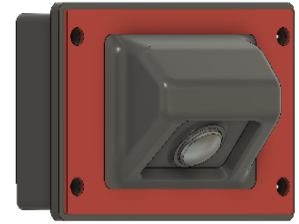

Right Angle

Loomed Coaxial Cable



OEM Vehicle Fakra Harness

Section 6: Application Specifics: F150 / Super Duty


Step 6-1.

Follow Ford F-150 Service manual instructions to remove camera from the tailgate. Details extracted from instructions are as follows to the right:


1. Open the tailgate.
2. **Vehicles With: Tailgate Step:**
 - Push the tailgate step release button.
 - Open the tailgate step.



Caution: Make sure camera orientation for up is noted when removing from release handle.

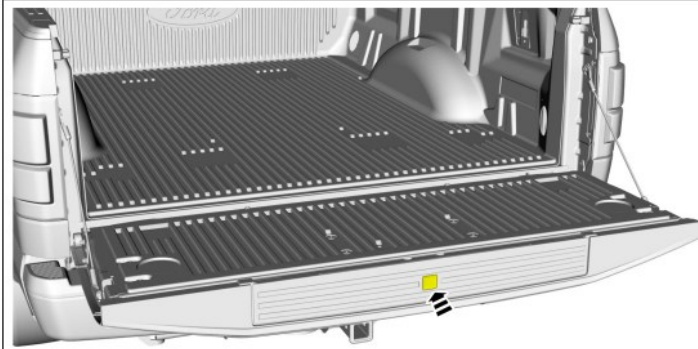

E196243

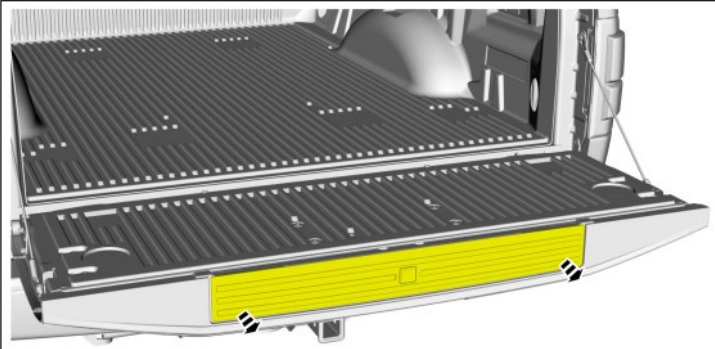


E196244

c. All vehicles

- If equipped. Remove the bedliner tailgate cover. *Torque: 22 lb.in (2.5 Nm)*
- If equipped. Remove the tailgate access panel bolts and the tailgate access panel. *Torque: 22 lb.*



E196058

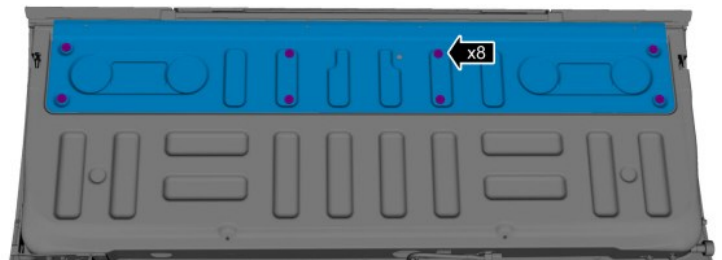



E196059

Section 6: Application Specifics: F150 / Super Duty

- If equipped. Remove the workspace tailgate access panel bolts and the workspace tailgate access panel. *Torque: 71 lb.in (8 Nm)*
- Remove the tailgate moulding. Refer to: Tailgate Moulding (501-08 Exterior Trim and Ornamentation, Removal and Installation).
- Remove the tailgate handle nuts. *Torque: 80 lb.in (9 Nm)*





Caution: Make sure camera orientation for up is noted when removing from release handle.

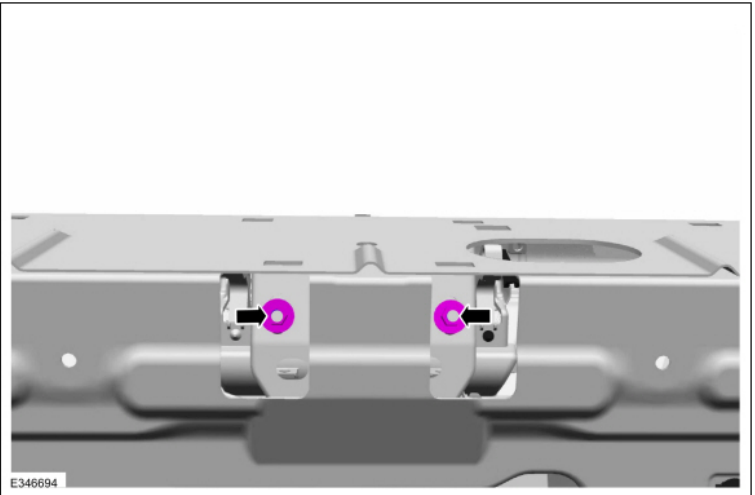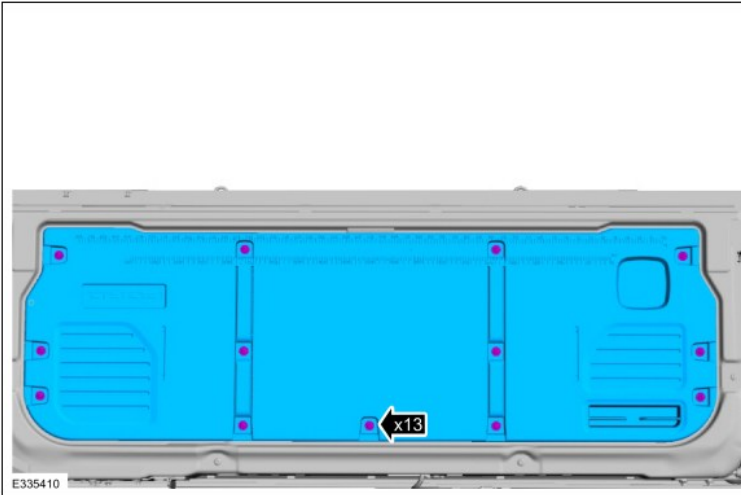


TOP VIEW

- Remove the tailgate release handle.
 - Release the retaining clips and position the tailgate release handle from the tailgate.
 - Disconnect the tailgate handle to tailgate control assembly rod.
 - Disconnect the rear camera electrical connector
 - Remove the screw and the rear bracket and camera.

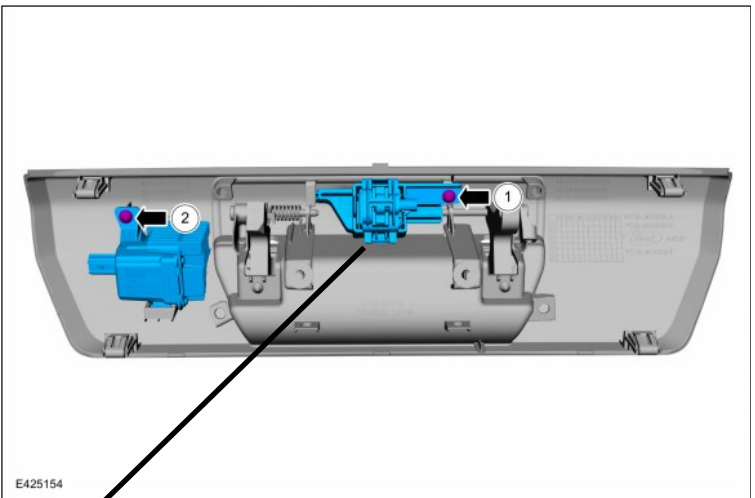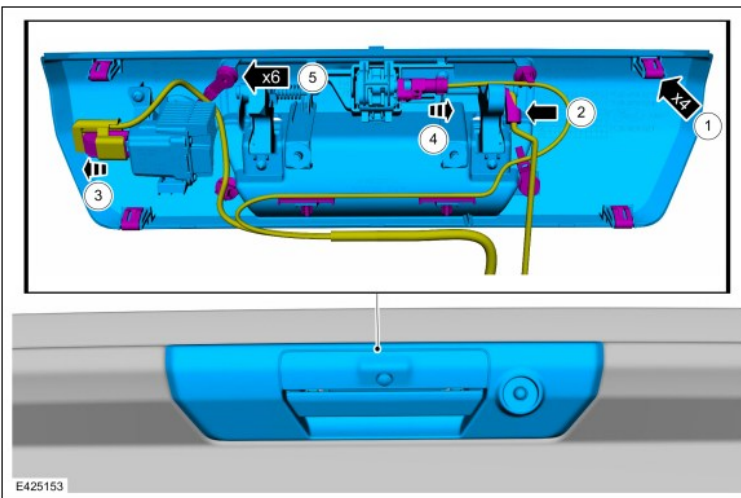

- Release the tab, and remove the bracket and the rear parking aid camera.

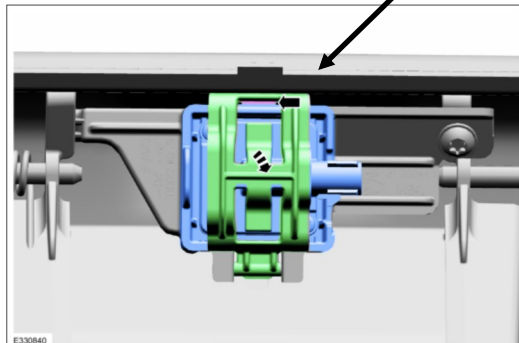

Caution: Make sure to notice camera orientation for UP when removing from release handle.

Section 6: Application Specifics: F150 / Super Duty

Step 6-2.




Caution: Make sure camera orientation for up is noted from previous disassembly.




- If the camera DOES not look like this (a single pin round coaxial snap-on connection) –**STOP**– you will need an analog back up camera kit. Please contact your Adrian representative.

Step 6-3.

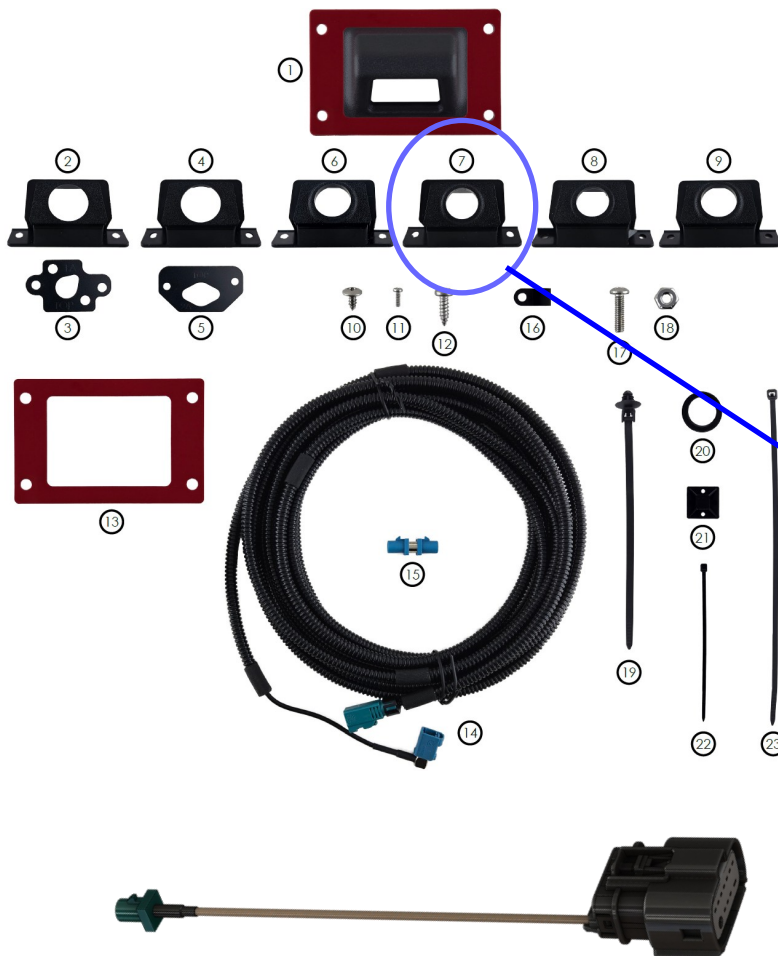

- Remove Digital Backup Camera kit from shipping package and make sure all pieces are present (contains bracketry for multiple vehicle platforms)

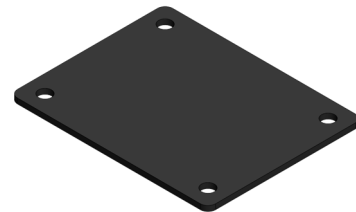

- Enclosure Back Plate (77212)

- Identify CAMERA INSERT “4” bracket (molded into the BACK SURFACE of part) [Part number BOM ID #7]

- MY24-25 (Only) F-150 and Hybrid adapter (77432)

Section 6: Application Specifics: F150 / Super Duty

Step 6-4.



Caution: Use a hand screwdriver to tighten these screws— do not over-torque.



- Again, identify the orientation of the enclosure on the door, and the orientation of the inner bracket inside the enclosure and make sure the proper OEM orientation has been maintained when all are in the installed position on the door.
- The BOM ITEM #10: #6 X 5/16" Truss Head Screws will be used to firmly mount the camera into the bracket.

Step 6-5.




- The camera should fit the bracket with very little gap between the lens and the hole in the bracket. The OEM camera should fit into this bracket squarely and not be loose when twisted or rocked within the bracket. (if so-you might have the wrong bracket) bracket should fit into the enclosure at an angle, top first, lightly snapping in.

Step 6-6.



Caution: Use a hand screwdriver to tighten these screws— do not over-torque.

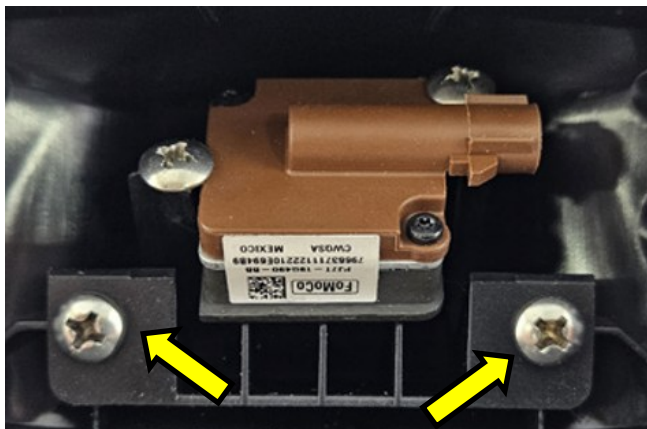

- The inner bracket's holes should align with the enclosure's screw bosses. Use BOM ITEM #12: #8 X 0.5 TAPPING PHP SCREWS to secure the inner bracket to the inside of the enclosure.
- DO NOT insert the 15' LVDS EXTENSION HARNESS to the back of the camera yet

Section 6: Application Specifics: Ford Maverick

Step 6-1.

Follow Ford Maverick manual instructions to remove camera from the tailgate. Details extracted from instructions are as follows to the right:

1. Open the tailgate.

2. **Vehicles With: Tailgate Step:**

- Push the tailgate step release button.
- Open the tailgate step.



Caution: Make sure camera orientation for up is noted when removing from release handle.

c. **All vehicles**

- If equipped. Remove the bedliner tailgate cover. *Torque: 22 lb.in (2.5 Nm)*
- If equipped. Remove the tailgate access panel bolts and the tailgate access panel. *Torque: 22 lb.*



d. You will need a 10mm socket and extender to reach the 10mm Nuts you need to unfasten to remove camera housing




Section 6: Application Specifics: Ford Maverick

Step 6-2.



There is one clip holding in the camera housing. Using a trim tool you can remove it



Caution: Make sure camera orientation for up is noted when removing from release handle.

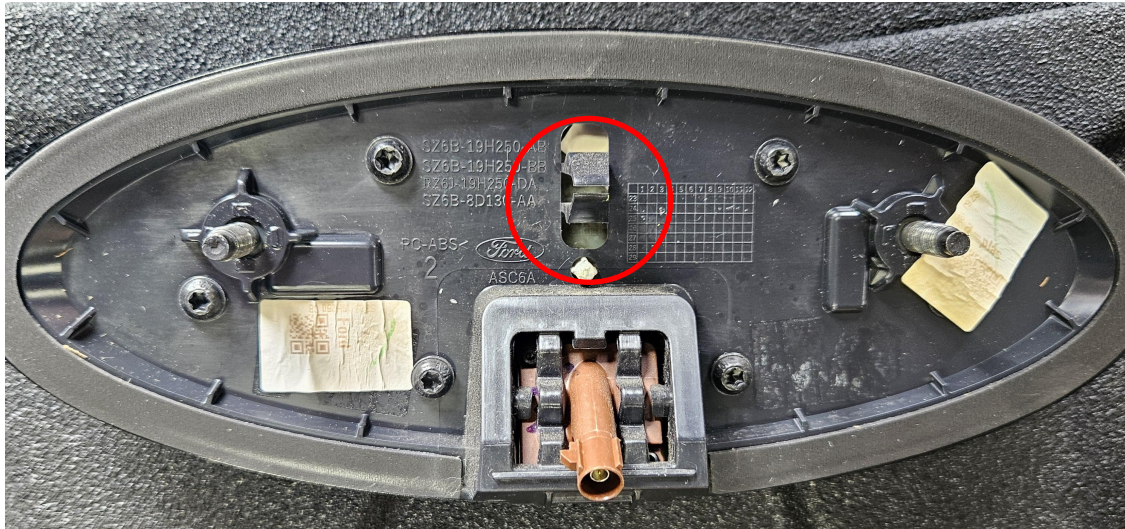

Step 6-2. Unscrew the six T20 torx bit screws circled. You will need a small knife to cut the seal along the edge of the housing. Remove camera from housing

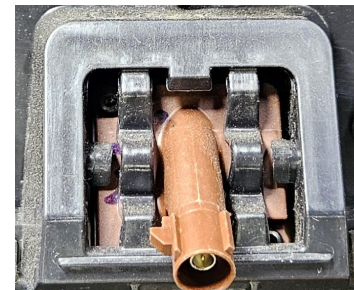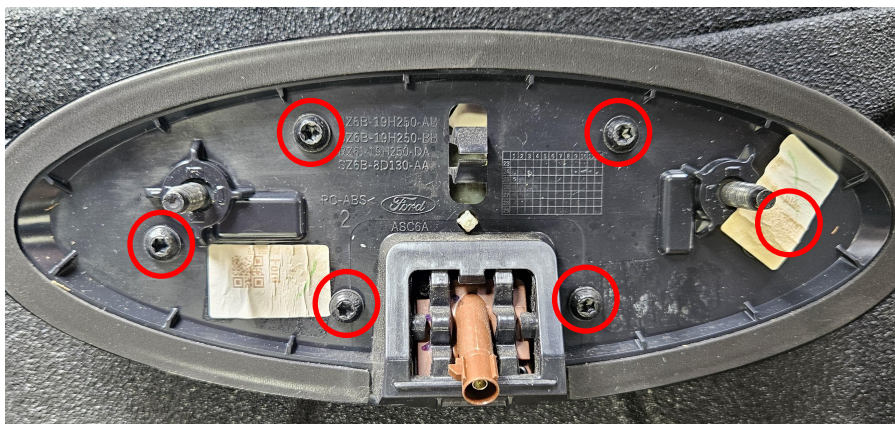

Section 6: Application Specifics: Ford Maverick

Step 6-2.




Caution: Make sure camera orientation for up is noted from previous disassembly.




- If the camera DOES not look like this (a single pin round coaxial snap-on connection) –**STOP**– you will need an analog back up camera kit. Please contact your Adrian representative.


Step 6-3.

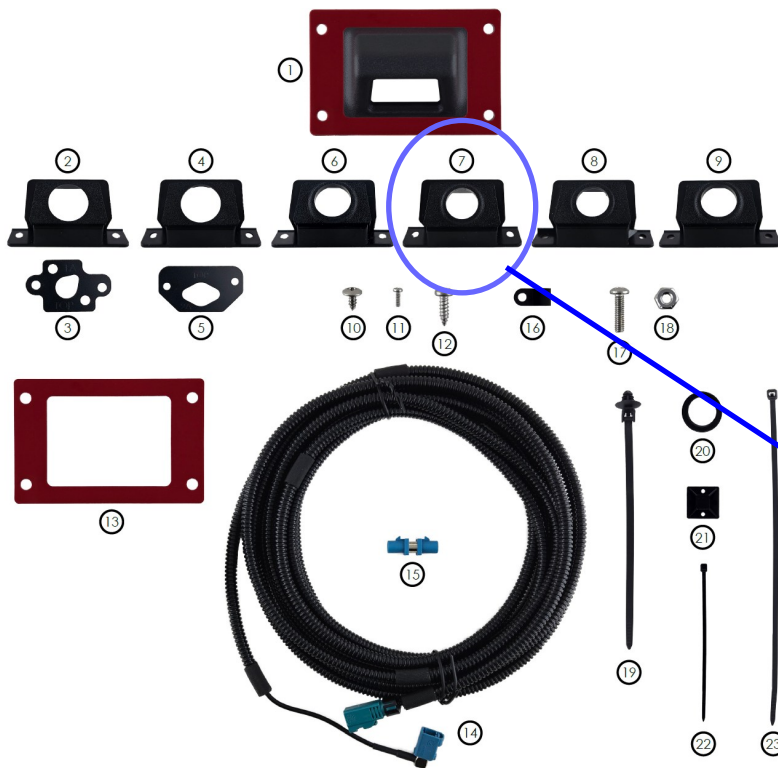

- Remove Digital Backup Camera kit from shipping package and make sure all pieces are present (contains bracketry for multiple vehicle platforms)

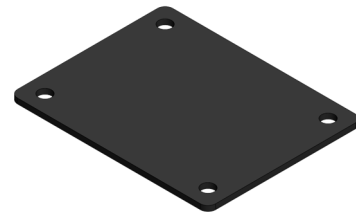


- Enclosure Back Plate (77212)

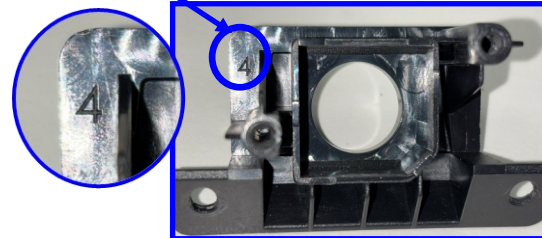

- Identify CAMERA INSERT “4” bracket (molded into the BACK SURFACE of part) [Part number BOM ID #7]

Section 6: Application Specifics: Colorado

Step 6-4.

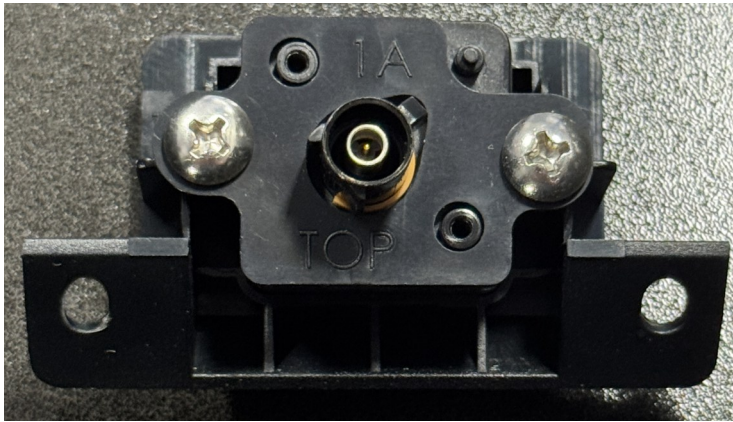

Caution: Use a hand screwdriver to tighten these screws— do not over-torque.


- Again, identify the orientation of the enclosure on the door, and the orientation of the inner bracket inside the enclosure and make sure the proper OEM orientation has been maintained when all are in the installed position on the door.
- The BOM ITEM #10: #6 X 5/16" Truss Head Screws will be used to firmly mount the camera into the bracket.

Step 6-5.



- The camera should fit the bracket with very little gap between the lens and the hole in the bracket. The OEM camera should fit into this bracket squarely and not be loose when twisted or rocked within the bracket. (if so-you might have the wrong bracket) bracket should fit into the enclosure at an angle, top first, lightly snapping in.

Step 6-6.

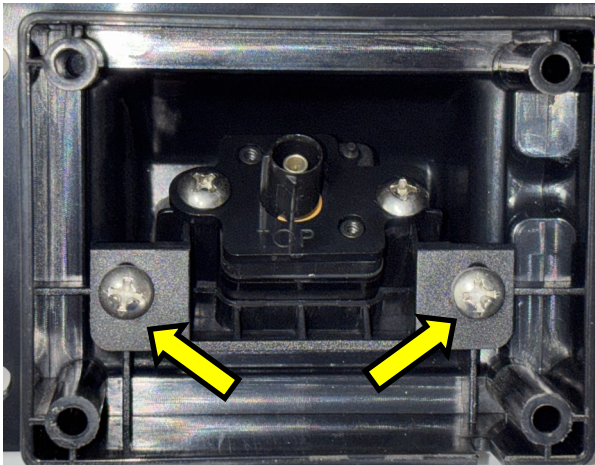

Caution: Use a hand screwdriver to tighten these screws— do not over-torque.

- The inner bracket's holes should align with the enclosure's screw bosses. Use BOM ITEM #12: #8 X 0.5 TAPPING PHP SCREWS to secure the inner bracket to the inside of the enclosure.
- DO NOT insert the 15' LVDS EXTENSION HARNESS to the back of the camera yet

Section 6: Application Specifics: Chevrolet Silverado 1500

Step 6-1.

Follow Chevy Silverado 1500 Service manual instructions to remove camera from the tailgate. Details extracted from instructions are as follows to the right:


1. Open the tailgate.
2. **Vehicles With: Tailgate Step:**
 - Push the tailgate step release button.
 - Open the tailgate step.




Caution: Make sure camera orientation for up is noted when removing from release handle.

c. **All vehicles**

- If equipped. Remove the bedliner tailgate cover. *Torque: 22 lb.in (2.5 Nm)*
- If equipped. Remove the tailgate access panel bolts and the tailgate access panel. *Torque: 22 lb.*

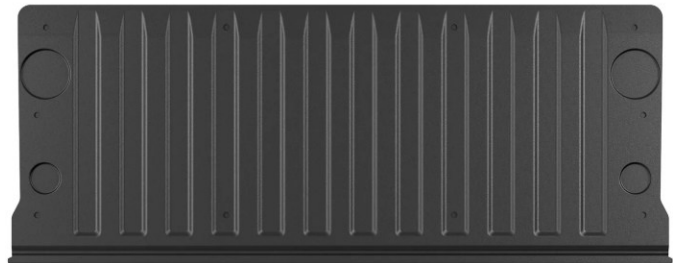

d. **Remove bolts circled**

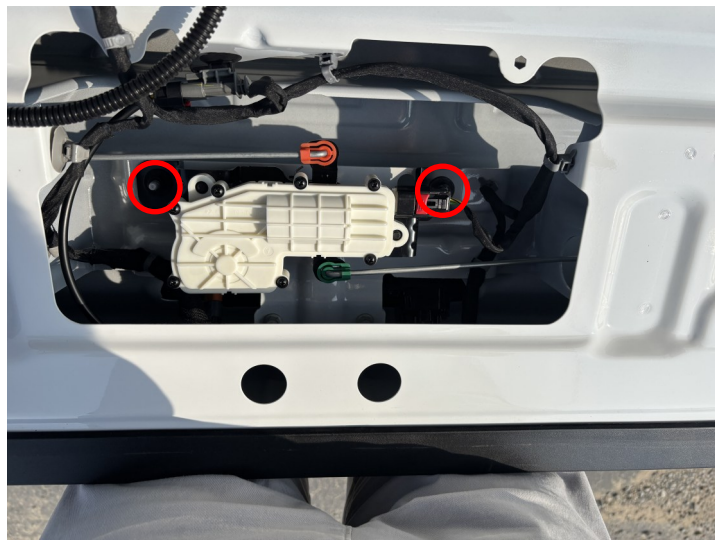



Section 6: Application Specifics: Chevrolet Silverado 1500

Step 6-2.

You will need to depress the clip holding in the camera housing with a tool as shown below



Caution: Make sure camera orientation for up is noted when removing from release handle.

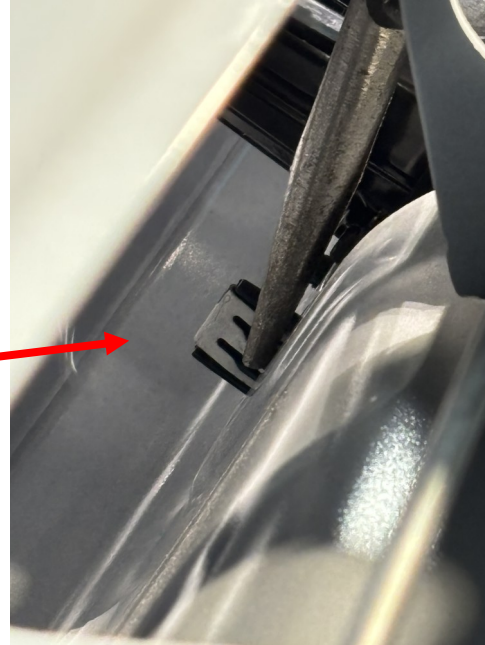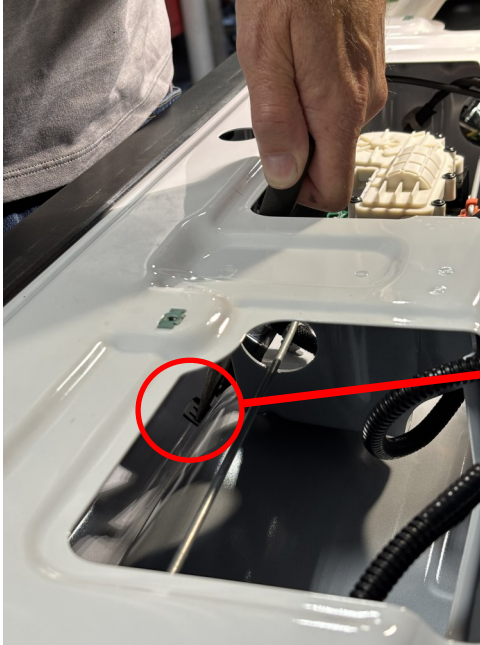


Step 6-2.

Remove camera housing. Unscrew the two screws circled. Remove camera from housing



Section 6: Application Specifics: Silverado 1500


Step 6-3.

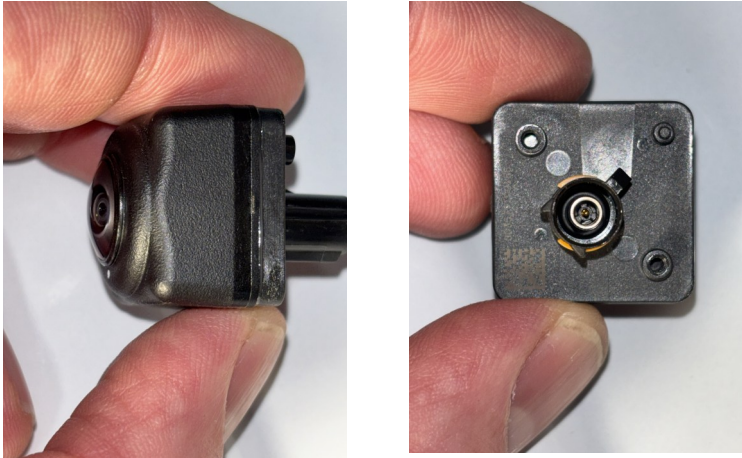


Caution: Make sure camera orientation for up is noted from previous disassembly.

- If the camera DOES not look like this (a single pin round coaxial snap-on connection) –**STOP**– you will need an analog back up camera kit. Please contact your Adrian representative.


Step 6-3.

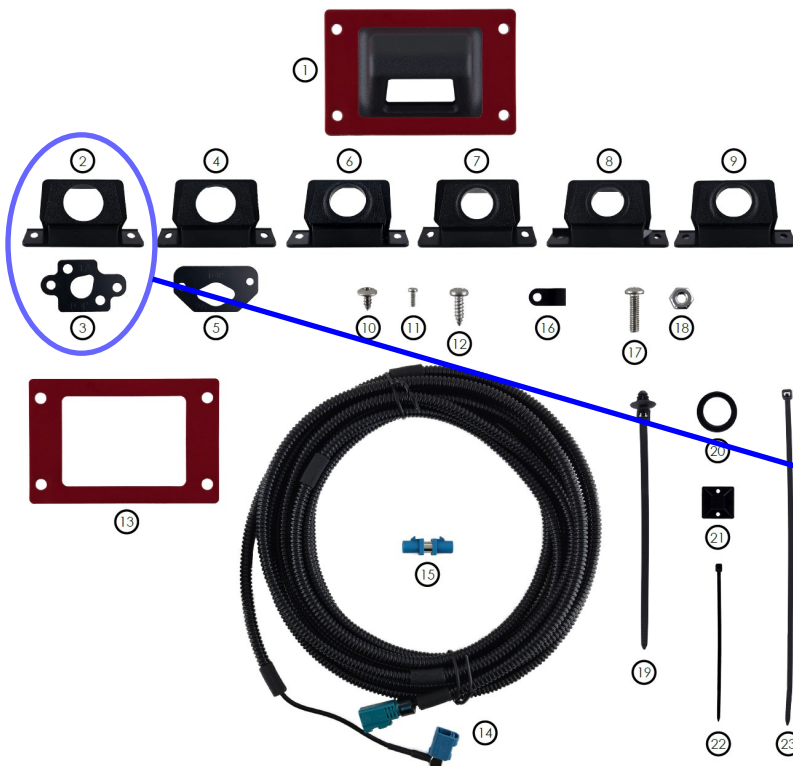

- Remove Digital Backup Camera kit from shipping package and make sure all pieces are present (contains bracketry for multiple vehicle platforms)

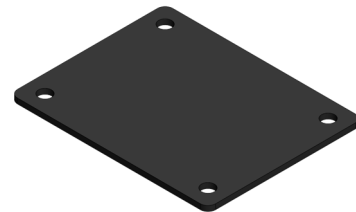

Enclosure Back Plate (77212)

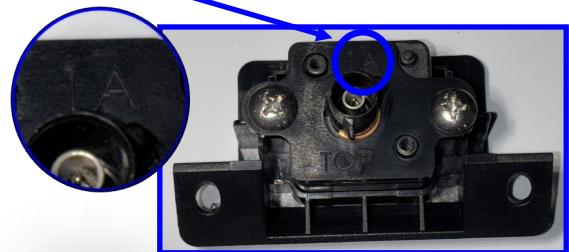


- Identify CAMERA INSERT "1A" bracket AND CAMERA INSERT PLATE "1A" (molded into the BACK SURFACE of part) [Part number BOM ID #2 and #3]

Section 6: Application Specifics: Silverado 1500

Step 6-4.



Caution: Use a hand screwdriver to tighten these screws— do not over-torque.

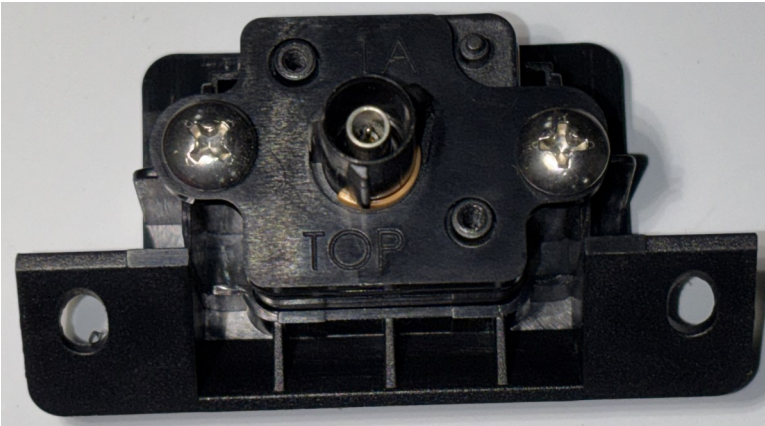


- Again, identify the orientation of the enclosure on the door, and the orientation of the inner bracket inside the enclosure and make sure the proper OEM orientation has been maintained when all are in the installed position on the door.
- The BOM ITEM #10: #6 X 5/16" Truss Head Screws will be used to firmly mount the camera into the bracket.

Step 6-5.



- The camera should fit the bracket with very little gap between the lens and the hole in the bracket. The OEM camera should fit into this bracket squarely and not be loose when twisted or rocked within the bracket. (if so-you might have the wrong bracket) bracket should fit into the enclosure at an angle, top first, lightly snapping in.

Step 6-6.

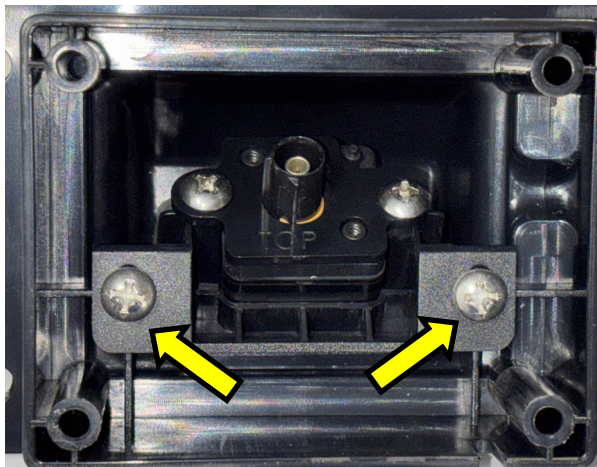

Caution: Use a hand screwdriver to tighten these screws— do not over-torque.

- The inner bracket's holes should align with the enclosure's screw bosses. Use BOM ITEM #12: #8 X 0.5 TAPPING PHP SCREWS to secure the inner bracket to the inside of the enclosure.
- DO NOT insert the 15' LVDS EXTENSION HARNESS to the back of the camera yet

Section 6: Application Specifics: Chevrolet Colorado

Step 6-1.

Follow Chevy Silverado 1500 Service manual instructions to remove camera from the tailgate. Details extracted from instructions are as follows to the right:

1. Open the tailgate.
2. **Vehicles With: Tailgate Step:**
 - Push the tailgate step release button.
 - Open the tailgate step.




Caution: Make sure camera orientation for up is noted when removing from release handle.

c. All vehicles

- If equipped. Remove the bedliner tailgate cover. *Torque: 22 lb.in (2.5 Nm)*
- If equipped. Remove the tailgate access panel bolts and the tailgate access panel. *Torque: 22 lb.*



d. Remove bolts circled

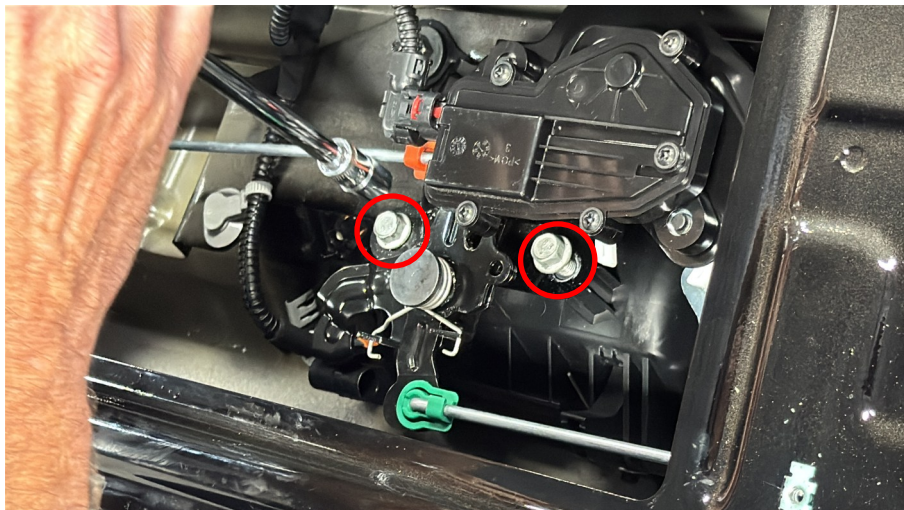

Section 6: Application Specifics: Chevrolet Colorado

Step 6-2.


There are two clips holding in the camera housing. Using a trim tool you can remove them



Caution: Make sure camera orientation for up is noted when removing from release handle.




Step 6-2. Unscrew the two T20 torx bit screws circled. Unscrew the two Phillips head screws. Remove camera from housing

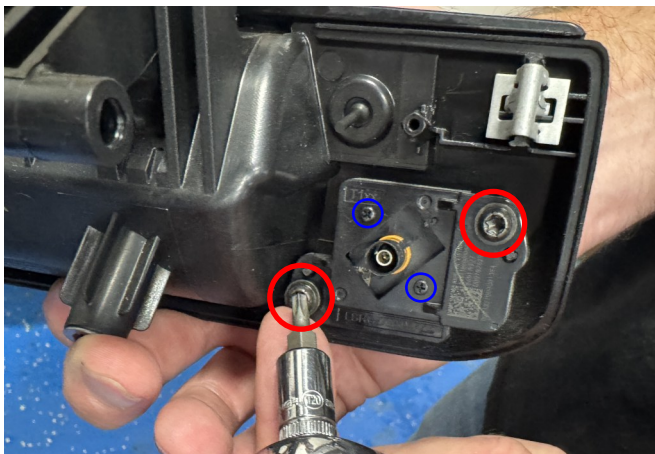

Section 6: Application Specifics: Colorado


Step 6-3.

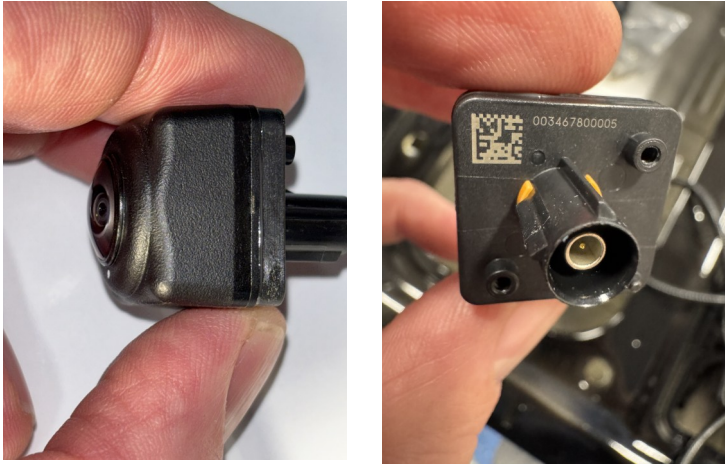

Caution: Make sure camera orientation for up is noted from previous disassembly.

- If the camera DOES not look like this (a single pin round coaxial snap-on connection) –**STOP**– you will need an analog back up camera kit. Please contact your Adrian representative.


Step 6-3.

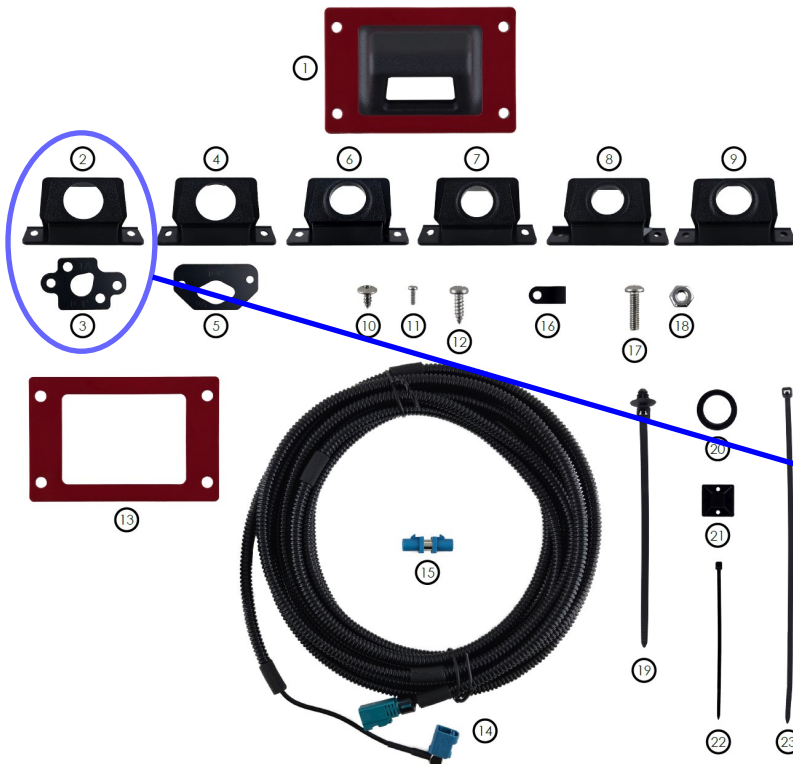

- Remove Digital Backup Camera kit from shipping package and make sure all pieces are present (contains bracketry for multiple vehicle platforms)




Enclosure Back Plate (77212)

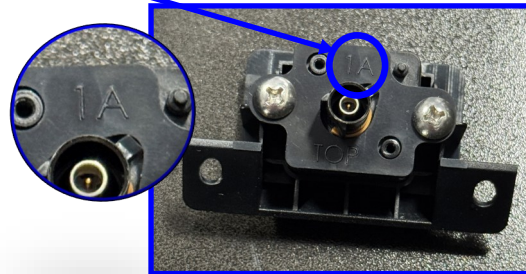

- Identify CAMERA INSERT "1A" bracket AND CAMERA INSERT PLATE "1A" (molded into the BACK SURFACE of part) [Part number BOM ID #2 and #3]

Section 6: Application Specifics: Colorado

Step 6-4.

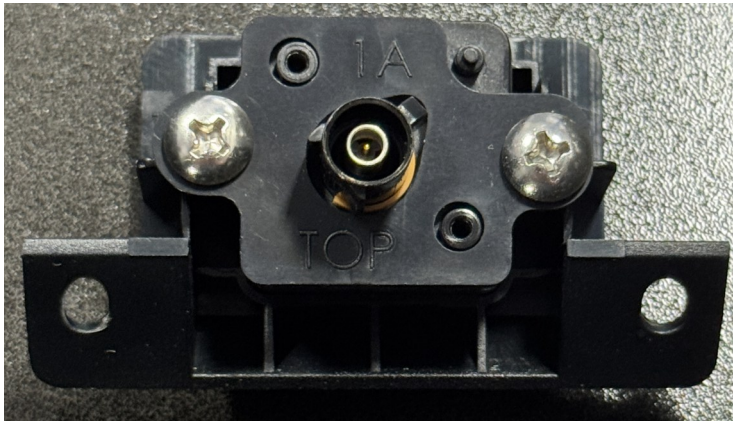

Caution: Use a hand screwdriver to tighten these screws— do not over-torque.


- Again, identify the orientation of the enclosure on the door, and the orientation of the inner bracket inside the enclosure and make sure the proper OEM orientation has been maintained when all are in the installed position on the door.
- The BOM ITEM #10: #6 X 5/16" Truss Head Screws will be used to firmly mount the camera into the bracket.

Step 6-5.



- The camera should fit the bracket with very little gap between the lens and the hole in the bracket. The OEM camera should fit into this bracket squarely and not be loose when twisted or rocked within the bracket. (if so-you might have the wrong bracket) bracket should fit into the enclosure at an angle, top first, lightly snapping in.

Step 6-6.

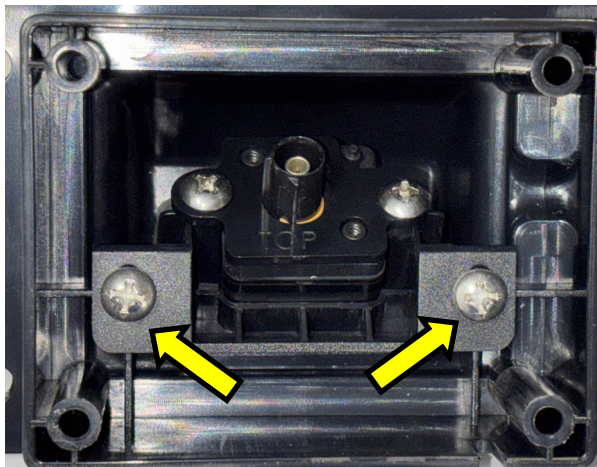

Caution: Use a hand screwdriver to tighten these screws— do not over-torque.

- The inner bracket's holes should align with the enclosure's screw bosses. Use BOM ITEM #12: #8 X 0.5 TAPPING PHP SCREWS to secure the inner bracket to the inside of the enclosure.
- DO NOT insert the 15' LVDS EXTENSION HARNESS to the back of the camera yet

Section 7: General installation


Step 7-1.

Camera installed in
Enclosure



- This assembly will be mounted into the walk-in door opening with the camera tilting at an angle downward toward the ground.
- There is red tape liner protecting the outward facing adhesive covered surface.

Step 7-2.

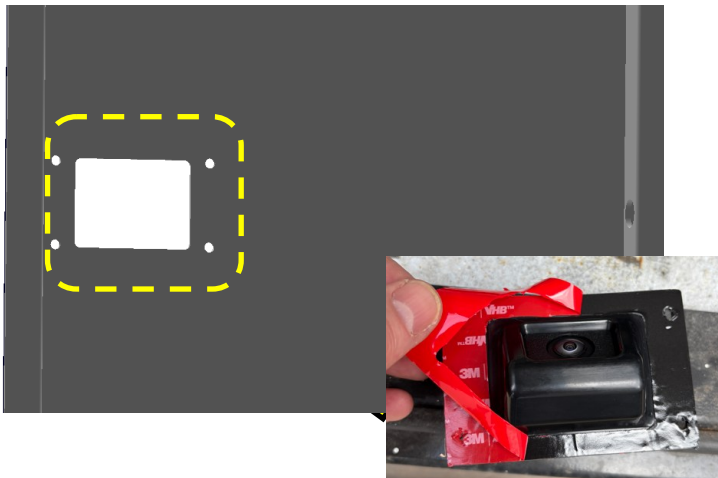

- Clean and let dry the surface around the square hole in the door on the inside of the door.
- **NOTE: The minimum double sided tape application temperature is 50° F (10°C).**
- Be sure to use 50:50 mixture of isopropyl alcohol (IPA*) solution to remove any dirt or oils. Allow to dry.
- The red gasket liner on the enclosure assembly will be removed before placement.

Step 7-3.




- This is VHB tape, so do not push to stick it unless the 4 screw holes are aligned.
- It is recommended that at least two corner screws BOM ITEM #17: 8-32 5/8" PHP SCREWS are present while installing the enclosure,
- Carefully aligning the enclosure protrusion through the hole in the door, make sure enclosure flange is flush before pushing for the adhesive to stick.

Section 7: General installation

Step 7-4.



Caution: Use a hand driver to tighten these nuts— do not over-torque

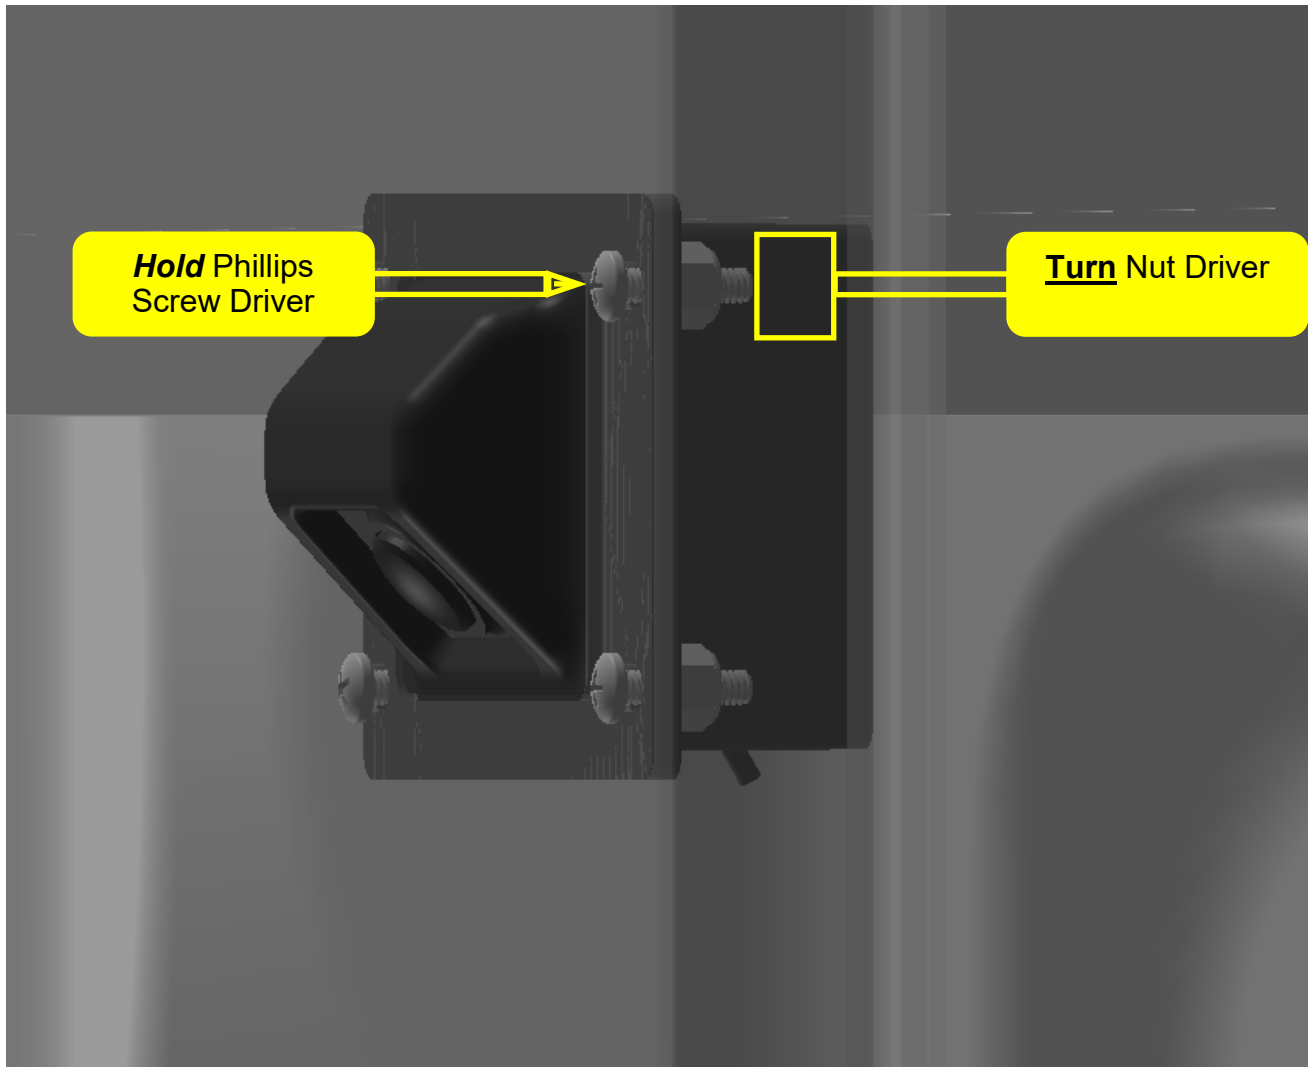

- Add the other two screws and make sure enclosure assembly is completely aligned before applying light pressure to the enclosure and gasket to the door.
- The enclosure should not be warping, binding, or pinching the plastic material into the side of the square hole. It should be interfacing flatly between the enclosure back flange, the gasket, and the door material for water tightness.
- **Hold** a Phillips head screwdriver to the screws on the outside of the door, while **turning** a hand nut driver to tighten the nylock nuts with very light torque on the back side (this prevents the turning screw heads from marking the outside paint or wrap of the walk-in door).
- Finish the nuts torquing lightly **HAND TIGHTEN** until snug (to avoid over compressing the plastic).

Section 8: Routing harness

Step 8-1.



Caution: The loom covered coaxial cable should not be bent at harsh angles, kinked or pinched during the installation.

Extension Harness Connection to OEM Camera Connection:

Because the extension harness right-angle connector is equipped with a seal, the connection between the connector and the OEM camera may require firm pressure to fully seat.

The connection should make a "click" sound when the connector is fully seated and locked.


Fully Seated Connection



Not Fully Seated Connection




Step 8-2.

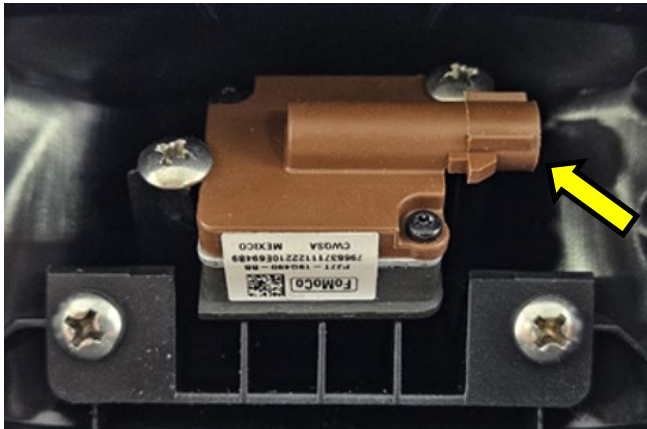

- Right angle end (shown above) of the BOM ITEM #14: 15' LVDS EXTENSION HARNESS will fit directly onto the OEM camera installed the enclosure with a small click. Be sure to use the push-pull-push test to ensure clip retainer is engaged.


Step 8-3.

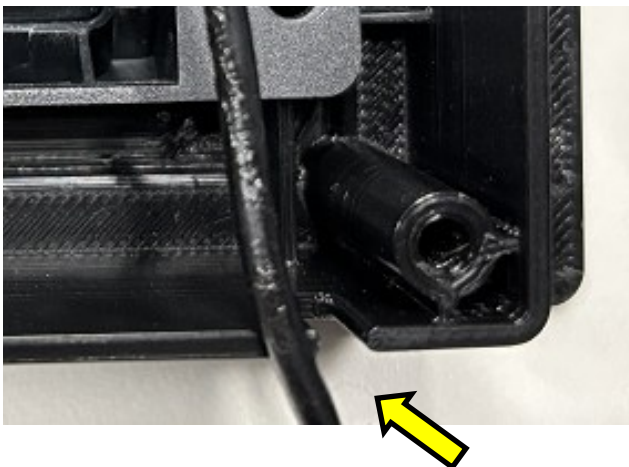

- The right angle swivel connection will be adjusted so that the coaxial wire can be routed out of the slot in the bottom of the box.


Section 8: Routing harness

Step 8-4.

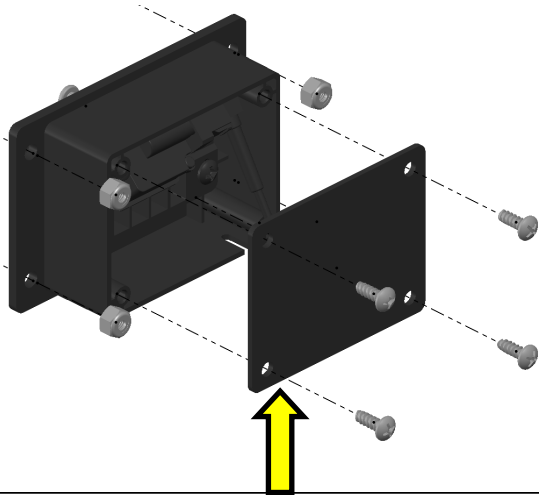

- Install the aluminum back plate cover [77212] of the enclosure while keeping the coaxial harness wire in the allotted channel for exiting the enclosure.
- Use BOM ITEM #12: #8 X 0.5 TAPPING PHP SCREWS to secure the back plate to the enclosure.
- **HAND TIGHTEN** the back cover.

Step 8-5.

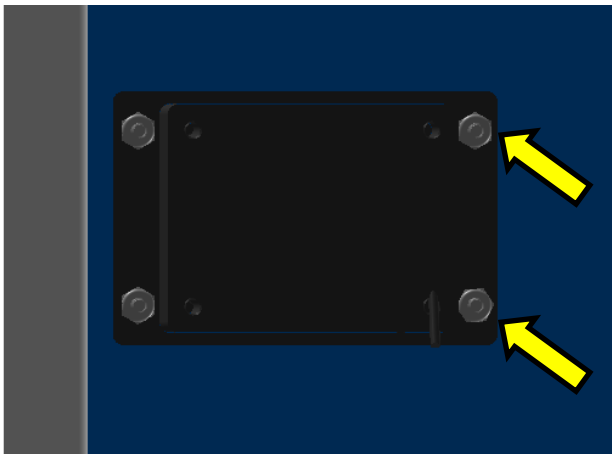


- Remove the bottom and top driver's side nuts from the enclosure mounting screws and obtain a black plastic P-clips BOM ITEM #16: BLACK P-CLIPS from the kit package.



- The tape will be assisting in keeping the enclosure in place now.

Step 8-6.

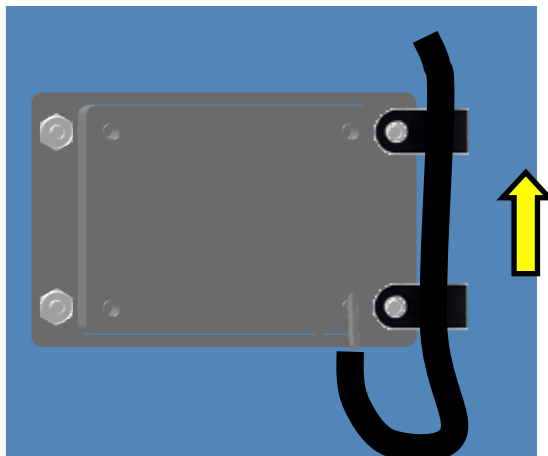

Caution: The loom covered coaxial cable should not be bent at harsh angles, kinked or pinched during the installation.

- These P-clips will be oriented like in the diagram so that wire is leaving the slot, then the looming cover on the coaxial cable begins, a small drip loop is formed, and then is fastened by the clips to the enclosure screws going upward to the top of the door.
- Again fasten the nuts with light torque while holding screws on the outside of the door to prevent spinning.
- During HAND TIGHTENING, ensure the P-clips stay in position and do not twist and damage the cable and loom.


Section 8: Routing harness

Step 8-7.




Caution: The loom covered coaxial cable should not be bent at harsh angles, kinked or pinched during the installation.

Door edge square tube

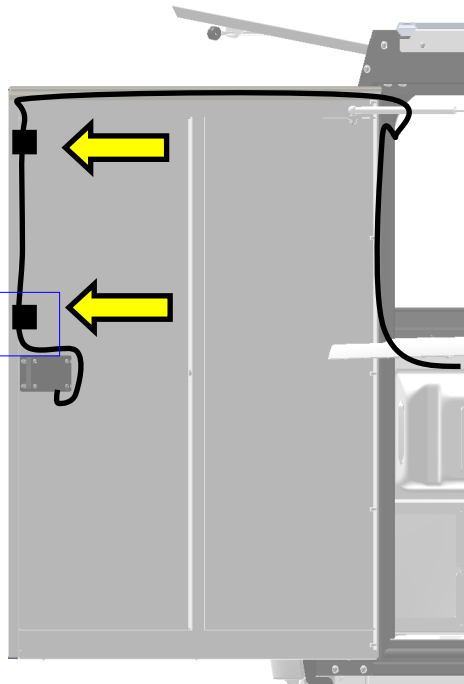

- From the P-Clip, the cable will be routed to the top of the door along the door's edge square tube.
- **NOTE: The minimum double sided tape application temperature is 50° F (10°C).**
- Be sure to use 50:50 mixture of isopropyl alcohol (IPA*) solution to remove any dirt or oils. Allow to dry.
- Apply the VHB adhesive mounts BOM ITEM #21: VHB ADHESIVE CABLE TIE BASE MOUNT.
- For excellent bonding, apply 15 lbs. of pressure for a few seconds.
- The adhesive will continue to bond for a few hours, do not stretch the cable too tightly between the squares when affixing cable ties.
- After the adhesive squares are affixed, use the BOM ITEM #22: 4" CABLE TIES


Step 8-8.

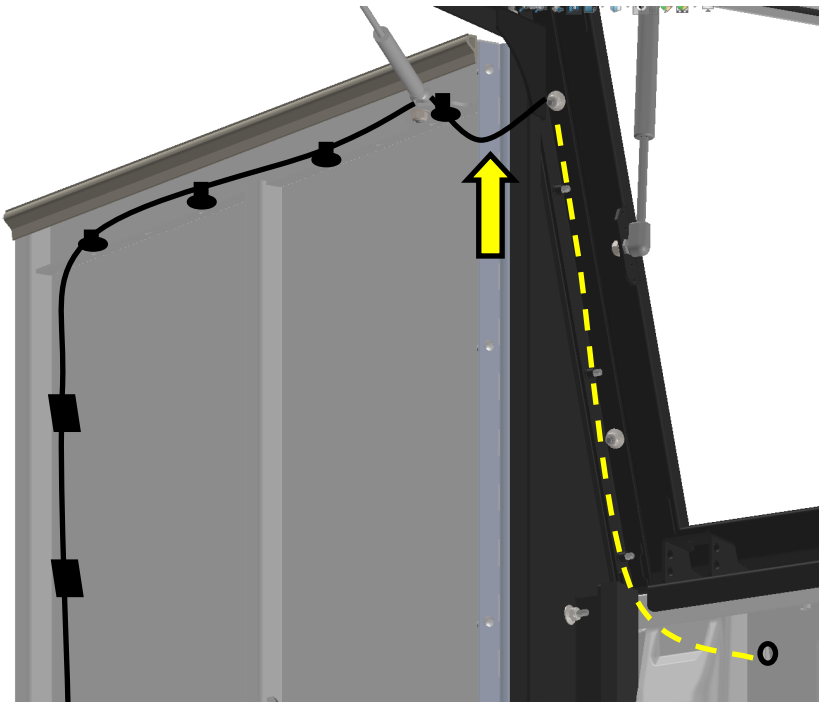

- Upon reaching the top of the door the cable will be neatly guided to the hinge side of the door. Fastening about every 10-12 inches to a Christmas tree cable mount in to the quarter inch holes in the top of the door bracket BOM ITEM #19: 0.25" FIR TREE CABLE TIE.
- The cable will be brought to the end of the door and a small amount of loop will be left in the space between the end mounting hole on the door bracket and the affixing point in the corner of the cap.

Section 8: Routing harness

Step 8-9.

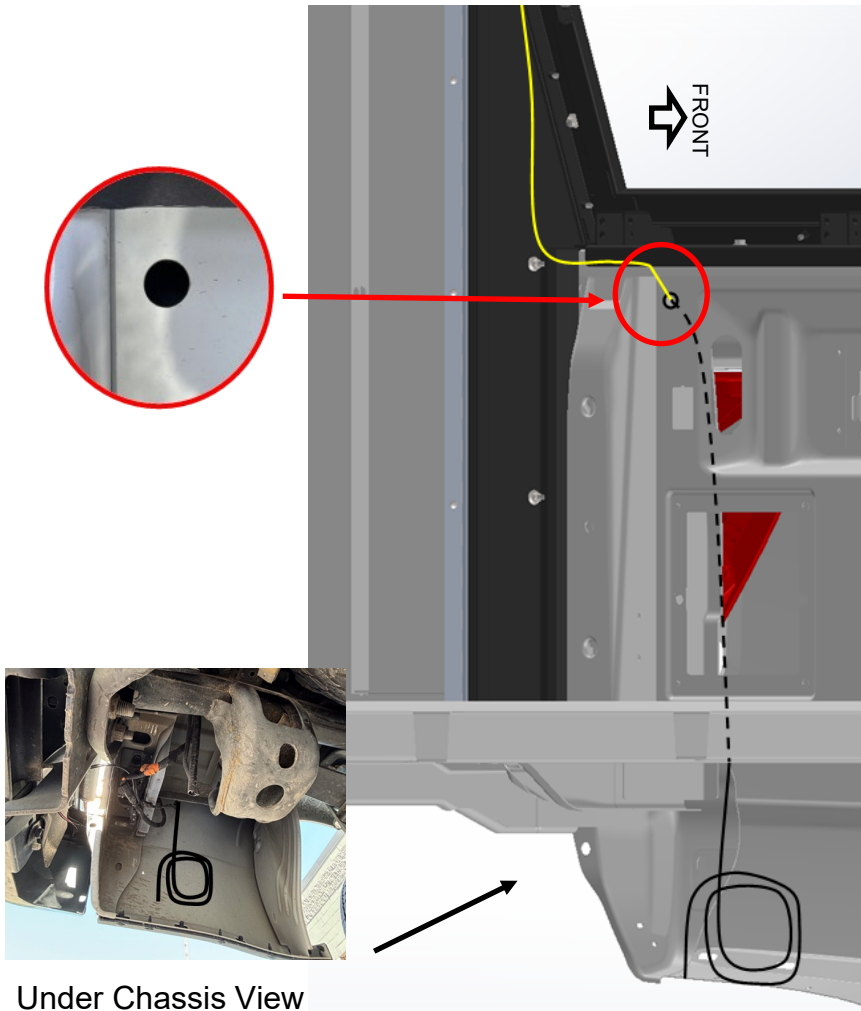

Under Chassis View



Note: Make sure the hole size stays well controlled due to the stiff nature of the snap bushing— do not over drill.

- (Red Circle Area) If necessary, utilize the Step Bit and drill to widen the existing 18.4mm hole to 3/4" (19mm).
- It is best practice to add etching paint to prevent any corrosion if the hole is enlarged.
- At this point the snap bushing in the kit BOM ITEM #20: SNAP BUSHING WITH 15.3MM I.D. can be pushed into the hole on the side of the bed wall and the cable can be fed down into that hole.
- Be sure the cable end will stay clean as it travels down the interior of the sidewall down to the bottom of the truck.
- Pull the cable all the way through so that there is just enough cable left inside of the topper/bed area to begin to finish routing.
- Use about three - 8" cable ties from the kit to hold the cable to exiting non-moving structures on the inside corner of the cap and ensure they are out of the way to prevent anything from snagging.

Step 8-10.




The wire MUST be tied up above the frame rail to avoid damage from ice and road debris.

1. UNDER the vehicle, by the rear bumper, BE AWARE of the hot exhaust systems, and route the harness above the frame rail and follow other wiring harnessing to the open OEM Mating connector for the adapter or the coaxial cable that has been left from the removal of the tail/end gate.

Section 8: Routing harness


Step 8-11.

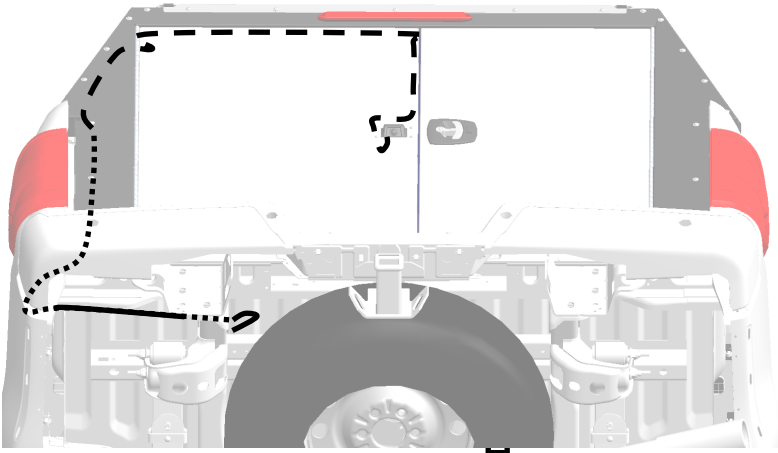

- The wire **MUST** be tied up above the frame rail to avoid damage from ice and road debris.

Step 8-12.

Under Chassis View

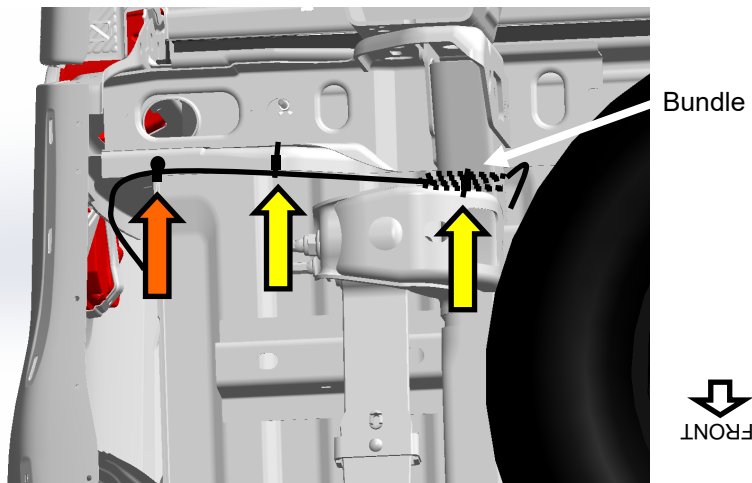


- It will be helpful to find a 1/4" hole [Area of Orange Arrow] in the trucks underbody sheet metal and utilize one of the Christmas tree cable mounts to secure the cable where it drops down from the hole on the topside bed wall.
- When routing is established, connect the coaxial cable and bundle/ loop any extra cable to tie high above the bottom of the truck.

- The installation is completed– please test and finish install by making sure cable will not be pinched or damaged during customer use.

Section 9: Testing and Finish


The camera installation should now be checked:

- Start vehicle.
 - Check around for safety.
 - Hold the brake, shift the vehicle into reverse and observe the back-up camera monitor in the vehicle. The image should be very similar to original image from the OEM tailgate installed backup camera.
 - If there any doubts, please ensure to validate with FMVSS111 procedure to ensure compliance.
- ◇ If the vehicle does not activate the backup camera while in reverse, check that there is no damage to the harnessing, and reassure all connections have been made securely.
- ◇ Lastly, ensure all harness is properly secured and cable ties are trimmed.
- ◇ The install is now complete!

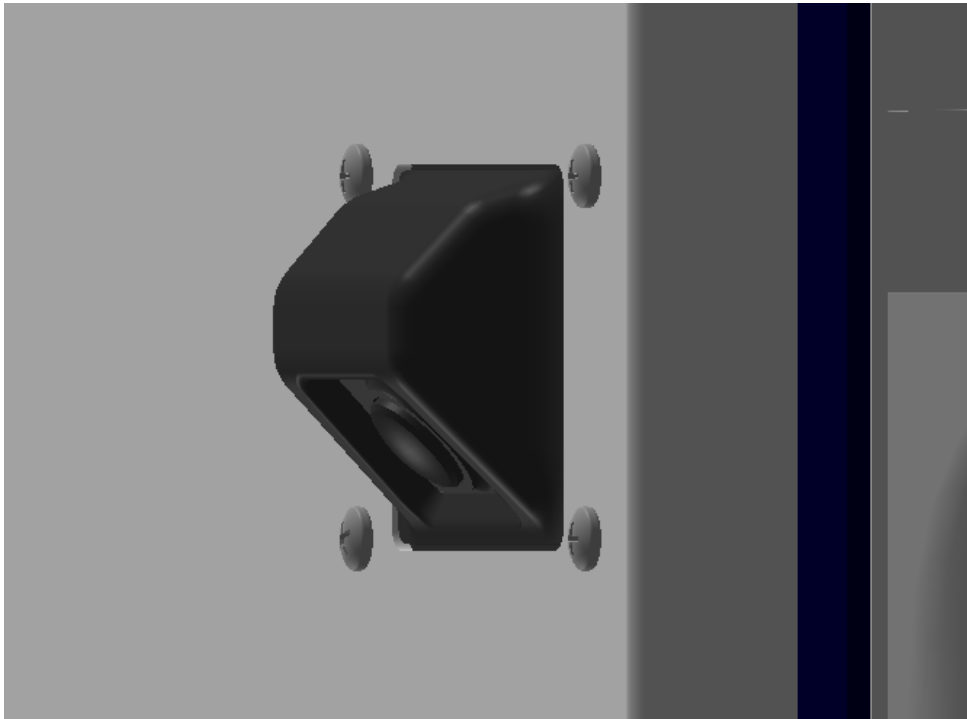

CATALOG NUMBER

TELH04

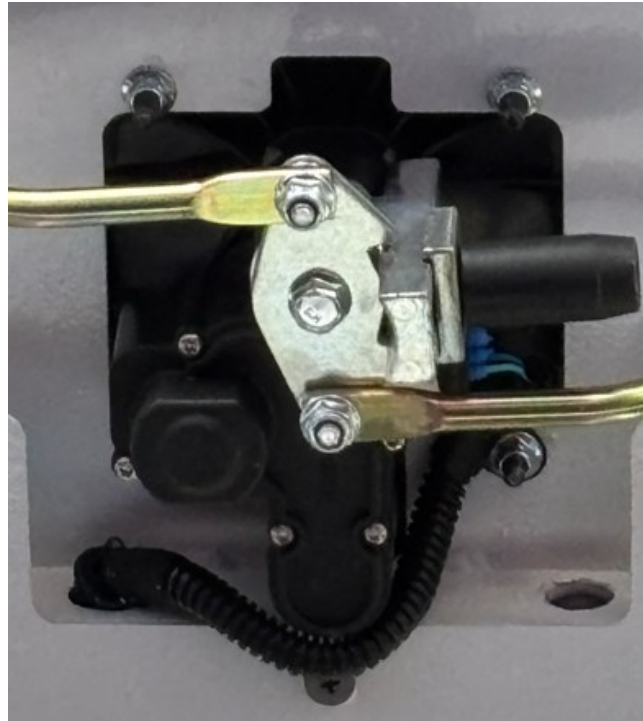

Vehicle Model	Bed Length	Cab Size	Battery Location	Compatible Topper
Chevy Colorado	5	Crew	Passenger	Hatch / Barn
Ford F150	5.5	Crew	Passenger	Hatch / Barn
Ford Lightning	5.5	Crew	Passenger	Hatch / Barn
Nissan Frontier	5	Crew	Passenger	Hatch / Barn

PRODUCT FEATURES

Adrian Cap Electronic Lock Kit for the Hatch Topper vehicles listed above.

- **This is a complete kit for installing electronic locks on all three Adrian Cap doors**
- **This kit uses Posi-Taps to pull the OEM latch signals — no soldering necessary**
- **This kit can be used in combination with Topper Interior Lighting without interference**

Introduction / Comments:

Install Instructions For Adrian Cap Electronic Lock Kits For MY25 Vehicles

Note:

Read all instructions prior to installation. Review the Adrian Steel **GENERAL PRECAUTIONS PAGES (56638)** before attempting installation. Only personnel familiar with using electrical best practices should perform this install. Reference **ELECTRICAL BEST PRACTICES MANUAL (54479)** before attempting installation.

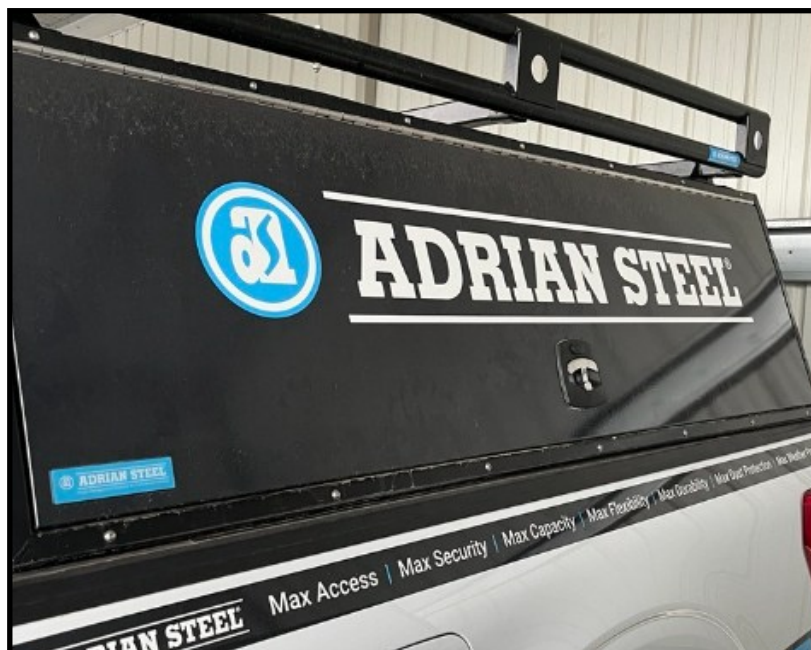
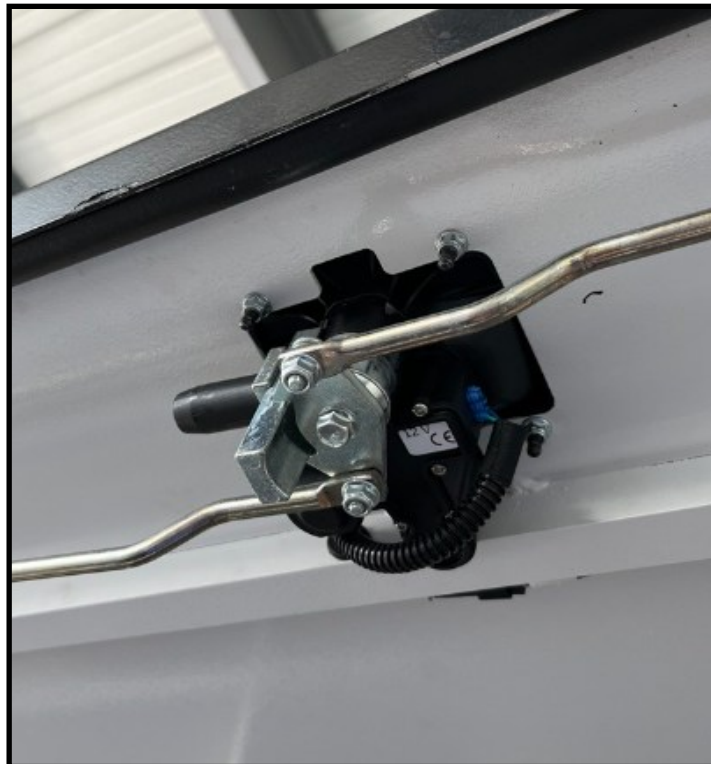


Table of Contents

Introduction Statement	2
Overall Harness Diagram	3
Tools needed	4
Torque requirements	4
Vehicle and Kit Charts	5
Kit Harnesses	7
Harnesses/Components Needed	8
Routing Overview	10
Platform Specific Posi-Tap Installation Instructions	11
Vehicle Harness Installation Instructions	20
Adrian Cap Harness Installation Instructions	23

Introduction Statement

****Please read statement below before moving forward****

Before installation, disconnect the OEM negative battery cable.

The TELH/B kits are divided by battery location in engine compartment, cab size, and bed length. The harnesses and routing is similar for all vehicles except for the lengths. These instructions are for the most standard configurations, and reference only. Please reference the vehicle being upfit and the spec sheet to confirm you have the correct kit.

These installation instructions are for most cases and for reference. Install instructions depend on the vehicle model and options. Please follow the labels to determine how to route each harness.

Chevy Silverado platforms are mirrored to the rest of the platforms, meaning the battery harness runs from the passenger side of the engine bay to the driver side foot well, the control harness is routed underneath the driver side, and the topper 3-split harness splits in the front driver side corner instead of the passenger side corner.

Overall Harness Diagram

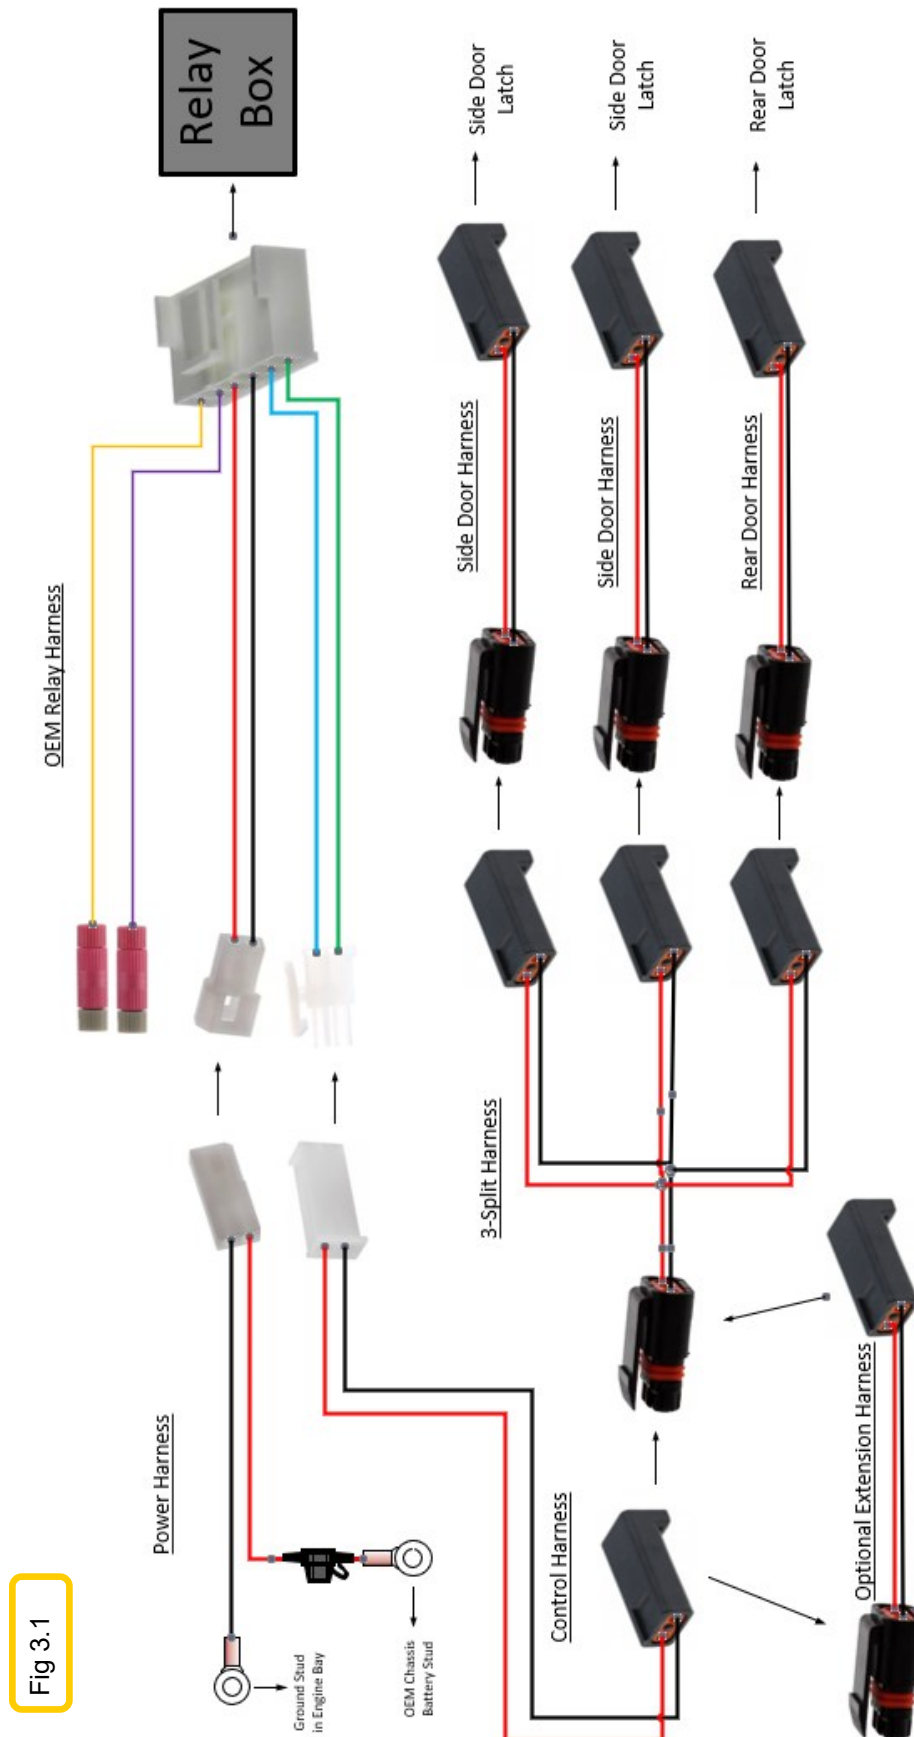


Fig 3.1

Tools required



- 8mm, 10mm, 11mm, and 13mm sockets
- T20 Torx bit
- Phillips 2 bit
- 1" step drill bit or hole saw
- 5/8" drill bit
- Power Drill
- Impact Driver
- Torque wrench
- Fish tape
- Pick or Small Flat Head Screw Driver
- Deburring tool

TORQUE

Torque E-Lock fasteners to 2.2 Nm.

DO NOT OVER TIGHTEN

Adrian Cap Electronic Lock Kit / Vehicle Chart - Hatch

NOTE: Silverado ICE and Hybrid is routed mirrored to the rest of the vehicles

Kit	Vehicle Model	Bed Length	Cab Size	Battery Location
TELH01	Ford Maverick	4.5	Crew	Driver
	Ford Ranger	5	Crew	Driver
	RAM 1500 (MY25+)	5.6 (67")	Crew	Driver
	Silverado 1500	5.75	Crew	Passenger
TELH02	RAM 1500 (MY25+)	6.3	Crew	Driver
	RAM HD (MY25+)	6.3	Crew	Driver
	Silverado 1500	6.5	Crew	Passenger
	Silverado HD	6.75	Crew	Passenger
TELH03	RAM 1500 (MY25+)	8	Crew	Driver
	RAM HD (MY25+)	8	Crew	Driver
	Silverado HD	8	Crew	Passenger
TELH04	Chevy Colorado	5	Crew	Passenger
	Ford F150	5.5	Crew	Passenger
	Ford Lightning	5.5	Crew	Passenger
	Nissan Frontier	5	Crew	Passenger
TELH05	Ford F150	6.5	Crew	Passenger
	Ford SD	6.75	Crew	Passenger
	Nissan Frontier	6	Crew	Passenger
	Silverado EV	5.9 (71")	Crew	Passenger
TELH06	Ford SD	8	Crew	Passenger
TELH07	Silverado 1500	6.5	Regular	Passenger
TELH08	RAM HD (MY 25+)	8	Regular	Driver
	Silverado 1500	8	Regular	Passenger
	Silverado HD	8	Regular	Passenger
TELH09	Ford F150	6.5	Regular	Passenger
TELH10	Ford F150	8	Regular	Passenger
	Ford SD	8	Regular	Passenger

Adrian Cap Electronic Lock Kit / Vehicle Chart - Barn Door

NOTE: Silverado ICE and Hybrid is routed mirrored to the rest of the vehicles

Kit	Vehicle Model	Bed Length	Cab Size	Battery Location
TELB01	Ford Maverick	4.5	Crew	Driver
	Ford Ranger	5	Crew	Driver
	RAM 1500 (MY25+)	5.6 (67")	Crew	Driver
TELB02	RAM 1500 (MY25+)	6.3	Crew	Driver
	RAM HD (MY25+)	6.3	Crew	Driver
TELB03	RAM 1500 (MY25+)	8	Crew	Driver
	RAM HD (MY25+)	8	Crew	Driver
TELB04	Chevy Colorado	5	Crew	Passenger
	Ford F150	5.5	Crew	Passenger
	Ford Lightning	5.5	Crew	Passenger
	Nissan Frontier	5	Crew	Passenger
TELB05	Ford F150	6.5	Crew	Passenger
	Ford SD	6.75	Crew	Passenger
	Nissan Frontier	6	Crew	Passenger
	Silverado EV	5.9 (71")	Crew	Passenger
TELB06	Ford SD	8	Crew	Passenger
TELB07	Silverado 1500	6.5	Regular	Passenger
TELB08	RAM HD (MY 25+)	8	Regular	Driver
TELB09	Ford F150	6.5	Regular	Passenger
TELB10	Ford F150	8	Regular	Passenger
	Ford SD	8	Regular	Passenger
TELB11	Silverado 1500	5.75	Crew	Passenger
TELB12	Silverado 1500	6.5	Crew	Passenger
	Silverado HD	6.75	Crew	Passenger
TELB13	Silverado HD	8	Crew	Passenger
TELB14	Silverado 1500	8	Regular	Passenger
	Silverado HD	8	Regular	Passenger

ADRIAN STEEL COMPANY • WWW.ADRIANSTEEL.COM • 906 JAMES STREET • ADRIAN, MI 49221 • 800-677-2726



Adrian Cap Electronic Lock Kit / Vehicle Chart - Barn Door

NOTE: Silverado ICE and Hybrid is routed mirrored to the rest of the vehicles

Kit	Vehicle Model	Bed Length	Cab Size	Battery Location
TELB01	Ford Maverick	4.5	Crew	Driver
TELB04	Ford F150	5.5	Crew	Passenger
TELB05	Ford F150	6.5	Crew	Passenger
TELB07	Silverado 1500	6.5	Regular	Passenger
TELB09	Ford F150	6.5	Regular	Passenger
TELB10	Ford F150	8	Regular	Passenger
TELB11	Silverado 1500	5.75	Crew	Passenger
TELB12	Silverado 1500	6.5	Crew	Passenger
TELB14	Silverado 1500	8	Regular	Passenger

TELH Kit Harnesses

Kit	74342	74343	74344	74345	74346	74347	74348	74340 x3	74341	74349 x2	74350	74533
TELH01	X		X				X	X	X	X	X	X
TELH02	X		X			X		X	X	X	X	X
TELH03	X		X		X			X	X	X	X	X
TELH04		X	X				X	X	X	X	X	X
TELH05		X	X			X		X	X	X	X	X
TELH06		X	X		X			X	X	X	X	X
TELH07	X			X		X		X	X	X	X	X
TELH08	X			X	X			X	X	X	X	X
TELH09		X		X		X		X	X	X	X	X
TELH10		X		X	X			X	X	X	X	X

TELB Kit Harnesses

Kit	74340 x3	74341	74342	74343	74344	74345	74346	74347	74348	74349 x2	74350	74533	77195
TELB01	X	X	X		X				X	X	X	X	
TELB02	X	X	X		X			X		X	X	X	
TELB03	X	X	X		X		X			X	X	X	
TELB04	X	X		X	X				X	X	X	X	
TELB05	X	X		X	X			X		X	X	X	
TELB06	X	X		X	X		X			X	X	X	
TELB07	X	X	X			X		X		X	X	X	X
TELB08	X	X	X			X	X			X	X	X	
TELB09	X	X		X		X		X		X	X	X	
TELB10	X	X		X		X	X			X	X	X	
TELB11	X	X	X		X				X	X	X	X	X
TELB12	X	X	X		X			X		X	X	X	X
TELB13	X	X	X		X		X			X	X	X	X
TELB14	X	X	X			X	X			X	X	X	X

Components





	Part #	Description
1	74340	ALLEGIS T-HANDLE E-LATCH
2	74341	E-LATCH OEM RELAY HARNESS
3	74342	E-LOCK PWR - DRIVER HARN
4	74343	E-LOCK PWR - PASS HARN
5	74344	E-LOCK CONTROL-CREW HARN
6	74345	E-LOCK CONTROL-REG HARN
7	74346	E-LOCK TPR 3SPLT 8' HARN
8	74347	E-LOCK TPR 3SPLT 6.75'
9	74348	E-LOCK TPR 3SPLT 5.75'
10	74349	E-LOCK TPR SIDE DOR HARN
11	74350	E-LOCK TPR REAR DOR HARN
12	74533	DUAL SPDT RELAY MODULE
13	80768	ROLL UP DOOR E-LOCK HARN

Harness pictures are for reference only.


Please reference the vehicle being upfit and pg. 4 to confirm which components are required for the install.

Fastener Bag Parts

QTY	Part #	Description
12	FAS0917	NUT,HEX NLK FLG M5 X 0.8 ZP
6	FAS0918	NUT,HEX NLK FLG 10-24 ZP
1	26618-0	Silicone Sealant

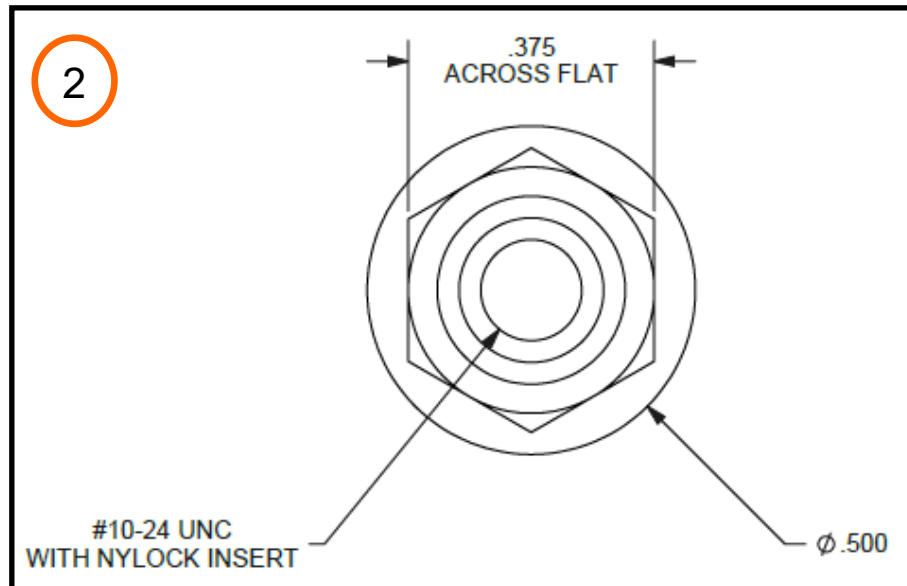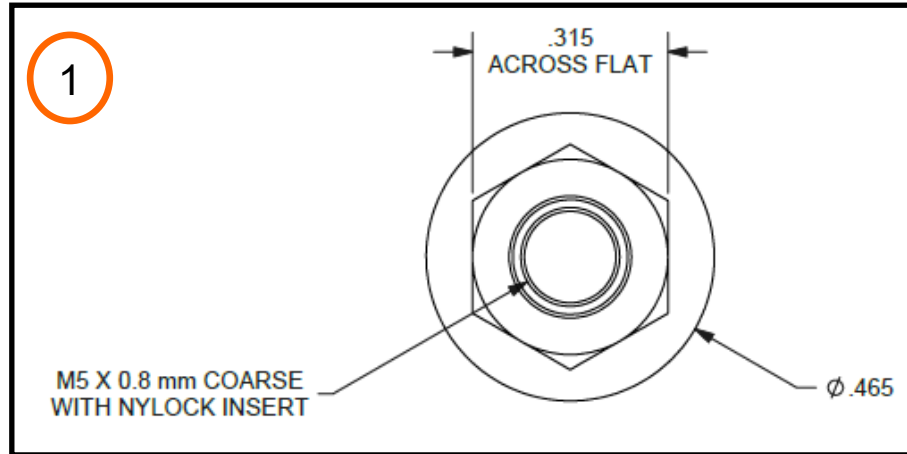



Routing Overview

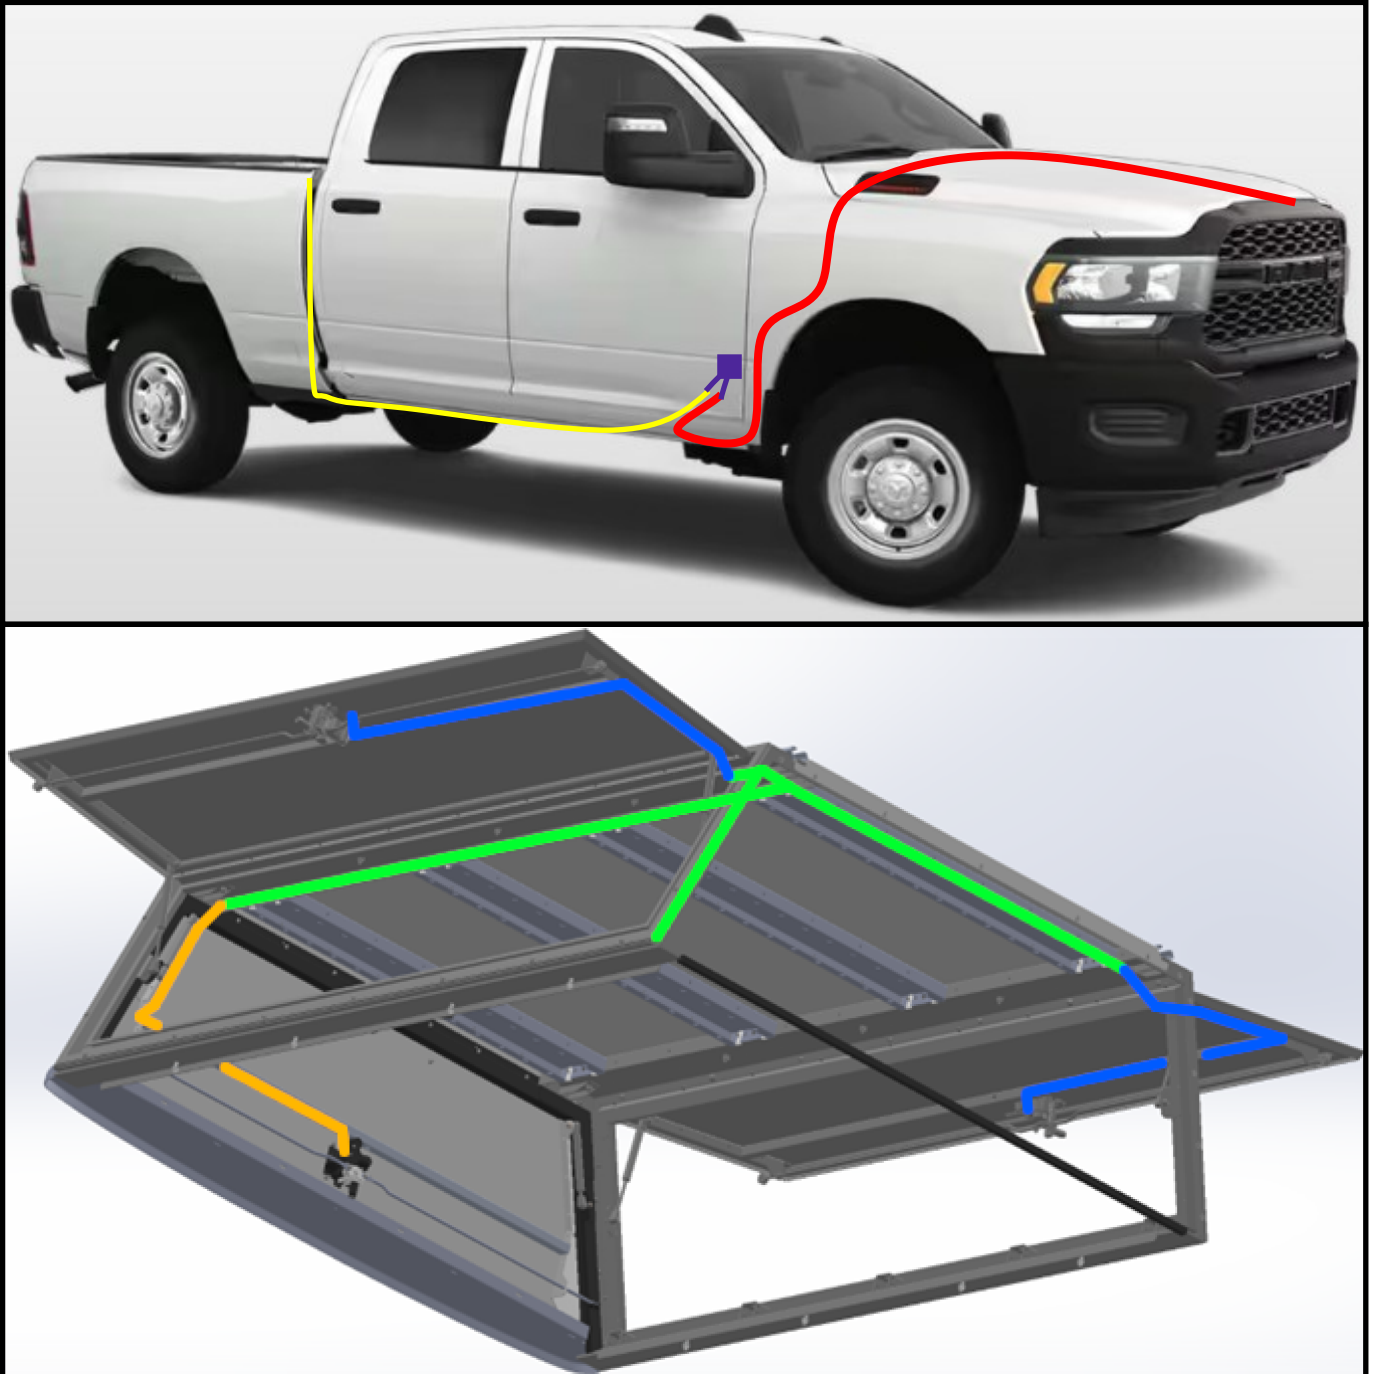

2024 RAM 2500 with Crew Cab and 6.75' Bed shown. All installs route along the same path except for Silverado ICE and Hybrid which is mirrored.

RED	74342 E-LOCK PWR - DRIVER HARN (Driver Side Position Shown)
PURPLE	74341 E-LATCH OEM RELAY HARNESS (located in the front passenger foot well)
YELLOW	74344 E-LOCK CONTROL-CREW HARN
GREEN	74347 E-LOCK TPPR 3SPLT 6.75'
BLUE	74349 E-LOCK TPPR SIDE DOR HARN
ORANGE	74350 E-LOCK TPPR REAR DOR HARN


Routing Overview Roll-up Door Topper ONLY

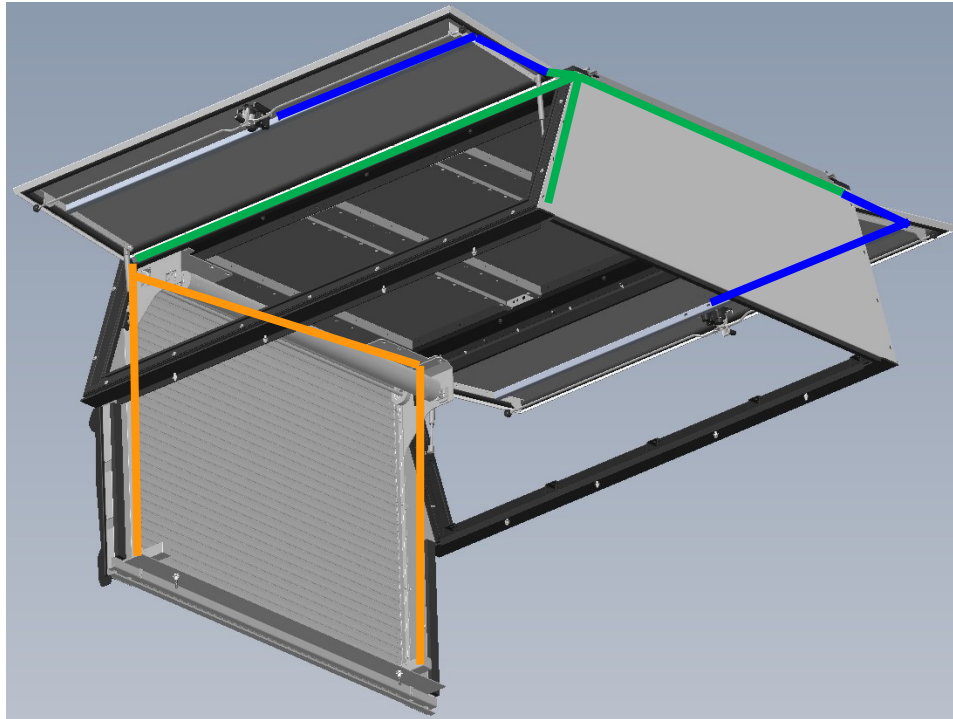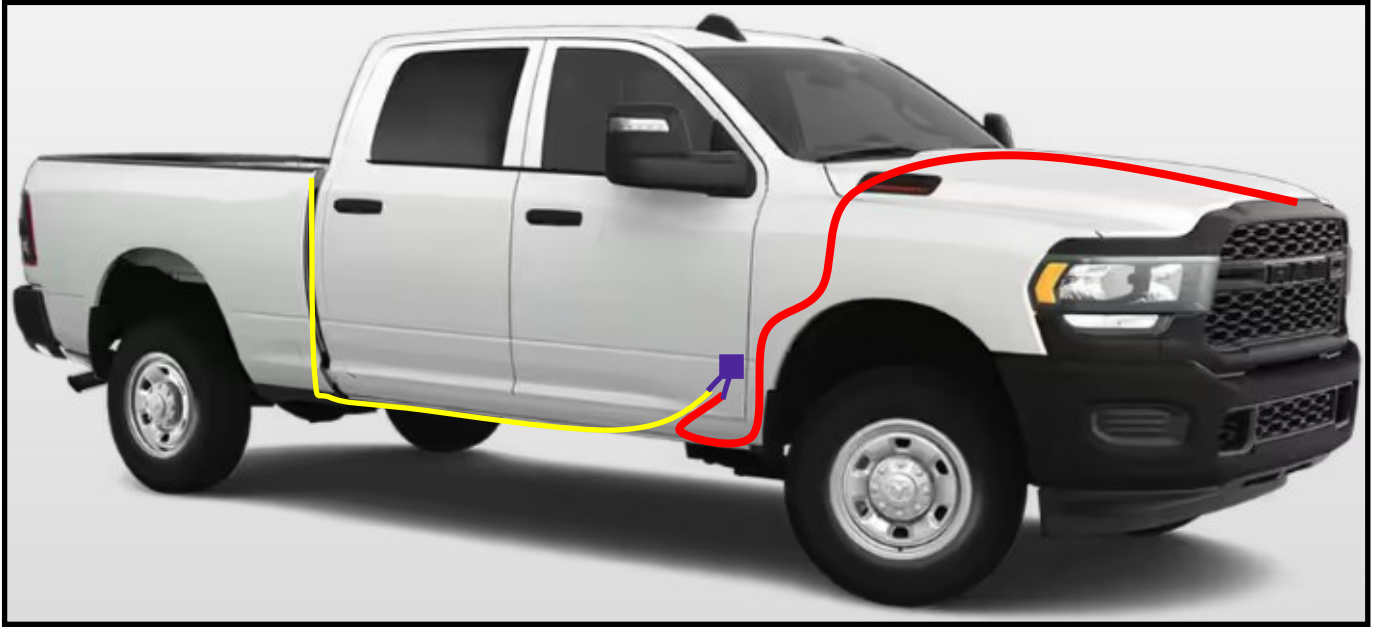

- | | |
|---------------|--|
| RED | 74342 E-LOCK PWR - DRIVER HARN (Driver Side Position Shown) |
| PURPLE | 74341 E-LATCH OEM RELAY HARNESS (located in the front passenger foot well) |
| YELLOW | 74344 E-LOCK CONTROL-CREW HARN |
| GREEN | 74347 E-LOCK TPPR 3SPLT 6.75' |
| BLUE | 74349 E-LOCK TPPR SIDE DOOR HARN |
| ORANGE | 80768 E-LOCK ROLL-UP DOOR REAR HARN |

Platform Specific Posi-Tap Installation Instructions

REMOVE BATTERY NEGATIVE CONNECTION before unplugging connectors from the BCM. Failure to do so may cause error codes to be thrown on the dash that will require an OBD2 tool to clear.

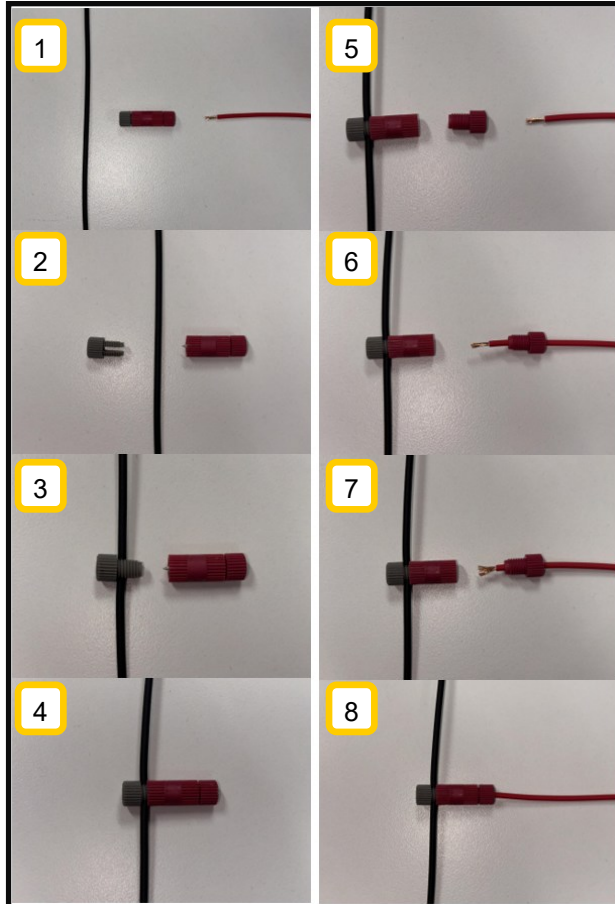

Posi-tap Install instructions:

Remove the gray cap on the Posi-Tap

Push the OEM signal wire into the slot on the gray cap.

Twist the Posi-Tap onto the gray cap with the OEM wire secured in between the two.

The pin point on the Posi-Tap will puncture the OEM wire and obtain the signal.

Remove the red cap on the Posi-Tap and place over the tapping wire with the threads facing towards the end of the wire.

Spread out the copper strands of the tapping wire into a cone-like shape, and insert the strands into the Posi-Tap


Twist the cap back onto the Posi-Tap with the tapping wire secured. Be sure of secure connection.

Note:

In the case all 3 E-Locks are triggering opposite of the OEM locks, start troubleshooting by swapping the tapping wires on the two Posi-Taps and test again.

Relay Module:

Make sure the toggle switch on the relay module is in the position away from the 6 pin connector.

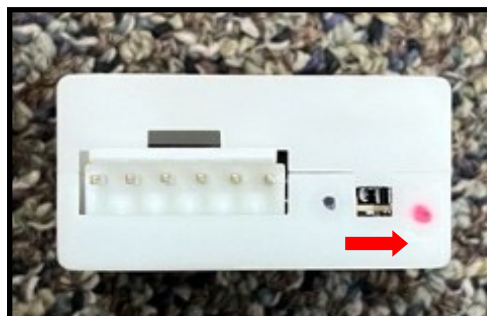

Platform Specific Posi-Tap Installation Instructions

Ford F-150 & Superduty

1. Ensure the battery negative is disconnected before removing any connectors from the BCM.
2. In the front passenger footwell, remove the kick plate and other trim panels around the BCM under the dash.
3. Locate BCM connector C2280C (J3) and disconnect it from the BCM. (Fig 12.1 & 12.2)
4. CAREFULLY cut away the tape wrapped around the OEM wires. (Fig 12.3)
5. Install the Posi-Taps following the instructions on page 11 using harness 74341 tapping wires. (Fig 12.4)

F150

74341 Yellow -> OEM Yellow / Grey Stripe

74341 Purple -> OEM Gray / Brown Stripe





Superduty (F250+)

74341 Yellow -> OEM Yellow

74341 Purple -> OEM Gray

6. Retape the harness around the Posi-Taps to secure the wires as intended by the OEM and plug the connector back into the BCM.
7. Plug the 74533 Relay Module into the 74341 harness 6-pin connector.
8. Secure the harness and relay module to the OEM harnesses. (Fig 12.5)

NOTE: The photos on this page may not reflect the accurate wire colors. Follow the colors listed above.

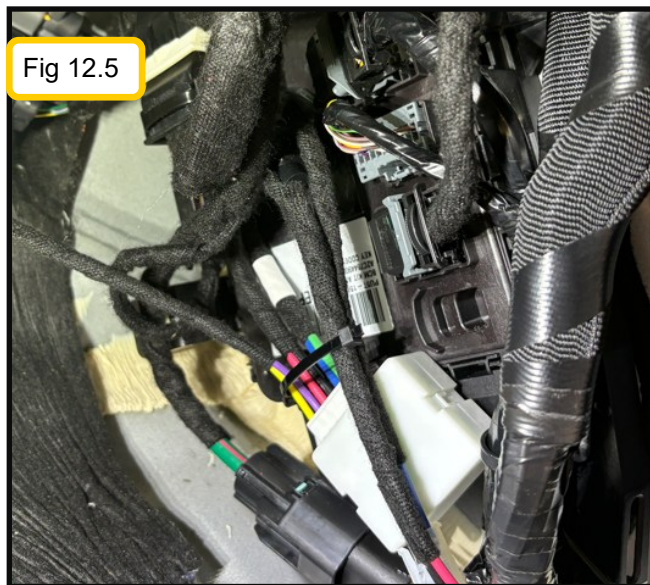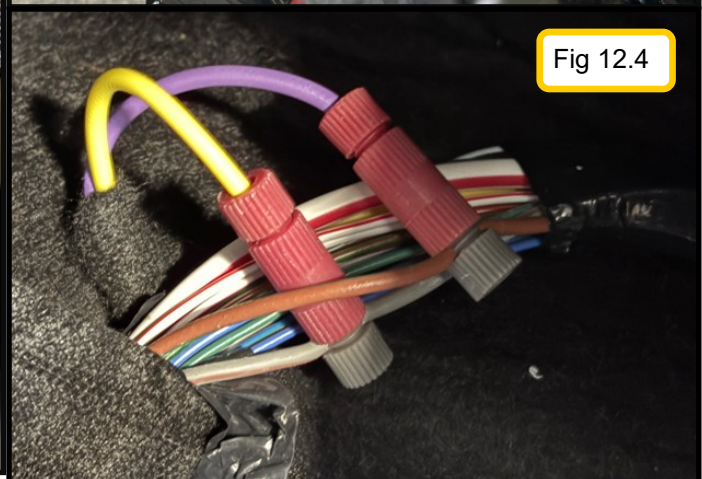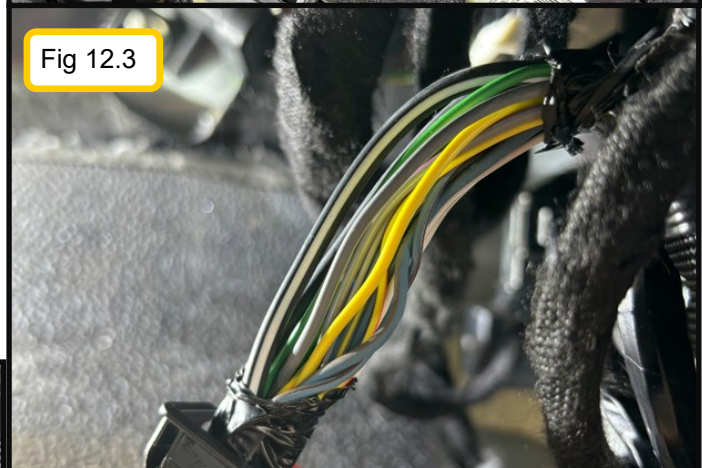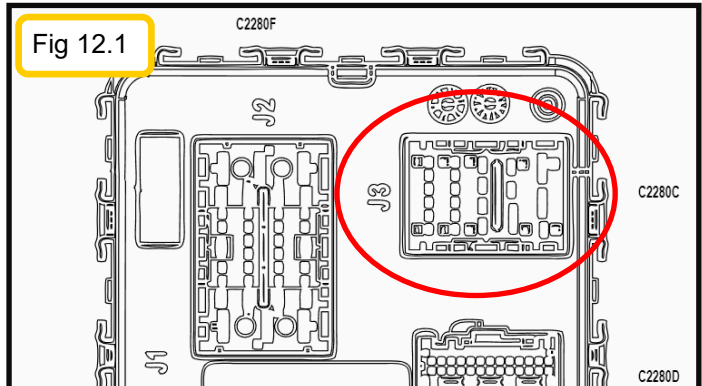

Platform Specific Posi-Tap Installation Instructions

Ford Lightning

1. Ensure the battery negative is disconnected before removing any connectors from the BCM.
2. In the front passenger footwell, remove the kick plate and other trim panels around the BCM under the dash.
3. Locate BCM connector C2280C and disconnect it from the BCM. (Fig 13.1)
4. CAREFULLY cut away the tape wrapped around the OEM wires. (Fig 13.2)
5. Install the Posi-Taps following the instructions on page 11 using harness 74341 tapping wires. (Fig 13.3)

Lightning

74341 Yellow -> OEM Brown / Green Stripe

74341 Purple -> OEM Gray / Brown Stripe

6. Retape the harness around the Posi-Taps to secure the wires as intended by the OEM and plug the connector back into the BCM.
7. Plug the 74533 Relay Module into the 74341 harness 6-pin connector.
8. Secure the harness and relay module to the OEM harnesses.

NOTE: The photos on this page may not reflect the accurate wire colors. Follow the colors listed above.



Platform Specific Posi-Tap Installation Instructions

Ford Maverick

1. Ensure the battery negative is disconnected before removing any connectors from the BCM.
2. In the front passenger footwell, remove the kick plate and other trim panels around the BCM under the dash.
3. Locate BCM connector C2280F and disconnect it from the BCM. (Fig 14.1)
4. CAREFULLY cut away the tape wrapped around the OEM wires.
5. Install the Posi-Taps following the instructions on page 11 using harness 74341 tapping wires. (Fig 14.2)





Maverick ICE & Hybrid

74341 Yellow -> OEM Brown / Green Stripe

74341 Purple -> OEM Gray / Brown Stripe

6. Retape the harness around the Posi-Taps to secure the wires as intended by the OEM and plug the connector back into the BCM.
7. Plug the 74533 Relay Module into the 74341 harness 6-pin connector.
8. Secure the harness and relay module to the OEM harnesses.

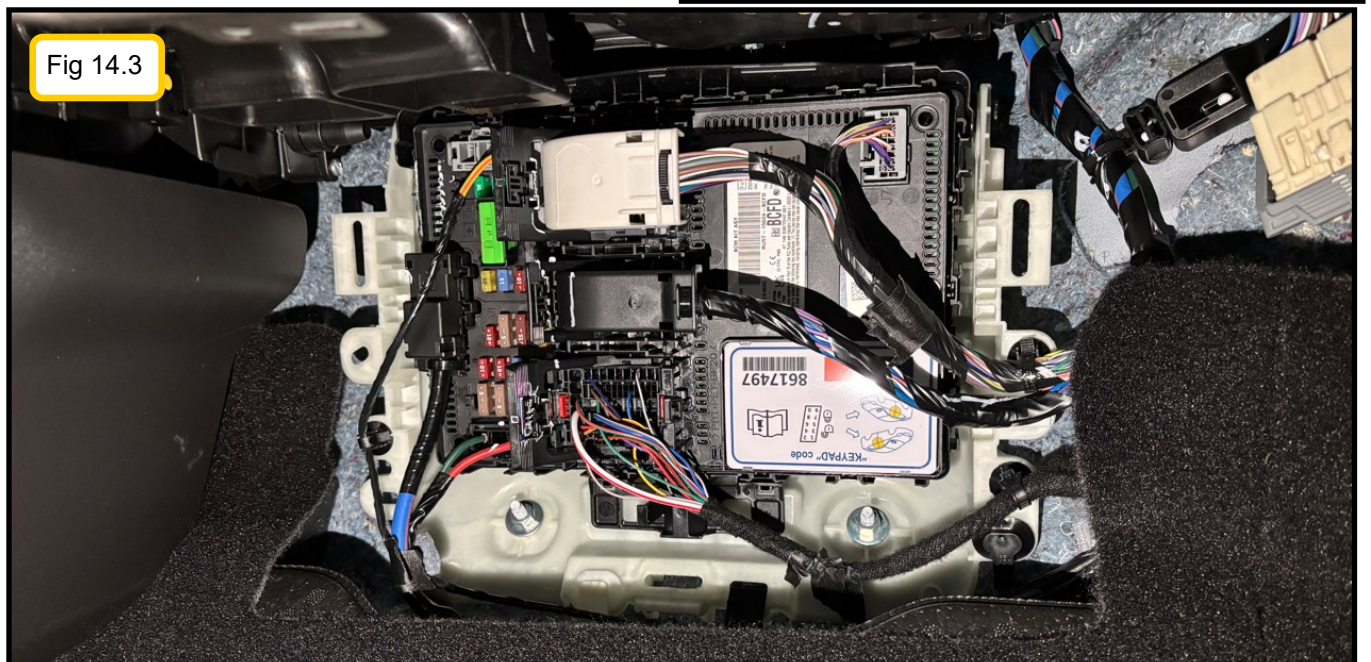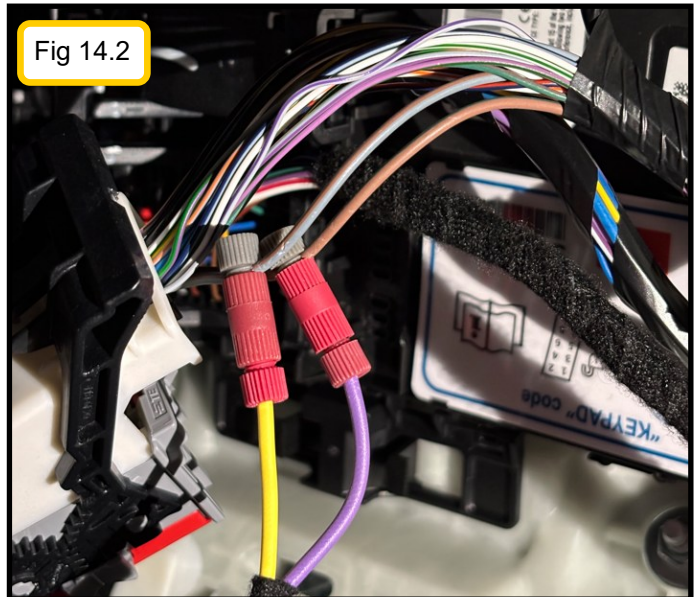

Platform Specific Posi-Tap Installation Instructions

Ford Ranger

1. Ensure the battery negative is disconnected before removing any connectors from the BCM.
2. In the front passenger footwell, remove the kick plate and other trim panels.
3. Locate the fabric tape wrapped harness coming from the black connector that passes through the vehicle wall into the door. (fig 15.2)
4. CAREFULLY cut away the tape wrapped around the OEM wires. (Fig 15.3)
5. Install the Posi-Taps following the instructions on page 11 using harness 74341 tapping wires. (Fig 15.4)

Ranger

74341 Yellow -> OEM Brown / Green Stripe

74341 Purple -> OEM Gray / Brown Stripe

6. Retape the harness around the Posi-Taps to secure the wires as intended by the OEM and plug the connector back into the BCM.
7. Plug the 74533 Relay Module into the 74341 harness 6-pin connector.
8. Secure the harness and relay module to the OEM harnesses.

NOTE: The photos on this page may not reflect the accurate wire colors. Follow the colors listed above.

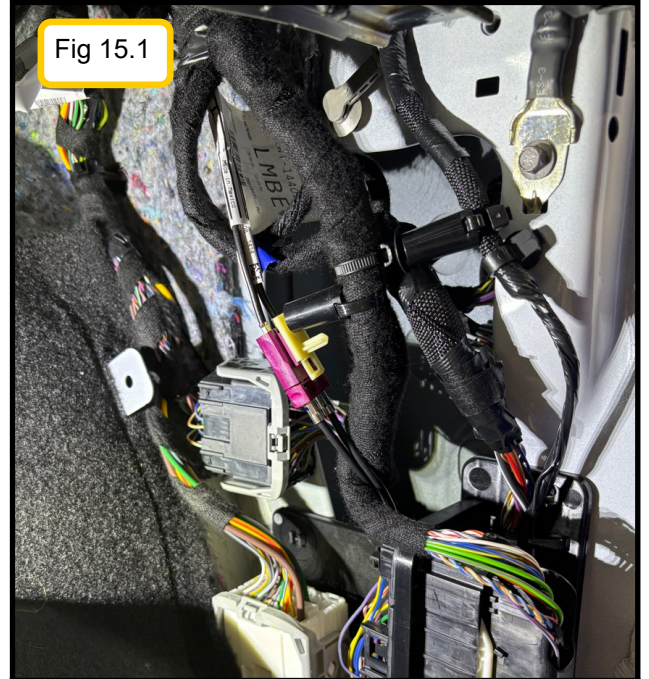


Fig 15.1

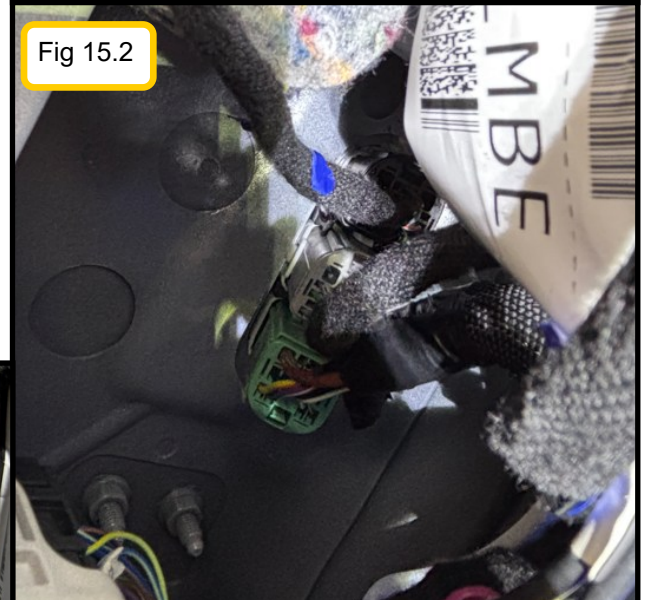


Fig 15.2

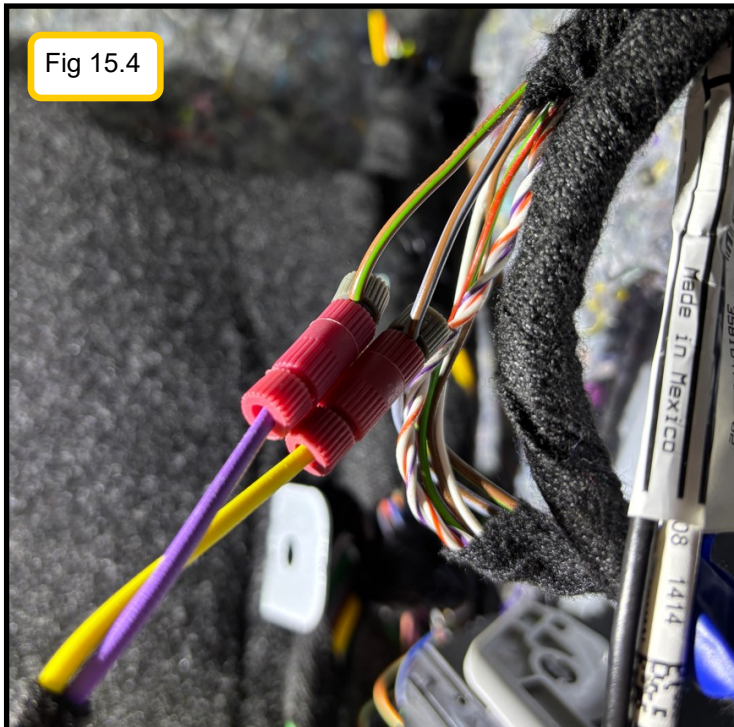


Fig 15.4

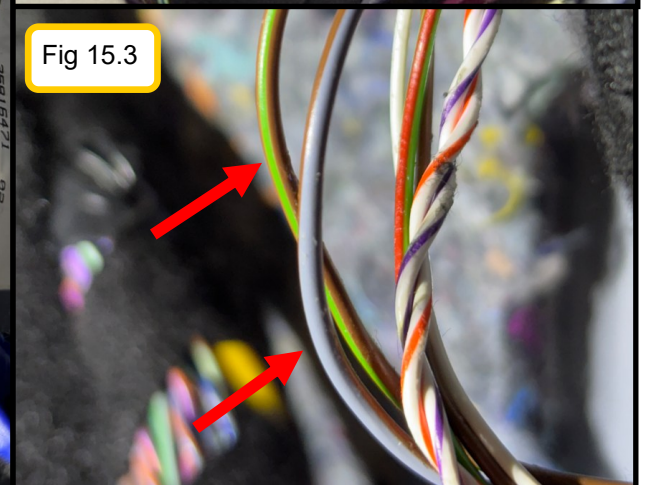


Fig 15.3

Platform Specific Posi-Tap Installation Instructions

RAM 1500 & HD (MY25+)

1. Ensure the battery negative is disconnected before removing any connectors from the BCM.
2. In the front passenger footwell, remove the kick plate and other trim panels under the dash.
3. Locate the OEM harness wrapped in glossy black tape on the side wall of the vehicle. (Fig 16.1)
4. CAREFULLY cut away the tape wrapped around the wires and locate the purple with green stripe wire and the green with gray stripe wire. (Fig 16.2)
5. Install the Posi-Taps following the instructions on page 11 using harness 74341 tapping wires. (Fig 16.3)

RAM

74341 Yellow -> OEM Beige W/ White Stripe
74341 Purple -> OEM Green W/ Violet Stripe

6. Retape the harness around the Posi-Taps to secure the wires as intended by the OEM and plug the connector back into the BCM.
7. Plug the 74533 Relay Module into the 74341 harness 6-pin connector.
8. Secure the harness and relay module to the OEM harnesses.

NOTE: The photos on this page may not reflect the accurate wire colors. Follow the colors listed above.

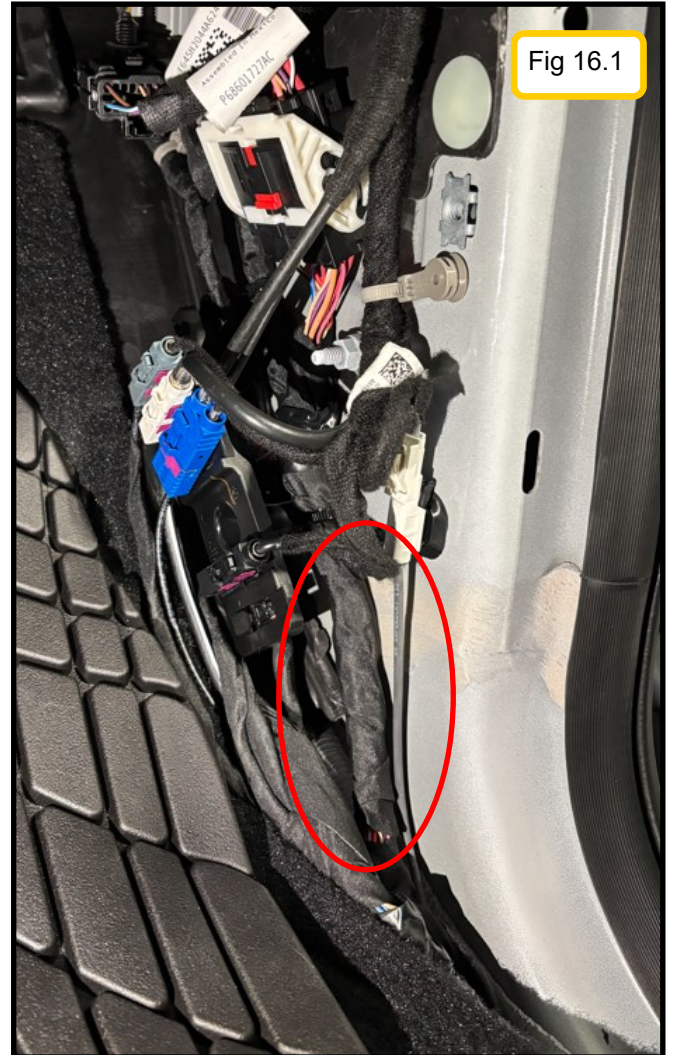


Fig 16.1



Fig 16.3

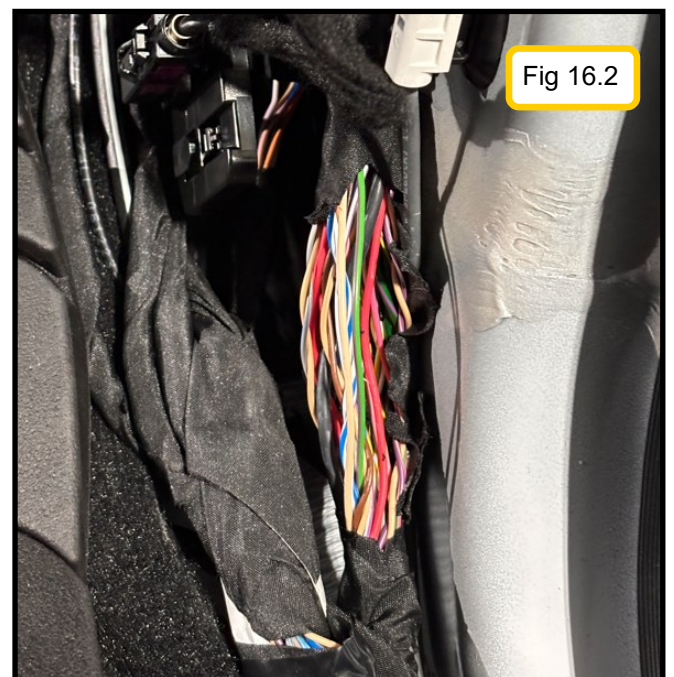


Fig 16.2

Platform Specific Posi-Tap Installation Instructions

Chevy Colorado

1. Ensure the battery negative is disconnected before removing any connectors from the BCM.
2. In the front passenger footwell, remove the kick plate and other trim panels.
3. Locate the Tesa tape wrapped harness that leads to the door connector. It will be leading behind the fuse block into the cavity.
4. CAREFULLY cut away the tape wrapped around the OEM wires. (Fig 17.1)
5. Install the Posi-Taps following the instructions on page 11 using harness 74341 tapping wires. (Fig 17.2)

Colorado

74341 Yellow -> OEM Gray / Black Stripe
74341 Purple -> OEM Yellow / Green Stripe

6. Retape the harness around the Posi-Taps to secure the wires as intended by the OEM.
7. Plug the 74533 Relay Module into the 74341 harness 6-pin connector.
8. Secure the harness and relay module to the OEM harnesses using the included zip ties.

NOTE: The photos on this page may not reflect the accurate wire colors. Follow the colors listed above.



Fig 17.1



Fig 17.2

Platform Specific Posi-Tap Installation Instructions

Chevy Silverado ICE and Hybrid 1500-3500




1. Ensure the battery negative is disconnected before removing any connectors from the BCM.
2. Silverado is different from all other platforms. The BCM is located behind the driver's side knee bolster. From underneath, there are two rows of colorful connectors. The one closest to driver's side wall of the vehicle is the BCM.
3. Disconnect connectors x8 (grey), and x6 (tan) by pulling the small tab down, and pressing the release in. (fig 18.1 & 18.2)
4. Install the Posi-Taps following the instructions on page 11 using harness 74341 tapping wires. (Fig 18.3)

Silverado

74341 Yellow -> OEM X6 Gray / Black Stripe
74341 Purple -> OEM X8 Yellow / Green Stripe

6. Plug the connectors back into the BCM.
7. Plug the 74533 Relay Module into the 74341 harness 6-pin connector.
8. Secure the harness and relay module to the OEM harnesses.

NOTE: The photos on this page may not reflect the accurate wire colors. Follow the colors listed above.

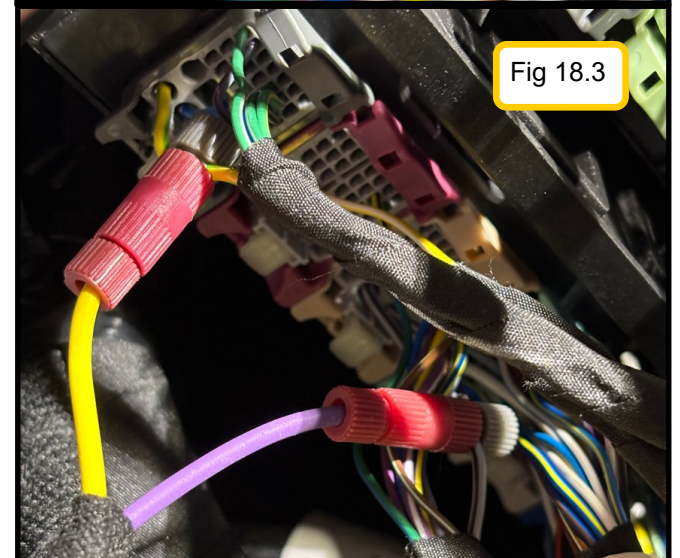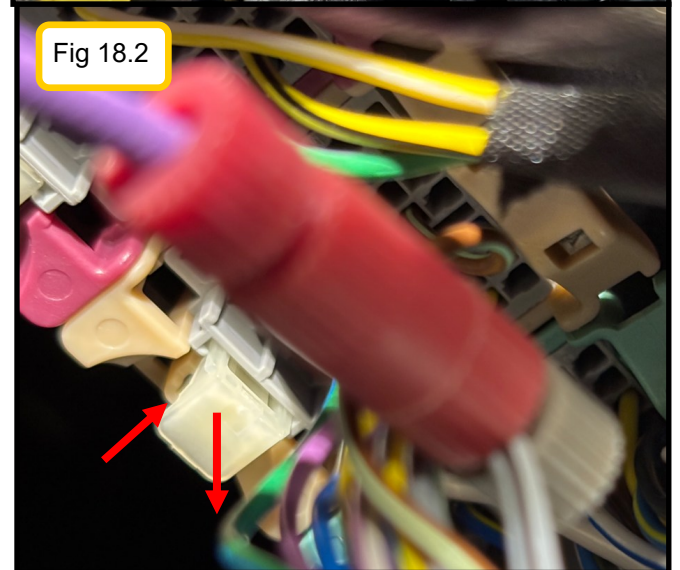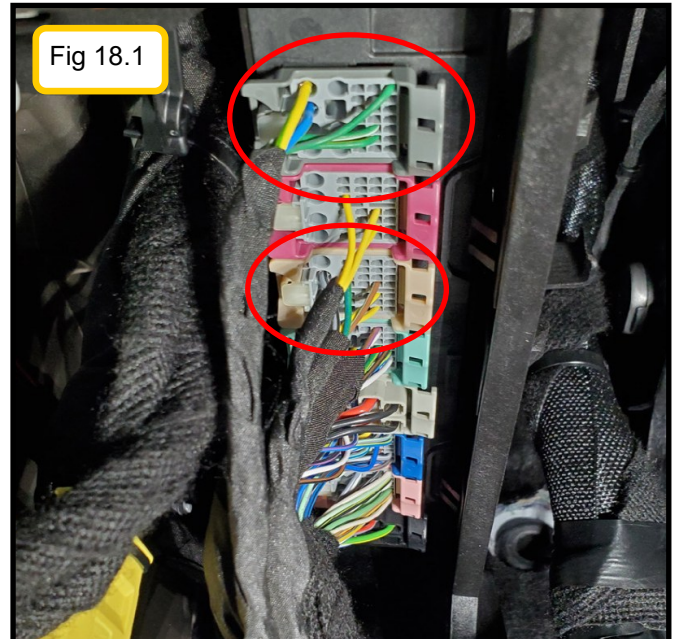

Platform Specific Posi-Tap Installation Instructions

Chevy Silverado EV

1. Remove the lower trim panel and pull back the flooring to reveal the OEM body wire harness. (Fig 19.1)
2. CAREFULLY cut away the tape wrapping around the harness. (Fig 19.2)
3. Locate the grey with black stripe and yellow with green stripe wires in this bundle. (Fig 19.3)
4. Install the Posi-Taps following the instructions on page 11 using harness 74341 tapping wires. (Fig 19.3)

Silverado EV

74341 Yellow -> Gray / Black Stripe
74341 Purple -> Yellow / Green Stripe

7. Plug the 74533 Relay Module into the 74341 harness 6-pin connector.
8. Secure the harness and relay module to the OEM harnesses.

NOTE: The photos on this page may not reflect the accurate wire colors. Follow the colors listed above.

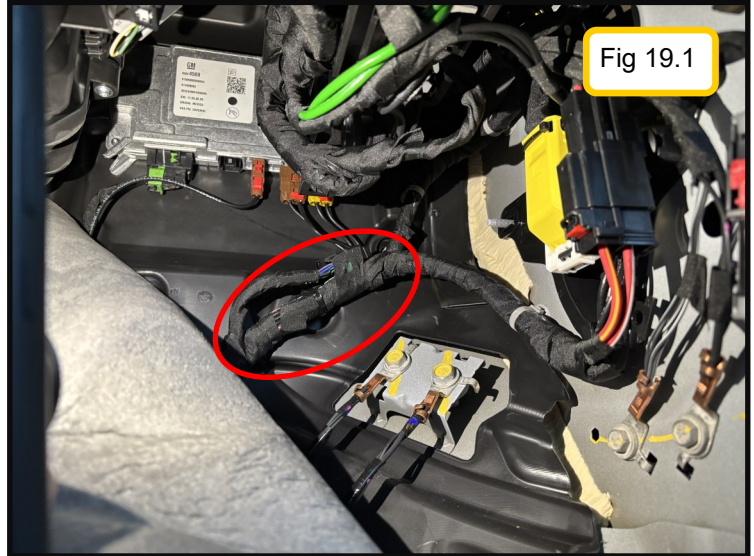


Fig 19.1

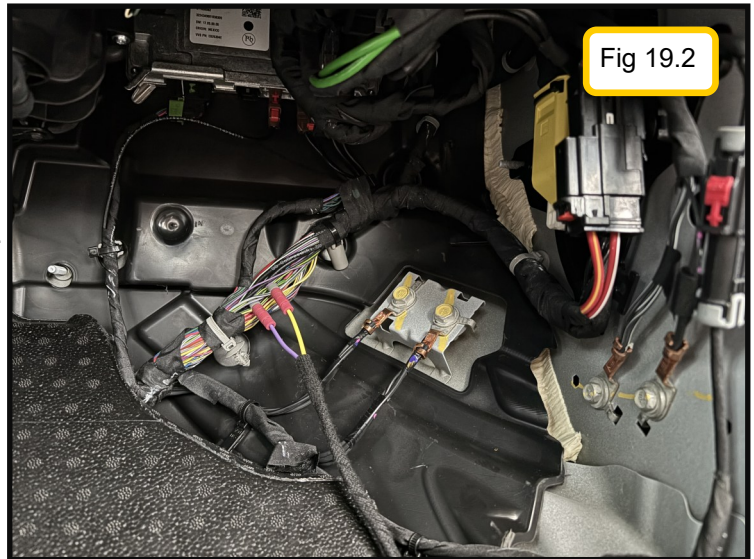


Fig 19.2

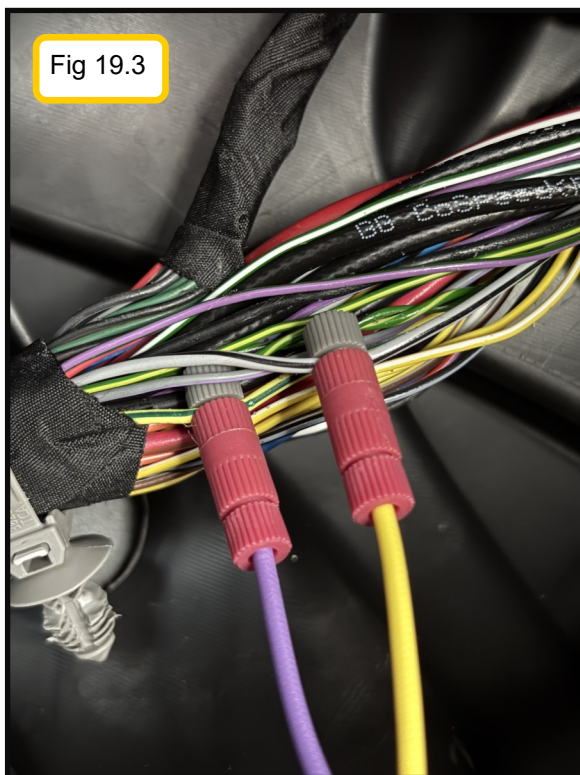


Fig 19.3

Platform Specific Posi-Tap Installation Instructions



Nissan Frontier

1. Ensure the battery negative is disconnected before removing any connectors.
2. In the front passenger footwell, remove the kick plate and other trim panels.
3. Locate connector M36 and unplug it. (Fig 20.1)
4. Remove the connector cover by pulling the cover away from the tabs (blue circles in fig 20.2)
5. Locate the pink and yellow wires in positions 55 and 56 in the connector (red circle in fig 20.2)
6. Install the Posi-Taps following the instructions on page 11 using harness 74341 tapping wires. (Fig 20.3)

Frontier

74341 Yellow -> OEM Pink
74341 Purple -> OEM Yellow

7. Fasten the cover back on the connector and plug in the connector. (fig 20.4)
8. Plug the 74533 Relay Module into the 74341 harness 6-pin connector.
9. Secure the harness and relay module to the OEM harnesses.

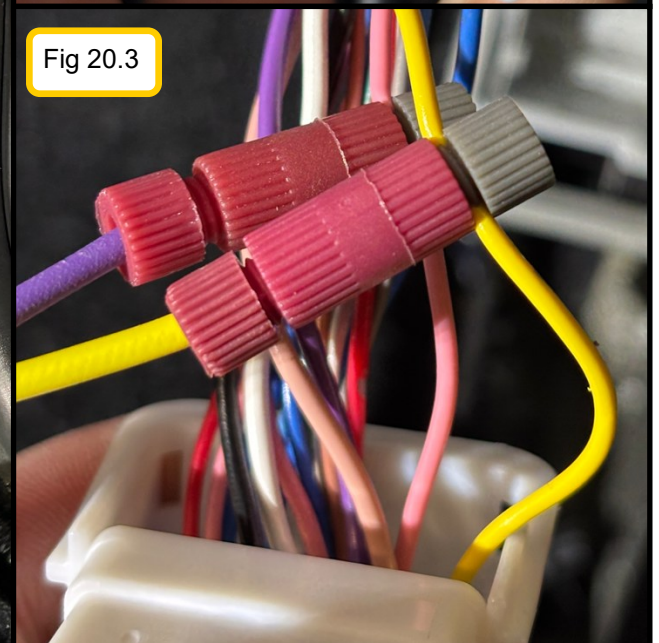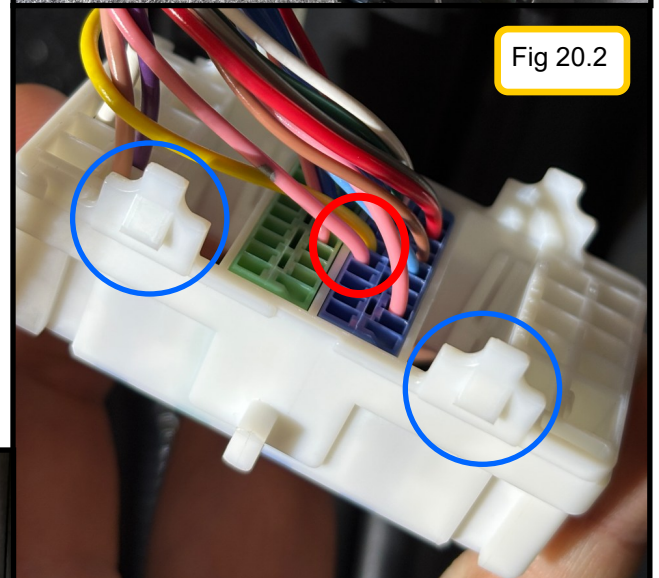

Battery Harness Install Instructions



Figure 21.1

Option 1: Passenger-Side Battery

Step 1:

Locate 74343 E-LOCK PWR - PASS HARN

Remove the fuse from the inline fuse holder until the end of the install.

Locate the OEM battery terminals under the hood. In some cases, the negative terminal is not available and a nearby ground stud will be used instead.

Step 2:

Attach the red wire with the ring terminal to the battery positive post or a post of proper size in the power distribution block.

Attach the black wire with the ring terminal to either the negative terminal of the battery, or a nearby ground stud on the chassis of the vehicle.

WARNING: DO NOT USE THE BATTERY CLAMP NUTS TO SECURE HARNESS

Torque the battery terminals to 8 Nm.

Step 3:

Route the power harness over to the rear passenger-side corner of the engine bay, and secure the power harness to OEM harnessing to strain relief the terminals.

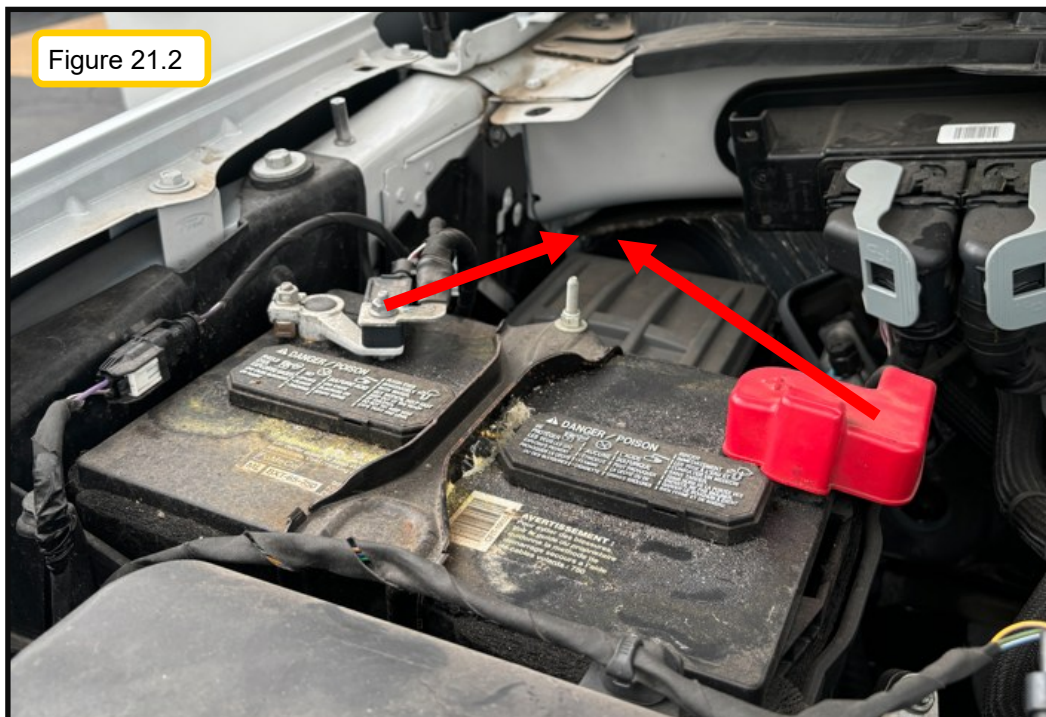


Figure 21.2

Figure 22.1


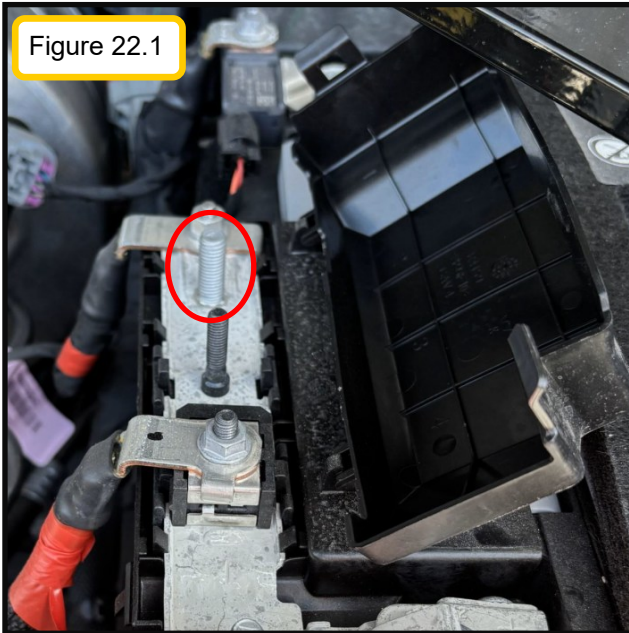


Figure 22.2



Figure 22.3

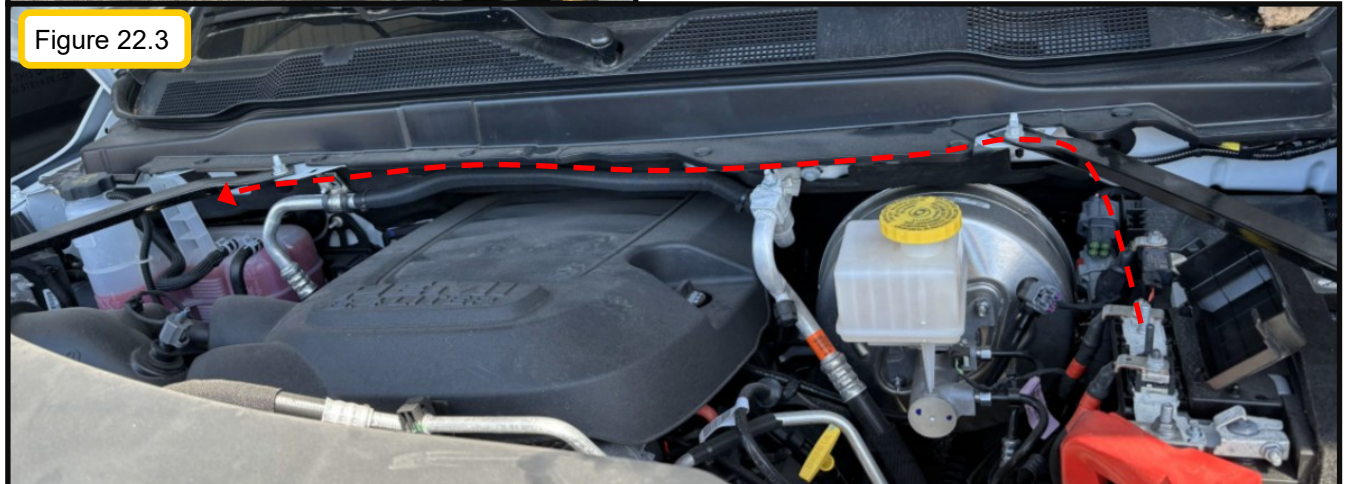

Option 2: Driver-Side or Centered Battery Silverado Passenger-Side Battery

Step 4:

Locate 74342 E-LOCK PWR - DRIVER HARN

Remove the fuse from the inline fuse holder until the end of the install.

Locate the OEM battery terminals under the hood. In some cases, the negative terminal is not available and a nearby ground stud will be used instead.

Step 5:

Attach the red wire with the ring terminal to the battery positive post or a post of proper size in the power distribution block.

Attach the black wire with the ring terminal to either the negative terminal of the battery, or a nearby ground stud on the chassis of the vehicle if the negative battery terminal is not available.

WARNING: DO NOT USE THE BATTERY CLAMP NUTs TO SECURE HARNESS

Torque the battery terminals to 8 Nm.

Step 6:

Route the power harness over to the passenger side of the vehicle, securing to nearby OEM harnessing whenever possible along the liner below the front windshield.

Figure 23.1



Figure 23.2



Step 7:

Route the harness down and around the front passenger-side wheel well so that it emerges under the front passenger footwell floor. (fig 23.1)

Step 8:

With the trim panels removed from installing the Posi-Taps and Relay Module, lift the carpeting and locate the OEM rubber or plastic grommet in the floor of the front passenger footwell. (fig 23.2)

If the OEM grommet is rubber, cut two 3/4" slits.

If the OEM grommet is plastic, drill a 3/4" hole in the grommet.

If an OEM grommet is not available, drill a 1" hole in a flat section of the floor as close to the Posi-Tap location as possible. (fig 23.3)

Insert the grommet included with the 74341 harness into the hole to prevent damage to the harnesses. (fig 23.4)

Step 9:

Route the power harness up through the grommet. (fig 23.2)

Figure 23.3



Figure 23.4





Maverick Hybrid Specific Routing Steps

Step 10:

Locate 74343 E-LOCK PWR - PASSENGER HARN

Remove the fuse from the inline fuse holder until the end of the install.

Locate the OEM battery under the rear seat.

Step 11:

Remove the positive terminal with the bus bar from the battery by loosening the clamp fastener. (Fig 24.1)

Step 12:

Attach the positive wire (with the in-line fuse) to the bus bar. (Fig 24.2)

Step 13:

Attach the negative wire with the ring terminal to the ground stud next to the battery. (Fig 24.3)

WARNING: DO NOT USE THE BATTERY CLAMP NUTs TO SECURE HARNESS

Step 14:

Reinstall the battery positive terminal.

Torque the battery clamp fastener to 5.2Nm, the bus bar locknut to 10Nm, and the ground fastener to 35Nm.

Step 15:

Route the power harness under the trim and kick panels to the front passenger foot well where the Relay Module 74533 is connected to the BCM harness.

Chevy Silverado EV Specific Routing Steps

Step 16.

When routing the battery harness down the footwell behind the liner, pass it through the space between the outer body panel and the chassis. (Fig 25.1)



Figure 25.1

Step 17.

Locate the small circular grommet a few inches above the lower passenger door hinge. Remove that grommet, cut a hole in it, and feed the battery harness through the hole and grommet into the passenger foot well. Reinstall the grommet and use silicone to seal the hole. (Fig 25.2)



Figure 25.2

Body Harness Install Instructions

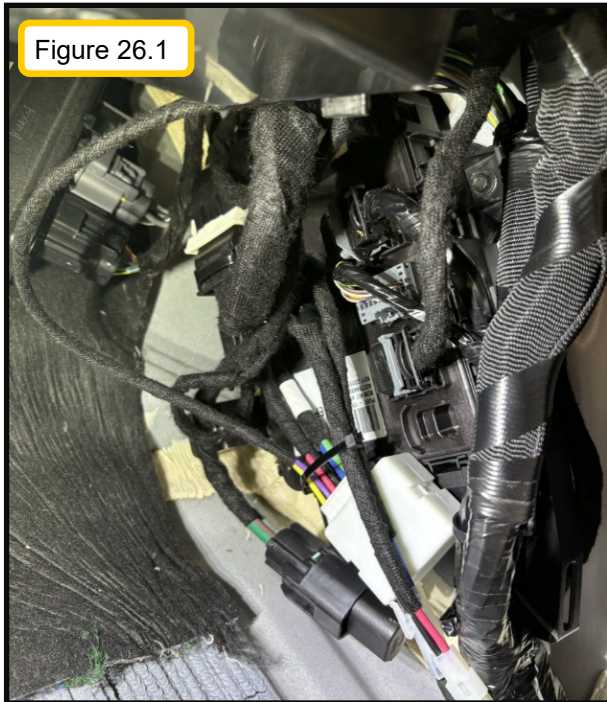


Figure 26.1

Step 1:

Plug the power harness (74342 or 74343) into its mating connector on the OEM Relay Harness 74341, and plug the control harness (74344 or 74345) into its mating connector on the OEM Relay Harness 74341. See Figure 3.1 for reference.

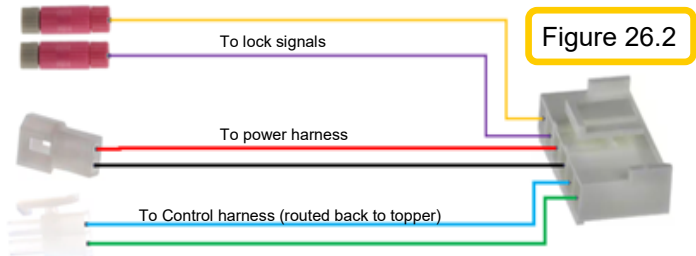


Figure 26.2

Tuck the Relay Module and attached harnessing behind the wires under the dash. Use zip ties to secure the Relay Module and connectors to the OEM harnesses at least 10cm above the floor of the vehicle.

Step 2:

Route the E-lock control harness back under where the passenger kick plate will be, then down the same grommet that the power harness came up. (Fig 26.3 and 26.4) (this will be the only harness on Maverick HYB).

Step 3:

Secure the harnesses to OEM harnesses with zip ties and seal the grommet gaps with silicone.



Figure 26.3

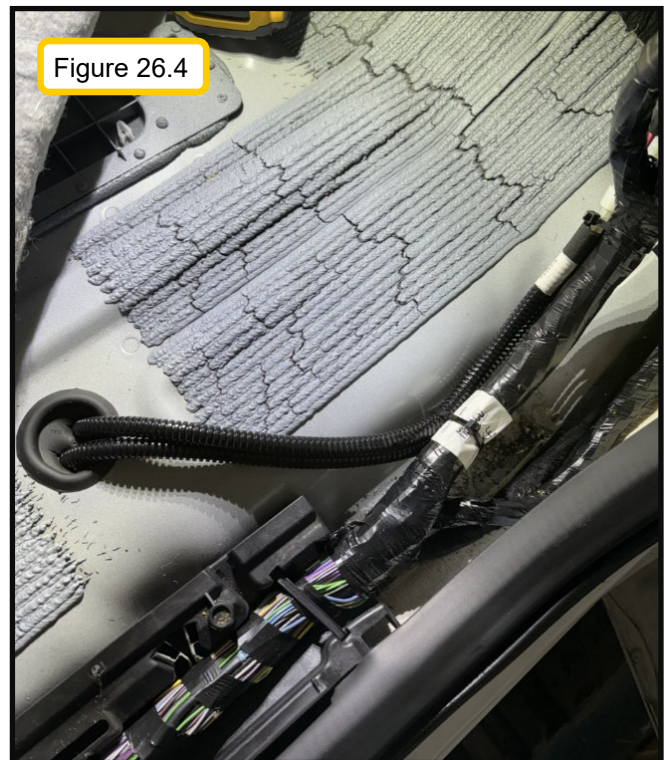


Figure 26.4



Figure 27.1

Step 9:

Using the P-clips and self tapping screws provided in the power harness bag, secure the excess power harness under the vehicle as shown. Use a zip tie to tie up the excess so it does not hang down.



Figure 27.2

Step 10:

Route the control harness along the length of the cab towards the bed. Use the P-clips and self tapping screws provided in the harness bag to secure the harness as shown. Continue backwards until reaching the gap between the cab and bed of the vehicle. (fig 27.2 and 27.3)



Figure 27.3

Step 11:

In the front passenger-side corner of the bed, locate the OEM hole (there may be a grommet) and feed the fish tape down through the side wall of the bed. Locate the end of the fish tape below the vehicle as shown in Fig 27.4 and tape the end of the control harness to the fish tape. Pull the harness up through the side wall of the bed and out the OEM hole as shown in Fig 27.6.

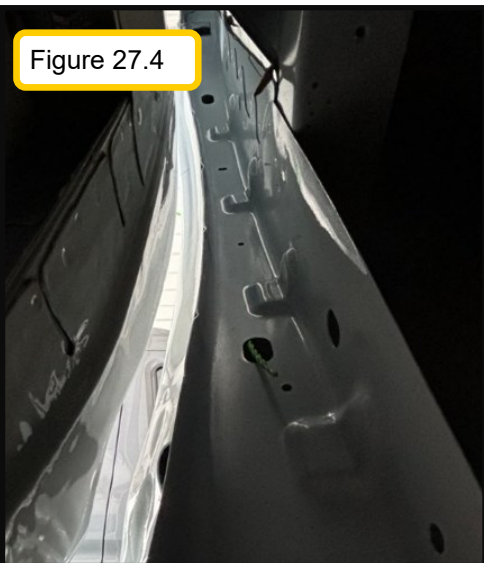


Figure 27.4

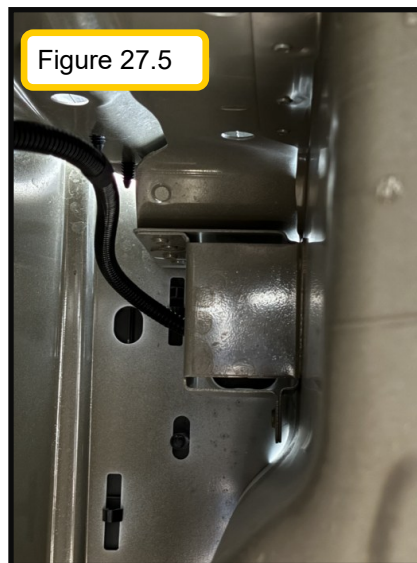


Figure 27.5



Figure 27.6

Chevy Silverado EV Specific Routing Steps

Step 12.

Route the body harness along the passenger side kick panels to behind the back seat. There you will find a grommet with an OEM harness running into it.

Step 13.

Unscrew the felt coverings in the passenger footwell. Locate the other end of the grommet protruding out of the cab. Unwrap the end of the grommet shown in Fig 28.3 and push the harness through the grommet from the cab side.

Step 14.

Use fish tape to route the harness up through the OEM hole shown in Fig 28.4



Adrian Cap Harness Install Instructions

1. Grab the 3-Split Harness (74346, 74347, or 74348) included in this kit. (Green in Figure 29.2)

2. Plug the 3-split section of harness into the control harness, and continue routing up the topper. Use the stud mount zip ties to secure the control harness to the screw threads inside the topper frame.



3. Once at the top, the harness will split three ways. (red line shows the part before the harness splits). (Fig 29.1)

4. The shortest end of the 3-split harness will connect directly to the passenger door harness (blue line).

5. Use tree cable ties to route the longest end of the 3-split harness to the rear door, going along the black topper support as shown to the right (yellow line) (Fig 29.4).

6. Use tree cable ties to route the remaining end of the harness to the driver's side door by going across the topper crossbeam closest top the cab (Figure 29.3).

NOTE: The rear door will have conflict with the magnet brackets, use the available pre-drilled holes to secure the harness.

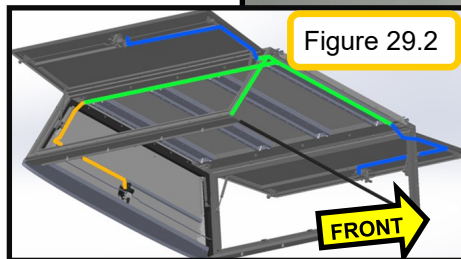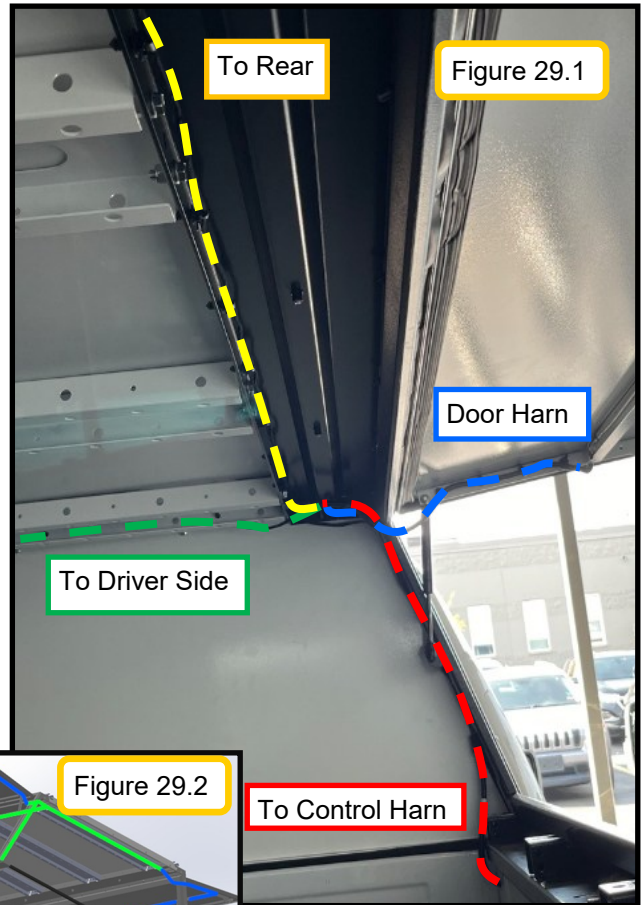


Adrian Cap Harness Install Instructions

Silverado - Specific Steps

For Adrian Caps with hatch rear doors, Silverado E-Lock kits (TELH) will route through the cap mirrored to the rest of the vehicles. The control harness will come up the front, driver- side topper pillar, and the routing will go across the topper to the passenger side door, and to the rear door on the driver side.

For Adrian Caps with barn / walk-in doors, Silverado ICE and Hybrid E-Lock kits (TELB) will utilize an additional harness, 77195 Adrian Cap E-Lock Extension Harness, to connect between the control harness and the 3-split harness as shown in the overall harness diagram on page 3. Follow the instructions below for installing this additional harness.

Connect the extension harness between the control harness and the 3-split harness (red circles). Route the harness as shown below (red arrows) and use the included stud-mount zip ties to anchor the harness up the pillar like the 3-split harness does normally. Route the 3-split harness like normal (blue arrows) back from the front top passenger-side corner of the topper (blue circle).

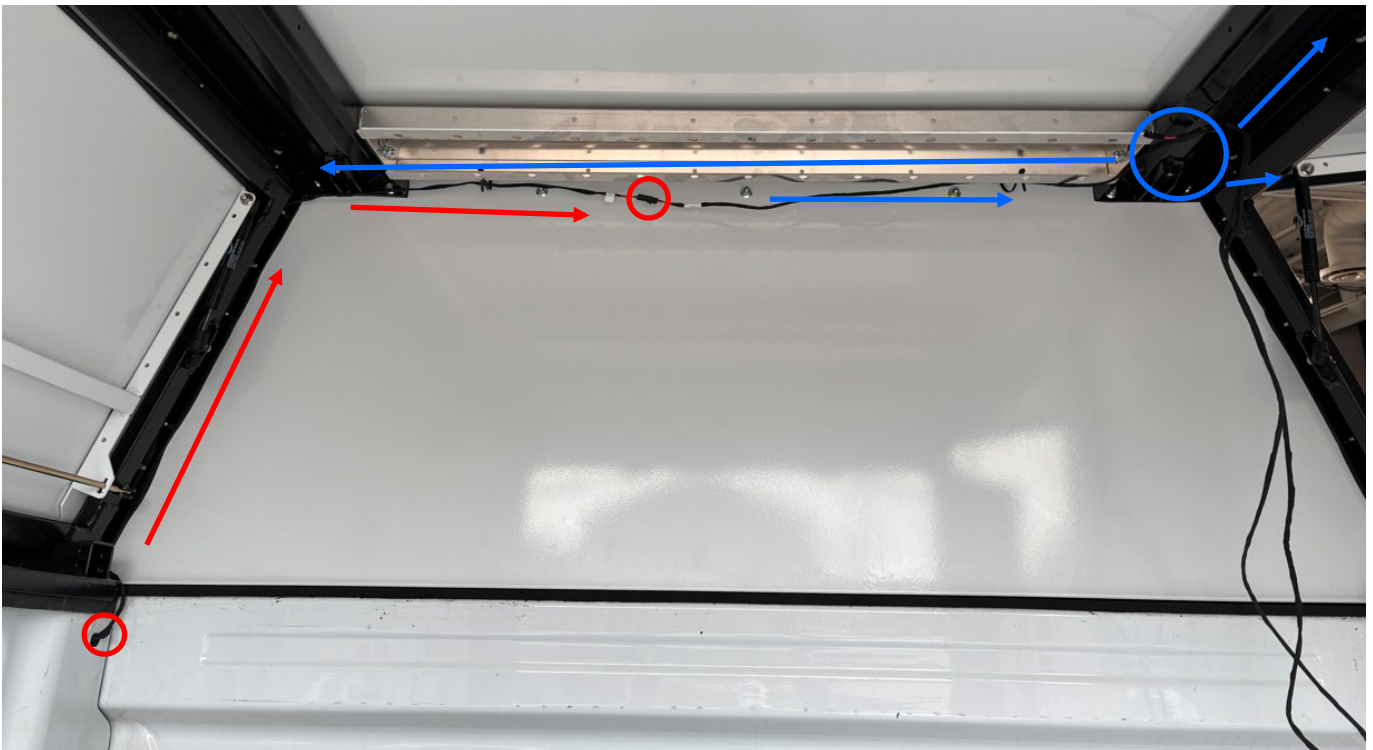

7. Before routing the door harnesses and with the locks removed, ensure the routing hole in the tube is 5/8". If it is not, use a 5/8" drill bit to widen out the hole. This only needs to be done on the hole the harness will be routed through. Use a deburring tool to clean up the edges. (Fig 31.1)





8. On each door, route the respective harness through the beam's opening on its left/right sides (depends on the door). (Fig 31.5)

9. Feed the harnessing through until the connector end reaches the first pre-drilled hole in the beam. (Fig 31.2)

10. Using picks or a small screwdriver, maneuver the connector through the hole so it comes out next to the lock. (Figure 31.3 & 31.4)

NOTE: Since the hole is on both sides of the tube, try to push on the connector from the outside of the hole, while using pick tools at the connector to wedge it out.

WARNING: These connectors are small, so they can be delicate. Take care to use minimal force when manipulating them through the hole.

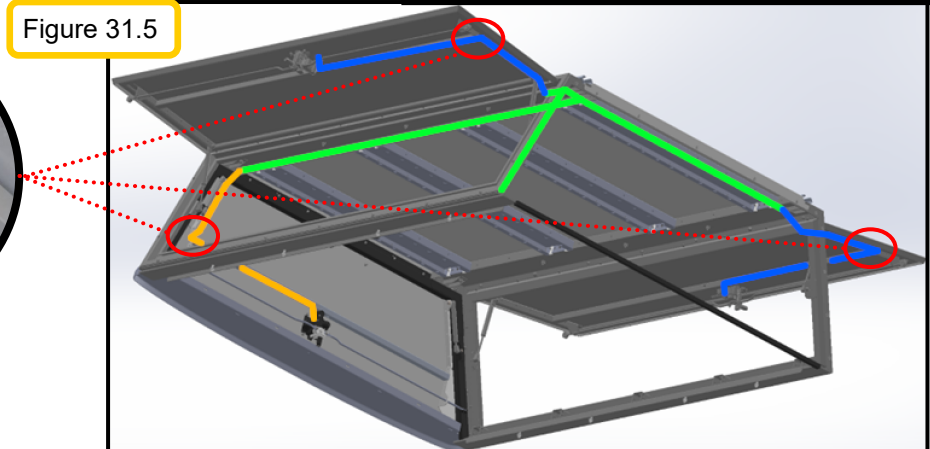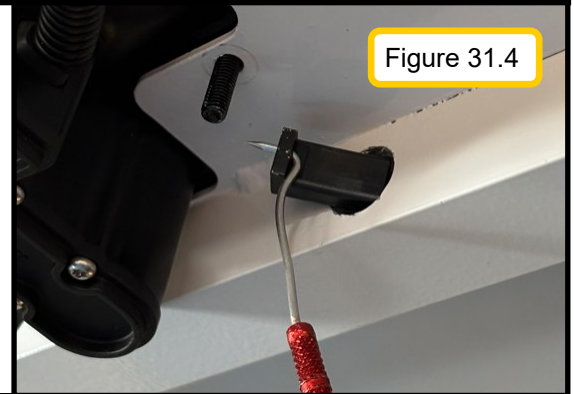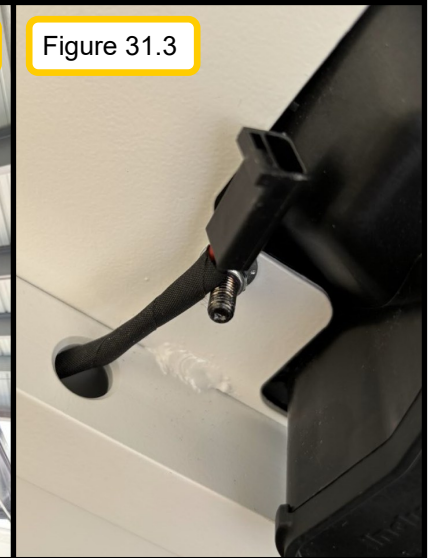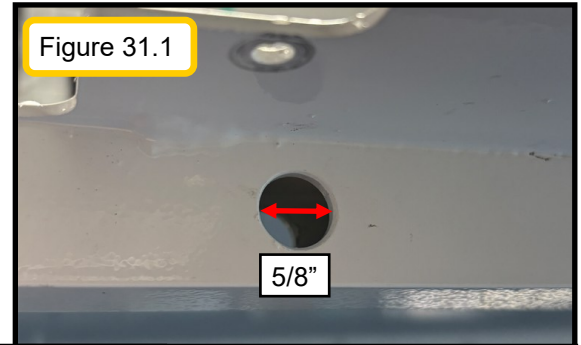

11. Install the E-locks using [4] 8mm nuts (FAS0917), add the P-clip included in the door harness bag to the lock harness as shown in fig 32.2, and secure the locking rods themselves using [2] 10mm nuts (FAS0918). (Fig 32.1)

****TORQUE ALL NUTS TO 2.2Nm****

12. Plug in the E-Lock harness into the door harness and guide the connectors through the hole back into the tube until the grommet is able to be stuck into the hole.

NOTE: Try pulling gently on the other end of the door harness to pull the connectors back into the tube.

NOTE: The wires going into both connectors may not match, but as long as the connectors lock together that is the important part

WARNING: These connectors are small, so they can be delicate. Take care to use minimal force when manipulating them through the hole.

13. The grommet is designed to be squished into place. Use a small dull screwdriver or plastic blade to press the angled piece of the blade through the hole, leaving the larger section outside the tube. (Fig 32.2)

14. Stuff the other end of the door harness into the tube up to the grommet. (Fig 32.3)

15. Secure the harness up the door with Christmas tree zip ties along the inside of the door shock. (Fig 32.4 & 32.5)

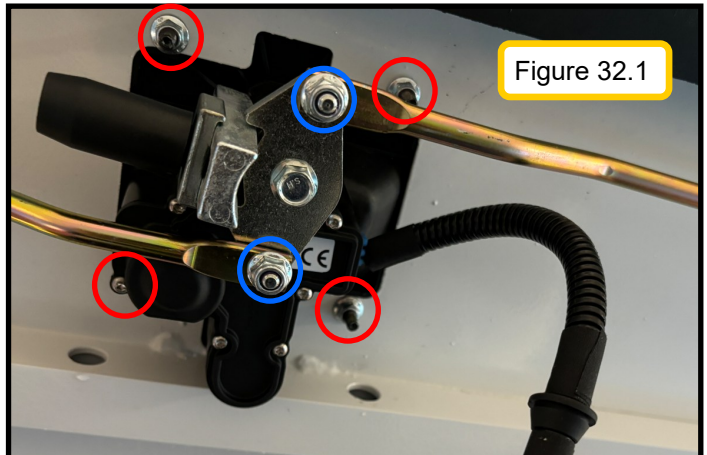


Figure 32.1

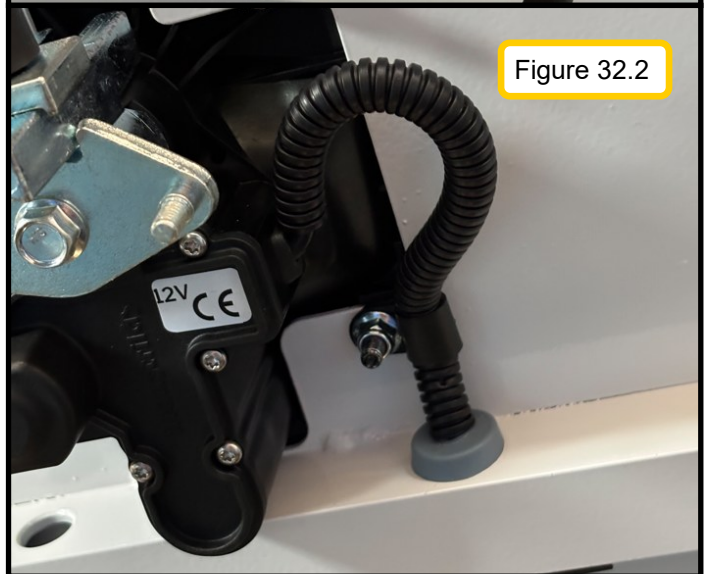


Figure 32.2


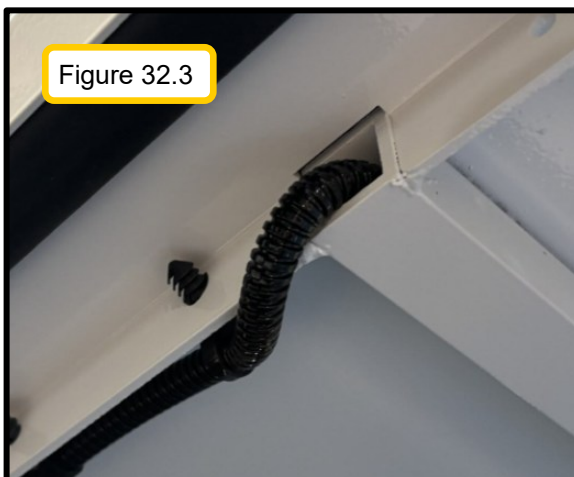


Figure 32.3

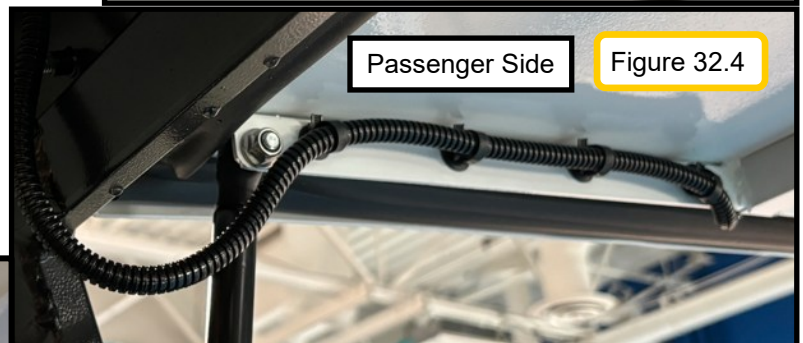

Passenger Side

Figure 32.4

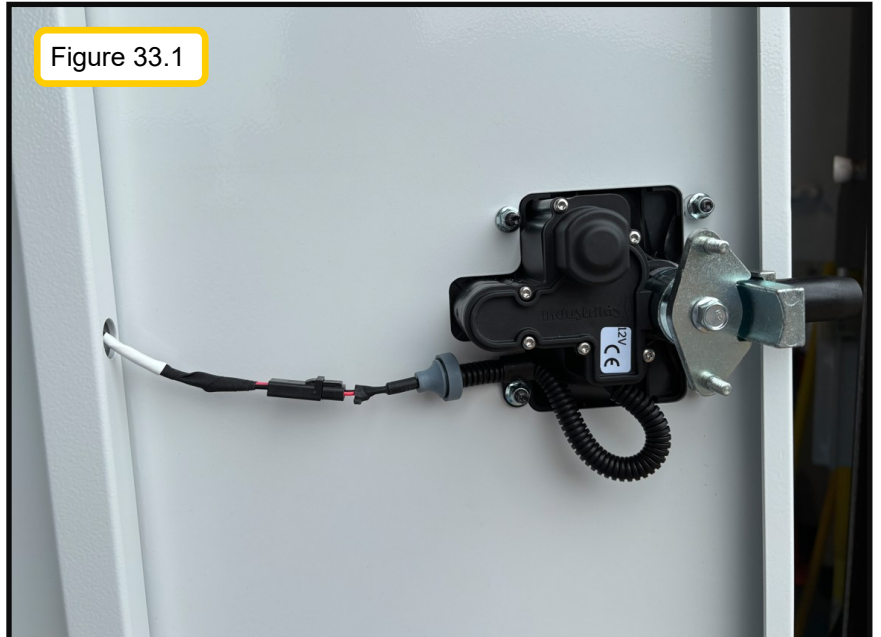


Figure 32.5

Driver Side

16. If the Adrian Cap has the barn door / walk-in topper, install the rear lock as shown. Use the P-clip in the same way as the side doors, and secure the E-Lock harness to the lower left lock mounting stud. (fig 33.1)

Figure 33.1



17. Route the rear door harness behind the shock, along the upper rail, and down into the square tube similar to the hatch door routing. (fig 33.2 & 33.3)

Figure 33.2



Figure 33.3



18. Plug the door harness into the 3-Split harness and use a stud-mount style zip tie included in the harness bag to secure the harness to the inside of the topper. Make sure to keep enough slack in the door harness so there's at least 1" free hanging clearance between the topper frame and the harness. (Fig 34.1 & 34.2)

19. Once all three locks and door harnesses are installed, test functionality of the locks. Open the handles on the locks and notice the small metal T-shaped pin underneath.

- Lock the vehicle, and the metal pin on each lock should turn 90 degrees into the horizontal position.

- Unlocking the vehicle should return the pin to its original vertical orientation.



- If the pins don't turn, or turn opposite of where they should, refer to pg. 11 for troubleshooting notes.

20. Secure any loose wiring under kick plates and behind the knee bolsters.

21. Secure any excess underbody wiring using zip ties. (Fig 27.1—27.3)

22. Reinstall the trim panels and clean up the vehicle.

INSTALL COMPLETE

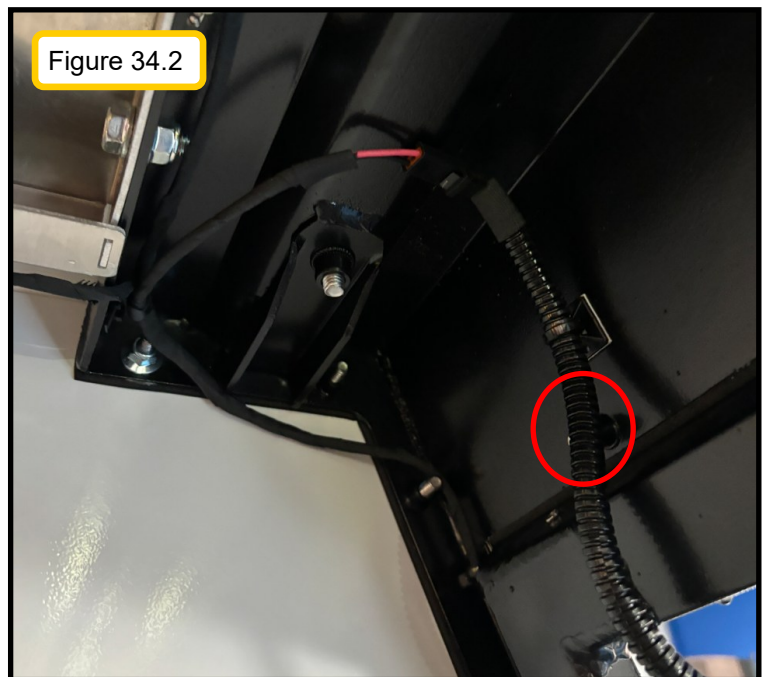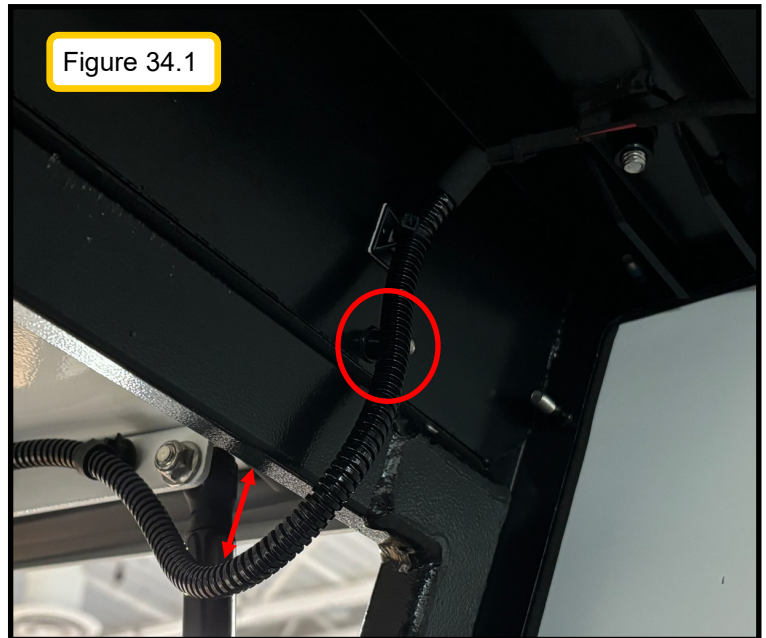

Roll-up Door Topper Only

Connect the 80678 E-Lock Roll-up Door Harness to the 3 Split Harness at the rear of the Topper by the Roll-up Door. Figure 35.1

Route the shorter leg of the harness straight down to be connected to the E-lock via butt-splice connectors.

Route the longer leg over and across the Roll-up Door then down the other side to be connected to the E-lock via butt-splice connectors. Figure 35.2

80678		E-Lock
RED	→	YELLOW
BLACK	→	RED

You may need to coil up extra harness as shown in Figure 35.3

Ensure butt-spliced are heated to be sealed.

Using the provided key for the Roll-up Door, ensure that the lock is in the position shown in Figure 35.4.

IF KEY IS NOT TURNED TO PROPER POSITION E-LOCKS WILL NOT LATCH

INSTALL COMPLETE

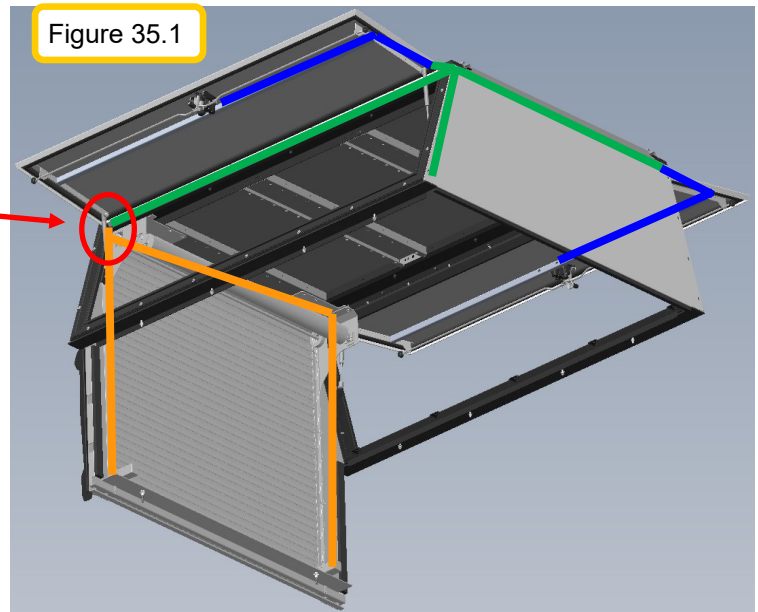


Figure 35.1

Figure 35.2

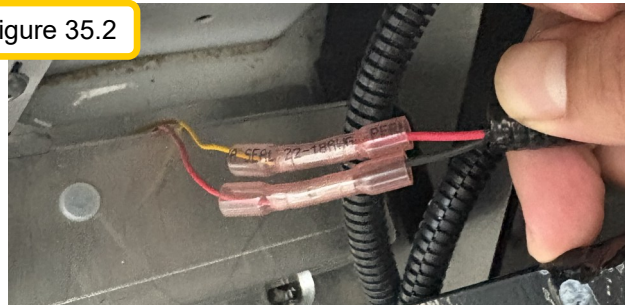


Figure 35.3



Figure 35.4



**Horizontal Position:
CORRECT**

