


CATALOG NUMBER

TELH02

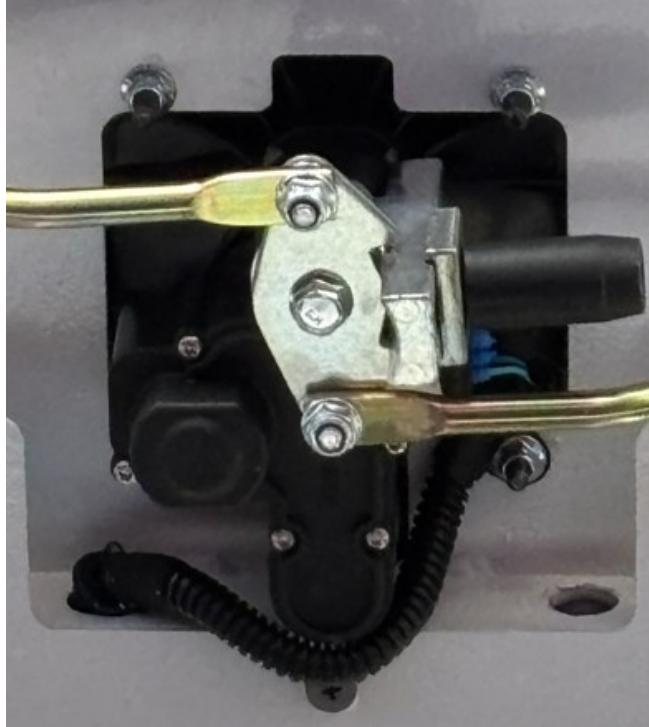

Vehicle Model	Bed Length	Cab Size	Battery Location	Compatible Topper
RAM 1500 (MY25+)	6.3	Crew	Driver	Hatch / Barn
RAM HD (MY25+)	6.3	Crew	Driver	Hatch / Barn
Silverado 1500	6.5	Crew	Passenger	Hatch
Silverado HD	6.75	Crew	Passenger	Hatch

PRODUCT FEATURES

Adrian Cap Electronic Lock Kit for the Hatch Topper vehicles listed above.

- **This is a complete kit for installing electronic locks on all three Adrian Cap doors**
- **This kit uses Posi-Taps to pull the OEM latch signals — no soldering necessary**
- **This kit can be used in combination with Topper Interior Lighting without interference**

Introduction / Comments:

Install Instructions For Adrian Cap Electronic Lock Kits For MY25 Vehicles

Note:

Read all instructions prior to installation. Review the Adrian Steel **GENERAL PRECAUTIONS PAGES (56638)** before attempting installation. Only personnel familiar with using electrical best practices should perform this install. Reference **ELECTRICAL BEST PRACTICES MANUAL (54479)** before attempting installation.

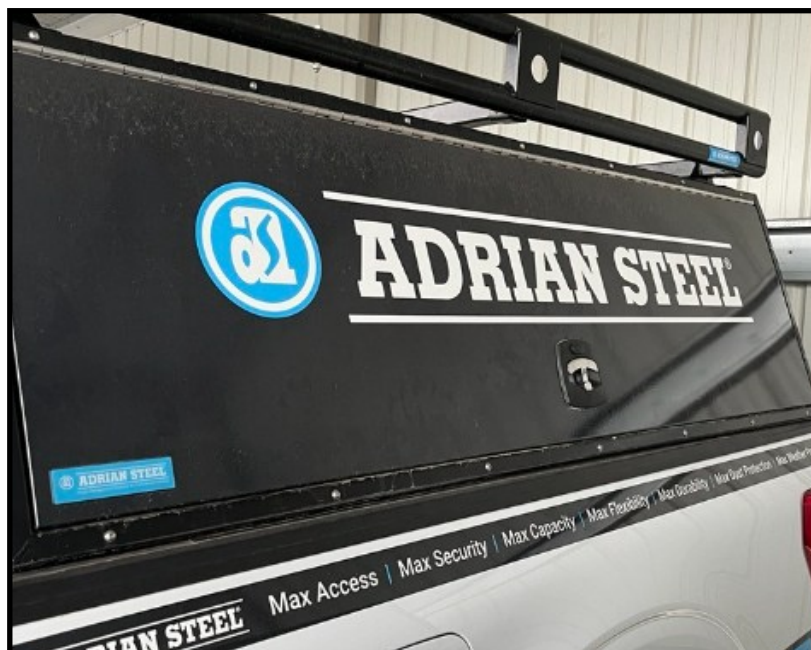
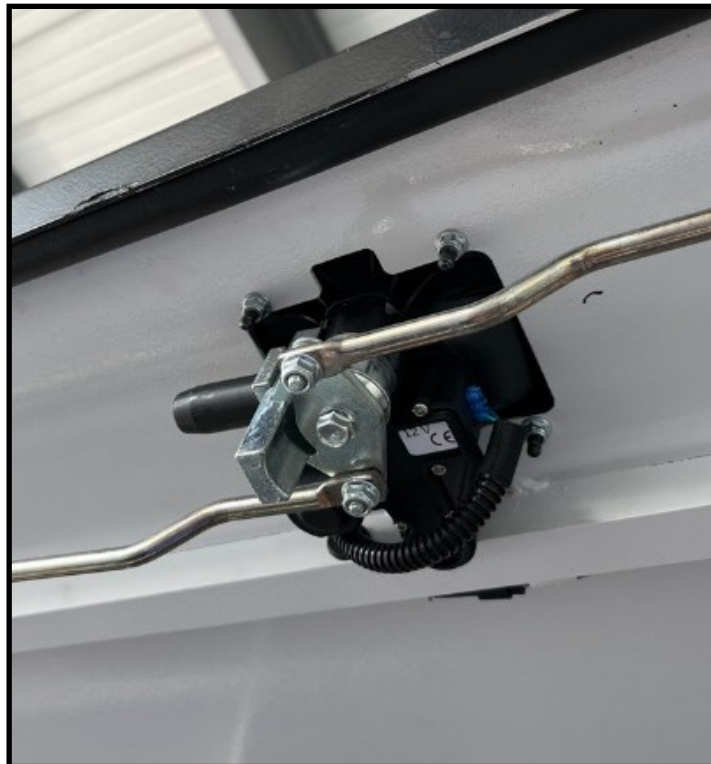


Table of Contents

Introduction Statement	2
Overall Harness Diagram	3
Tools needed	4
Torque requirements	4
Vehicle and Kit Charts	5
Kit Harnesses	7
Harnesses/Components Needed	8
Routing Overview	10
Platform Specific Posi-Tap Installation Instructions	11
Vehicle Harness Installation Instructions	20
Adrian Cap Harness Installation Instructions	23

Introduction Statement

****Please read statement below before moving forward****

Before installation, disconnect the OEM negative battery cable.

The TELH/B kits are divided by battery location in engine compartment, cab size, and bed length. The harnesses and routing is similar for all vehicles except for the lengths. These instructions are for the most standard configurations, and reference only. Please reference the vehicle being upfit and the spec sheet to confirm you have the correct kit.

These installation instructions are for most cases and for reference. Install instructions depend on the vehicle model and options. Please follow the labels to determine how to route each harness.

Chevy Silverado platforms are mirrored to the rest of the platforms, meaning the battery harness runs from the passenger side of the engine bay to the driver side foot well, the control harness is routed underneath the driver side, and the topper 3-split harness splits in the front driver side corner instead of the passenger side corner.

Overall Harness Diagram

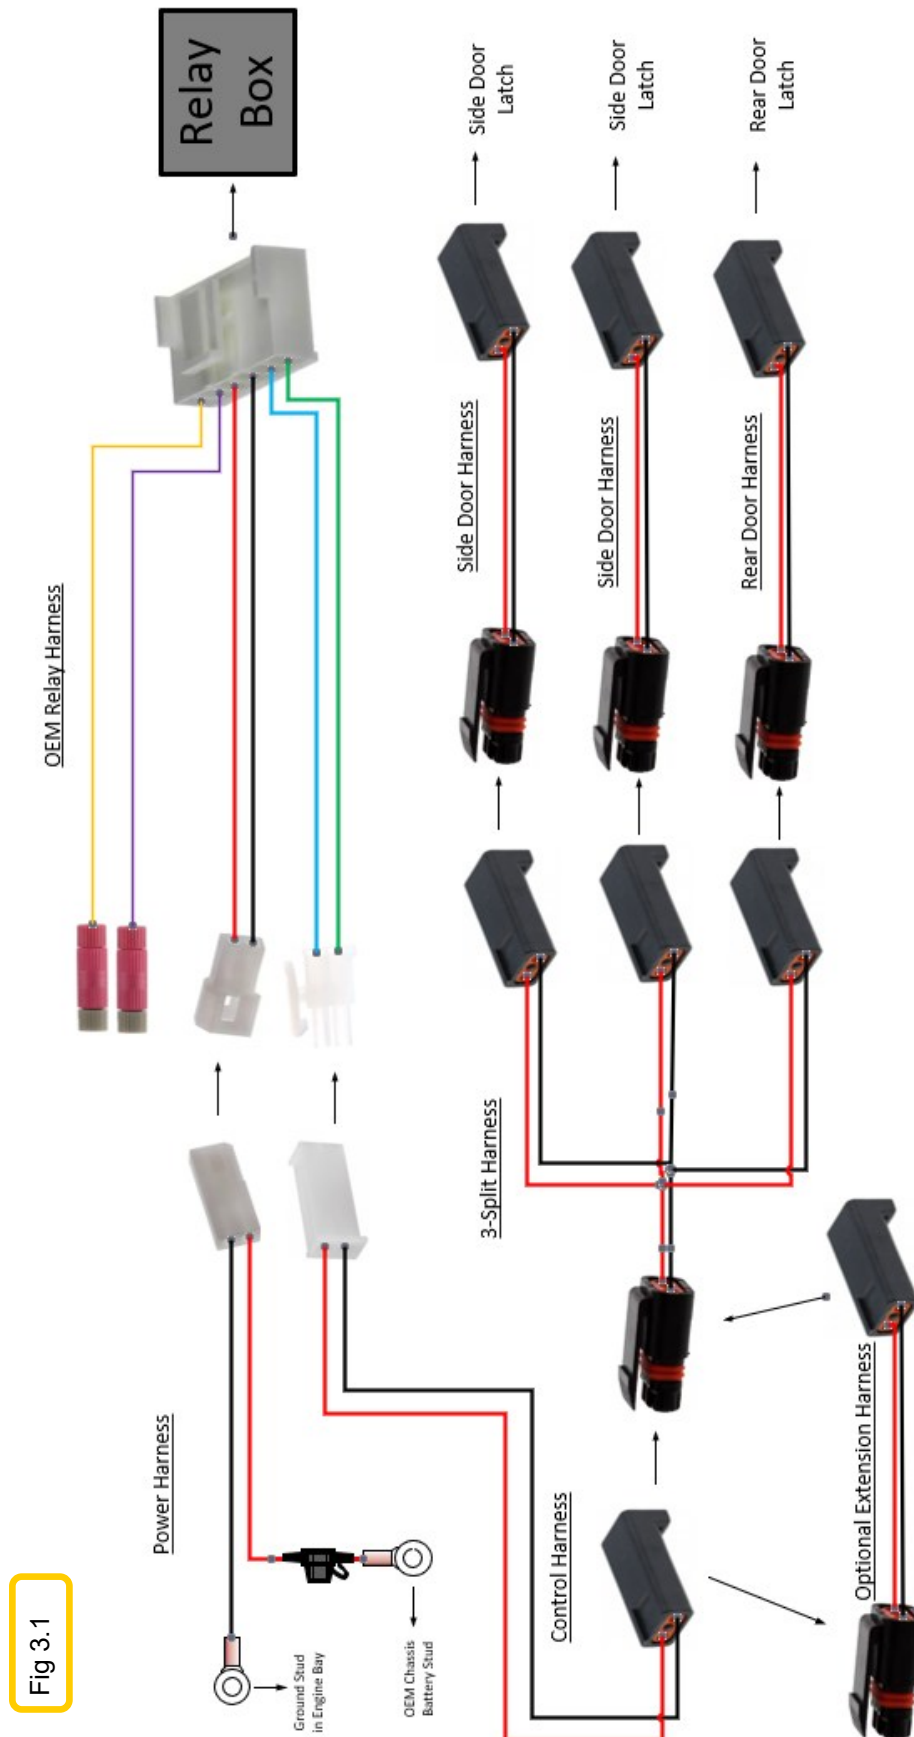


Fig 3.1

Tools required



- 8mm, 10mm, 11mm, and 13mm sockets
- T20 Torx bit
- Phillips 2 bit
- 1" step drill bit or hole saw
- 5/8" drill bit
- Power Drill
- Impact Driver
- Torque wrench
- Fish tape
- Pick or Small Flat Head Screw Driver
- Deburring tool

TORQUE

Torque E-Lock fasteners to 2.2 Nm.

DO NOT OVER TIGHTEN

Adrian Cap Electronic Lock Kit / Vehicle Chart - Hatch

NOTE: Silverado ICE and Hybrid is routed mirrored to the rest of the vehicles

Kit	Vehicle Model	Bed Length	Cab Size	Battery Location
TELH01	Ford Maverick	4.5	Crew	Driver
	Ford Ranger	5	Crew	Driver
	RAM 1500 (MY25+)	5.6 (67")	Crew	Driver
	Silverado 1500	5.75	Crew	Passenger
TELH02	RAM 1500 (MY25+)	6.3	Crew	Driver
	RAM HD (MY25+)	6.3	Crew	Driver
	Silverado 1500	6.5	Crew	Passenger
	Silverado HD	6.75	Crew	Passenger
TELH03	RAM 1500 (MY25+)	8	Crew	Driver
	RAM HD (MY25+)	8	Crew	Driver
	Silverado HD	8	Crew	Passenger
TELH04	Chevy Colorado	5	Crew	Passenger
	Ford F150	5.5	Crew	Passenger
	Ford Lightning	5.5	Crew	Passenger
	Nissan Frontier	5	Crew	Passenger
TELH05	Ford F150	6.5	Crew	Passenger
	Ford SD	6.75	Crew	Passenger
	Nissan Frontier	6	Crew	Passenger
	Silverado EV	5.9 (71")	Crew	Passenger
TELH06	Ford SD	8	Crew	Passenger
TELH07	Silverado 1500	6.5	Regular	Passenger
TELH08	RAM HD (MY 25+)	8	Regular	Driver
	Silverado 1500	8	Regular	Passenger
	Silverado HD	8	Regular	Passenger
TELH09	Ford F150	6.5	Regular	Passenger
TELH10	Ford F150	8	Regular	Passenger
	Ford SD	8	Regular	Passenger

Adrian Cap Electronic Lock Kit / Vehicle Chart - Barn Door

NOTE: Silverado ICE and Hybrid is routed mirrored to the rest of the vehicles

Kit	Vehicle Model	Bed Length	Cab Size	Battery Location
TELB01	Ford Maverick	4.5	Crew	Driver
	Ford Ranger	5	Crew	Driver
	RAM 1500 (MY25+)	5.6 (67")	Crew	Driver
TELB02	RAM 1500 (MY25+)	6.3	Crew	Driver
	RAM HD (MY25+)	6.3	Crew	Driver
TELB03	RAM 1500 (MY25+)	8	Crew	Driver
	RAM HD (MY25+)	8	Crew	Driver
TELB04	Chevy Colorado	5	Crew	Passenger
	Ford F150	5.5	Crew	Passenger
	Ford Lightning	5.5	Crew	Passenger
	Nissan Frontier	5	Crew	Passenger
TELB05	Ford F150	6.5	Crew	Passenger
	Ford SD	6.75	Crew	Passenger
	Nissan Frontier	6	Crew	Passenger
	Silverado EV	5.9 (71")	Crew	Passenger
TELB06	Ford SD	8	Crew	Passenger
TELB07	Silverado 1500	6.5	Regular	Passenger
TELB08	RAM HD (MY 25+)	8	Regular	Driver
TELB09	Ford F150	6.5	Regular	Passenger
TELB10	Ford F150	8	Regular	Passenger
	Ford SD	8	Regular	Passenger
TELB11	Silverado 1500	5.75	Crew	Passenger
TELB12	Silverado 1500	6.5	Crew	Passenger
	Silverado HD	6.75	Crew	Passenger
TELB13	Silverado HD	8	Crew	Passenger
TELB14	Silverado 1500	8	Regular	Passenger
	Silverado HD	8	Regular	Passenger

ADRIAN STEEL COMPANY • WWW.ADRIANSTEEL.COM • 906 JAMES STREET • ADRIAN, MI 49221 • 800-677-2726



Adrian Cap Electronic Lock Kit / Vehicle Chart - Barn Door

NOTE: Silverado ICE and Hybrid is routed mirrored to the rest of the vehicles

Kit	Vehicle Model	Bed Length	Cab Size	Battery Location
TELB01	Ford Maverick	4.5	Crew	Driver
TELB04	Ford F150	5.5	Crew	Passenger
TELB05	Ford F150	6.5	Crew	Passenger
TELB07	Silverado 1500	6.5	Regular	Passenger
TELB09	Ford F150	6.5	Regular	Passenger
TELB10	Ford F150	8	Regular	Passenger
TELB11	Silverado 1500	5.75	Crew	Passenger
TELB12	Silverado 1500	6.5	Crew	Passenger
TELB14	Silverado 1500	8	Regular	Passenger

TELH Kit Harnesses

Kit	74342	74343	74344	74345	74346	74347	74348	74340 x3	74341	74349 x2	74350	74533
TELH01	X		X				X	X	X	X	X	X
TELH02	X		X			X		X	X	X	X	X
TELH03	X		X		X			X	X	X	X	X
TELH04		X	X				X	X	X	X	X	X
TELH05		X	X			X		X	X	X	X	X
TELH06		X	X		X			X	X	X	X	X
TELH07	X			X		X		X	X	X	X	X
TELH08	X			X	X			X	X	X	X	X
TELH09		X		X		X		X	X	X	X	X
TELH10		X		X	X			X	X	X	X	X

TELB Kit Harnesses

Kit	74340 x3	74341	74342	74343	74344	74345	74346	74347	74348	74349 x2	74350	74533	77195
TELB01	X	X	X		X				X	X	X	X	
TELB02	X	X	X		X			X		X	X	X	
TELB03	X	X	X		X		X			X	X	X	
TELB04	X	X		X	X				X	X	X	X	
TELB05	X	X		X	X			X		X	X	X	
TELB06	X	X		X	X		X			X	X	X	
TELB07	X	X	X			X		X		X	X	X	X
TELB08	X	X	X			X	X			X	X	X	
TELB09	X	X		X		X		X		X	X	X	
TELB10	X	X		X		X	X			X	X	X	
TELB11	X	X	X		X				X	X	X	X	X
TELB12	X	X	X		X			X		X	X	X	X
TELB13	X	X	X		X		X			X	X	X	X
TELB14	X	X	X			X	X			X	X	X	X

Components





	Part #	Description
1	74340	ALLEGIS T-HANDLE E-LATCH
2	74341	E-LATCH OEM RELAY HARNESS
3	74342	E-LOCK PWR - DRIVER HARN
4	74343	E-LOCK PWR - PASS HARN
5	74344	E-LOCK CONTROL-CREW HARN
6	74345	E-LOCK CONTROL-REG HARN
7	74346	E-LOCK TPR 3SPLT 8' HARN
8	74347	E-LOCK TPR 3SPLT 6.75'
9	74348	E-LOCK TPR 3SPLT 5.75'
10	74349	E-LOCK TPR SIDE DOR HARN
11	74350	E-LOCK TPR REAR DOR HARN
12	74533	DUAL SPDT RELAY MODULE
13	80768	ROLL UP DOOR E-LOCK HARN

Harness pictures are for reference only.


Please reference the vehicle being upfit and pg. 4 to confirm which components are required for the install.

Fastener Bag Parts

QTY	Part #	Description
12	FAS0917	NUT,HEX NLK FLG M5 X 0.8 ZP
6	FAS0918	NUT,HEX NLK FLG 10-24 ZP
1	26618-0	Silicone Sealant

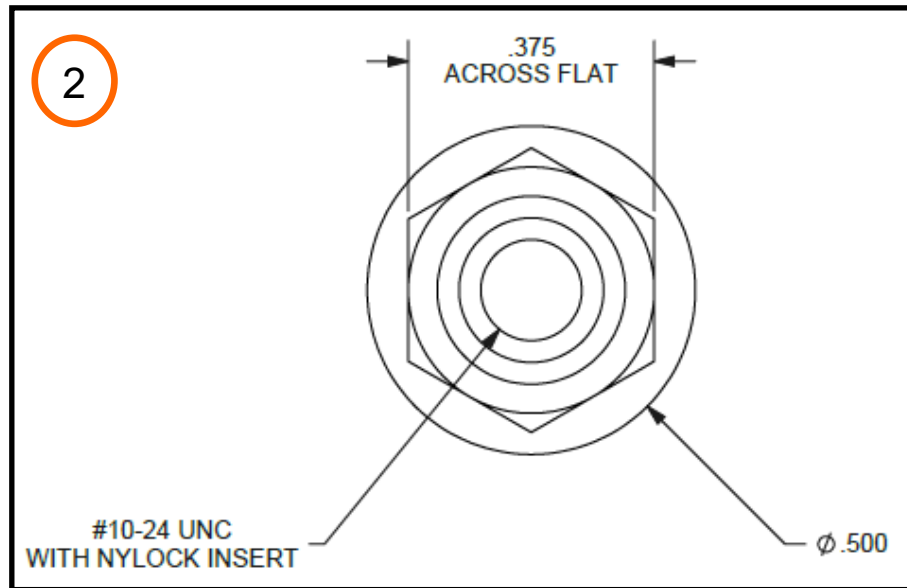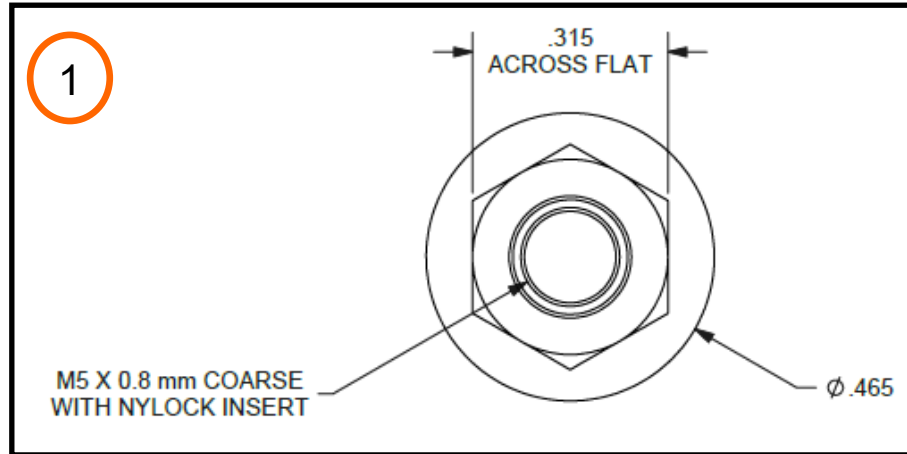



Routing Overview

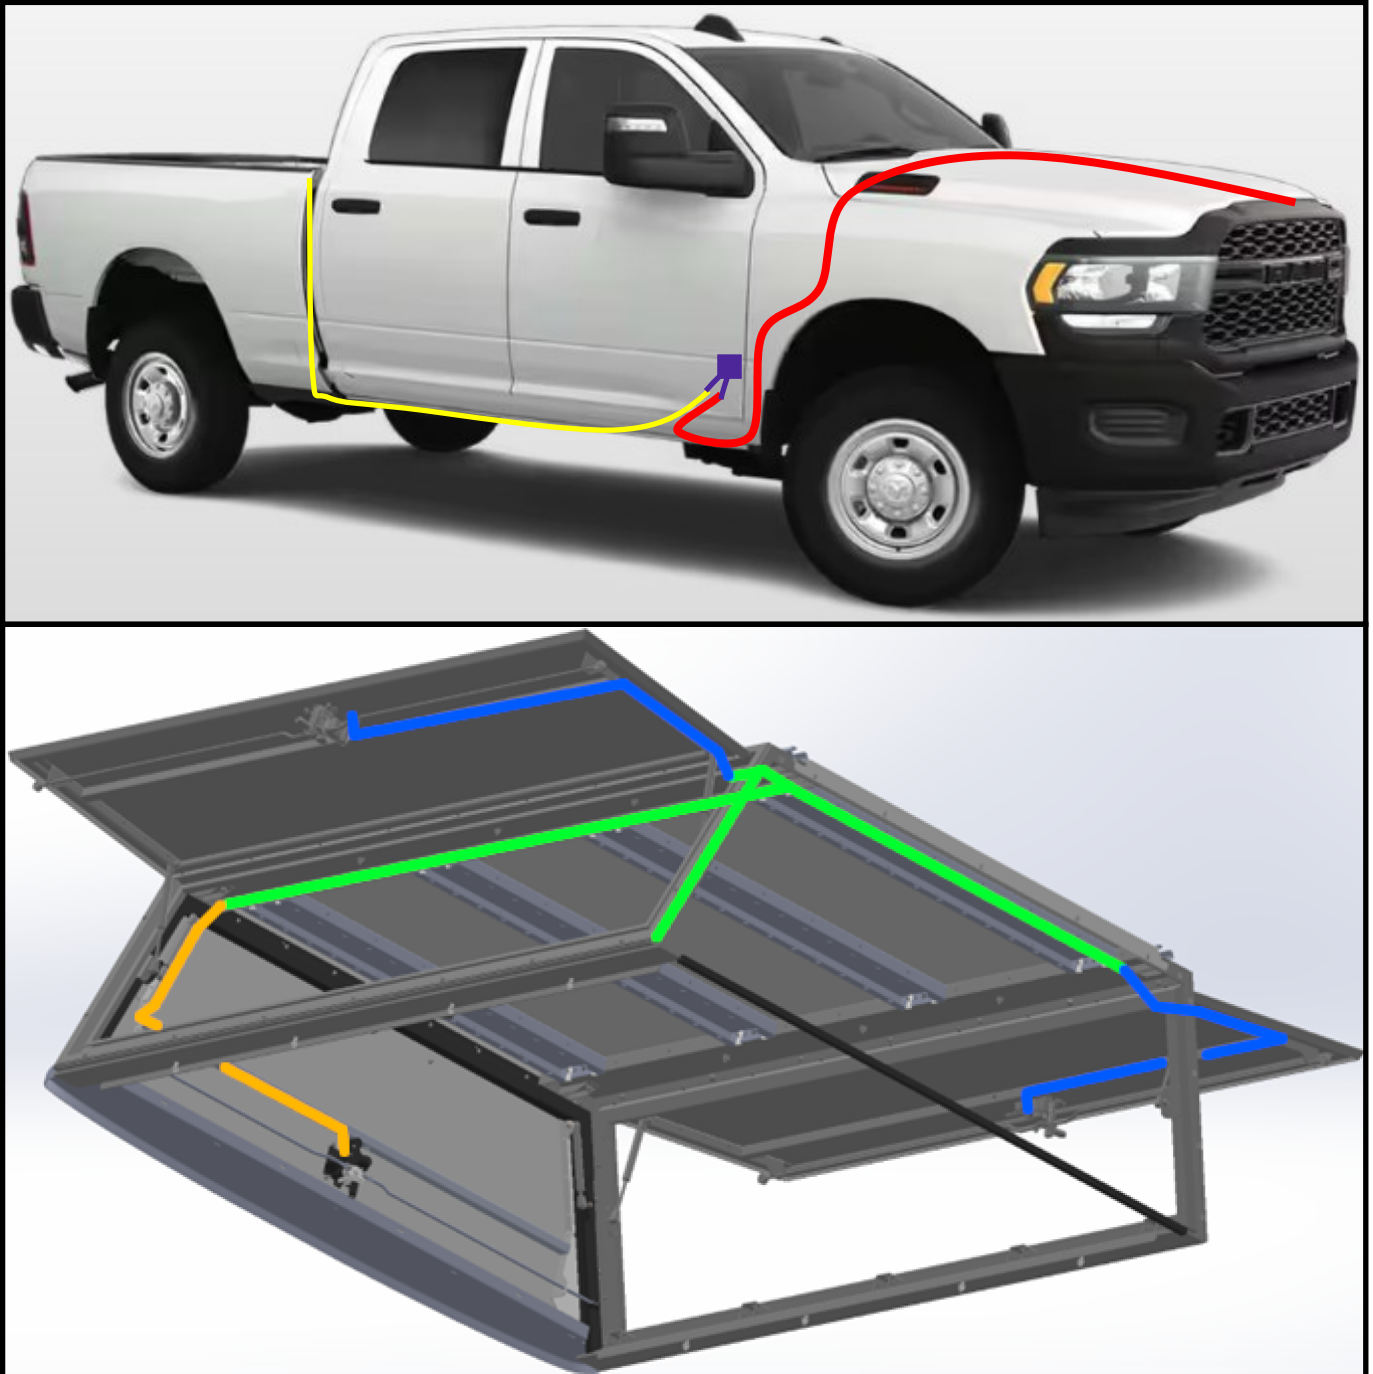

2024 RAM 2500 with Crew Cab and 6.75' Bed shown. All installs route along the same path except for Silverado ICE and Hybrid which is mirrored.

RED	74342 E-LOCK PWR - DRIVER HARN (Driver Side Position Shown)
PURPLE	74341 E-LATCH OEM RELAY HARNESS (located in the front passenger foot well)
YELLOW	74344 E-LOCK CONTROL-CREW HARN
GREEN	74347 E-LOCK TPPR 3SPLT 6.75'
BLUE	74349 E-LOCK TPPR SIDE DOR HARN
ORANGE	74350 E-LOCK TPPR REAR DOR HARN


Routing Overview Roll-up Door Topper ONLY

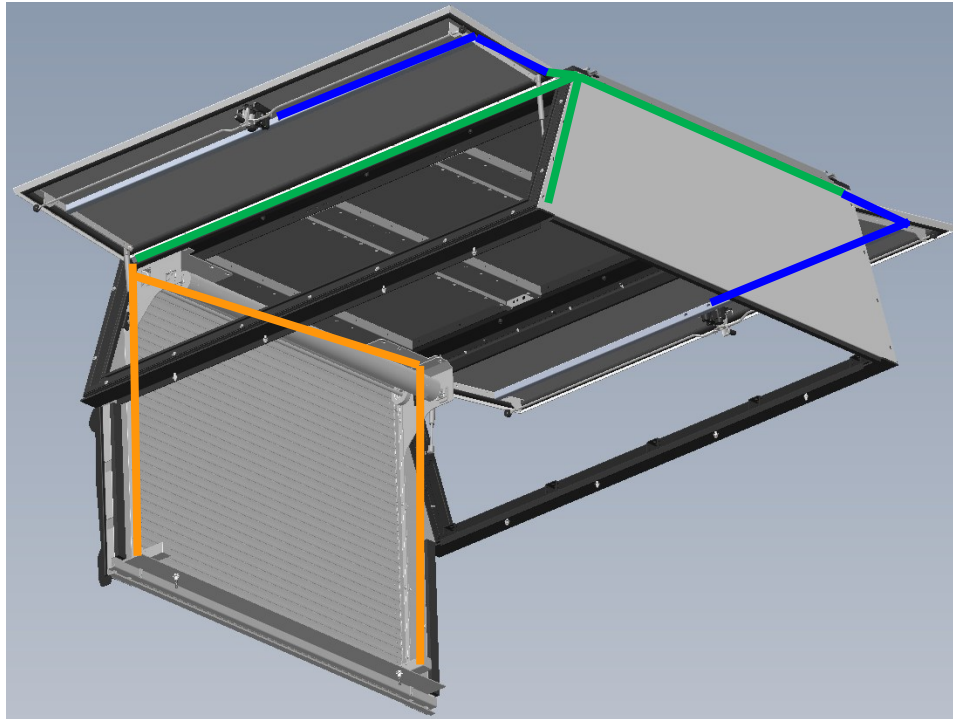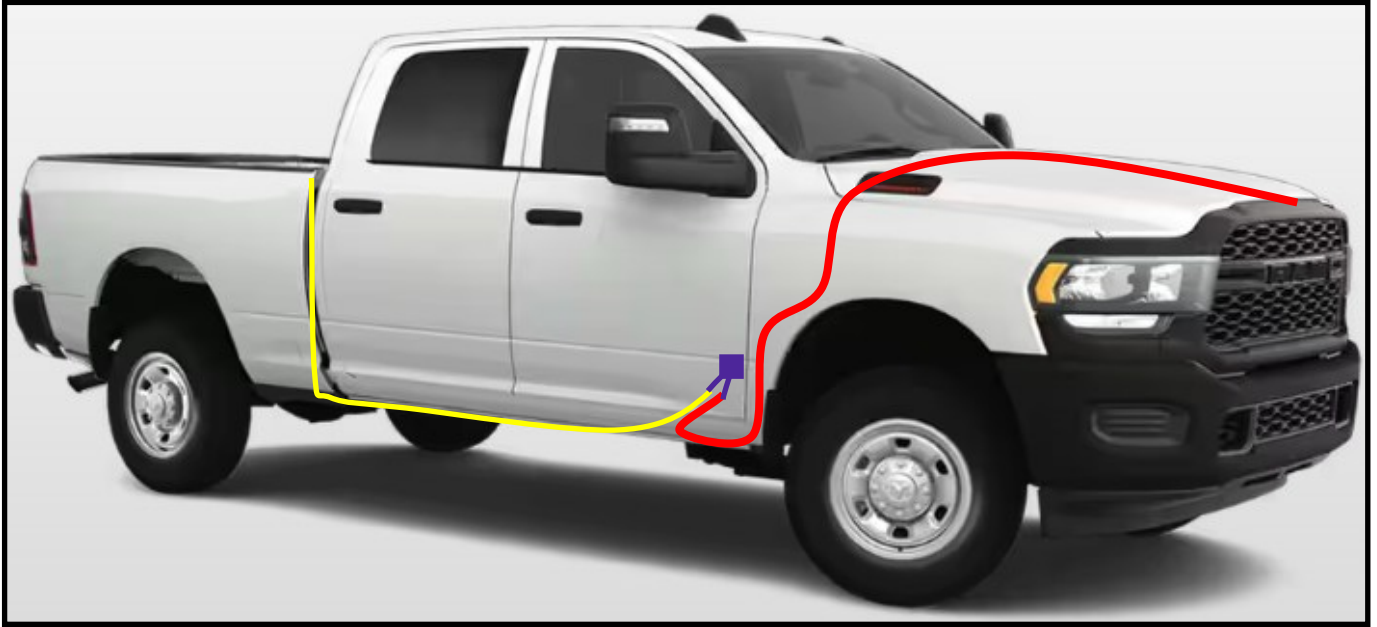

- | | |
|---------------|--|
| RED | 74342 E-LOCK PWR - DRIVER HARN (Driver Side Position Shown) |
| PURPLE | 74341 E-LATCH OEM RELAY HARNESS (located in the front passenger foot well) |
| YELLOW | 74344 E-LOCK CONTROL-CREW HARN |
| GREEN | 74347 E-LOCK TPPR 3SPLT 6.75' |
| BLUE | 74349 E-LOCK TPPR SIDE DOOR HARN |
| ORANGE | 80768 E-LOCK ROLL-UP DOOR REAR HARN |

Platform Specific Posi-Tap Installation Instructions

REMOVE BATTERY NEGATIVE CONNECTION before unplugging connectors from the BCM. Failure to do so may cause error codes to be thrown on the dash that will require an OBD2 tool to clear.

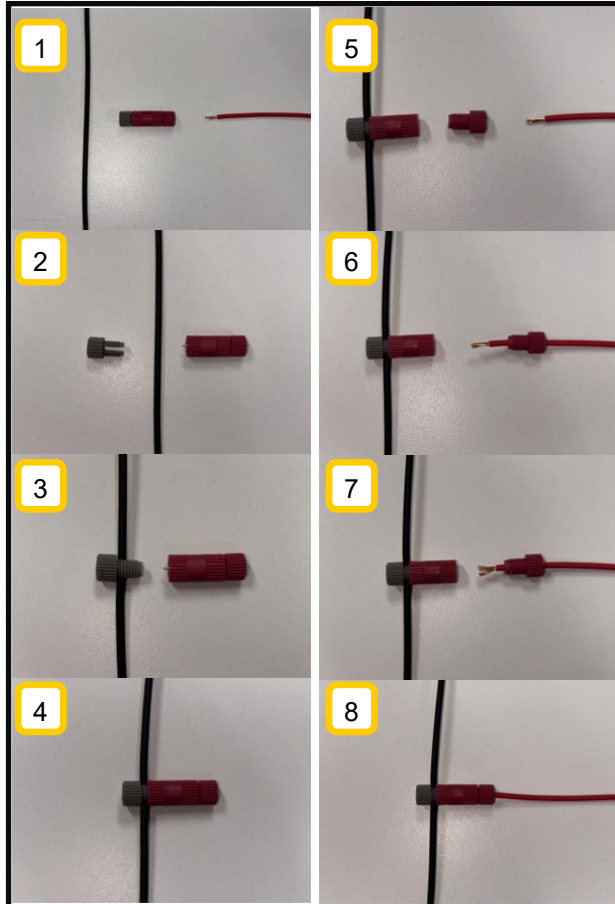

Posi-tap Install instructions:

Remove the gray cap on the Posi-Tap

Push the OEM signal wire into the slot on the gray cap.

Twist the Posi-Tap onto the gray cap with the OEM wire secured in between the two.

The pin point on the Posi-Tap will puncture the OEM wire and obtain the signal.

Remove the red cap on the Posi-Tap and place over the tapping wire with the threads facing towards the end of the wire.

Spread out the copper strands of the tapping wire into a cone-like shape, and insert the strands into the Posi-Tap


Twist the cap back onto the Posi-Tap with the tapping wire secured. Be sure of secure connection.

Note:

In the case all 3 E-Locks are triggering opposite of the OEM locks, start troubleshooting by swapping the tapping wires on the two Posi-Taps and test again.

Relay Module:

Make sure the toggle switch on the relay module is in the position away from the 6 pin connector.

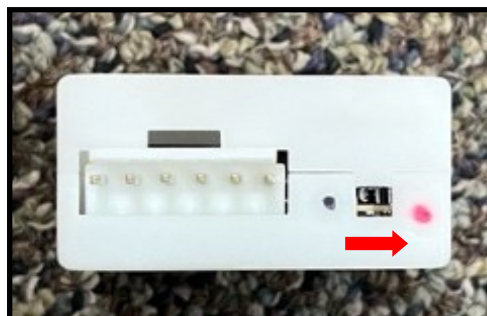

Platform Specific Posi-Tap Installation Instructions

Ford F-150 & Superduty

1. Ensure the battery negative is disconnected before removing any connectors from the BCM.
2. In the front passenger footwell, remove the kick plate and other trim panels around the BCM under the dash.
3. Locate BCM connector C2280C (J3) and disconnect it from the BCM. (Fig 12.1 & 12.2)
4. CAREFULLY cut away the tape wrapped around the OEM wires. (Fig 12.3)
5. Install the Posi-Taps following the instructions on page 11 using harness 74341 tapping wires. (Fig 12.4)

F150

74341 Yellow -> OEM Yellow / Grey Stripe

74341 Purple -> OEM Gray / Brown Stripe





Superduty (F250+)

74341 Yellow -> OEM Yellow

74341 Purple -> OEM Gray

6. Retape the harness around the Posi-Taps to secure the wires as intended by the OEM and plug the connector back into the BCM.
7. Plug the 74533 Relay Module into the 74341 harness 6-pin connector.
8. Secure the harness and relay module to the OEM harnesses. (Fig 12.5)

NOTE: The photos on this page may not reflect the accurate wire colors. Follow the colors listed above.

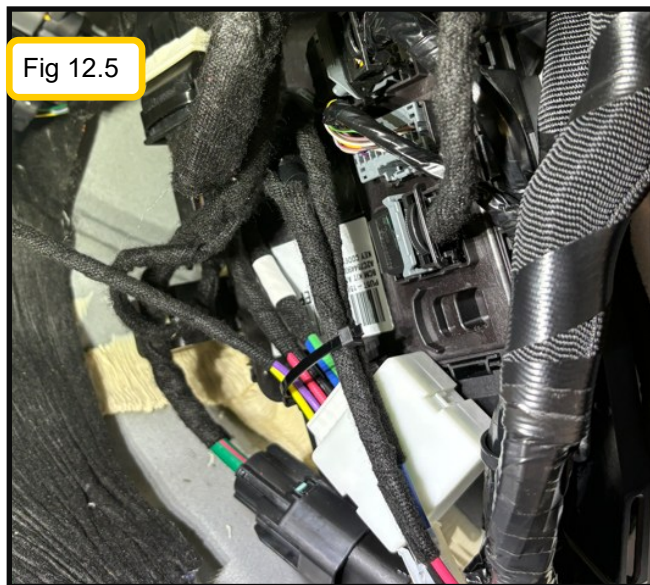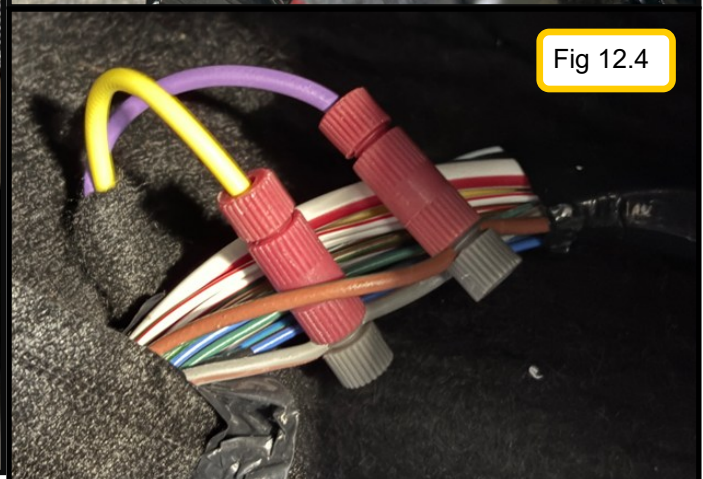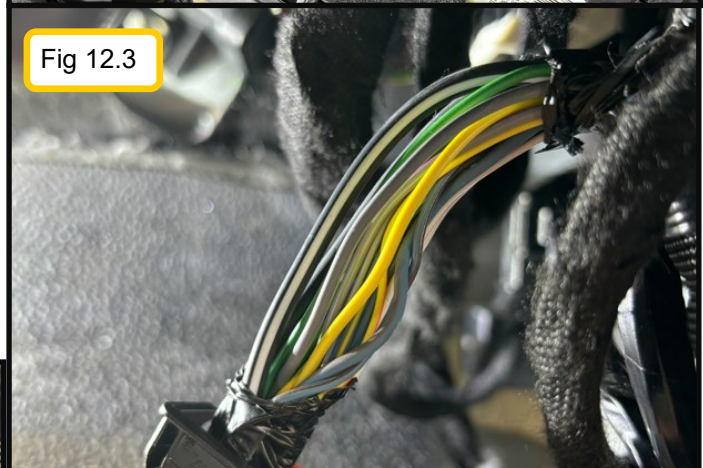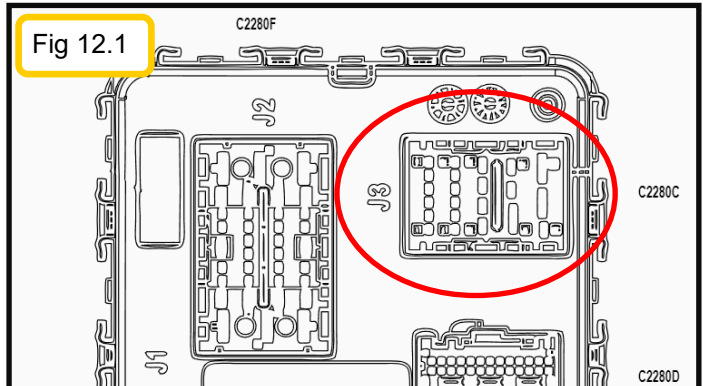

Platform Specific Posi-Tap Installation Instructions

Ford Lightning

1. Ensure the battery negative is disconnected before removing any connectors from the BCM.
2. In the front passenger footwell, remove the kick plate and other trim panels around the BCM under the dash.
3. Locate BCM connector C2280C and disconnect it from the BCM. (Fig 13.1)
4. CAREFULLY cut away the tape wrapped around the OEM wires. (Fig 13.2)
5. Install the Posi-Taps following the instructions on page 11 using harness 74341 tapping wires. (Fig 13.3)

Lightning

74341 Yellow -> OEM Brown / Green Stripe

74341 Purple -> OEM Gray / Brown Stripe

6. Retape the harness around the Posi-Taps to secure the wires as intended by the OEM and plug the connector back into the BCM.
7. Plug the 74533 Relay Module into the 74341 harness 6-pin connector.
8. Secure the harness and relay module to the OEM harnesses.

NOTE: The photos on this page may not reflect the accurate wire colors. Follow the colors listed above.



Platform Specific Posi-Tap Installation Instructions

Ford Maverick

1. Ensure the battery negative is disconnected before removing any connectors from the BCM.
2. In the front passenger footwell, remove the kick plate and other trim panels around the BCM under the dash.
3. Locate BCM connector C2280F and disconnect it from the BCM. (Fig 14.1)
4. CAREFULLY cut away the tape wrapped around the OEM wires.
5. Install the Posi-Taps following the instructions on page 11 using harness 74341 tapping wires. (Fig 14.2)





Maverick ICE & Hybrid

74341 Yellow -> OEM Brown / Green Stripe

74341 Purple -> OEM Gray / Brown Stripe

6. Retape the harness around the Posi-Taps to secure the wires as intended by the OEM and plug the connector back into the BCM.
7. Plug the 74533 Relay Module into the 74341 harness 6-pin connector.
8. Secure the harness and relay module to the OEM harnesses.

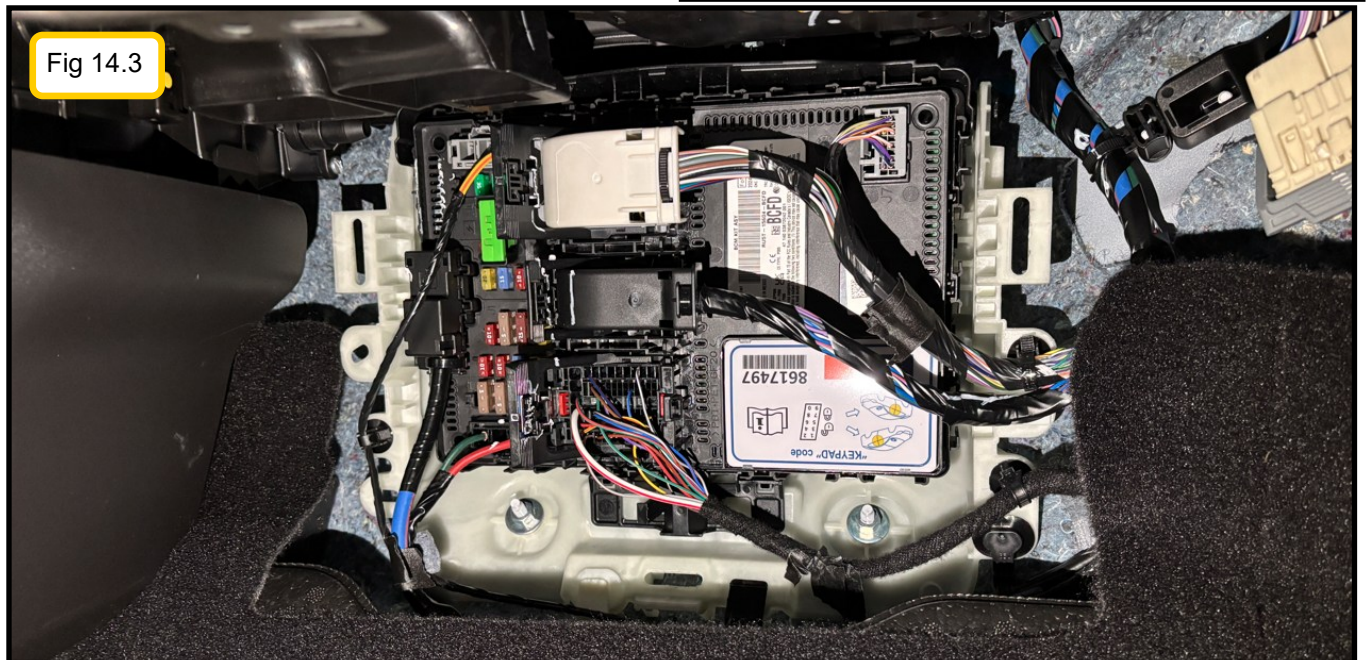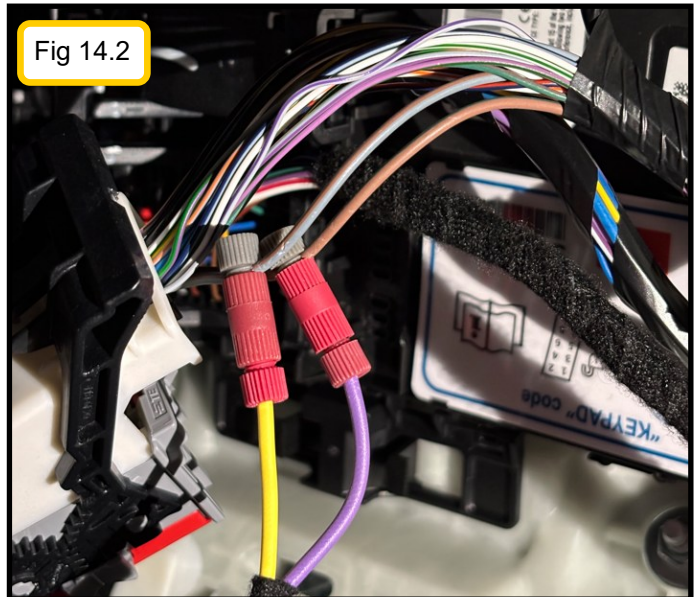

Platform Specific Posi-Tap Installation Instructions

Ford Ranger

1. Ensure the battery negative is disconnected before removing any connectors from the BCM.
2. In the front passenger footwell, remove the kick plate and other trim panels.
3. Locate the fabric tape wrapped harness coming from the black connector that passes through the vehicle wall into the door. (fig 15.2)
4. CAREFULLY cut away the tape wrapped around the OEM wires. (Fig 15.3)
5. Install the Posi-Taps following the instructions on page 11 using harness 74341 tapping wires. (Fig 15.4)

Ranger

74341 Yellow -> OEM Brown / Green Stripe

74341 Purple -> OEM Gray / Brown Stripe

6. Retape the harness around the Posi-Taps to secure the wires as intended by the OEM and plug the connector back into the BCM.
7. Plug the 74533 Relay Module into the 74341 harness 6-pin connector.
8. Secure the harness and relay module to the OEM harnesses.

NOTE: The photos on this page may not reflect the accurate wire colors. Follow the colors listed above.

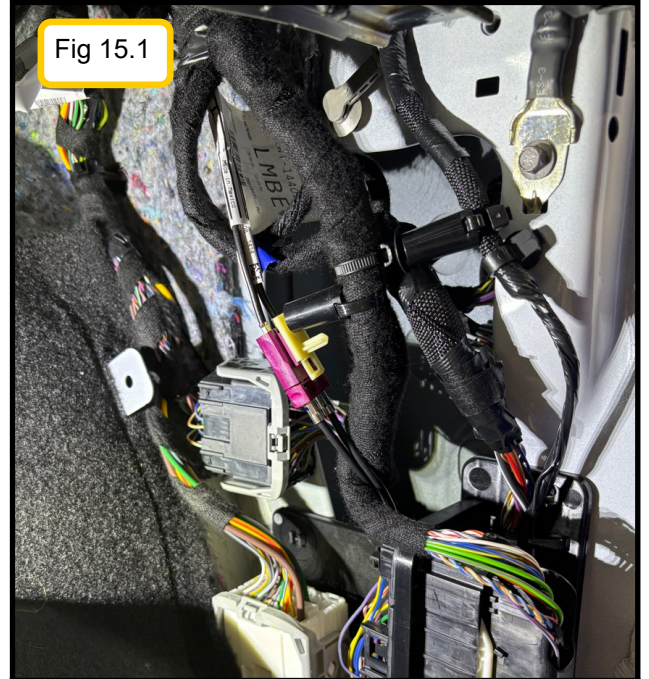


Fig 15.1

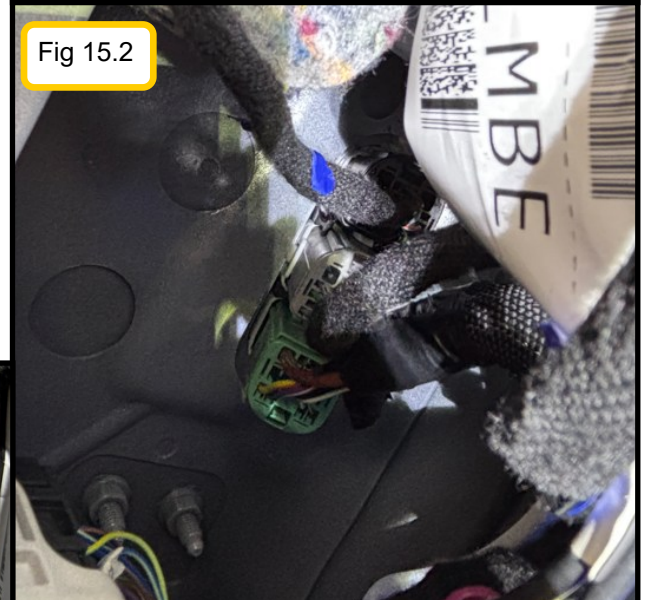


Fig 15.2

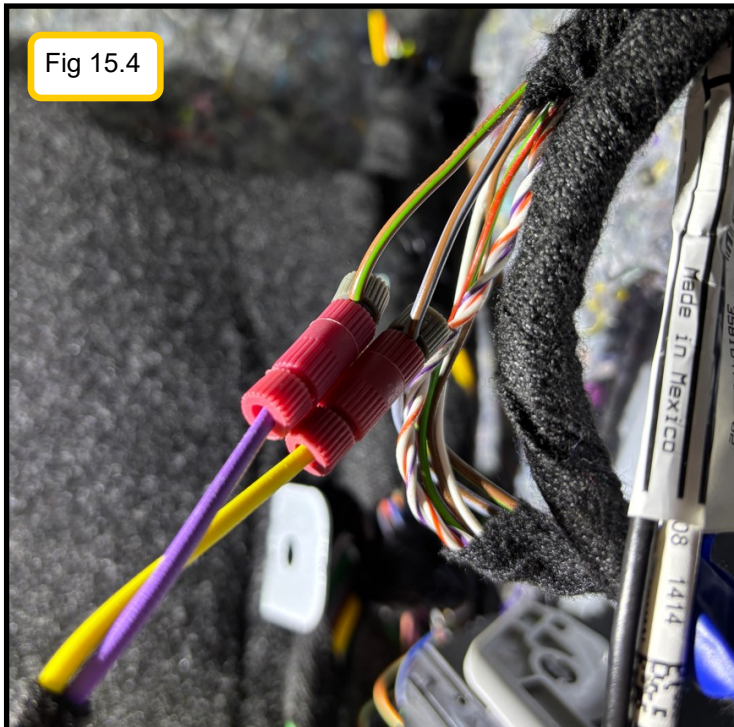


Fig 15.4

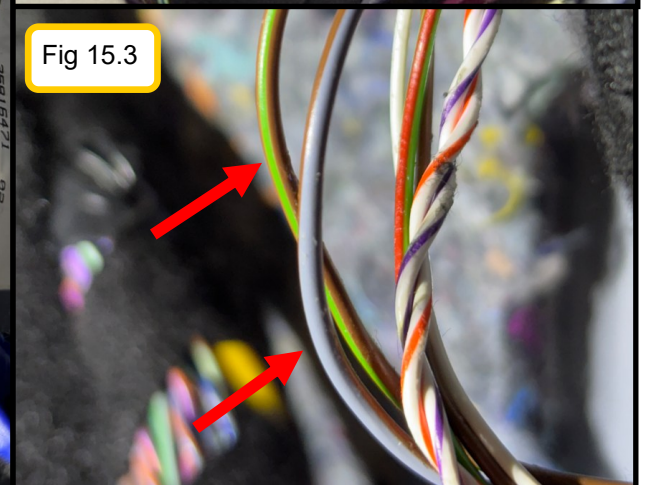


Fig 15.3

Platform Specific Posi-Tap Installation Instructions

RAM 1500 & HD (MY25+)

1. Ensure the battery negative is disconnected before removing any connectors from the BCM.
2. In the front passenger footwell, remove the kick plate and other trim panels under the dash.
3. Locate the OEM harness wrapped in glossy black tape on the side wall of the vehicle. (Fig 16.1)
4. CAREFULLY cut away the tape wrapped around the wires and locate the purple with green stripe wire and the green with gray stripe wire. (Fig 16.2)
5. Install the Posi-Taps following the instructions on page 11 using harness 74341 tapping wires. (Fig 16.3)

RAM

74341 Yellow -> OEM Beige W/ White Stripe
74341 Purple -> OEM Green W/ Violet Stripe

6. Retape the harness around the Posi-Taps to secure the wires as intended by the OEM and plug the connector back into the BCM.
7. Plug the 74533 Relay Module into the 74341 harness 6-pin connector.
8. Secure the harness and relay module to the OEM harnesses.

NOTE: The photos on this page may not reflect the accurate wire colors. Follow the colors listed above.

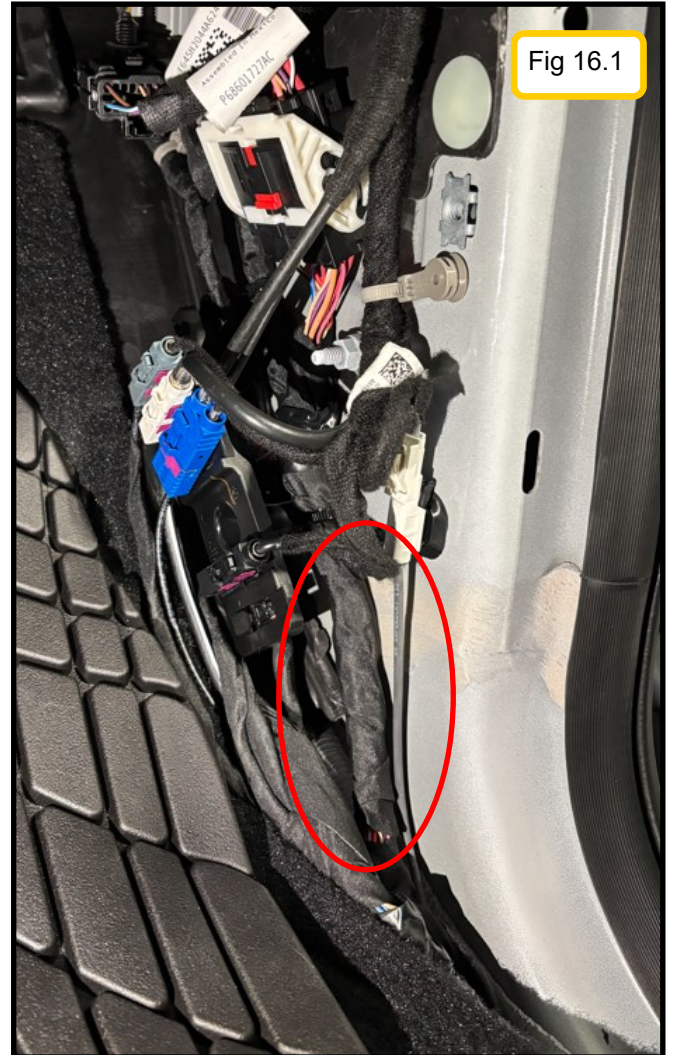


Fig 16.1



Fig 16.3

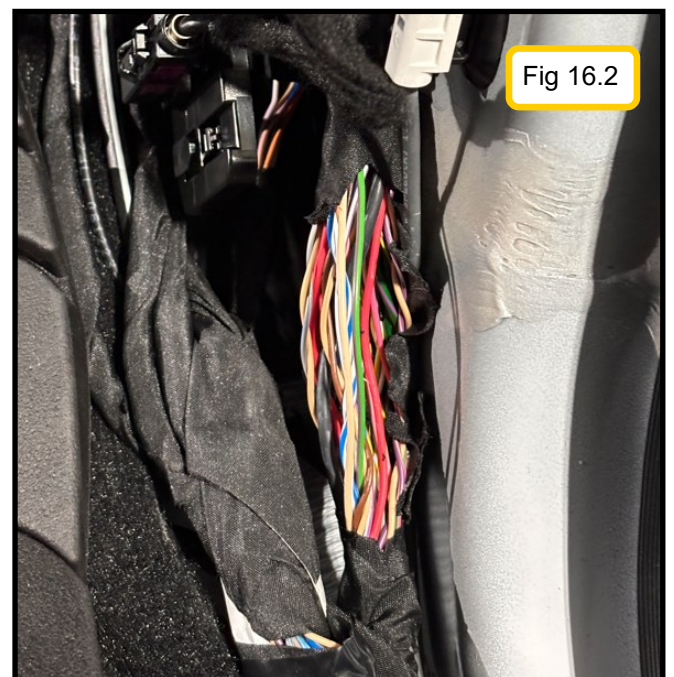


Fig 16.2

Platform Specific Posi-Tap Installation Instructions

Chevy Colorado

1. Ensure the battery negative is disconnected before removing any connectors from the BCM.
2. In the front passenger footwell, remove the kick plate and other trim panels.
3. Locate the Tesa tape wrapped harness that leads to the door connector. It will be leading behind the fuse block into the cavity.
4. CAREFULLY cut away the tape wrapped around the OEM wires. (Fig 17.1)
5. Install the Posi-Taps following the instructions on page 11 using harness 74341 tapping wires. (Fig 17.2)

Colorado

74341 Yellow -> OEM Gray / Black Stripe
74341 Purple -> OEM Yellow / Green Stripe

6. Retape the harness around the Posi-Taps to secure the wires as intended by the OEM.
7. Plug the 74533 Relay Module into the 74341 harness 6-pin connector.
8. Secure the harness and relay module to the OEM harnesses using the included zip ties.

NOTE: The photos on this page may not reflect the accurate wire colors. Follow the colors listed above.



Fig 17.1



Fig 17.2

Platform Specific Posi-Tap Installation Instructions

Chevy Silverado ICE and Hybrid 1500-3500



1. Ensure the battery negative is disconnected before removing any connectors from the BCM.
2. Silverado is different from all other platforms. The BCM is located behind the driver's side knee bolster. From underneath, there are two rows of colorful connectors. The one closest to driver's side wall of the vehicle is the BCM.
3. Disconnect connectors x8 (grey), and x6 (tan) by pulling the small tab down, and pressing the release in. (fig 18.1 & 18.2)
4. Install the Posi-Taps following the instructions on page 11 using harness 74341 tapping wires. (Fig 18.3)

Silverado

74341 Yellow -> OEM X6 Gray / Black Stripe
74341 Purple -> OEM X8 Yellow / Green Stripe

6. Plug the connectors back into the BCM.
7. Plug the 74533 Relay Module into the 74341 harness 6-pin connector.
8. Secure the harness and relay module to the OEM harnesses.

NOTE: The photos on this page may not reflect the accurate wire colors. Follow the colors listed above.

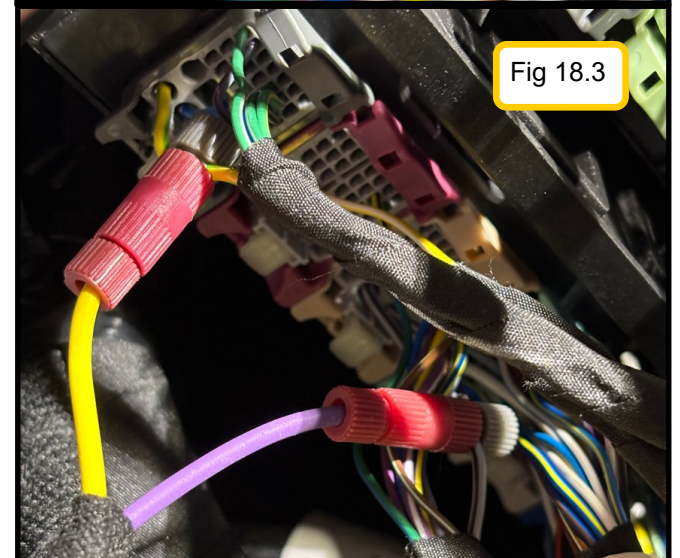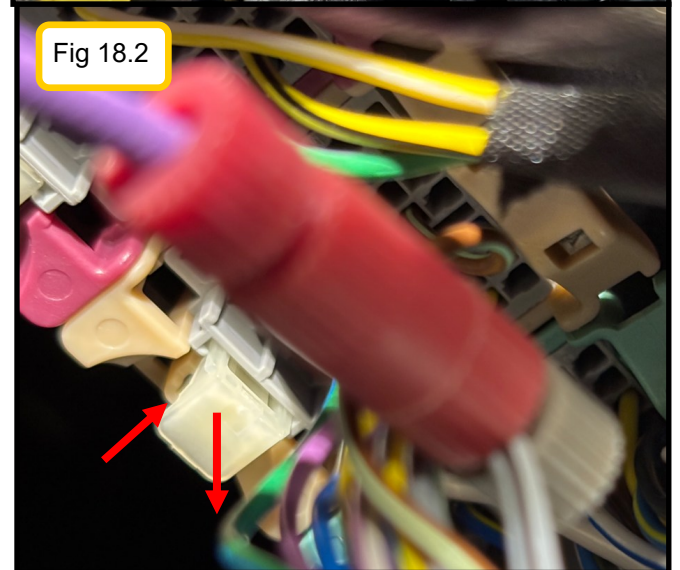

Platform Specific Posi-Tap Installation Instructions

Chevy Silverado EV




1. Remove the lower trim panel and pull back the flooring to reveal the OEM body wire harness. (Fig 19.1)
2. CAREFULLY cut away the tape wrapping around the harness. (Fig 19.2)
3. Locate the grey with black stripe and yellow with green stripe wires in this bundle. (Fig 19.3)
4. Install the Posi-Taps following the instructions on page 11 using harness 74341 tapping wires. (Fig 19.3)

Silverado EV

74341 Yellow -> Gray / Black Stripe
74341 Purple -> Yellow / Green Stripe

7. Plug the 74533 Relay Module into the 74341 harness 6-pin connector.
8. Secure the harness and relay module to the OEM harnesses.

NOTE: The photos on this page may not reflect the accurate wire colors. Follow the colors listed above.

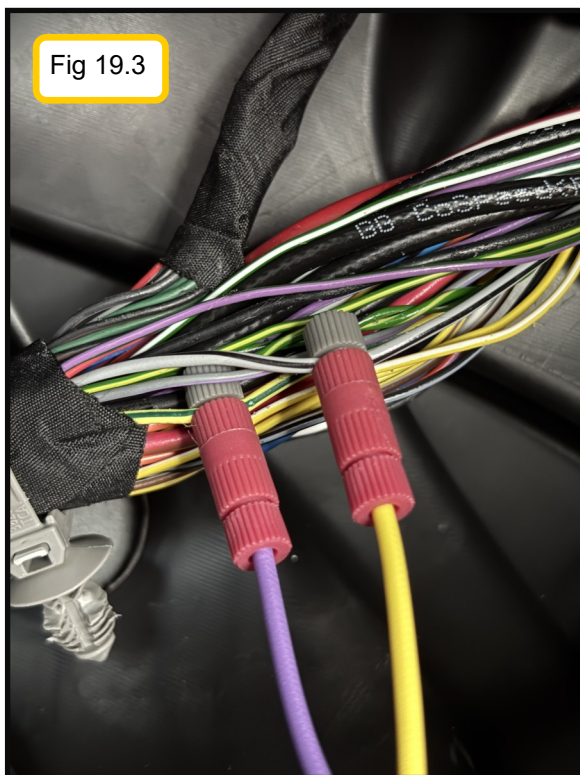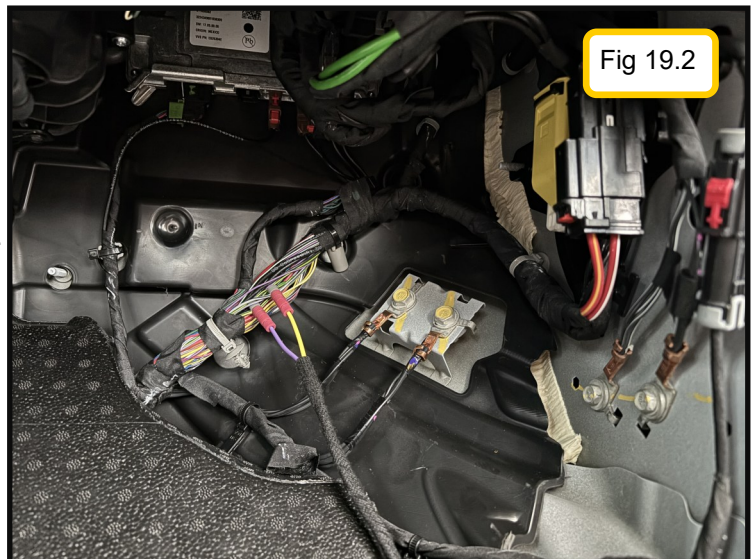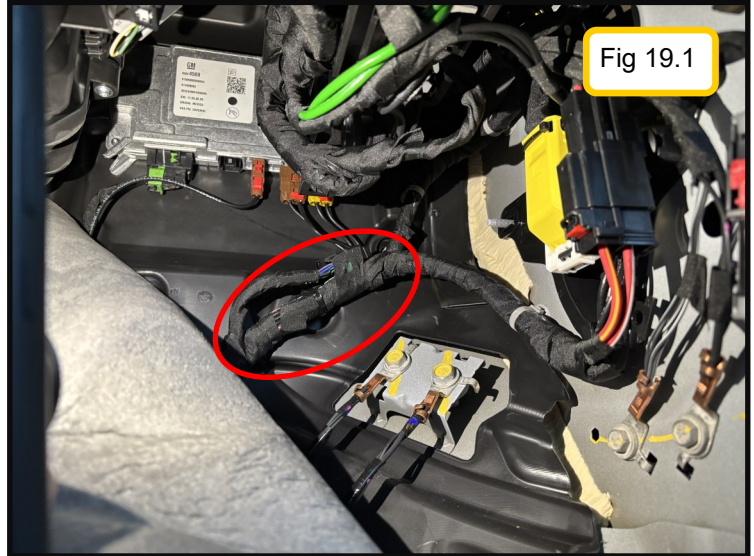

Platform Specific Posi-Tap Installation Instructions



Nissan Frontier

1. Ensure the battery negative is disconnected before removing any connectors.
2. In the front passenger footwell, remove the kick plate and other trim panels.
3. Locate connector M36 and unplug it. (Fig 20.1)
4. Remove the connector cover by pulling the cover away from the tabs (blue circles in fig 20.2)
5. Locate the pink and yellow wires in positions 55 and 56 in the connector (red circle in fig 20.2)
6. Install the Posi-Taps following the instructions on page 11 using harness 74341 tapping wires. (Fig 20.3)

Frontier

74341 Yellow -> OEM Pink
74341 Purple -> OEM Yellow

7. Fasten the cover back on the connector and plug in the connector. (fig 20.4)
8. Plug the 74533 Relay Module into the 74341 harness 6-pin connector.
9. Secure the harness and relay module to the OEM harnesses.

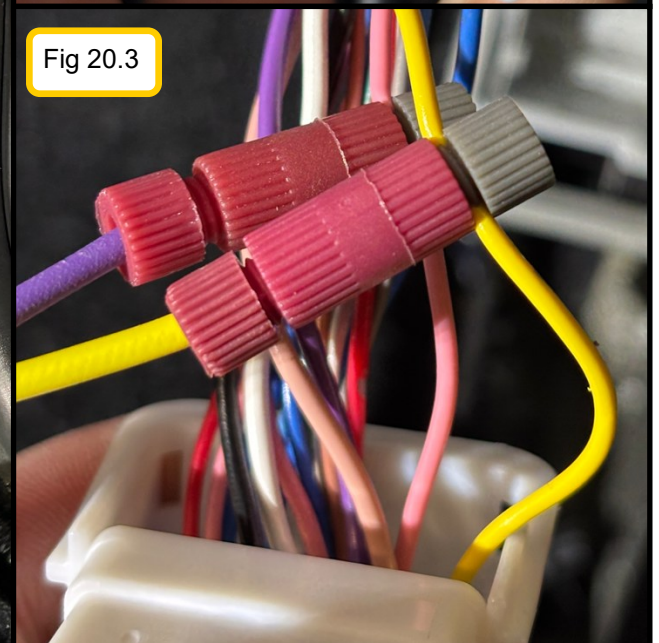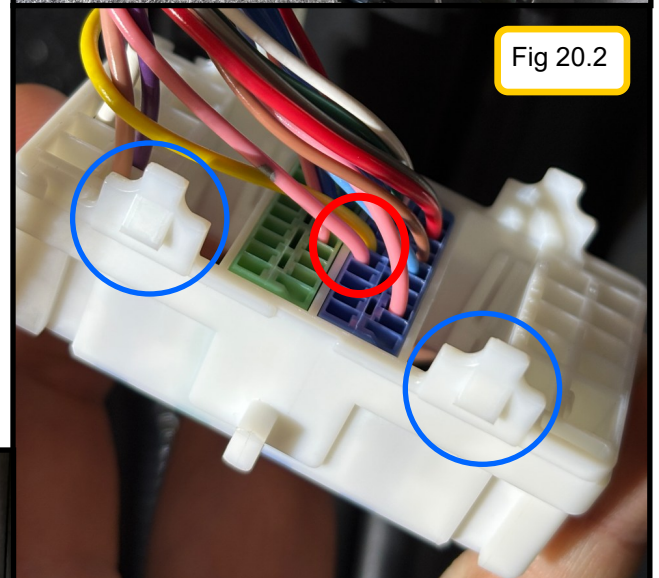

Battery Harness Install Instructions



Figure 21.1

Option 1: Passenger-Side Battery

Step 1:

Locate 74343 E-LOCK PWR - PASS HARN

Remove the fuse from the inline fuse holder until the end of the install.

Locate the OEM battery terminals under the hood. In some cases, the negative terminal is not available and a nearby ground stud will be used instead.

Step 2:

Attach the red wire with the ring terminal to the battery positive post or a post of proper size in the power distribution block.

Attach the black wire with the ring terminal to either the negative terminal of the battery, or a nearby ground stud on the chassis of the vehicle.

WARNING: DO NOT USE THE BATTERY CLAMP NUTS TO SECURE HARNESS

Torque the battery terminals to 8 Nm.

Step 3:

Route the power harness over to the rear passenger-side corner of the engine bay, and secure the power harness to OEM harnessing to strain relief the terminals.

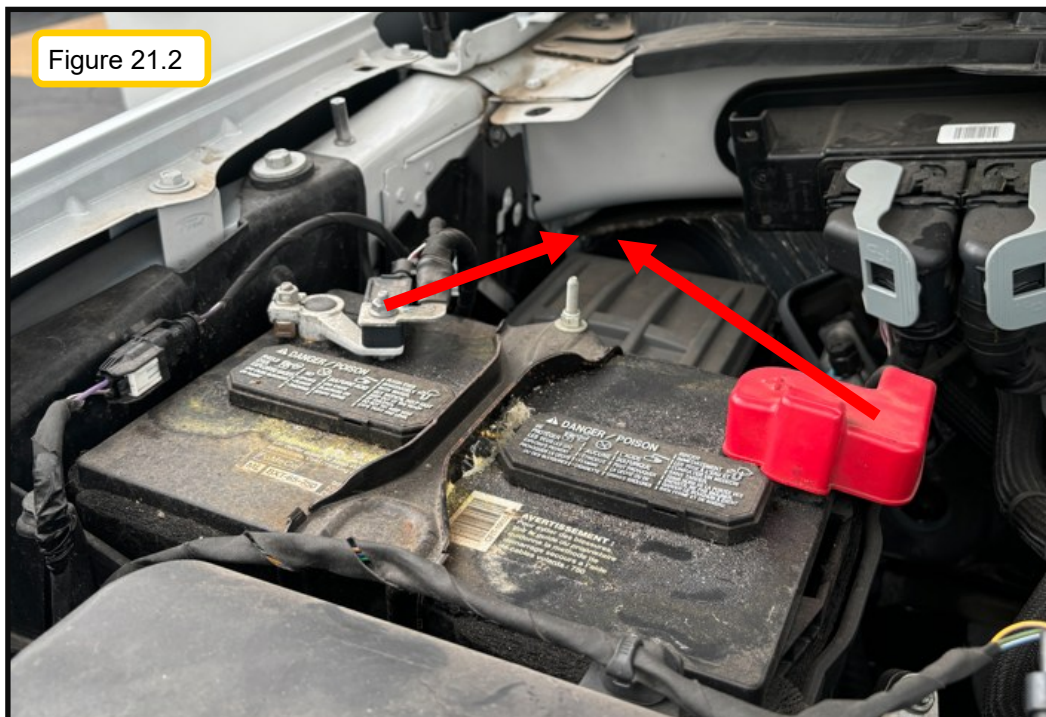


Figure 21.2

Figure 22.1


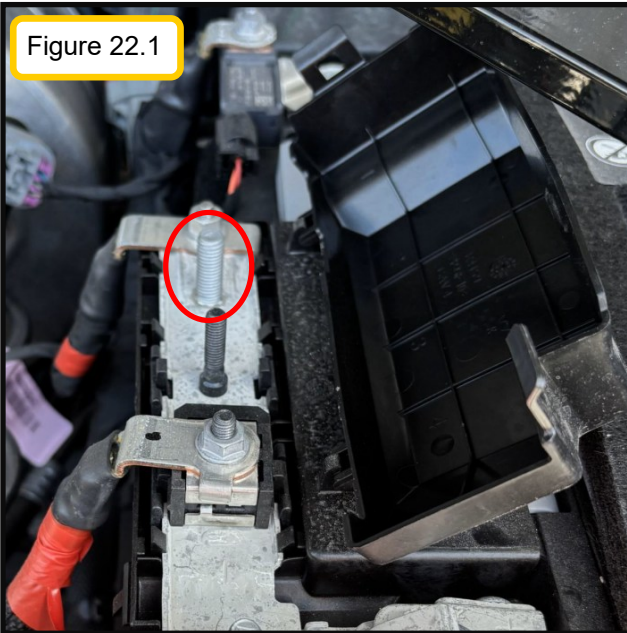


Figure 22.2



Figure 22.3

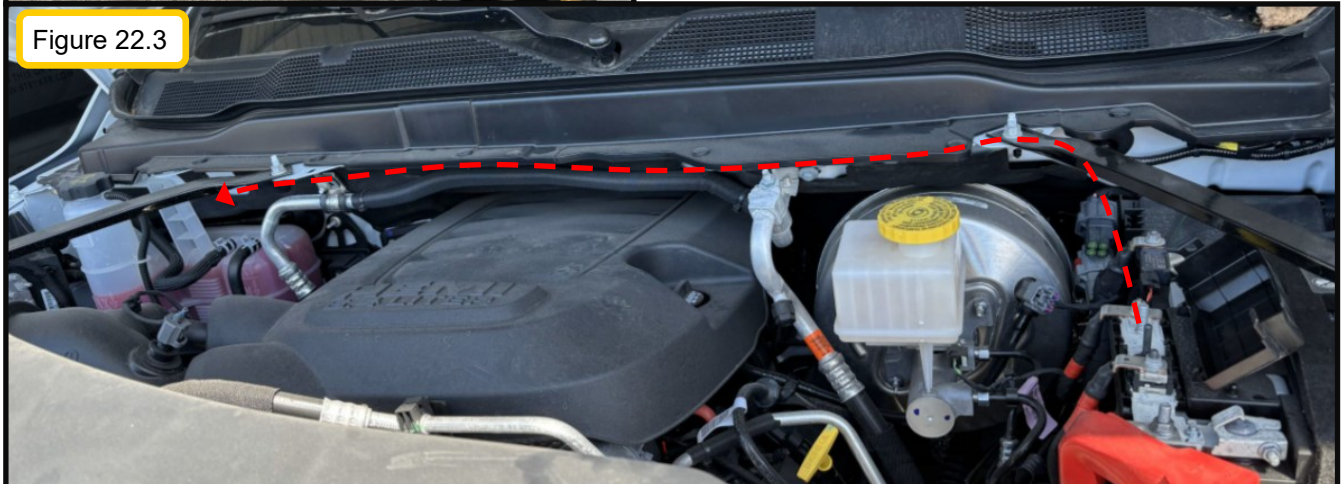

Option 2: Driver-Side or Centered Battery Silverado Passenger-Side Battery

Step 4:

Locate 74342 E-LOCK PWR - DRIVER HARN

Remove the fuse from the inline fuse holder until the end of the install.

Locate the OEM battery terminals under the hood. In some cases, the negative terminal is not available and a nearby ground stud will be used instead.

Step 5:

Attach the red wire with the ring terminal to the battery positive post or a post of proper size in the power distribution block.

Attach the black wire with the ring terminal to either the negative terminal of the battery, or a nearby ground stud on the chassis of the vehicle if the negative battery terminal is not available.

WARNING: DO NOT USE THE BATTERY CLAMP NUTs TO SECURE HARNESS

Torque the battery terminals to 8 Nm.

Step 6:

Route the power harness over to the passenger side of the vehicle, securing to nearby OEM harnessing whenever possible along the liner below the front windshield.

Figure 23.1



Figure 23.2



Step 7:

Route the harness down and around the front passenger-side wheel well so that it emerges under the front passenger footwell floor. (fig 23.1)

Step 8:

With the trim panels removed from installing the Posi-Taps and Relay Module, lift the carpeting and locate the OEM rubber or plastic grommet in the floor of the front passenger footwell. (fig 23.2)

If the OEM grommet is rubber, cut two 3/4" slits.

If the OEM grommet is plastic, drill a 3/4" hole in the grommet.

If an OEM grommet is not available, drill a 1" hole in a flat section of the floor as close to the Posi-Tap location as possible. (fig 23.3)

Insert the grommet included with the 74341 harness into the hole to prevent damage to the harnesses. (fig 23.4)

Step 9:


Route the power harness up through the grommet. (fig 23.2)

Figure 23.3



Figure 23.4



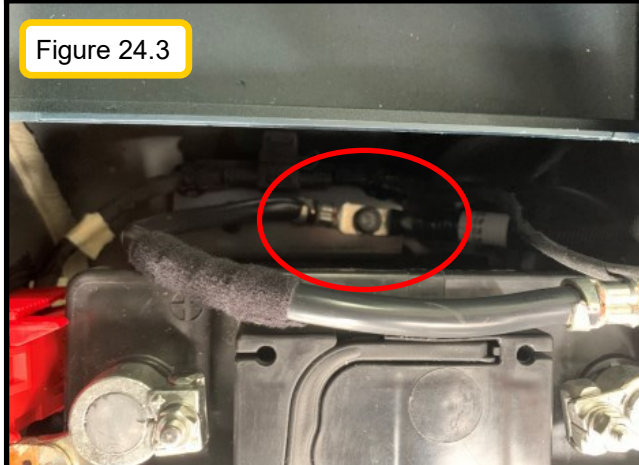

Maverick Hybrid Specific Routing Steps

Step 10:

Locate 74343 E-LOCK PWR - PASSENGER HARN

Remove the fuse from the inline fuse holder until the end of the install.

Locate the OEM battery under the rear seat.

Step 11:

Remove the positive terminal with the bus bar from the battery by loosening the clamp fastener. (Fig 24.1)

Step 12:

Attach the positive wire (with the in-line fuse) to the bus bar. (Fig 24.2)

Step 13:

Attach the negative wire with the ring terminal to the ground stud next to the battery. (Fig 24.3)

WARNING: DO NOT USE THE BATTERY CLAMP NUTs TO SECURE HARNESS

Step 14:

Reinstall the battery positive terminal.

Torque the battery clamp fastener to 5.2Nm, the bus bar locknut to 10Nm, and the ground fastener to 35Nm.

Step 15:

Route the power harness under the trim and kick panels to the front passenger foot well where the Relay Module 74533 is connected to the BCM harness.

Chevy Silverado EV Specific Routing Steps

Step 16.

When routing the battery harness down the footwell behind the liner, pass it through the space between the outer body panel and the chassis. (Fig 25.1)



Step 17.

Locate the small circular grommet a few inches above the lower passenger door hinge. Remove that grommet, cut a hole in it, and feed the battery harness through the hole and grommet into the passenger foot well. Reinstall the grommet and use silicone to seal the hole. (Fig 25.2)



Body Harness Install Instructions


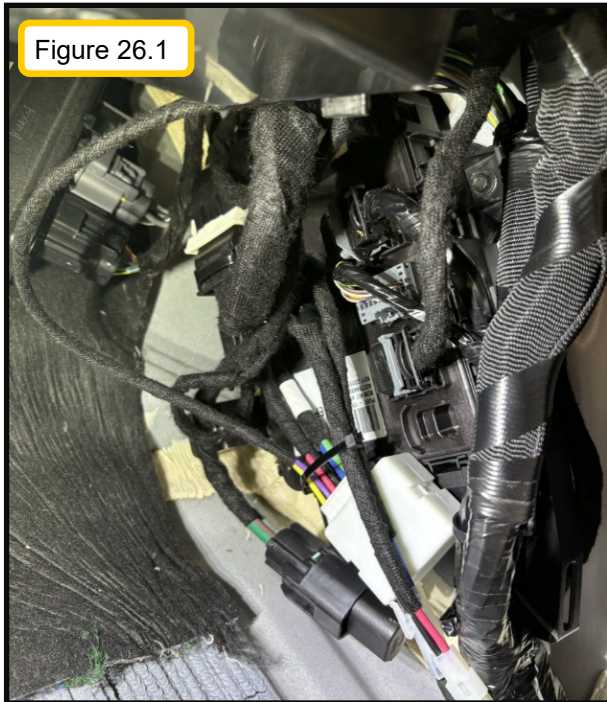


Figure 26.1

Step 1:

Plug the power harness (74342 or 74343) into its mating connector on the OEM Relay Harness 74341, and plug the control harness (74344 or 74345) into its mating connector on the OEM Relay Harness 74341. See Figure 3.1 for reference.

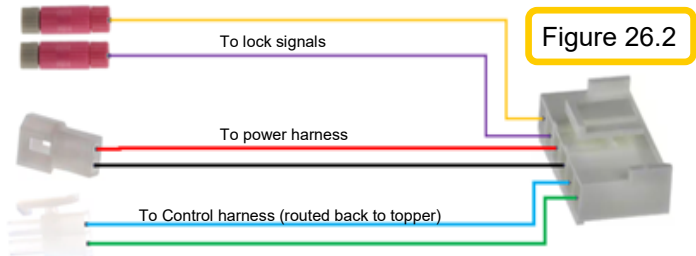

Tuck the Relay Module and attached harnessing behind the wires under the dash. Use zip ties to secure the Relay Module and connectors to the OEM harnesses at least 10cm above the floor of the vehicle.

Step 2:

Route the E-lock control harness back under where the passenger kick plate will be, then down the same grommet that the power harness came up. (Fig 26.3 and 26.4) (this will be the only harness on Maverick HYB).

Step 3:

Secure the harnesses to OEM harnesses with zip ties and seal the grommet gaps with silicone.



Figure 26.3

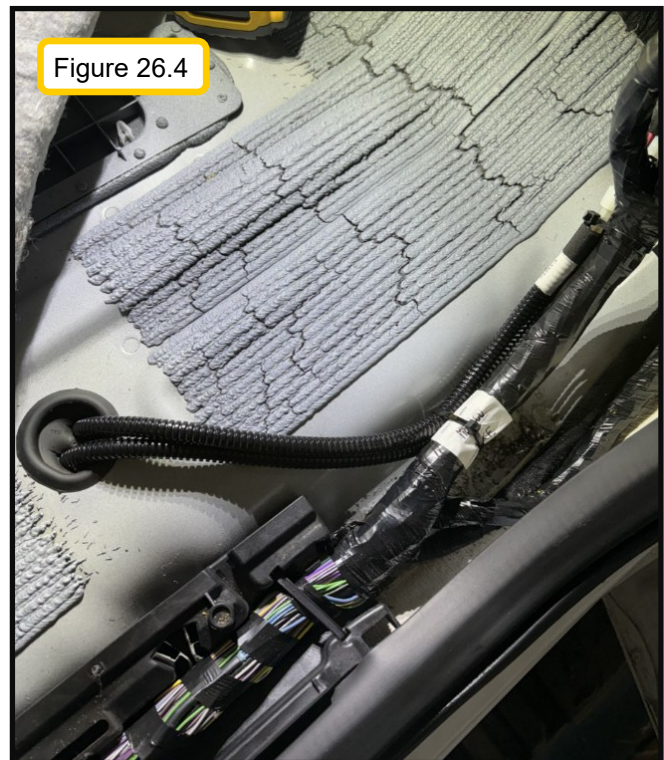


Figure 26.4



Figure 27.1

Step 9:

Using the P-clips and self tapping screws provided in the power harness bag, secure the excess power harness under the vehicle as shown. Use a zip tie to tie up the excess so it does not hang down.



Figure 27.2

Step 10:

Route the control harness along the length of the cab towards the bed. Use the P-clips and self tapping screws provided in the harness bag to secure the harness as shown. Continue backwards until reaching the gap between the cab and bed of the vehicle. (fig 27.2 and 27.3)



Figure 27.3

Step 11:

In the front passenger-side corner of the bed, locate the OEM hole (there may be a grommet) and feed the fish tape down through the side wall of the bed. Locate the end of the fish tape below the vehicle as shown in Fig 27.4 and tape the end of the control harness to the fish tape. Pull the harness up through the side wall of the bed and out the OEM hole as shown in Fig 27.6.

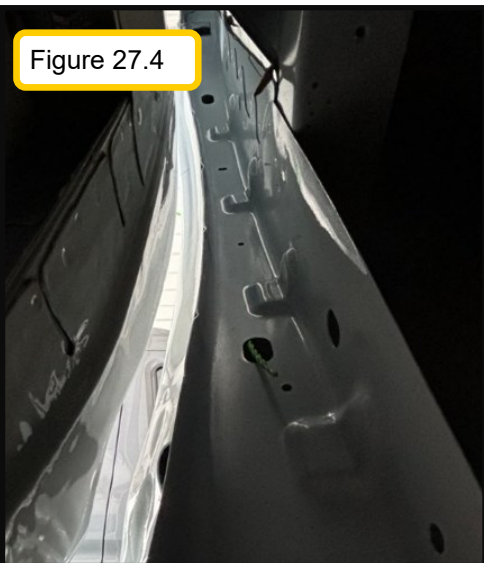


Figure 27.4

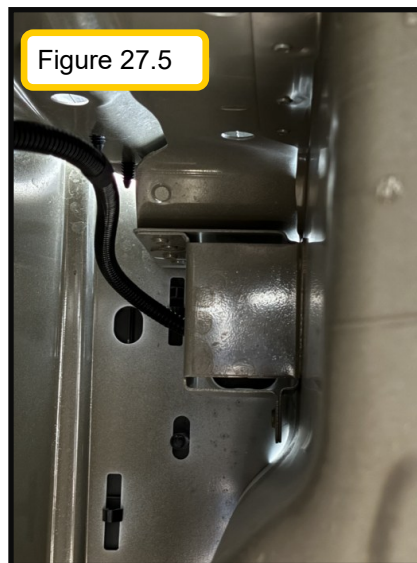


Figure 27.5



Figure 27.6

Chevy Silverado EV Specific Routing Steps

Step 12.

Route the body harness along the passenger side kick panels to behind the back seat. There you will find a grommet with an OEM harness running into it.

Step 13.

Unscrew the felt coverings in the passenger footwell. Locate the other end of the grommet protruding out of the cab. Unwrap the end of the grommet shown in Fig 28.3 and push the harness through the grommet from the cab side.

Step 14.

Use fish tape to route the harness up through the OEM hole shown in Fig 28.4



Figure 28.1



Figure 28.2



Figure 28.4

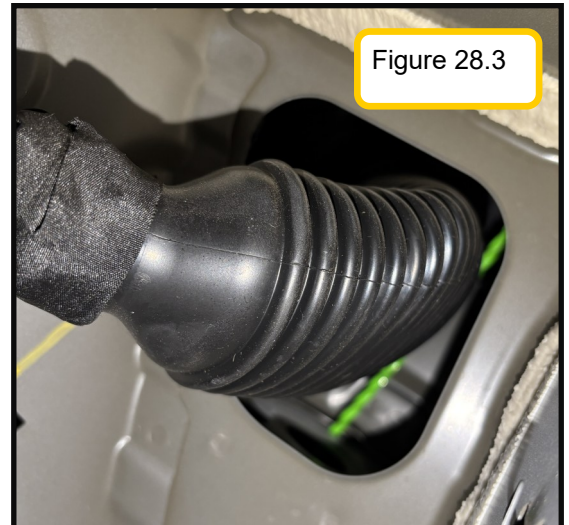


Figure 28.3

Adrian Cap Harness Install Instructions

1. Grab the 3-Split Harness (74346, 74347, or 74348) included in this kit. (Green in Figure 29.2)

2. Plug the 3-split section of harness into the control harness, and continue routing up the topper. Use the stud mount zip ties to secure the control harness to the screw threads inside the topper frame.



3. Once at the top, the harness will split three ways. (red line shows the part before the harness splits). (Fig 29.1)

4. The shortest end of the 3-split harness will connect directly to the passenger door harness (blue line).

5. Use tree cable ties to route the longest end of the 3-split harness to the rear door, going along the black topper support as shown to the right (yellow line) (Fig 29.4).

6. Use tree cable ties to route the remaining end of the harness to the driver's side door by going across the topper crossbeam closest top the cab (Figure 29.3).

NOTE: The rear door will have conflict with the magnet brackets, use the available pre-drilled holes to secure the harness.

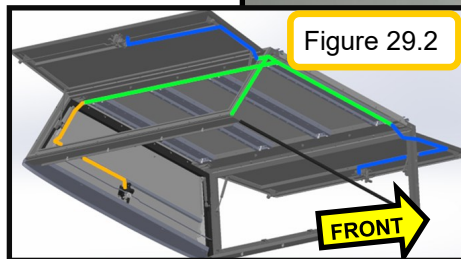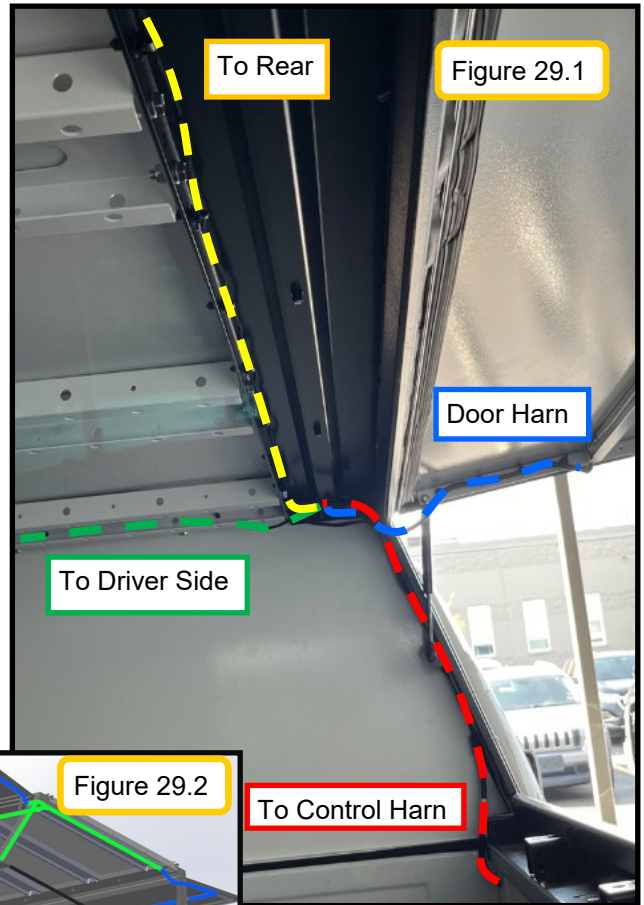


Adrian Cap Harness Install Instructions

Silverado - Specific Steps

For Adrian Caps with hatch rear doors, Silverado E-Lock kits (TELH) will route through the cap mirrored to the rest of the vehicles. The control harness will come up the front, driver- side topper pillar, and the routing will go across the topper to the passenger side door, and to the rear door on the driver side.

For Adrian Caps with barn / walk-in doors, Silverado ICE and Hybrid E-Lock kits (TELB) will utilize an additional harness, 77195 Adrian Cap E-Lock Extension Harness, to connect between the control harness and the 3-split harness as shown in the overall harness diagram on page 3. Follow the instructions below for installing this additional harness.

Connect the extension harness between the control harness and the 3-split harness (red circles). Route the harness as shown below (red arrows) and use the included stud-mount zip ties to anchor the harness up the pillar like the 3-split harness does normally. Route the 3-split harness like normal (blue arrows) back from the front top passenger-side corner of the topper (blue circle).

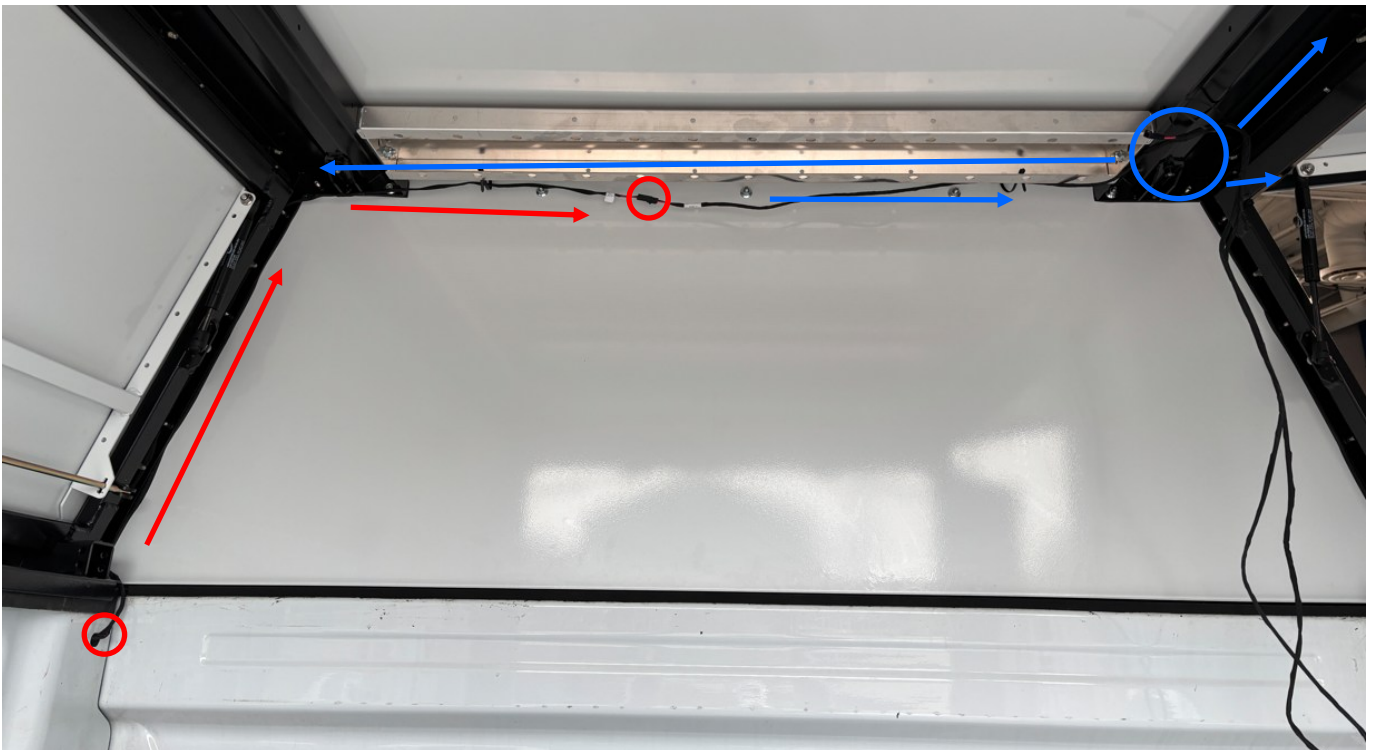

7. Before routing the door harnesses and with the locks removed, ensure the routing hole in the tube is 5/8". If it is not, use a 5/8" drill bit to widen out the hole. This only needs to be done on the hole the harness will be routed through. Use a deburring tool to clean up the edges. (Fig 31.1)





8. On each door, route the respective harness through the beam's opening on its left/right sides (depends on the door). (Fig 31.5)

9. Feed the harnessing through until the connector end reaches the first pre-drilled hole in the beam. (Fig 31.2)

10. Using picks or a small screwdriver, maneuver the connector through the hole so it comes out next to the lock. (Figure 31.3 & 31.4)

NOTE: Since the hole is on both sides of the tube, try to push on the connector from the outside of the hole, while using pick tools at the connector to wedge it out.

WARNING: These connectors are small, so they can be delicate. Take care to use minimal force when manipulating them through the hole.

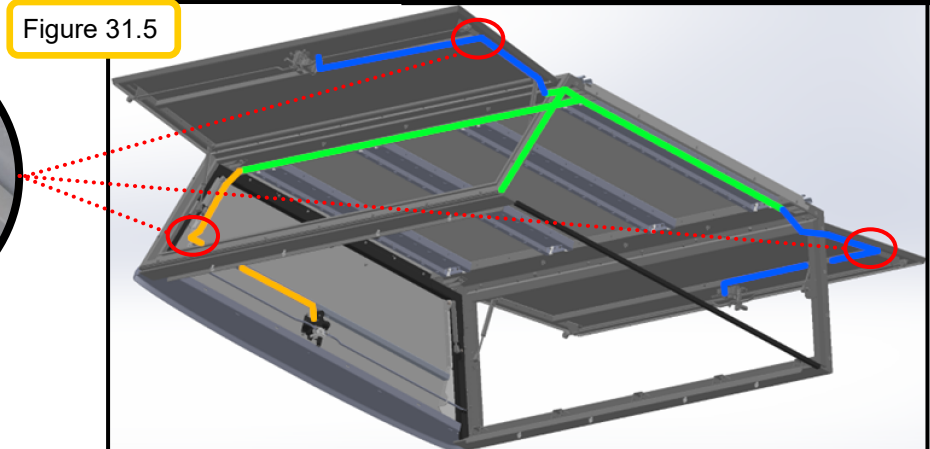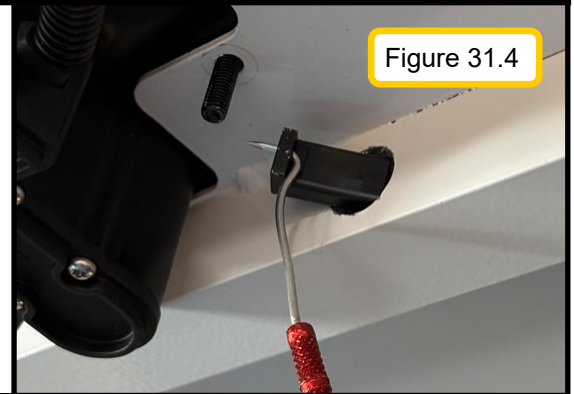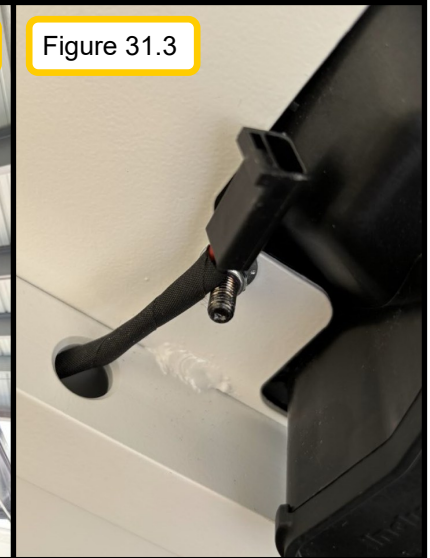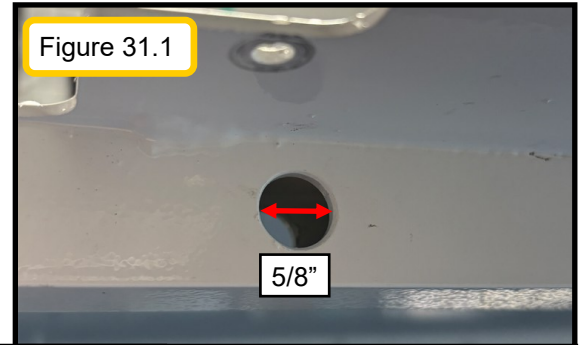

11. Install the E-locks using [4] 8mm nuts (FAS0917), add the P-clip included in the door harness bag to the lock harness as shown in fig 32.2, and secure the locking rods themselves using [2] 10mm nuts (FAS0918). (Fig 32.1)

****TORQUE ALL NUTS TO 2.2Nm****

12. Plug in the E-Lock harness into the door harness and guide the connectors through the hole back into the tube until the grommet is able to be stuck into the hole.

NOTE: Try pulling gently on the other end of the door harness to pull the connectors back into the tube.

NOTE: The wires going into both connectors may not match, but as long as the connectors lock together that is the important part

WARNING: These connectors are small, so they can be delicate. Take care to use minimal force when manipulating them through the hole.

13. The grommet is designed to be squished into place. Use a small dull screwdriver or plastic blade to press the angled piece of the blade through the hole, leaving the larger section outside the tube. (Fig 32.2)

14. Stuff the other end of the door harness into the tube up to the grommet. (Fig 32.3)

15. Secure the harness up the door with Christmas tree zip ties along the inside of the door shock. (Fig 32.4 & 32.5)

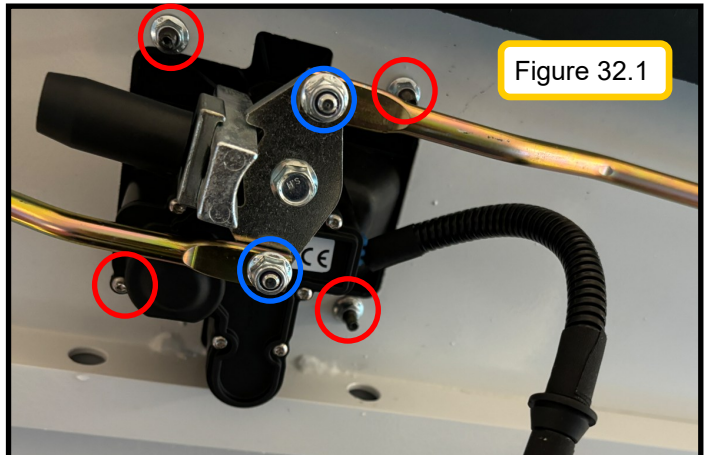


Figure 32.1

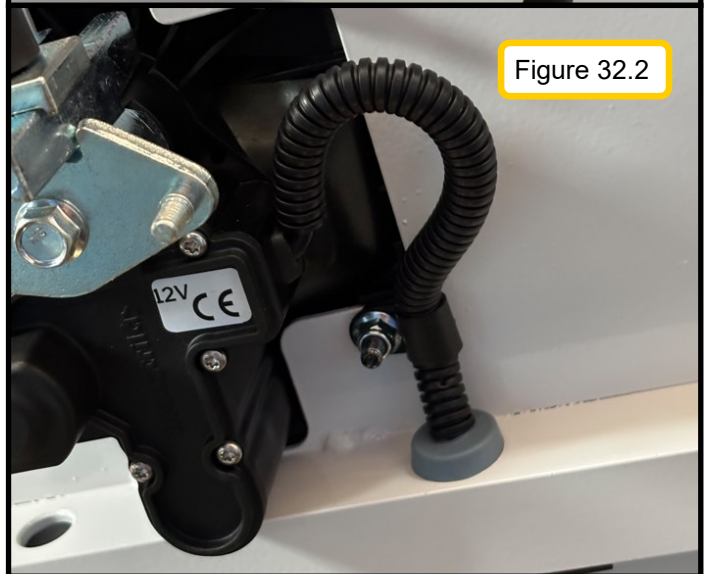


Figure 32.2


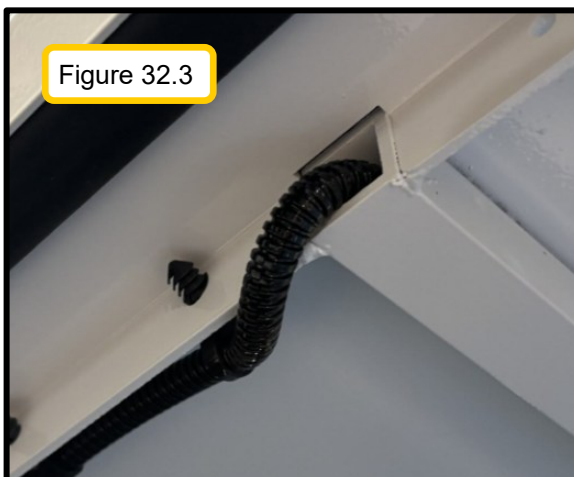


Figure 32.3

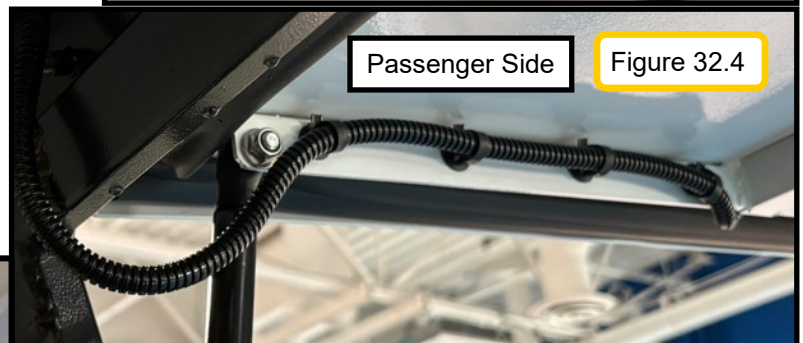

Passenger Side

Figure 32.4

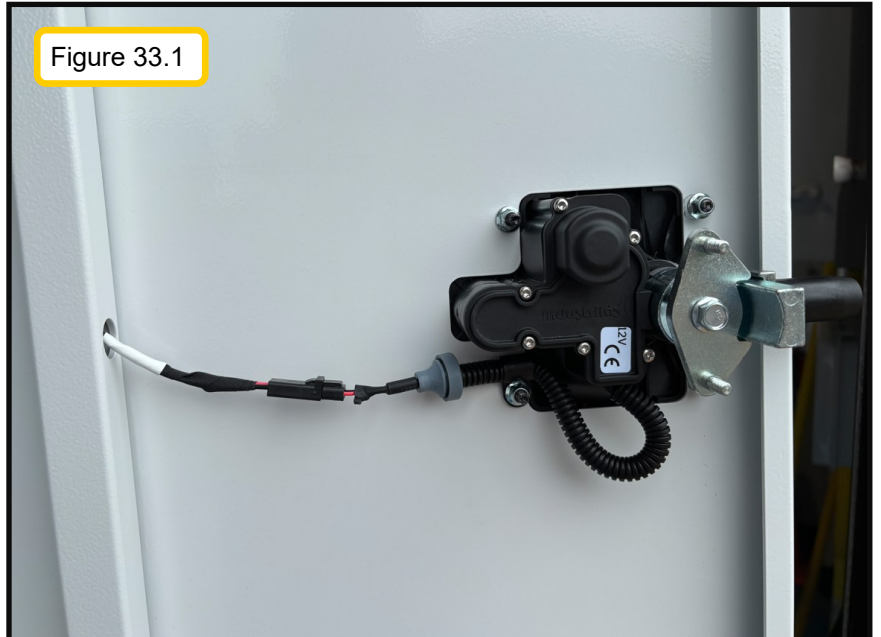


Figure 32.5

Driver Side

16. If the Adrian Cap has the barn door / walk-in topper, install the rear lock as shown. Use the P-clip in the same way as the side doors, and secure the E-Lock harness to the lower left lock mounting stud. (fig 33.1)

Figure 33.1



17. Route the rear door harness behind the shock, along the upper rail, and down into the square tube similar to the hatch door routing. (fig 33.2 & 33.3)

Figure 33.2



Figure 33.3



18. Plug the door harness into the 3-Split harness and use a stud-mount style zip tie included in the harness bag to secure the harness to the inside of the topper. Make sure to keep enough slack in the door harness so there's at least 1" free hanging clearance between the topper frame and the harness. (Fig 34.1 & 34.2)

19. Once all three locks and door harnesses are installed, test functionality of the locks. Open the handles on the locks and notice the small metal T-shaped pin underneath.

- Lock the vehicle, and the metal pin on each lock should turn 90 degrees into the horizontal position.

- Unlocking the vehicle should return the pin to its original vertical orientation.



- If the pins don't turn, or turn opposite of where they should, refer to pg. 11 for troubleshooting notes.

20. Secure any loose wiring under kick plates and behind the knee bolsters.

21. Secure any excess underbody wiring using zip ties. (Fig 27.1—27.3)

22. Reinstall the trim panels and clean up the vehicle.

INSTALL COMPLETE

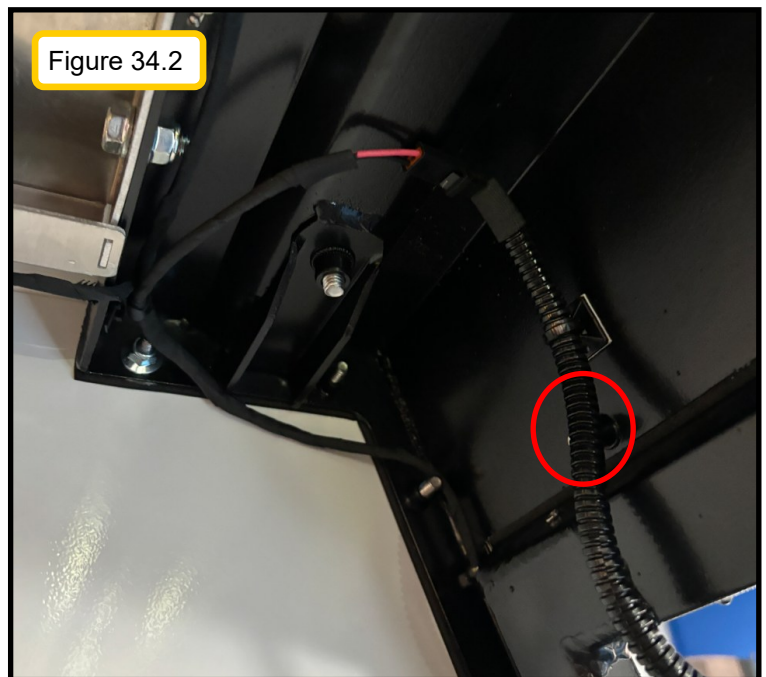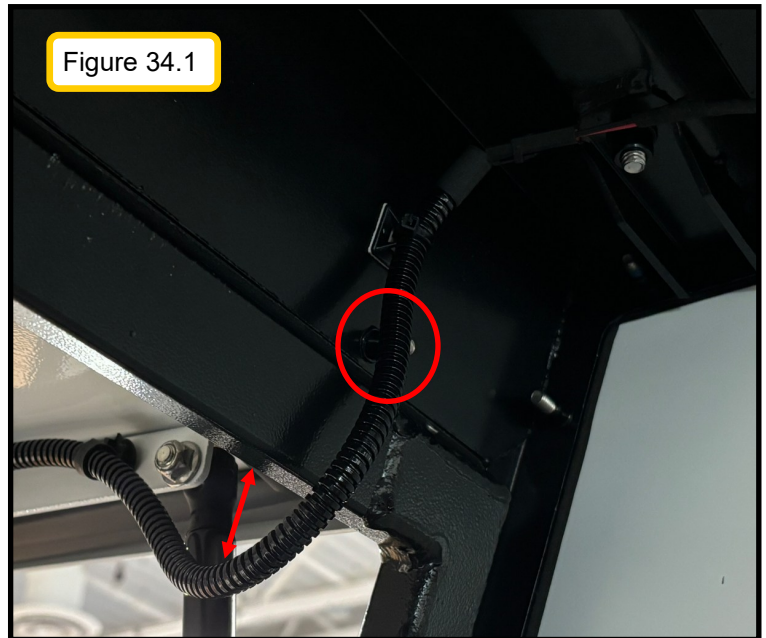

Roll-up Door Topper Only

Connect the 80678 E-Lock Roll-up Door Harness to the 3 Split Harness at the rear of the Topper by the Roll-up Door. Figure 35.1

Route the shorter leg of the harness straight down to be connected to the E-lock via butt-splice connectors.

Route the longer leg over and across the Roll-up Door then down the other side to be connected to the E-lock via butt-splice connectors. Figure 35.2

80678		E-Lock
RED	→	YELLOW
BLACK	→	RED

You may need to coil up extra harness as shown in Figure 35.3

Ensure butt-spliced are heated to be sealed.

Using the provided key for the Roll-up Door, ensure that the lock is in the position shown in Figure 35.4.

IF KEY IS NOT TURNED TO PROPER POSITION E-LOCKS WILL NOT LATCH

INSTALL COMPLETE

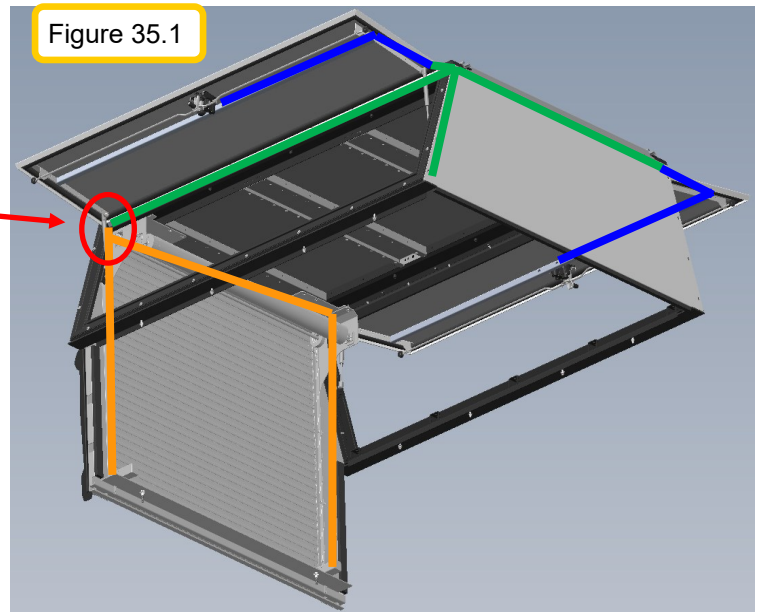


Figure 35.1

Figure 35.2

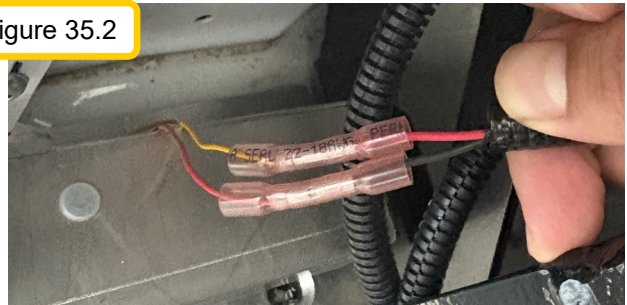


Figure 35.3



Figure 35.4



**Horizontal Position:
CORRECT**



INSTR.
NUMBER : **71622**

PG: **1** REV: **V**

PART
NUMBER : **TFK__T178HM23W**

PART
DESC. : ASM INS, TFK__T178HM23W

BOM FOR 6.5' F-150

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	TSK78M23W	TOP, SIDE KIT,78",M,23,W	2
2	TCK78HM23W	TOP,CLOSE KIT,78",HM23,W	1
3	TRK7823W	TOP, ROOF KIT,78",23,W	1
4	THKFDT178M23	HDW KIT, TFKFDT178HM23W	1
5	TMLHK	Topper Mechanical Lock Hatch Kit	1

*** E-LOCK VERSION SWAP TMLHK WITH TELH05**

BOM FOR 6.5' SILVERADO 1500

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	TSK78M23W	TOP, SIDE KIT,78",M,23,W	2
2	TCK78HM23W	TOP,CLOSE KIT,78",HM23,W	1
3	TRK7823W	TOP, ROOF KIT,78",23,W	1
4	THKGMT178M23	HDW KIT, TFKGMT178HM23W	1
5	TMLHK	Topper Mechanical Lock Hatch Kit	1
19	81552-W	INTERIOR, LGT MAG BRKT, WHITE	1

*** E-LOCK VERSION SWAP TMLHK WITH TELH02**


NOTE: THESE INSTRUCTIONS ARE VALID FOR ALL TFK FULL TOPPER KITS. A FEW BOM KITS ARE SHOWN FOR REFERENCE ONLY.

INSTRUCTIONS SHOWS F-150 BODY DURING INSTALLATION

FASTENER AND HOLE COUNTS MAY BE DIFFERENT BETWEEN TOPPER KITS.

**E-LOCK VERSIONS:
SWAP M WITH E IN PART NUMBER**

EXAMPLE: TFKFDT178HM23W BECOMES TFKFDT178HE23W

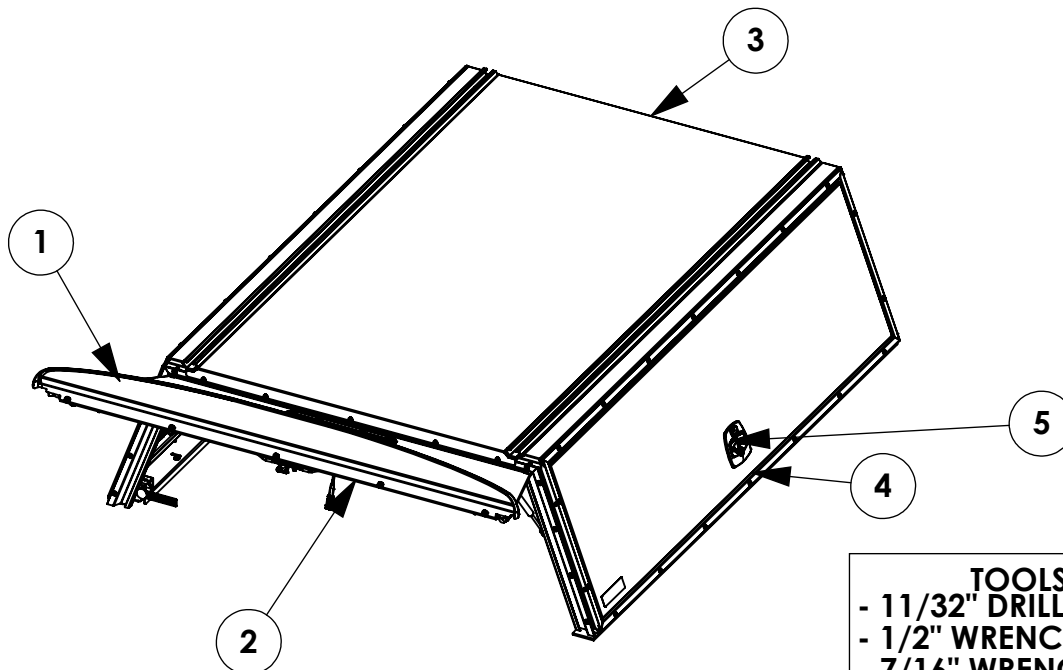

TOOLS NEEDED:

- 11/32" DRILL BIT
- 1/2" WRENCH & SOCKET
- 7/16" WRENCH
- M10 SOCKET
- M8 SOCKET
- M4 ALLEN
- 3/16" ALLEN
- 5/32" ALLEN
- DRIVE RATCHET / IMPACT
- SCISSORS
- TAPE MEASURE
- ALIGNMENT PUNCH
- 1/4" RIVET TIP

INSTR.
NUMBER : 71622

PG:
2

REV:
V

PART
NUMBER : TFK__T178HM23W

PART
DESC. : ASM INS, TFK__T178HM23W

E-LOCK VERSIONS:
SWAP M WITH E IN PART NUMBER
EXAMPLE: TFKFDT178HM23W
BECOMES TFKFDT178HE23W

BOM FOR 6.3' RAM


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	TCK78HM23W	TOP,CLOSE KIT,78",HM23,W	1
2	THKRAM175M23	HDW KIT, TCKRAMT175HM23W	1
3	TRK7523W	TOP, ROOF PANEL KIT, RAM	1
4	TSK75M23W	TOP, SIDE KIT, 78" RAM	2
5	TMLHK	Topper Mechanical Lock Hatch Kit	1

*** E-LOCK VERSION SWAP TMLHK WITH TELH02**

BOM FOR 5.7' RAM

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	TSK66M23W	TOP, SIDE KIT,66",M,23,W	2
2	TCK78HM23W	TOP,CLOSE KIT,78",HM23,W	1
3	TRK6623W	TOP, ROOF KIT,66",23,W	1
4	THKRAM167M23	HDW KIT, TFKRAM167HM23W	1
5	TMLHK	Topper Mechanical Lock Hatch Kit	1

*** E-LOCK VERSION SWAP TMLHK WITH TELH01**

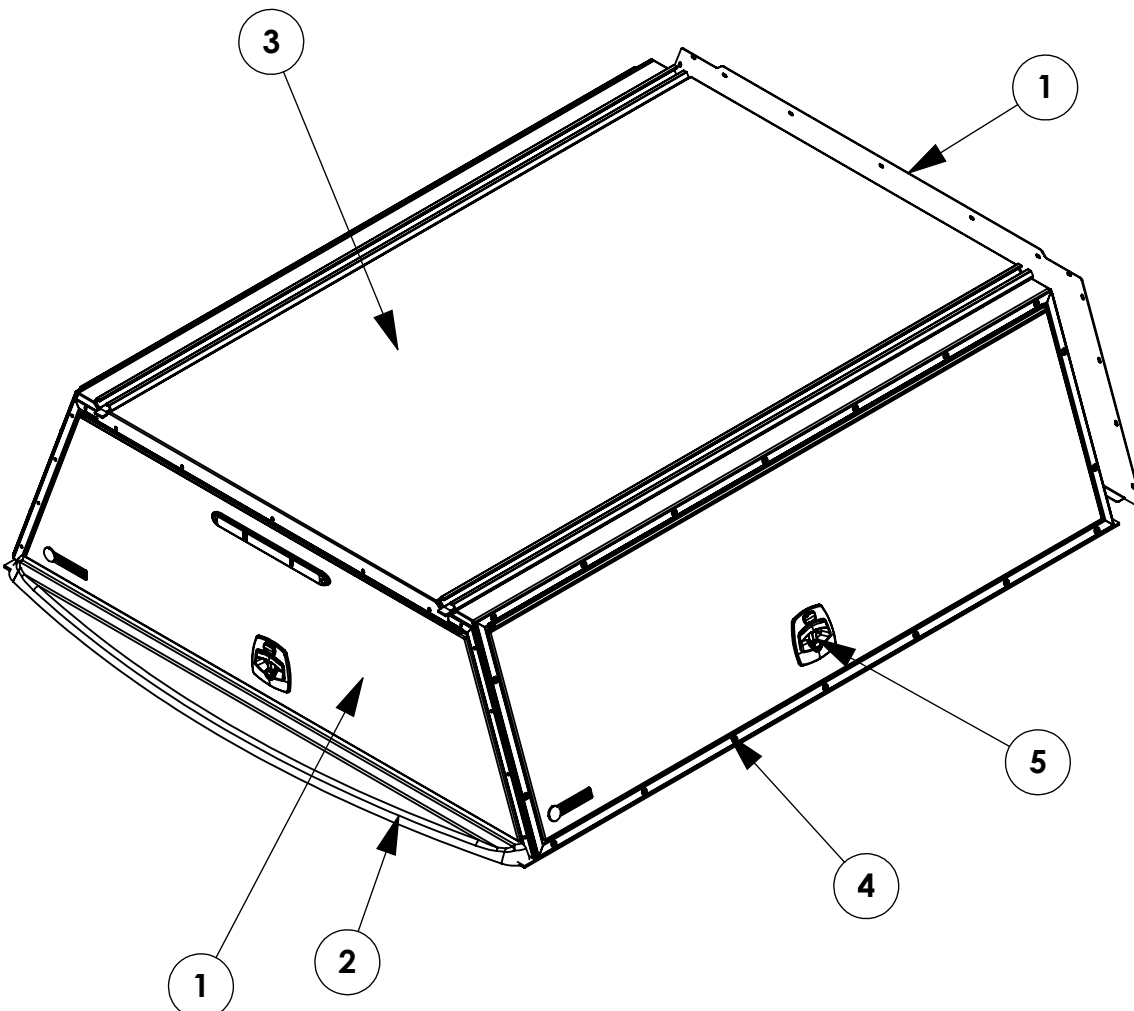

INSTR.
NUMBER : 71622

PG:
3

REV:
V

PART
NUMBER : TFK__T196HM23W

PART
DESC. : ASM INS, TFK__T178HM23W

E-LOCK VERSIONS:
SWAP M WITH E IN PART NUMBER
EXAMPLE: TFKFDT178HM23W
BECOMES TFKFDT178HE23W

BOM FOR 8.0' 23" TALL FORD F-150, F-250, F-350

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	TSK96M23W	TOP, SIDE KIT,96",M,23,W	2
2	TCK78HM23W	TOP,CLOSE KIT,78",HM23,W	1
3	TRK9623W	TOP, ROOF KIT,96",23,W	1
4	THKFDT196M23	HDW KIT, TFKFDT196HM23W	1
5	TMLHK	Topper Mechanical Lock Hatch Kit	1

*** E-LOCK VERSION SWAP TMLHK WITH TELH06**

BOM FOR 8.0' 23" TALL SILVERADO 1500, 2500, 3500


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	TSK96M23W	TOP, SIDE KIT,96",M,23,W	2
2	TCK78HM23W	TOP,CLOSE KIT,78",HM23,W	1
3	TRK9623W	TOP, ROOF KIT,96",23,W	1
4	THKGMT196M23	HDW KIT, TFKGMT196HM23W	1
5	TMLHK	Topper Mechanical Lock Hatch Kit	1

*** E-LOCK VERSION SWAP TMLHK WITH TELH03**

BOM FOR 8.0' 23" TALL RAM 1500, 2500, 3500

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	TSK96M23W	TOP, SIDE KIT,96",M,23,W	2
2	TCK78HM23W	TOP,CLOSE KIT,78",HM23,W	1
3	TRK9623W	TOP, ROOF KIT,96",23,W	1
4	THKRAM196M23	HDW KIT, TFKRAM196HM23W	1
5	TMLHK	Topper Mechanical Lock Hatch Kit	1

*** E-LOCK VERSION SWAP TMLHK WITH TELH03**

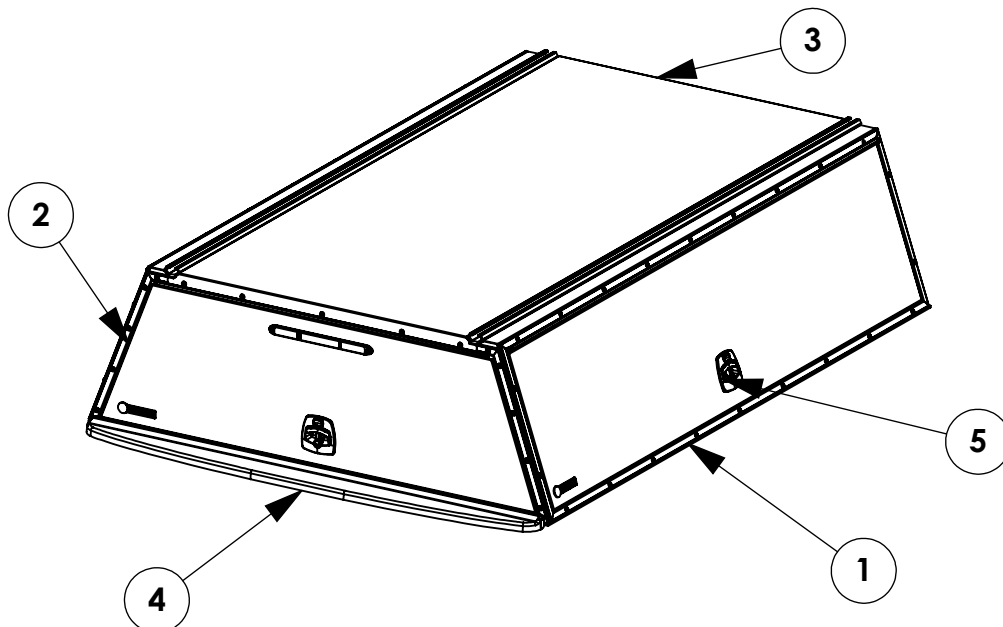

INSTR. NUMBER : 71622	PG: 4	REV: V	BOM FOR 8.0' 26" TALL FORD F-150, F-250, F-350			
			ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
PART NUMBER : TFK__T296HM26W			1	TSK96M26W	TOP, SIDE KIT,96",M,26,W	2
			2	TCK80HM26W	TOP,CLOSE KIT,80",HM263,W	1
PART DESC. : ASM INS, TFK__T178HM23W			3	TRK9623W	TOP, ROOF KIT,96",23,W	1
			4	THKFDT296M26	HDW KIT, TFKFDT296HM26W	1
			5	TMLHK	Topper Mechanical Lock Hatch Kit	1

E-LOCK VERSIONS:
SWAP M WITH E IN PART NUMBER
EXAMPLE: TFKFDT178HM23W
BECOMES TFKFDT178HE23W

*** E-LOCK VERSION SWAP TMLHK WITH TELH06**

BOM FOR 8.0' 26" TALL SILVERADO 1500, 2500, 3500

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	TSK96M26W	TOP, SIDE KIT,96",M,26,W	2
2	TCK80HM26W	TOP,CLOSE KIT,80",HM263,W	1
3	TRK9623W	TOP, ROOF KIT,96",23,W	1
4	THKGMT296M26	HDW KIT, TFKGMT296HM26W	1
5	TMLHK	Topper Mechanical Lock Hatch Kit	1


*** E-LOCK VERSION SWAP TMLHK WITH TELH03**



BOM FOR 8.0' 26" TALL RAM 1500, 2500, 3500
NOTE: SPECIAL ASSEMBLY INSTRUCTION SHOWN ON SHEET 20

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	TSK96M26W	TOP, SIDE KIT,96",M,26,W	2
2	TCK80HM26W	TOP,CLOSE KIT,80",HM263,W	1
3	TRK9623W	TOP, ROOF KIT,96",23,W	1
4	THKRAM296M26	HDW KIT, TFKRAM296HM26W	1
5	TMLHK	Topper Mechanical Lock Hatch Kit	1

*** E-LOCK VERSION SWAP TMLHK WITH TELH03**

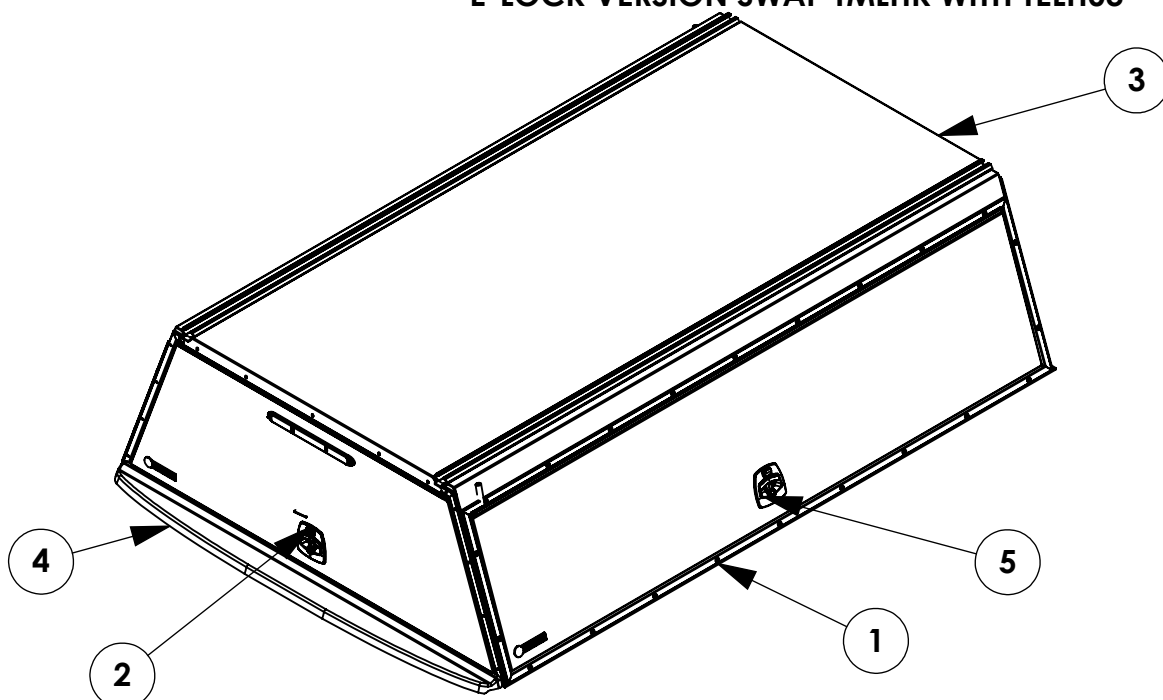

INSTR. : 71622
NUMBER

PG: 5
REV: V

PART : TFKFDT166HM23W
NUMBER


PART :
DESC. : ASM INS, TFK__T178HM23W

E-LOCK VERSION: TFKFDT166HE23W

BOM FOR 5.5' 23" TALL FORD F-150 LIGHTNING/ICE

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	TSK66M23W	TOP, SIDE KIT,66",M,23,W	2
2	TCK78HM23W	TOP,CLOSE KIT,78",HM23,W	1
3	TRK6623W	TOP, ROOF KIT,66",23,W	1
4	THKFDT166M23	HDW KIT, TFKFDT166HM23W	1
5	TMLHK	Topper Mechanical Lock Hatch Kit	1


*** E-LOCK VERSION SWAP TMLHK WITH TELH04**

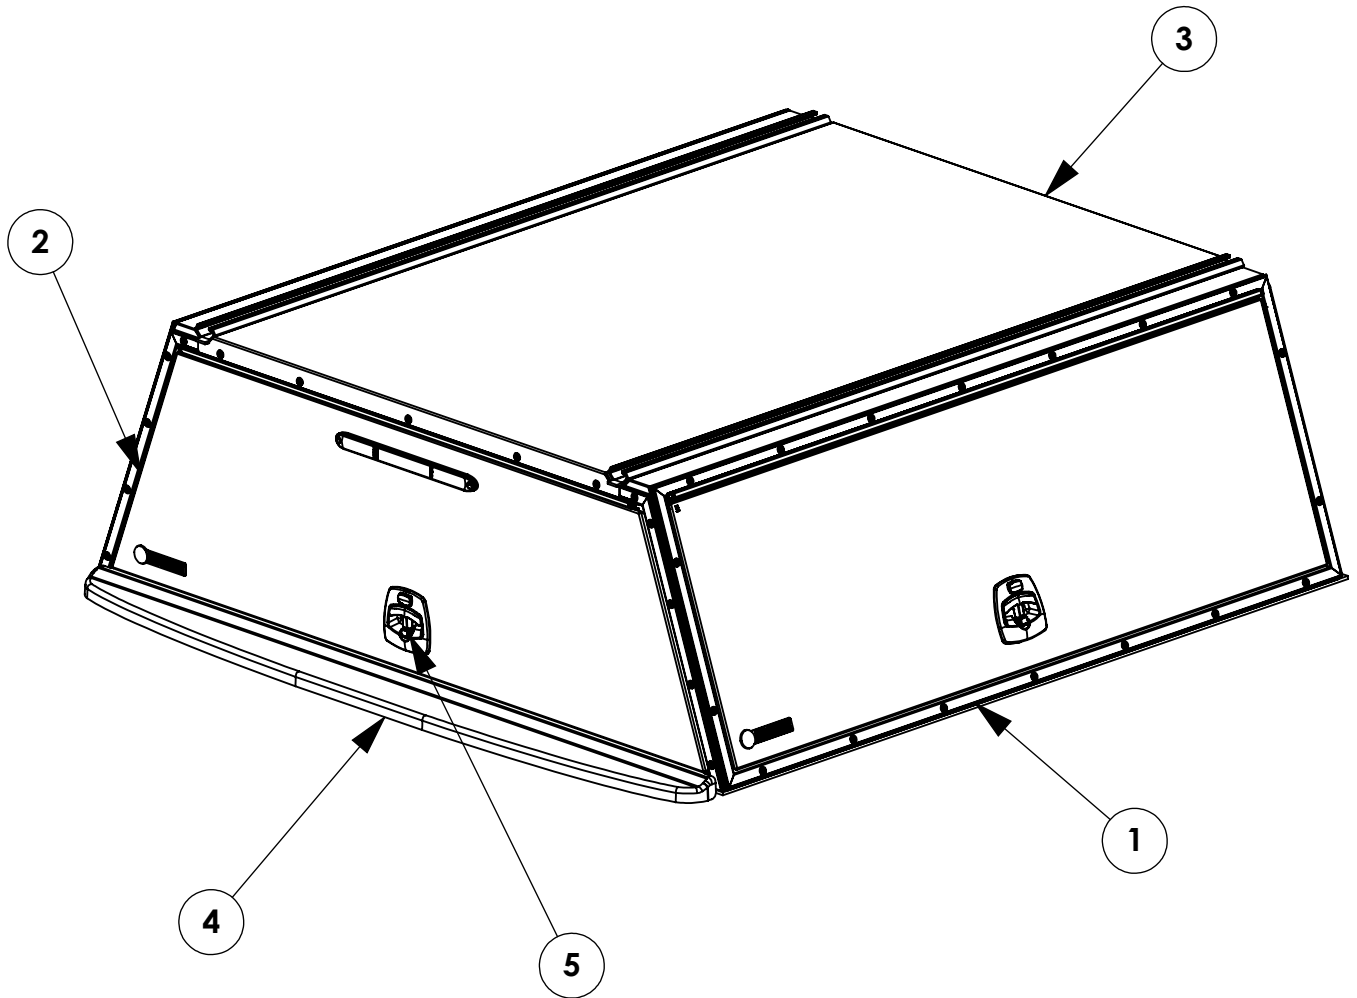

INSTR. : 71622 NUMBER		PG: 6	REV: V	BOM FOR 5' FORD RANGER			
PART : TFKRNG160HM23W NUMBER				ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
PART : DESC. : ASM INS, TFK__T178HE23W				1	TSKRNG60M23W	TOP, SIDE KIT,60", RANGER,M,23,W	2
				2	TCK72HM23W	TOP,CLOSE KIT,72",HM23,W	1
				3	TRK6023W	TOP, ROOF KIT,60",23,W	1
				4	THKRNG160M23	HDW KIT, TFKNFT172HM23W	1
				5	TMLHK	TOPPER MECHANICAL LOCK HATCH KIT	1

E-LOCK VERSION: TFKRNG160HE23W

* E-LOCK VERSION SWAP TMLHK WITH TELH04

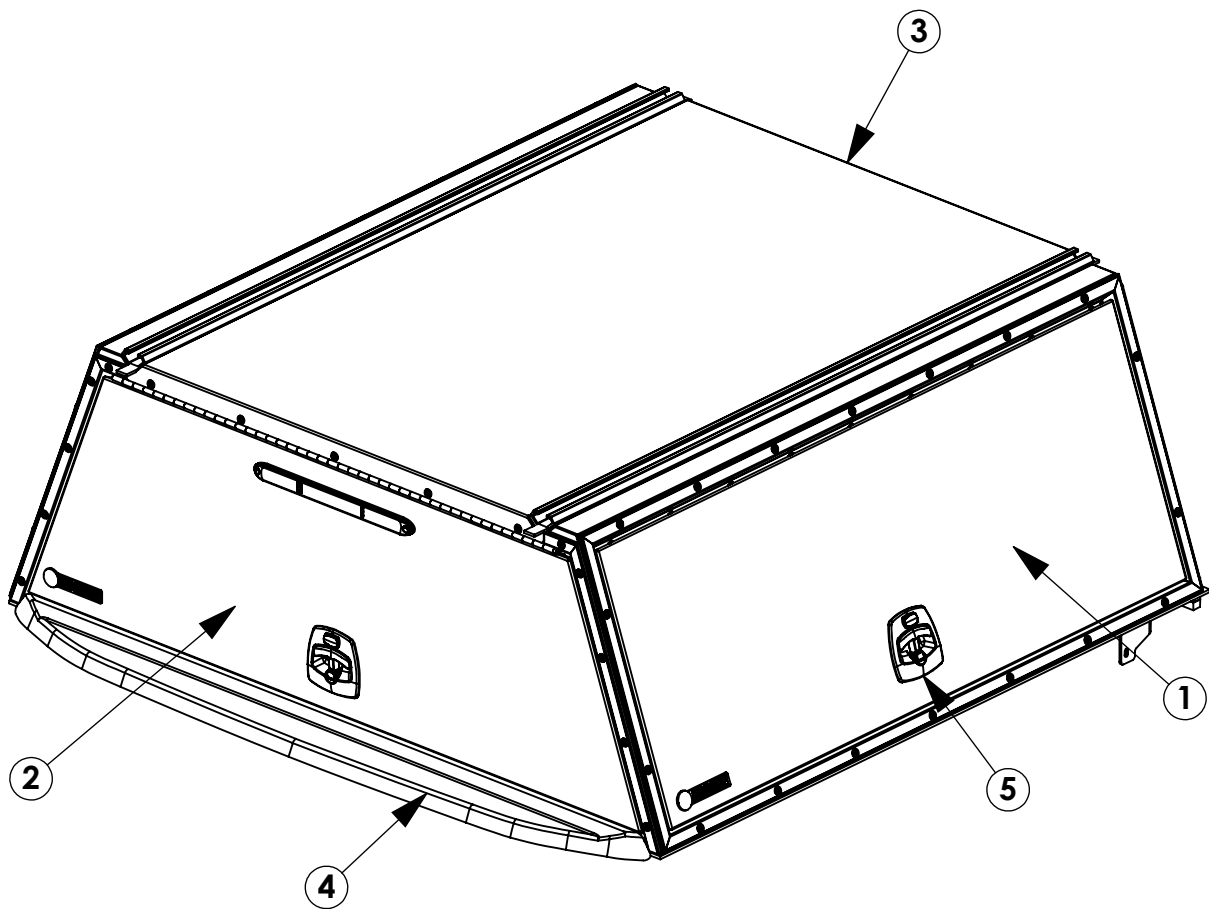


INSTR. NUMBER	: 71622	PG: 7	REV: V
PART NUMBER	: TFKNFT172HM23W		
PART DESC.	: ASM INS, TFK__T178HM23W		

E-LOCK VERSION: TFKNFT172HE23W

BOM FOR 6.0' 23" TALL NISSAN FRONTIER

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	TSK72M23W	TOP, SIDE KIT,72",M,23,W	2
2	TCK72HM23W	TOP,CLOSE KIT,72",HM23,W	1
3	TRK7223W	TOP, ROOF KIT,72",23,W	1
4	THKNFT172M23	HDW KIT, TFKNFT172HM23W	1
5	TMLHK	Topper Mechanical Lock Hatch Kit	1

*** E-LOCK VERSION SWAP TMLHK WITH TELH05**

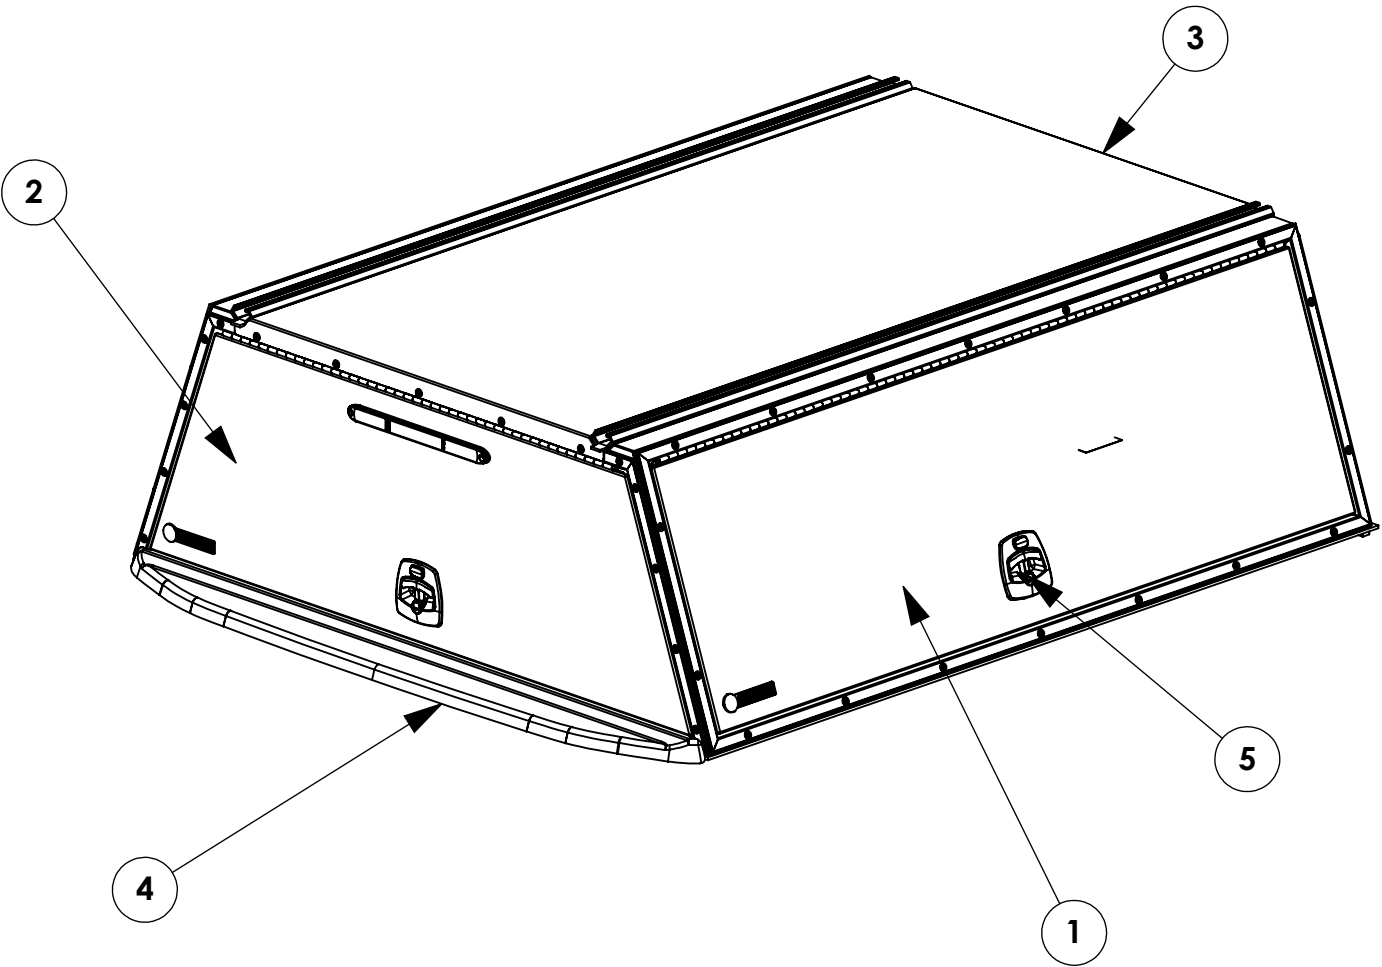

INSTR.
NUMBER : **71622**

PG:
8

REV:
V

PART
NUMBER : **TFKNFT160HM23W**


PART
DESC. : ASM INS, TFK__T178HM23W

E-LOCK VERSIONS:
SWAP M WITH E IN PART NUMBER
EXAMPLE: TFKFDT178HM23W
BECOMES TFKFDT178HE23W

BOM FOR 5.0' 23" TALL NISSAN FRONTIER

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	TSK60M23W	TOP, SIDE KIT,60",M,23,W	2
2	TCK72HM23W	TOP,CLOSE KIT,72",HM23,W	1
3	TRK6023W	TOP, ROOF KIT,60",23,W	1
4	THKNFT172M23	HDW KIT, TFKNFT172HM23W	1
5	TMLHK	Topper Mechanical Lock Hatch Kit	1


*** E-LOCK VERSION SWAP TMLHK WITH TELH04**

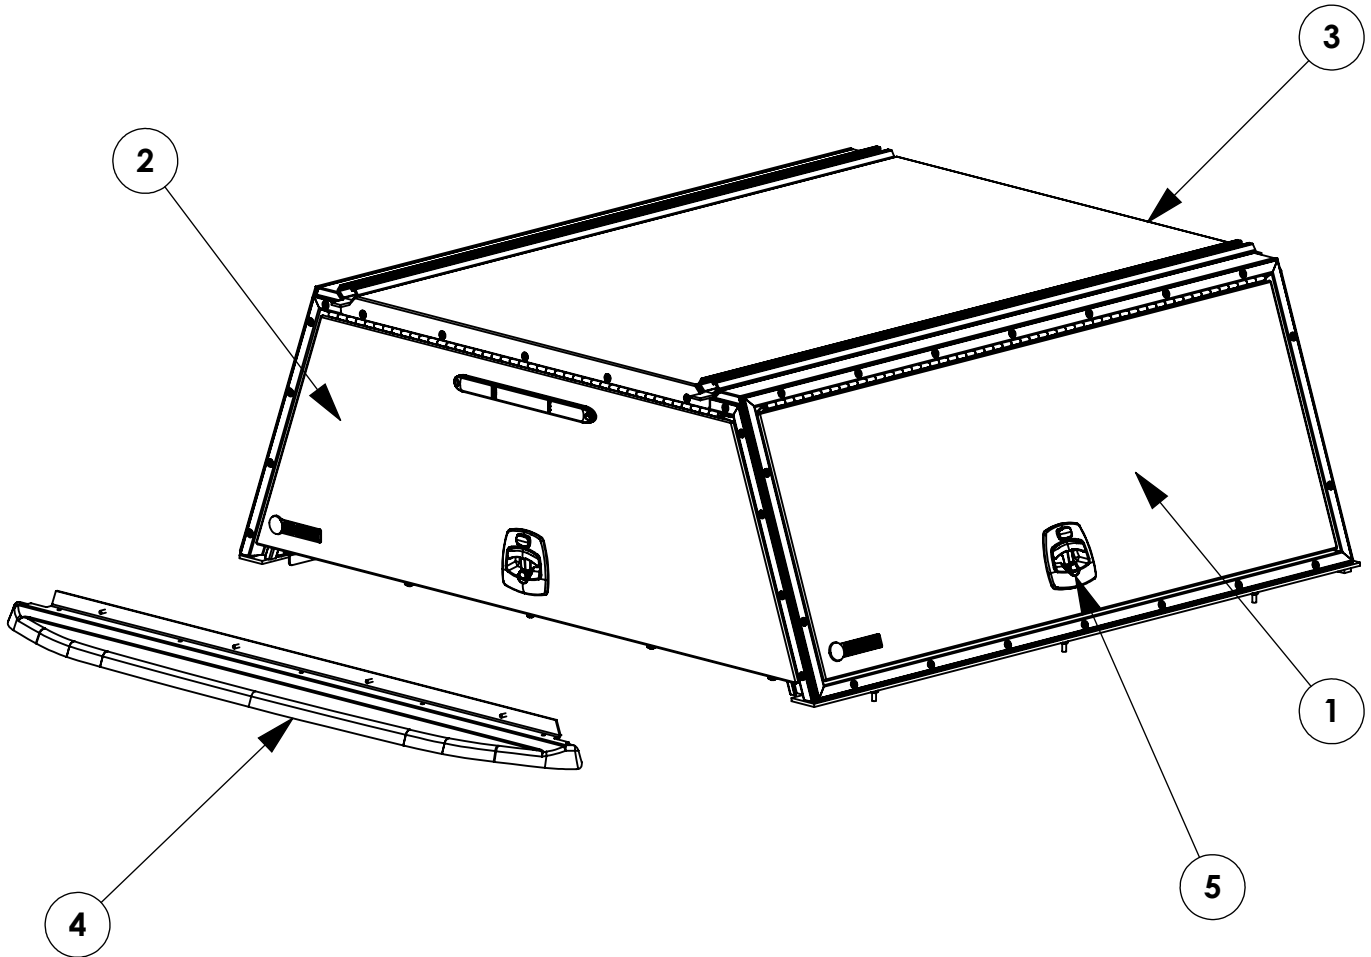


INSTR. : 71622		PG: 9	REV: V	BOM FOR 5.1' 23" TALL COLORADO		
PART : TFKNFT160HM23W		ITEM NO.	PART NUMBER	DESCRIPTION	QTY.	
PART : ASM INS, TFK__T178HM23W DESC. :		1	TSKCOL60M23W	TOP, SIDE KIT,60",M,23,W	2	
		2	TCK72HM23W	TOP,CLOSE KIT,72",HM23,W	1	
		3	TRK6123W	TOP, ROOF KIT,61",23,W	1	
		4	THKCOL60M23	HDW KIT, TFKCOL160HM23W	1	
		5	TMLHK	Topper Mechanical Lock Hatch Kit	1	

E-LOCK VERSIONS:
SWAP M WITH E IN PART NUMBER
EXAMPLE: TFKFDT178HM23W
BECOMES TFKFDT178HE23W

* E-LOCK VERSION SWAP TMLHK WITH TELH04

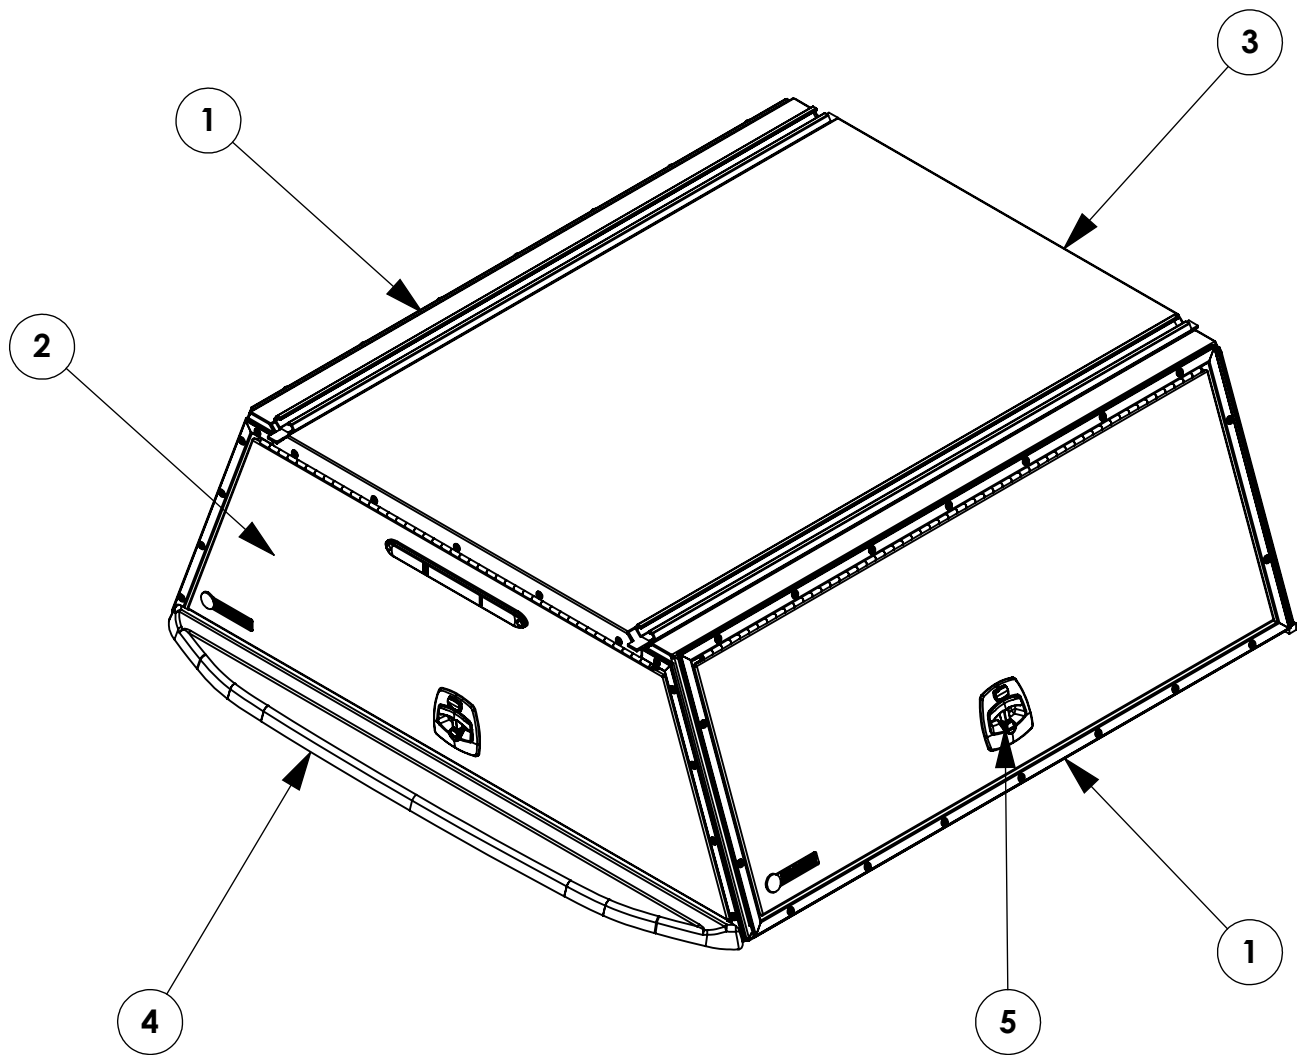

INSTR. : 71622		PG: 10	REV: V	BOM FOR 69" 23" TALL SILVERADO EV 1500			
PART : TFKGME169HM23W				ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
				1	TSK69M23WPS	TOP, SIDE KIT,SILVERADO EV, 69", PS	1
PART : ASM INS, TFKGME169HM23W				2	TSK69M23WDS	TOP, SIDE KIT,SILVERADO EV, 69",DS	1
E-LOCK VERSIONS: SWAP M WITH E IN PART NUMBER EXAMPLE: TFKFDT178HM23W BECOMES TFKFDT178H<u>E</u>23W				3	TCKGMEHM23W	TOP,CLOSE KIT,SILVERADO EV,HM23,W	1
				4	TRKGME6923W	TOP, ROOF KIT,69",23,W	1
				5	THKGME169M23	HDW KIT, TFKGME169HM23W	1
				6	TMLHK	Topper Mechanical Lock Hatch Kit	1

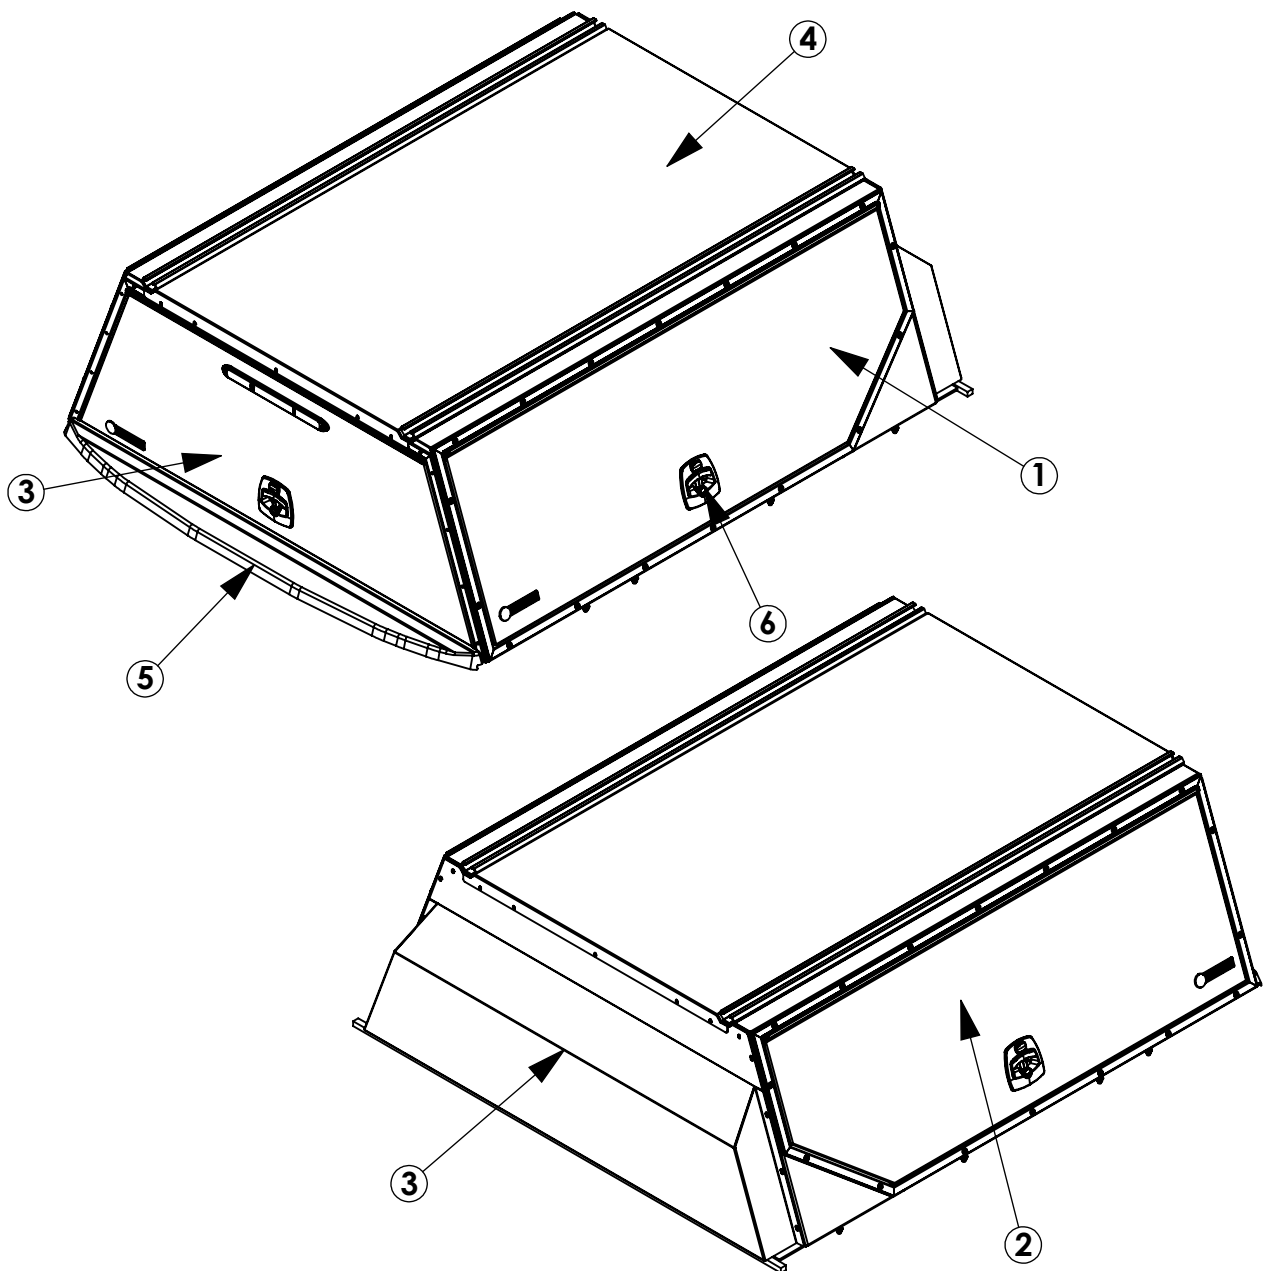


INSTR. NUMBER	: 71622	PG: 11	REV: V
PART NUMBER	: TFKGMT280HM23W		
PART DESC.	: ASM INS, TFK__T178HM23W		

BOM FOR 80" 23" TALL SILVERADO 2500, 3500

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	TSK80M23W	TOP, SIDE KIT,80",M,23,W	2
2	TCK78HM23W	TOP,CLOSE KIT,78",HM23,W	1
3	TRK8026W	TOP, ROOF KIT,80",26,W	1
4	THKGMT280M23	HDW KIT, TFKGMT280HM23W	1
5	TMLHK	Topper Mechanical Lock Hatch Kit	1

E-LOCK VERSIONS:
SWAP M WITH E IN PART NUMBER
EXAMPLE: TFKFDT178HM23W
BECOMES TFKFDT178HE23W

*** E-LOCK VERSION SWAP TMLHK WITH TELH03**

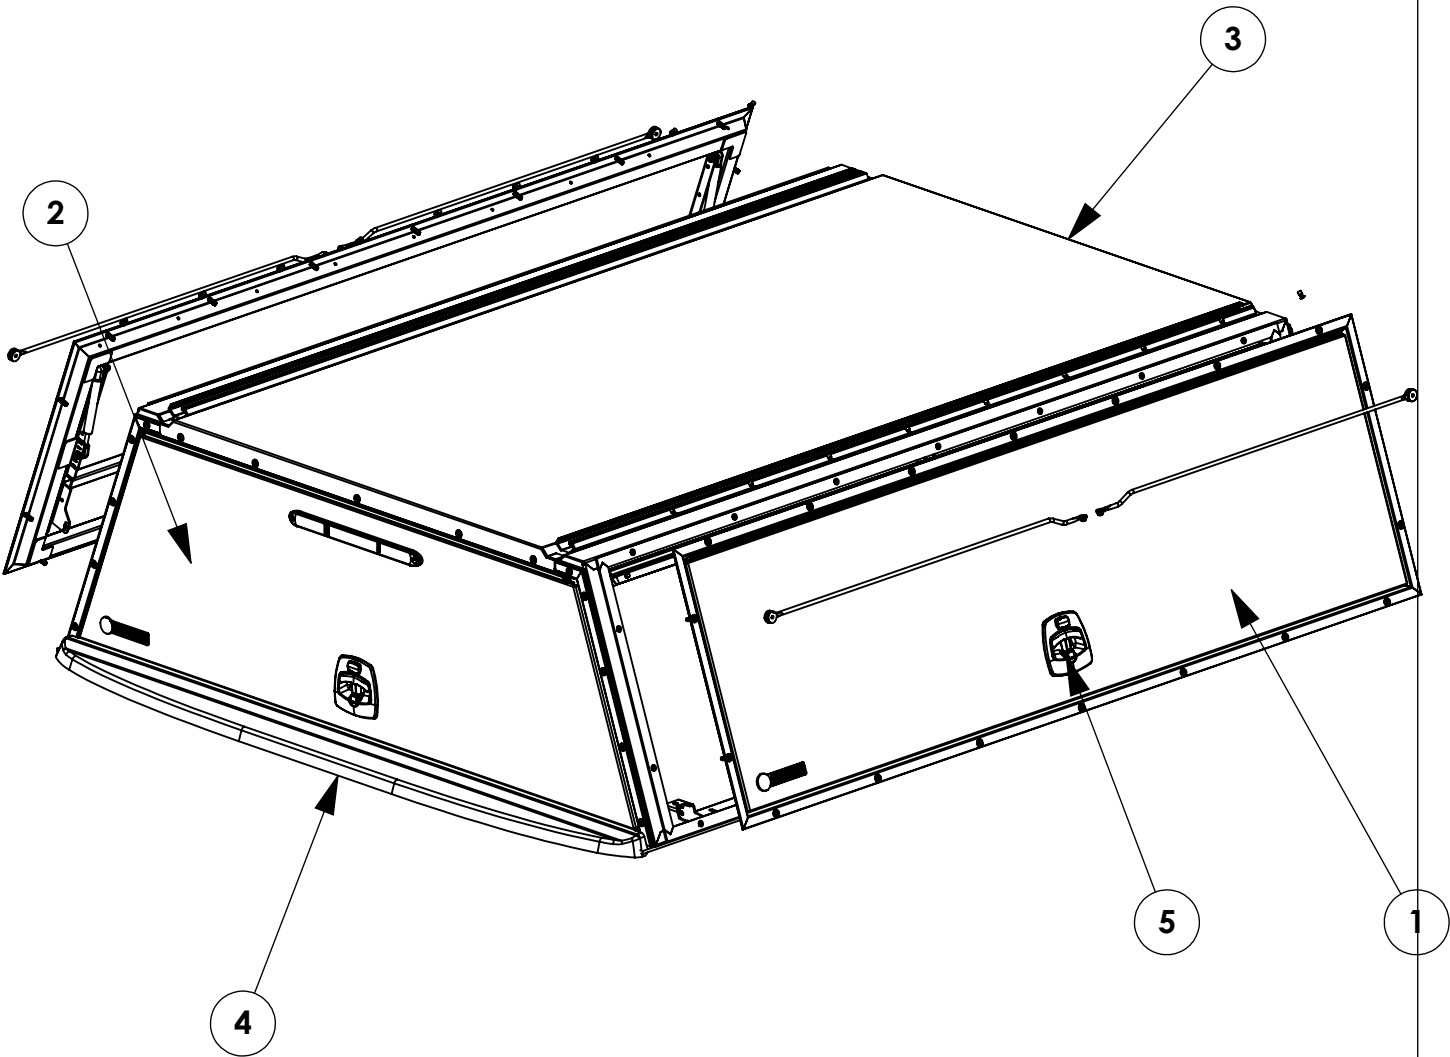

INSTR.
NUMBER : **71622**

PG: **12**

REV: **V**

BOM FOR 70" 23" TALL SILVERADO 1500


PART
NUMBER : **TFKGMT170HM23W**

PART :
DESC. : ASM INS, TFK__T178HM23W

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	TSK70M23W	TOP, SIDE KIT,70",M,23,W	2
2	TCK78HM23W	TOP,CLOSE KIT,78",HM23,W	1
3	TRK7023W	TOP, ROOF KIT,70",23,W	1
4	THKGMT280M23	HDW KIT, TFKGMT280HM23W	1
5	TMLHK	Topper Mechanical Lock Hatch Kit	1

E-LOCK VERSIONS:
SWAP M WITH E IN PART NUMBER
EXAMPLE: TFKFDT178HM23W
BECOMES TFKFDT178HE23W

*** E-LOCK VERSION SWAP TMLHK WITH TELH03**

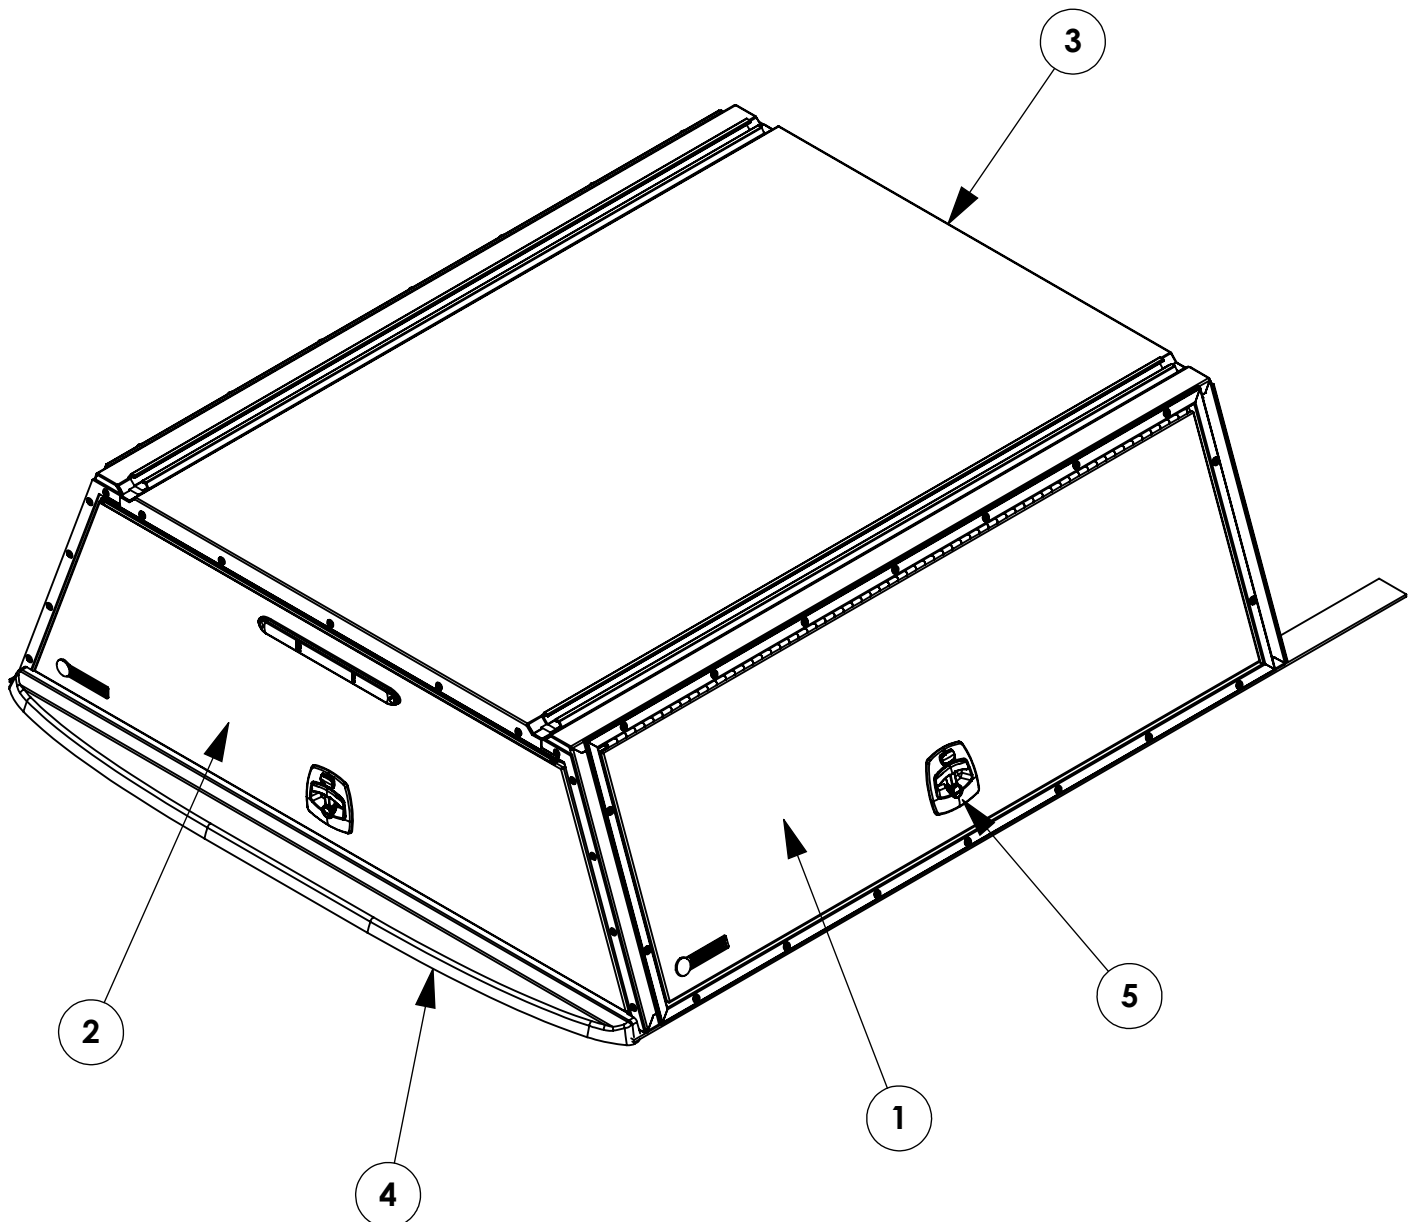

GET TO KNOW THE VEHICLE - AT THE BEGINNING OF ANY INSTALLATION, CHECK THE LOCATION OF THE FUEL TANK, FUEL LINES, BRAKE LINES, HIGH VOLTAGE BATTERIES AND WIRING HARNESSSES TO AVOID INJURY OR PROPERTY DAMAGE FROM TOOL CONTACT.

SEAL ALL EXTERIOR HOLES - ALL INSTALLATION HOLES SHOULD BE SEALED WITH BUTYL TAPE OR SILICON TO PREVENT WATER AND EXHAUST GASES FROM ENTERING THE VEHICLE.

CONTROL DRILL DEPTH - TO AVOID DAMAGE TO THE VEHICLE, USE A DRILL STOP OR CLEARED STEP BIT WHEN DRILLING INSTALLATION HOLES.

ALWAYS ADD PRIMER - WHEN ADDING INSTALLATION HOLES BE SURE TO USE A SELF-ETCHING PRIMER TO PREVENT CORROSION, FASTENER FAILURE AND INJURY.

MOUNTING POINTS MUST HAVE METAL-TO-METAL CONTACT - USE PROVIDED MOUNTING SPACERS TO ACCOMMODATE FOR VEHICLE FEATURES, CARPET OR SUBFLOORS.

PROVIDE CLEARANCE FOR SPACERS - IF THE INSTALLATION VEHICLE CONTAINS A CARPET OR SUBFLOOR, USE A 1-3/16" DIAMETER CARPET CUTTER (P/N: 31183-0) AT ALL MOUNTING LOCATIONS TO OPEN UP ROOM FOR SPACERS.

CHECK SPACER ORIENTATION - BE SURE THAT THE INDENT IN THE SPACER COVERS THE PLUSNUT HEAD; THIS ENSURES THE MOST METAL-TO-METAL CONTACT AND REDUCES VIBRATION.


PLUSNUT INSTALLATION - A PLUSNUT GUN IS RECOMMENDED FOR PLUSNUT INSTALLATION FOR ITS PRODUCTION SPEED. HOWEVER, A PLUSNUT SETTING TOOL CAN ALSO BE USED (P/N: 22200-0).

THRU-BOLT CLEARANCE - WHEN USING A THRU-BOLT AT ANY MOUNTING LOCATION, BE SURE THAT YOUR HOLE HAS 1/16" CLEARANCE.


INTENTIONALLY LEFT BLANK

FASTENERS USED


BAG REFERENCE: ALL

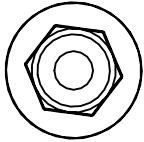


FAS0055
1/4-20 ZP
HFLNG NLK NUT
QTY: 10

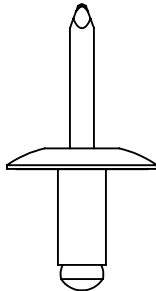


FAS1014
.25X.11GR AL
RIVET, BLND
QTY: 5




FAS0919
5/16-18 X 1.25 SST
BHC SCREW
QTY: 10

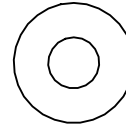


FAS0234
1/4 SST
FLAT WASHER
QTY: 30

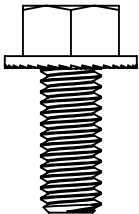


FAS0438
5/16-18 X .75 ZP
HFNLG SCREW
QTY: 16

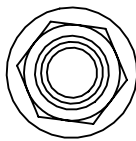


FAS0440
5/16-18 ZP
HFLNG NLK NUT
QTY: 16

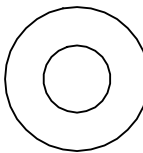


FAS0552
5/16 SST
FLAT WASHER
QTY: 10




FAS0940
1/4-20 X 1.0 SS NP
BHTX SCREW
QTY: 30



FAS0066
1/4 LOCK WASHER
EXT. TOOTH
QTY: 1



FAS0148
#10 X 0.5 NI-ZN
PH SELF DRILL SCREW
QTY: 1

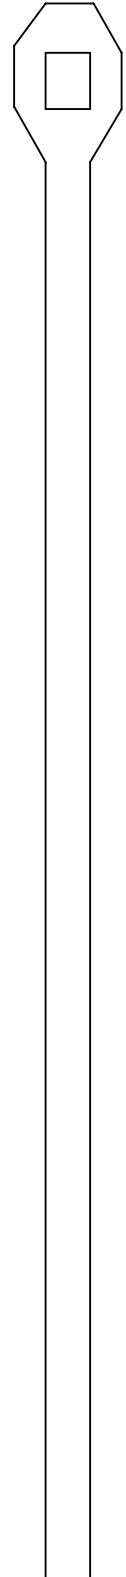

78320
7.5" STUD MNT
CABLE TIE
QTY: 5


INTENTIONALLY LEFT BLANK

PAGE:


17

FASTENERS USED


BAG REFERENCE: ALL

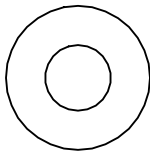


FAS0164
5/16 ALUM
FLAT WASHER
QTY BAG71794: 0
QTY BAG71801: 8




FAS0242
5/16-18 X 1.5 SST
HH SCREW
QTY BAG71794: 8
QTY BAG71801: 8



FAS0248
5/16-18 SST
HH NLK NUT
QTY BAG71794: 8
QTY BAG71801: 8

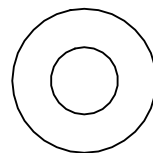

FAS0552
5/16 SST
FLAT WASHER
QTY BAG71794: 16
QTY BAG71801: 8

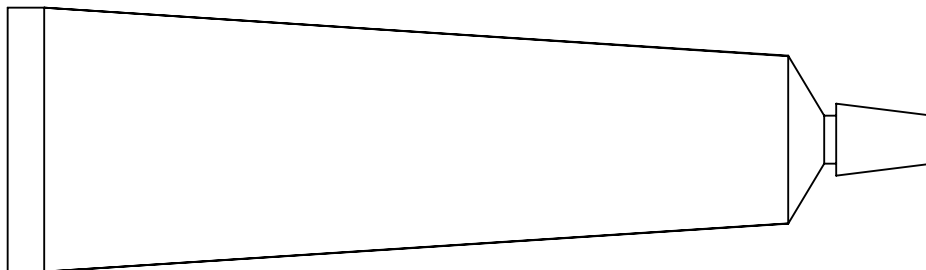

26618-0
1 OZ TUBE
SILICONE
QTY BAG71794: 2
QTY BAG71801: 2

INTENTIONALLY LEFT BLANK

PAGE:

19

FASTENERS USED


BAG REFERENCE: BAG76637



**FAS0917
M5 X .8 ZP
HFLNG NLK NUT
QTY: 12**



**FAS0918
10-24 ZP
HFLNG NLK NUT
QTY: 6**

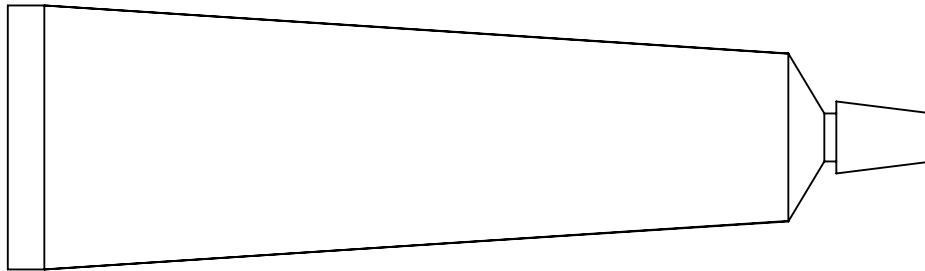

**26618-0
1 OZ TUBE
SILICONE**

INTENTIONALLY LEFT BLANK



STEP 1 - ASSEMBLE BODY FRAME: SIDES AND CROSSBOWS

Step 1.1
OPEN [x2]
TOPPER SIDE
KITS
[TSK78M23W]

Step 1.2
OPEN TOPPER
ROOF KIT
[TRK7823W]

Step 1.3
FULLY TIGHTEN
FAS0438 AND
FAS0440
(16 PLACES)
1/2" WRENCH
1/2" SOCKET



Step 1.4
ADD FOAM
STRIP 80402
TO THE
MIDDLE OF
EACH
CROSSBOW
(4 PLACES)

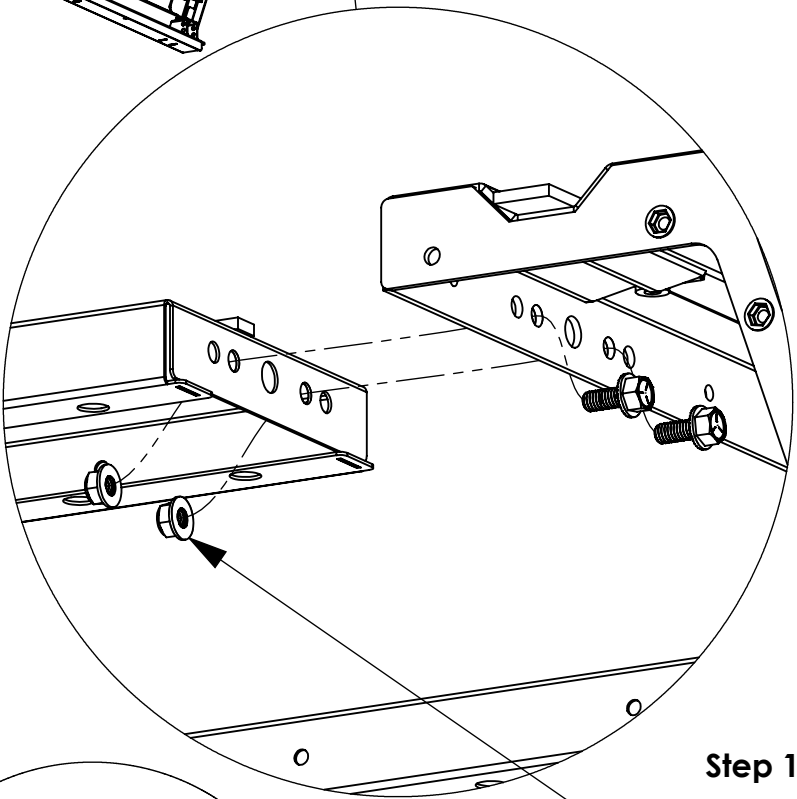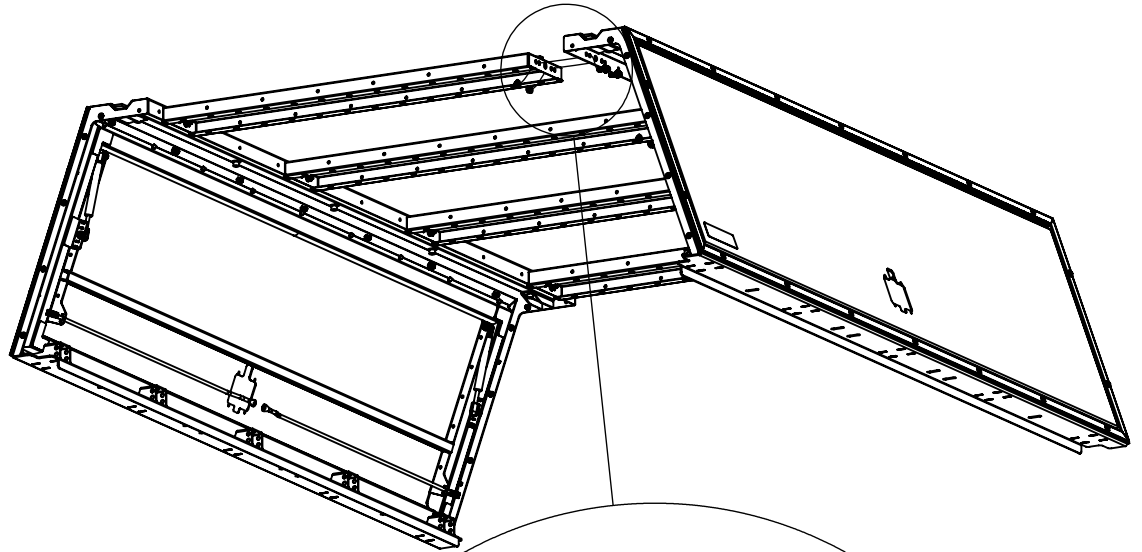

Step 1.3

NOTE: Nut
inboard

Step 1.4

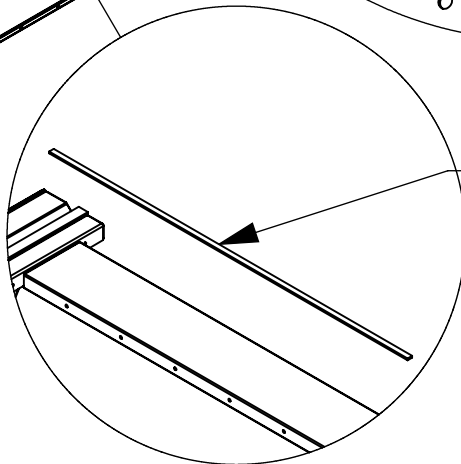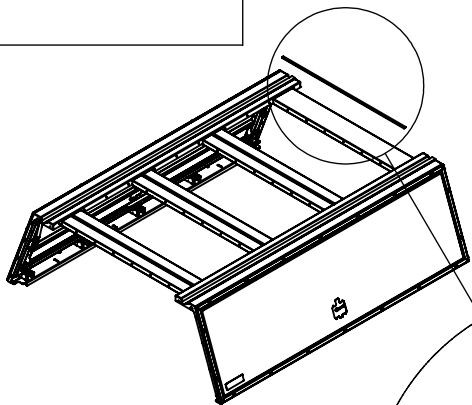

STEP 2 - ATTACH HARDWARE: SIDE DOOR HANDLES, FRONT & REAR SEALS

Step 2.1
CUT ZIP TIES
THAT ARE
HOLDING
LOCKRODS IN
PLACE.

!! CAUTION !!
DOORS MAY
TRY TO OPEN.

Step 2.2
ATTACH HANDLE
TO DOOR

FULLY TIGHTEN
FAS0917
(4 PER DOOR)
M10 SOCKET

DO NOT
OVERTIGHTEN

Step 2.3
ATTACH
LOCKRODS TO
HANDLE

FULLY TIGHTEN
FAS0918
(2 PLACES)
M8 SOCKET



DO NOT
OVERTIGHTEN

Step 2.4
ADJUST HANDLE
POINT TO ALIGN
WITH CASTING
LINE ON HANDLE
BODY
(APPROX: 1.0")


FULLY TIGHTEN
4mm ALLEN
(2 PLACES)

Step 2.5
APPLY FOAM
SEALS TO ALL
CORNERS.

USE HOLES IN
SEAL TO ALIGN
MATERIAL.

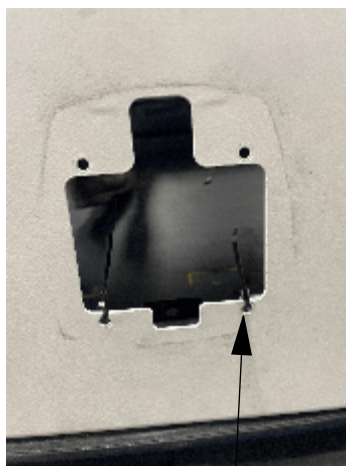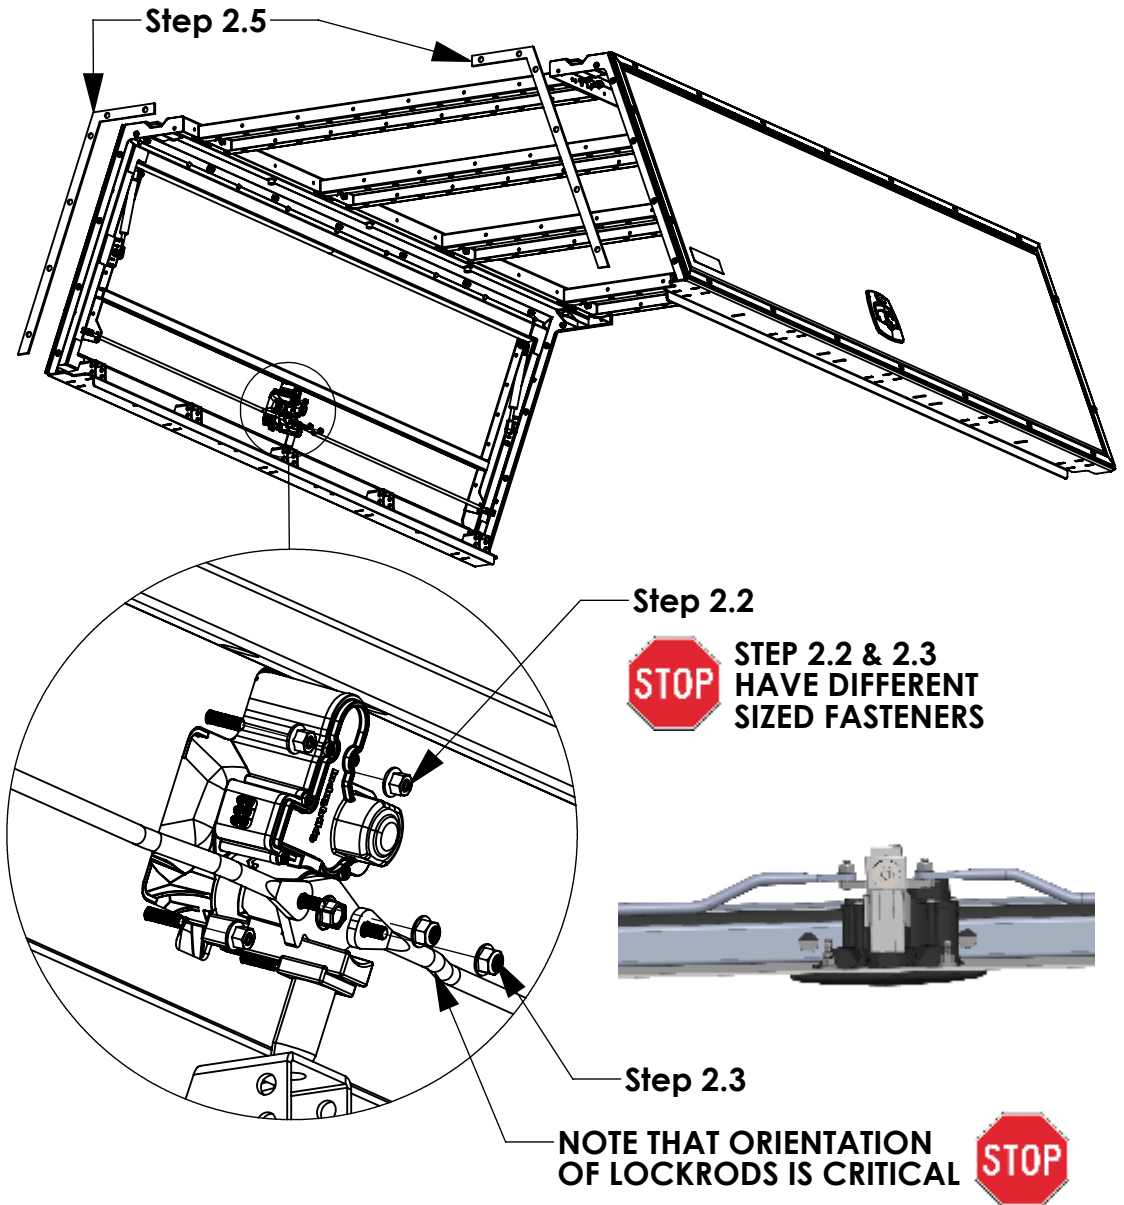

Step 2.1

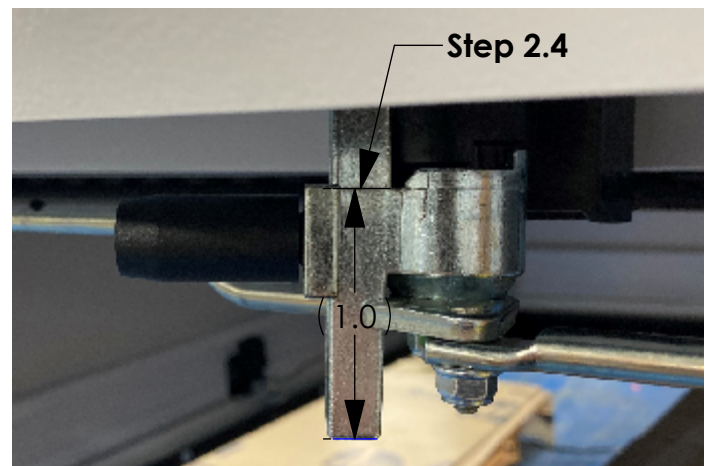

STEP 3 - ATTACH FRONT PANEL

Step 3.1
OPEN TOPPER
CLOSURE KIT
[TCK78HM23W]

Step 3.2
ATTACH FRONT
PANEL

HAND TIGHTEN
FAS0234,
FAS0940
(10 PLACES)


DO NOT
TIGHTEN UNTIL
AFTER STEP 4

Step 3.2B
COLORADO
FRONT PANEL
FLANGE IS
OUTBOARD

DO NOT
TIGHTEN UNTIL
AFTER STEP 4

APPLY A STRIP OF
SILICONE THEN
RUNS THE LENGTH
OF THE FRONT
PANEL JUST BELOW
THE SCREWS

Step 3.2

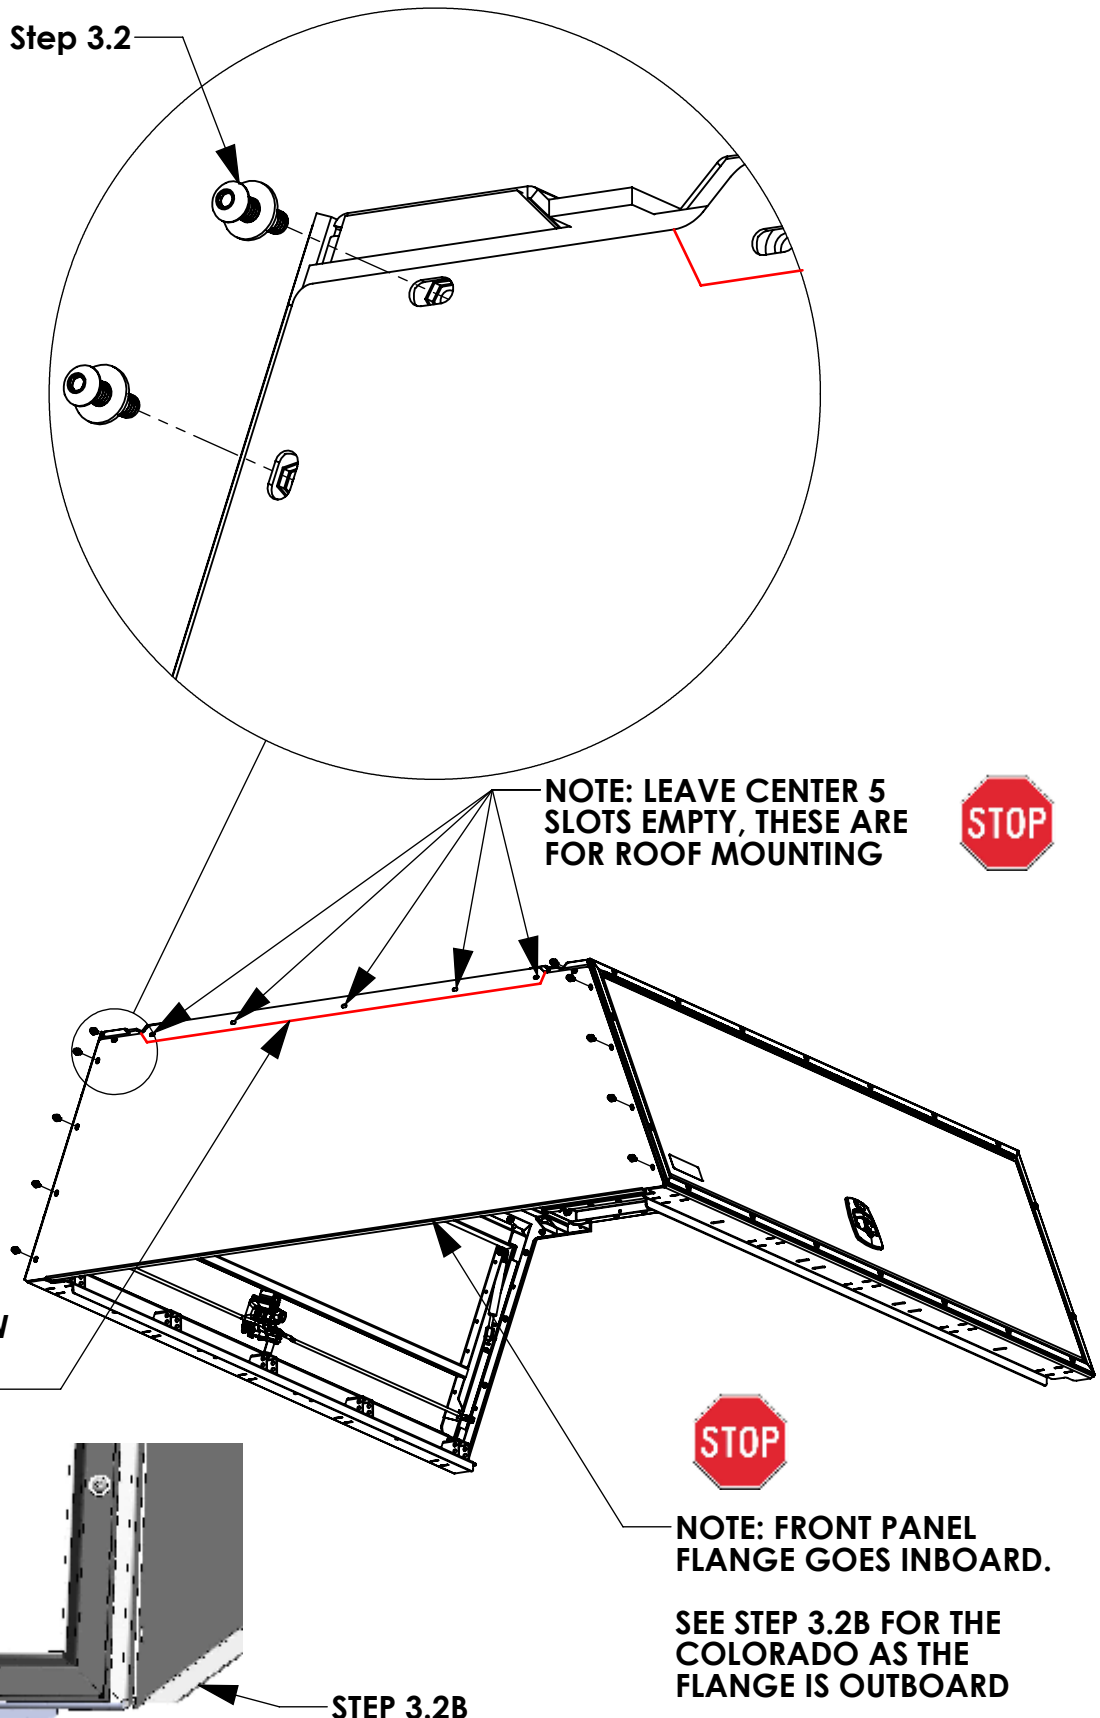

NOTE: LEAVE CENTER 5
SLOTS EMPTY, THESE ARE
FOR ROOF MOUNTING



NOTE: FRONT PANEL
FLANGE GOES INBOARD.

SEE STEP 3.2B FOR THE
COLORADO AS THE
FLANGE IS OUTBOARD



STEP 3.2B

STEP 4 - ATTACH LIFTGATE**Step 4.1
ATTACH
LIFTGATE FRAME**

**FULLY TIGHTEN
FAS0234,
FAS0940
(10 PLACES)
5/32" ALLEN**

**Step 4.2
GO BACK AND
FULLY TIGHTEN
FASTENERS
FROM STEP 3.2**


**(10 PLACES)
5/32" ALLEN**

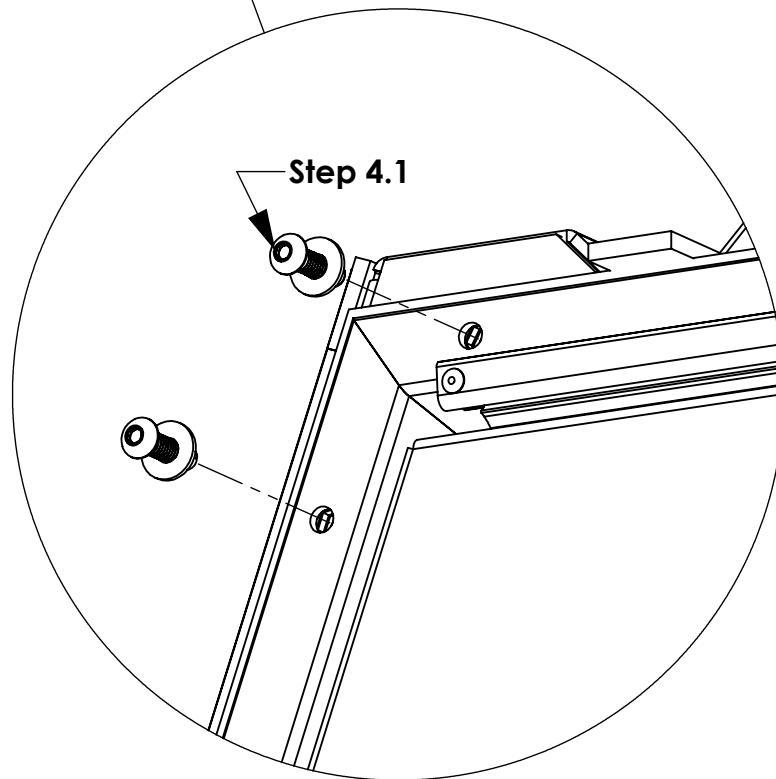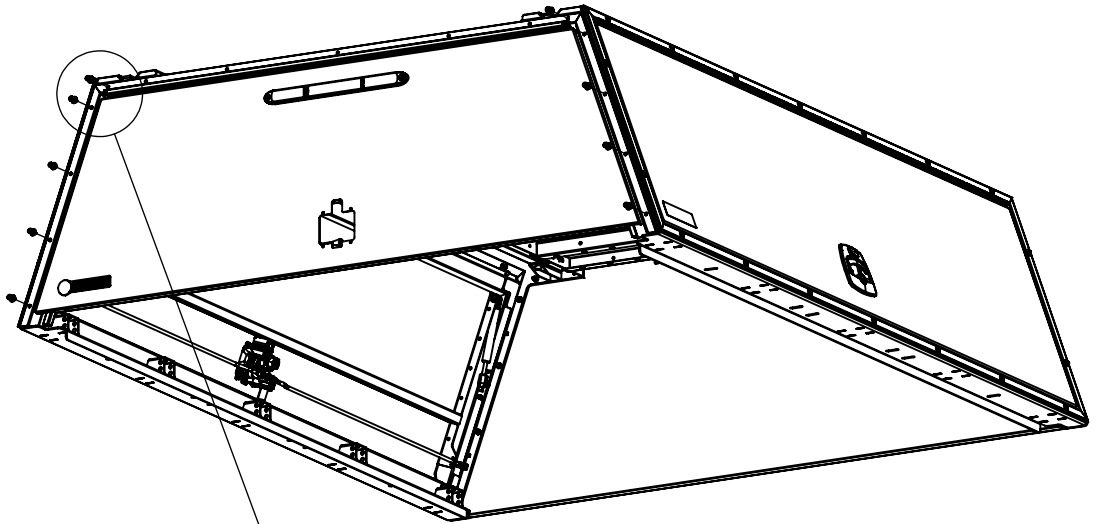


STEP 5 - ATTACH LIFTGATE HANDLE

Step 5.1
CUT ZIP TIES
THAT ARE
HOLDING
LOCKRODS IN
PLACE.

!! CAUTION !!
DOOR MAY TRY
TO OPEN.

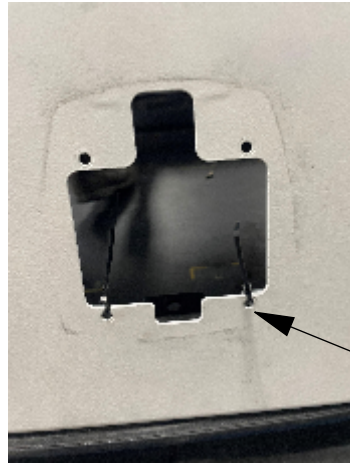


STEP 5.1

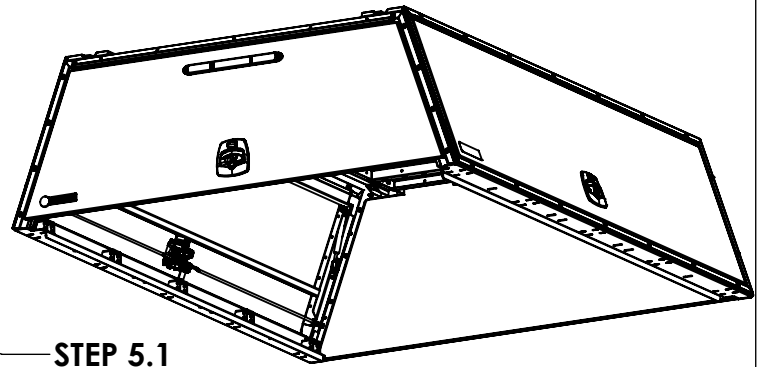

Step 5.2
ATTACH HANDLE
TO DOOR

FULLY TIGHTEN
FAS0917
(4 PER DOOR)
M10 SOCKET

DO NOT
OVERTIGHTEN

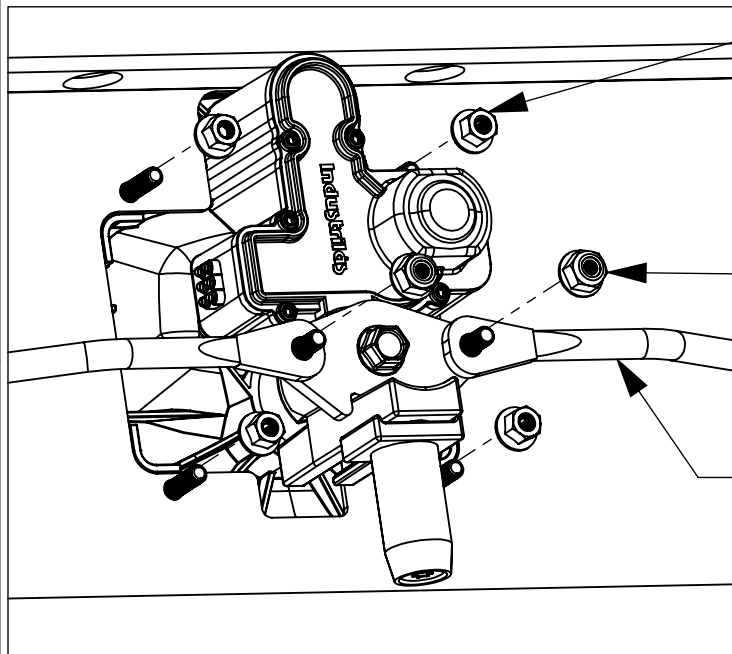

STEP 5.2



STEP 5.2 & 5.3
HAVE DIFFERENT
SIZED FASTENERS

STEP 5.3

Step 5.3
ATTACH
LOCKRODS TO
HANDLE

FULLY TIGHTEN
FAS0918
(2 PLACES)
M8 SOCKET


DO NOT
OVERTIGHTEN

NOTE THAT ORIENTATION
OF LOCKRODS IS
CRITICAL



Step 5.4
ADJUST HANDLE
POINT TO ALIGN
WITH CASTING
LINE ON HANDLE
BODY
(APPROX: 1.0")

FULLY TIGHTEN
M4 ALLEN
(2 PLACES)

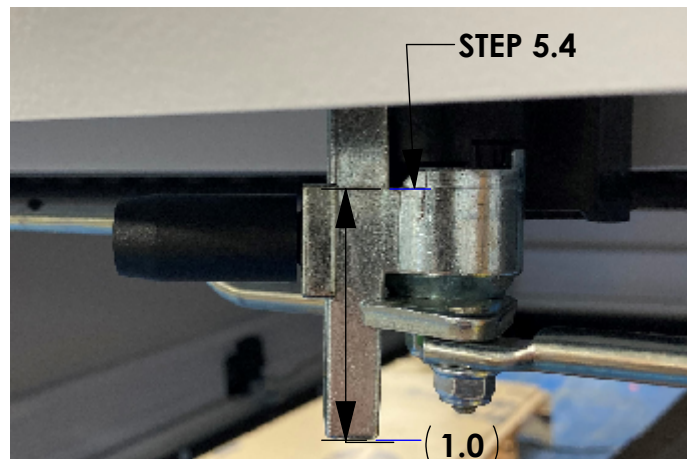

STEP 5.4

(1.0)


STEP 6 - ATTACH ROOF AND ROOF RAILS

Step 6.1
PLACE ROOF
PANEL ON
TOPPER BODY,
BUT SLID
FORWARD OF
FRONT PANEL TO
AVOID
REMOVING
SILICONE APPLIED
IN STEP 3. THEN
SLIDE ROOF
PANEL INTO
CORRECT
POSITION.



**PLEASE NOTE THAT ORDER OF OPERATIONS ON
THESE BUILD STEPS IS CRITICAL TO A PROPER SEAL!**


Step 6.1

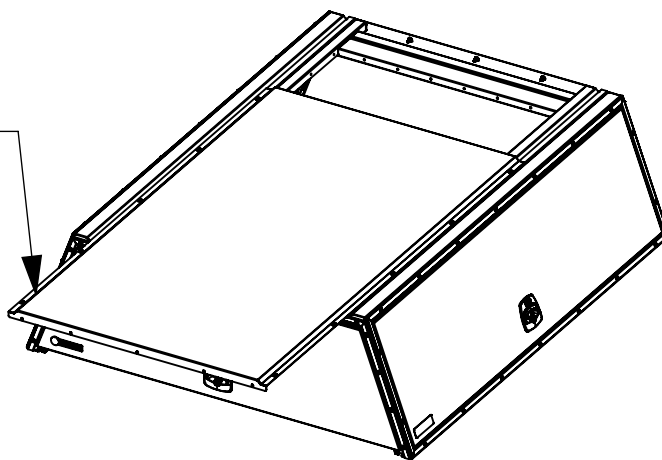

Step 6.2
ATTACH
MOUNTING RAILS
TO TOPPER BODY.

USE AN
ALIGNMENT
PUNCH TO POKE
THROUGH SEALS


FULLY TIGHTEN
FAS0552,
FAS0919
(10 PLACES)
3/16" ALLEN

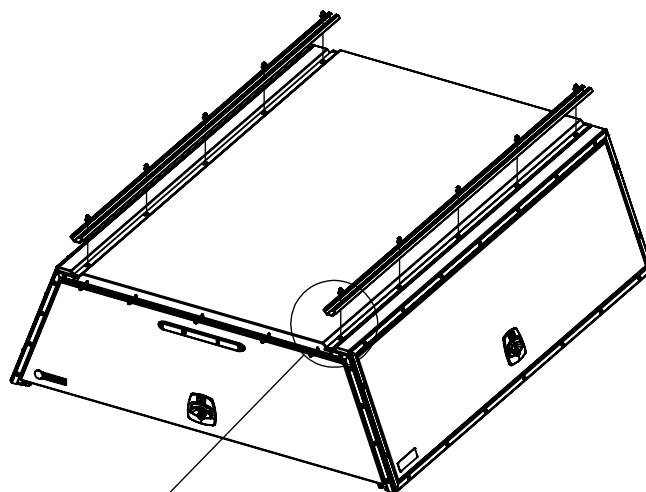

Step 6.2

Step 6.3
ATTACH ROOF
TO TOPPER
BODY.

FULLY TIGHTEN
FAS0055,
FAS0552,
FAS0940
(10 PLACES)
5/32" ALLEN
7/16" WRENCH

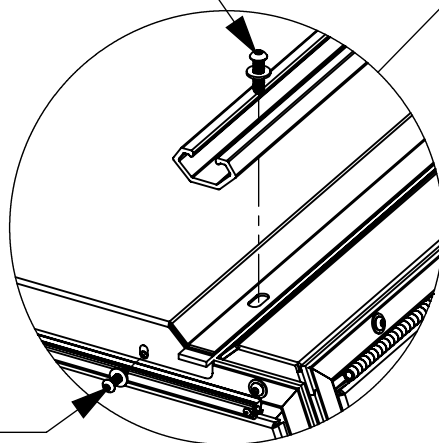


Step 6.3

STEP 7 - ATTACH TAILGATE COVER

Step 7.1
ADD SILICONE TO
CORNER OF
TAILGATE COVER
AND AROUND
BOTTOM FACE
MOUNTING
HOLES.

Step 7.1
FULL LENGTH
OF THIS SEAM

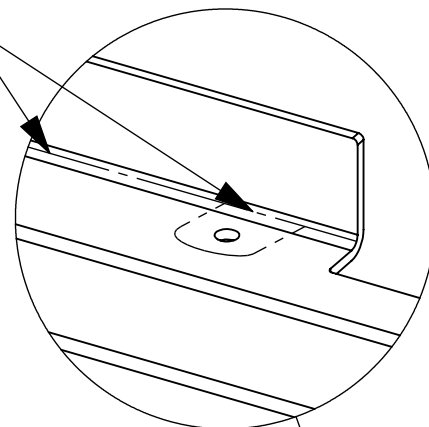


Step 7.2
ATTACH TAILGATE
COVER TO REAR
DOOR.

FULLY SECURE
FAS1014
(5 PLACES)

1/4" RIVET TIP

NOTE: INSTALL
CENTER RIVET FIRST
TO HOLD IN PLACE
DURING INSTALL

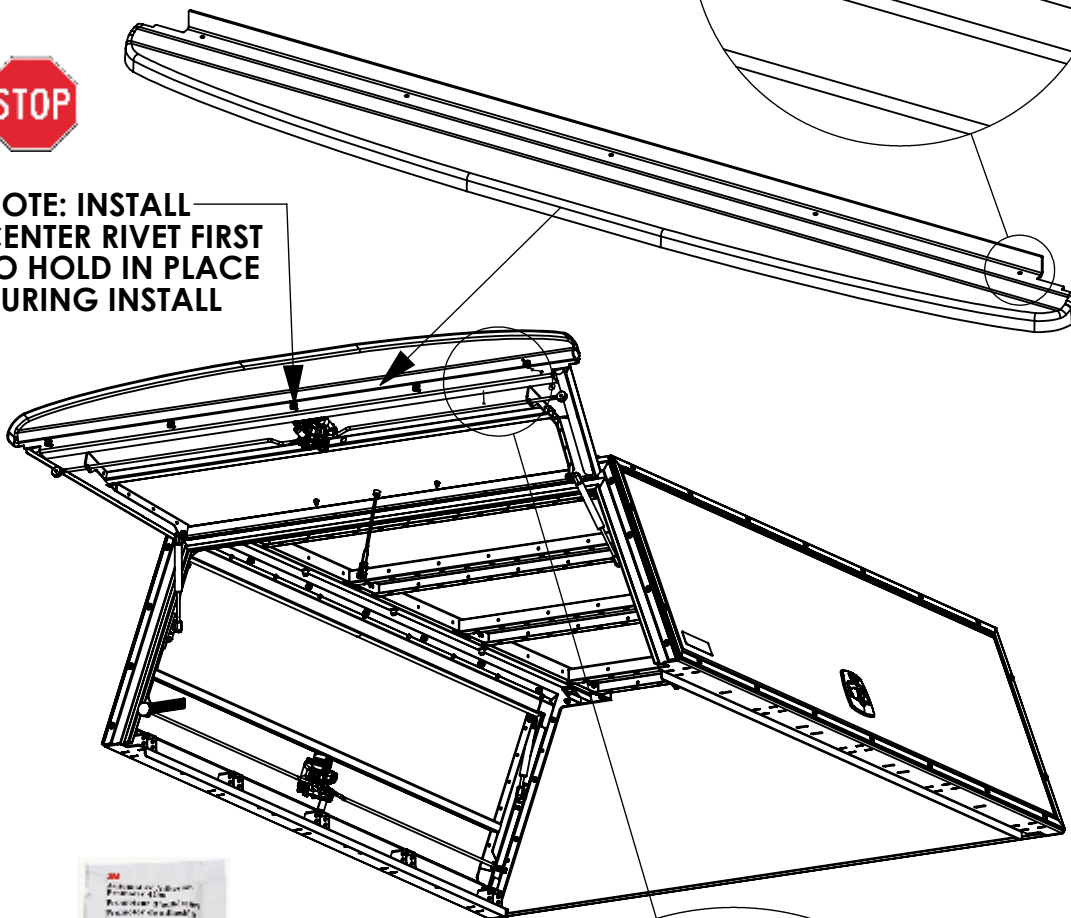

Step 7.3
COLORADO &
SILVERADO.
PREP WITH 57392
ADHESION
PROMOTER.


ADD 77152
D-SEAL X 22" LG
TO BOTH SIDE OF
TAILGATE COVER



Step 7.3
COLORADO &
SILVERADO



Step 7.2

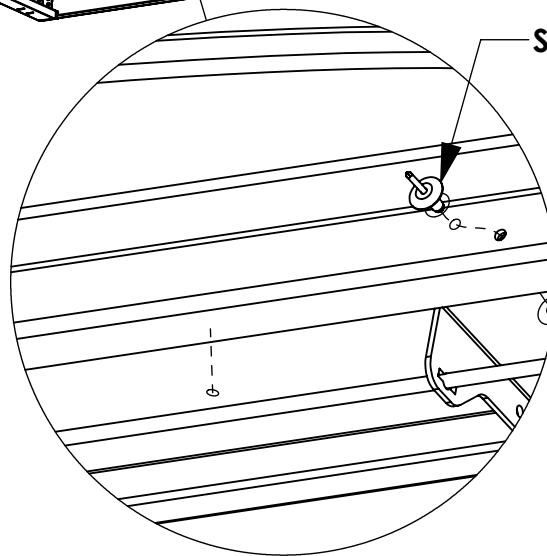


STEP 8 - ATTACH SEALS TO TRUCK BED

Step 8.1
INSTALL FRONT
BED SEAL. REFER
TO TABLE 1 TO
GET OEM
SPECIFIC
DISTANCE OFF
OF THE INSIDE
EDGE OF THE
BED. CENTER
BETWEEN THE
DRIVER AND
PASSENGER SIDE
BED RAIL TRIM.

TRIM OFF EXTRA,
IF NECESSARY.

**TOP VIEW - COLORADO, SILVERADO
& RAM, FULL DISTANCE AT FRONT
EDGE**

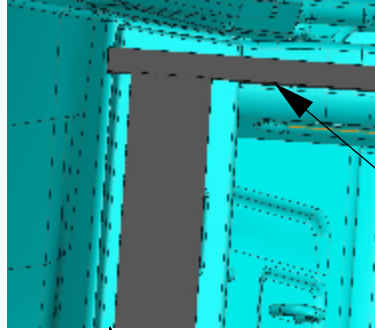

**STEP 8.3
1/4" GAP**

**STEP 8.3
AT FLAT**

**Step 8.1
DIST**

TOP VIEW

FRONT

**DRIVER'S
SIDE**

Step 8.2
INSTALL SIDE BED
SEALS. ALIGN TO
THE FRONT AND
INSIDE EDGES OF
THE SIDE BED
RAIL TRIM.


DO NOT TRIM
EXCESS UNTIL
TOPPER IS ON
THE TRUCK.

Step 8.3
**COLORADO
ONLY !**
INSTALL SIDE BED
SEALS. ALIGN TO
THE FRONT AND
INSIDE EDGES OF
THE SIDE BED
RAIL TRIM.

DO NOT TRIM
EXCESS UNTIL
TOPPER IS ON
THE TRUCK.

TABLE 1:

VEHICLE PLATFORM	DIST.
F-150	.875"
SILVERADO	0.25"
RAM	.15"

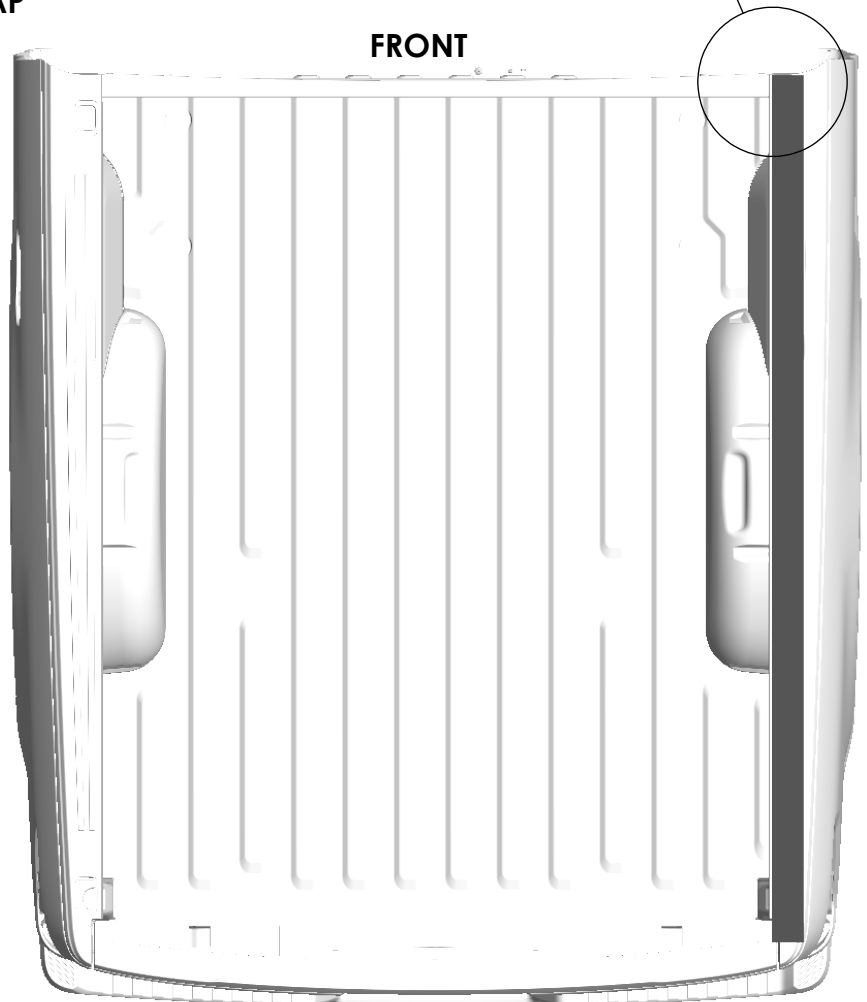

STEP 8 - ATTACH SEALS TO TRUCK BED (NOTE: FOR CHEVY SILVERADO ONLY)


Step 8.4
PLACE 81456
GASKET IN THE
GAP BETWEEN
THE TRUCK BED
AND CAB.




BEFORE
ATTACHING TO
TRUCK BED,
CLEAN AND PREP
AREA. DO NOT
ATTACH TO
PLASTIC TRIM. IF
TRIM IS ON
FRONT OF BED
ATTACH TO CAB.

ONCE AREA IS
PREPARED
CENTER GASKET
ON THE REAR
WINDOW.


MAKE SURE THAT
GASKET HAS FULL
SURFACE
CONTACT SO
ADHESIVE WILL
PROPERLY BOND.

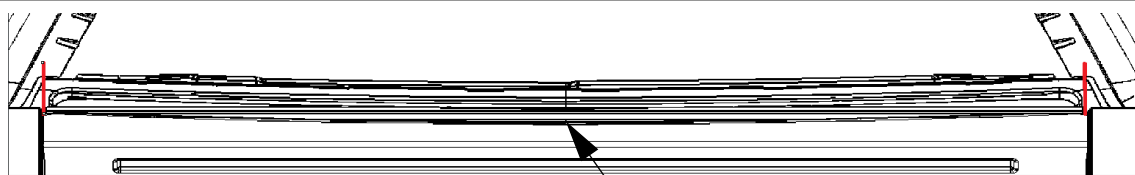

Step 8.4

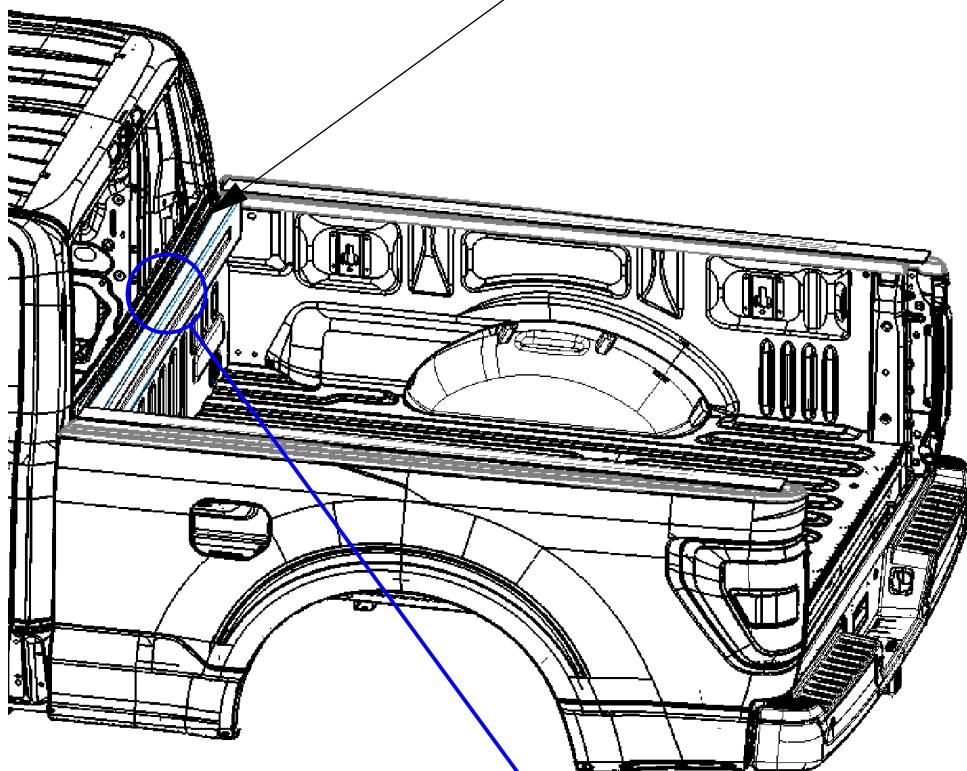



NOTE:
IF TRUCK BED HAS A SPRAY
ON BED LINER, PLACE
GASKET UNDER LINER ON
TRUCK BED

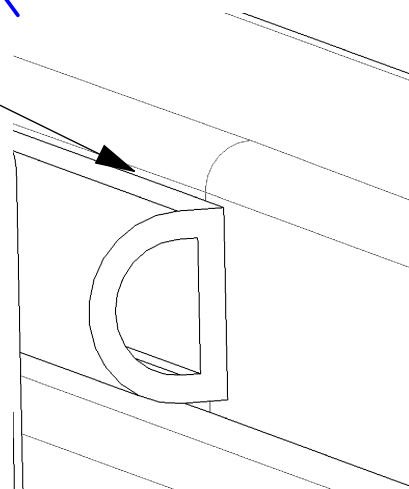

STEP 9A - INSTALL FOAM & 73740 SEALANT TO TRUCK CAB AND BED SEAMS (NOTE: FOR CHEVY SILVERADO ONLY)

STEP 9A.1
CUT A 2.5" FOAM PIECE OF 73398, INSERT UNDER TRIM OF THE BED RAIL, GOING INTO THE GAP AS SHOWN

STEP 9A.1

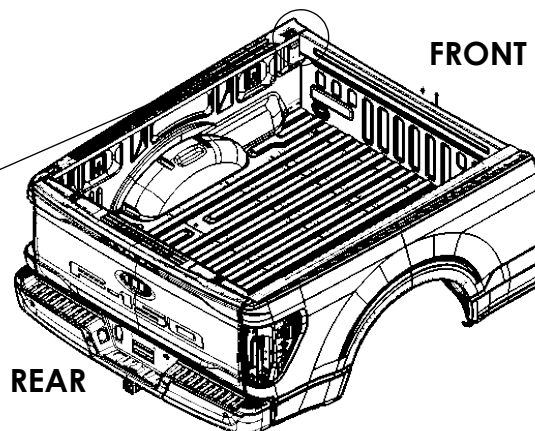
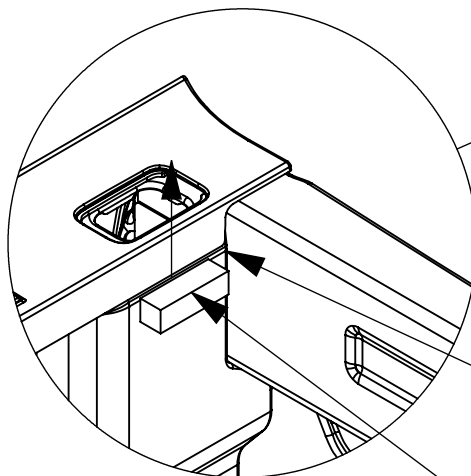


FRONT

REAR

THERE IS A GAP BETWEEN THE OEM BED AND TRIM (NOT SHOWN)

INSERT THE FOAM UNDER THE TRIM AND COVER THE GAP W/ THE FOAM

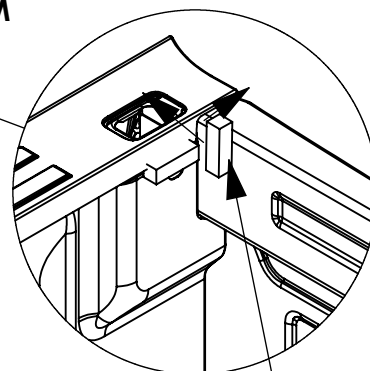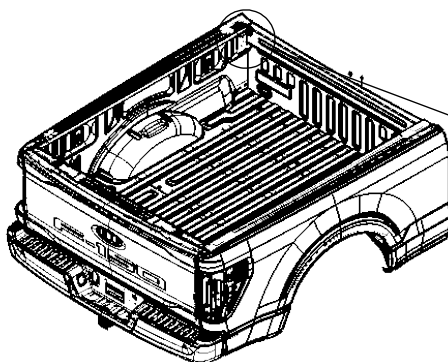

STEP 9A.2
INSERT A 2ND FOAM OF THE SAME DIMENSION INTO THE GAP, PERPENDICULAR TO THE ONE IN STEP 9.1, BOTH PIECES SHOULD BE TOUCHING

STEP 9A.3
SECURE BOTH PIECES OF FOAM IN PLACE WITH 3M SEALANT AROUND THE PERIMETER AND FILL ANY REMAINING GAPS, REPEAT ON PASSENGER SIDE

STEP 9A.2

INSERT THE 2ND PIECE OF FOAM PERPENDICULAR TO THE 1ST PIECE. FOLD OVER THE FOAM TO ALSO COVER THE GAP BETWEEN THE TRIM AND WALL RAIL




STEP 9A.3

ADD 3M SEALANT AROUND THE PERIMETER OF THE FOAMS, BETWEEN THE RAIL TRIM & THE BED, & REPEAT ON PASSENGER SIDE

STEP 9B - INSTALL FOAM TO TRUCK CAB AND BED SEAMS (NOTE: FOR CHEVY SILVERADO EV ONLY)

STEP 9B.1
PLACE FOAM
AROUND TOP
OF BED RAILS,
STRIPS WILL
BUTT UP
AGAINST EACH
OTHER AT
CORNERS


STEP 9B.1

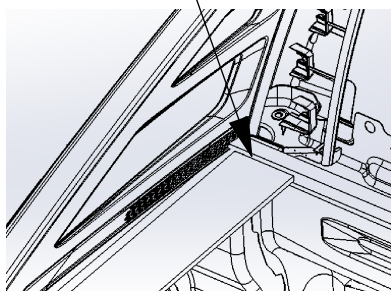

NOTE:
LOCATE DRAIN HOLES AND
TRIM FOAM AROUND THEM,
TO MAKE SURE HOLES AREN'T
BEING BLOCKED

71766

FRONT

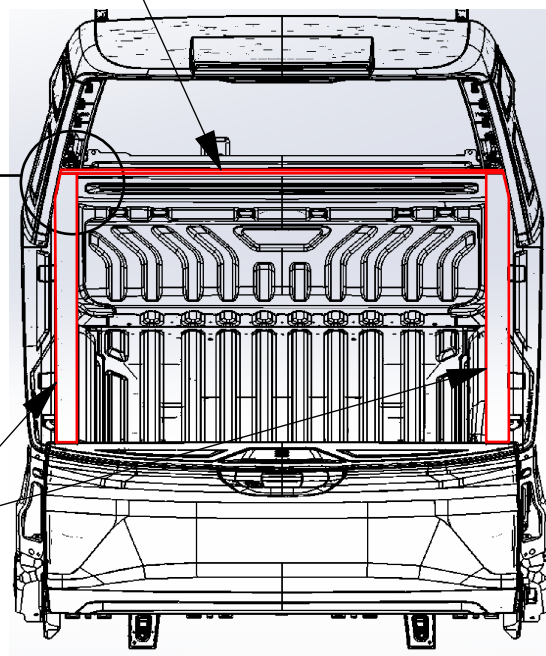



71768

REAR

STEP 9B.2
WHEN PLACING
TOPPER ON BED,
TOPPER WILL
NEED TO BE
BROUGHT IN
LOW AND THEN
MOVED
FORWARD TO FIT
INSIDE TRUCK
TRIM. (AS
SHOWN)

STEP 9B.3
WITH TOPPER IN
PLACE EXCESS
TRIM

STEP 9B.2

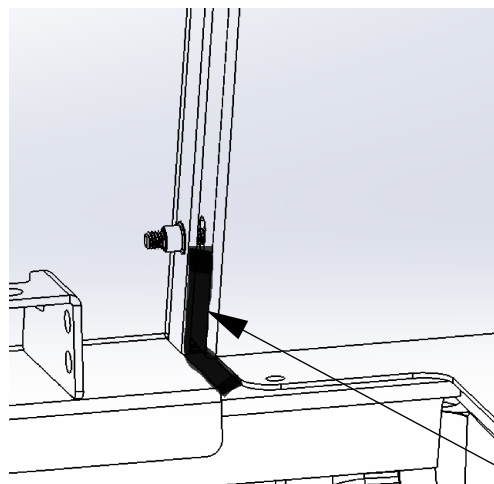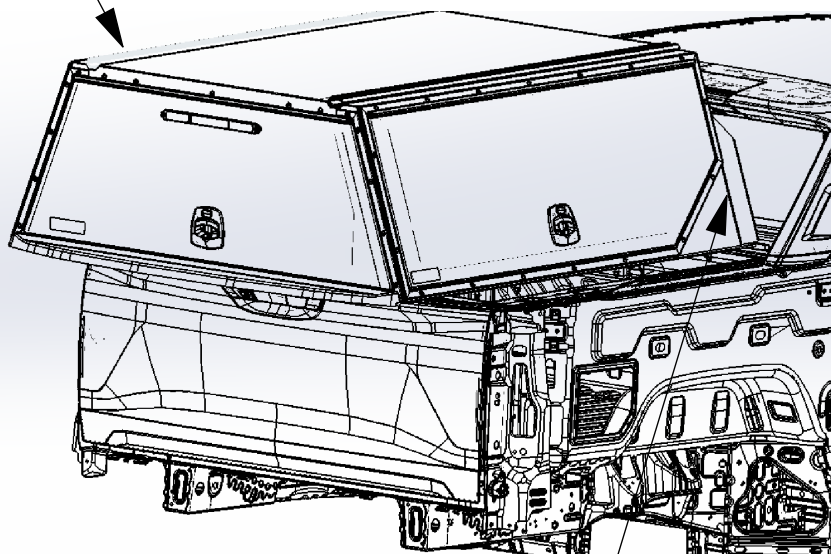

NOTE:
WHEN TOPPER IS IN PLACE USE
SLICONE INSIDE OF TOPPER TO
SEAL GAPS AT FRONT OF TOPPER .
(AS SHOWN)

STEP 9C - INSTALL FOAM, (6) SPACER & 73740 SEALANT TO TRUCK CAB AND BED SEAMS (NOTE: FOR FORD RANGER ONLY)

STEP 9C.1
REMOVE PLUGS
LOCATED ON
THE TRUCK BED
RAIL,




**DO NOT DRILL
INTO THE RAIL**

STEP 9C.2
CENTER
(6) SPACERS
OVER HOLE,
TAPE SPACER TO
HOLD IT IN THE
LOCATION



NOTE:
TALL SPACERS
TO BE USED
WITH 2025
MODELS,

**SHORT SPACERS
TO BUT USED
WITH 2026 OR
NEWER MODELS**

STEP 9C.3
PLACE FOAM
AROUND TOP OF
BED RAILS, STRIPS
WILL BUTT UP
AGAINST EACH
OTHER AT
CORNERS

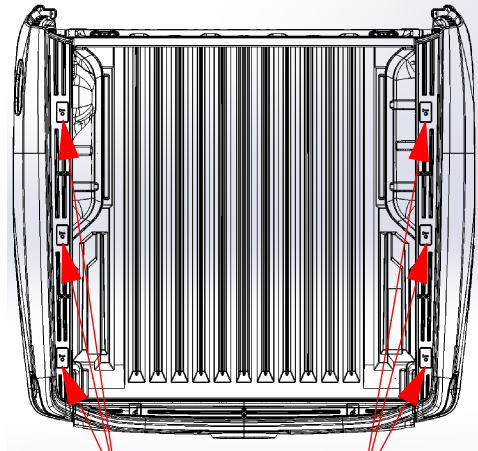


STEP 9C.1

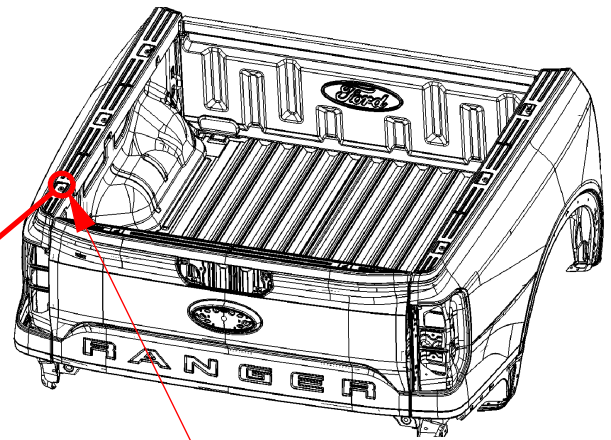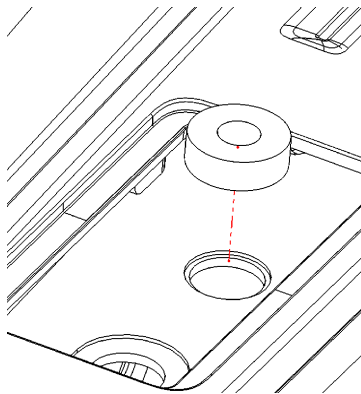

STEP 9C.2

STEP 9C.3

71766

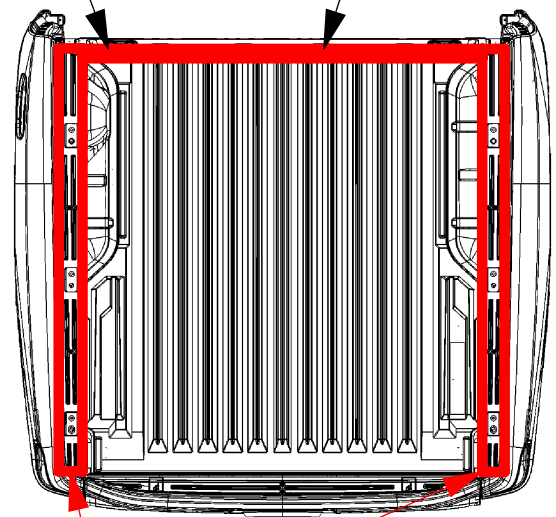

71768



NOTE:
BEFORE INSTALL PREP IS STARTED,
IF RANGER MODEL YEAR IS 2024, MAKE SURE
THAT LOAD BOX REINFORCEMENT BRACKETS
HAVE BEEN INSTALLED. SCAN QR CODE FOR
DOCUMENTED DIRECTION




STEP 9C - INSTALL FOAM, (6) SPACER & 73740 SEALANT TO TRUCK CAB AND BED SEAMS (NOTE: FOR FORD RANGER ONLY)


STEP 9C.4
SLIDE 80670 &
80671 UNDER
TRIM AT FRONT
CORNERS OF
BED TO MOUNT
TO OEM HOLES,
FULLY TIGHTEN
(6)FAS0329,
(6)FAS0552, &
(6)FAS0588

**M8 SOCKET
DRILL**

NOTE:
TRIM IS NOT VISIBLE FOR
CLARITY

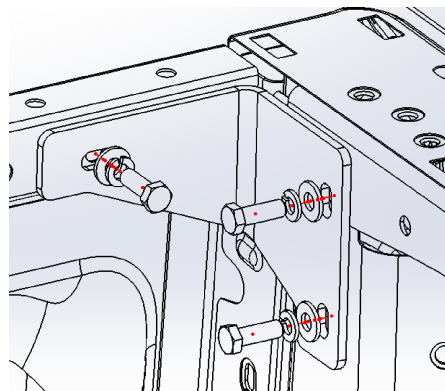

STEP 9C.4

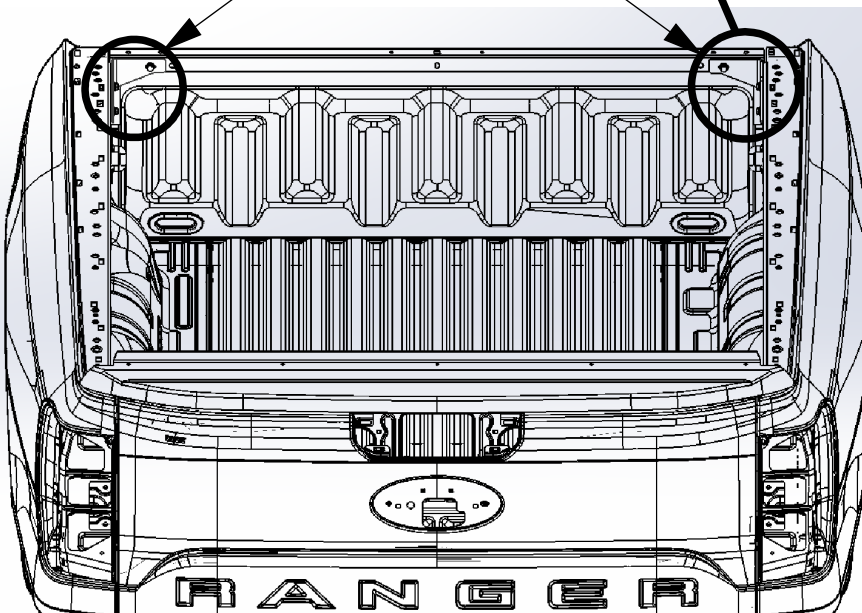

NOTE:
BEFORE INSTALL PREP IS STARTED,
IF RANGER MODEL YEAR IS 2024, MAKE SURE
THAT LOAD BOX REINFORCEMENT BRACKETS
HAVE BEEN INSTALLED. SCAN QR CODE FOR
DOCUMENTED DIRECTION



STEP 10 - ATTACH TOPPER TO TRUCK BED

NOTE: (FOR 8.0' 26" TALL RAM 1500, 2500, 3500 ONLY) TOPPER MUST BE SOFT INSTALLED TO MARK FOR DRILLING. TOPPER TO BE REMOVED PRIOR TO DRILLING.

Step 10.1
SET TOPPER ONTO TRUCK BED. ALIGNMENT IS BASED OFF OF THE TAILGATE CLEARANCE CUTOUT IN THE SIDE BED RAILS (FOR FORD ONLY) AND PLACE ON THE PREVIOUSLY INSTALLED FRONT BED SEAL STEP 8.1

THESE 2 FACES SHOULD BE ALIGNED.

Step 10.2
USE HOLES IN THE BED RAIL TO MARK AND DRILL MOUNTING LOCATIONS. IT IS NOT NECESSARY TO REMOVE THE TOPPER FOR THIS STEP.


(8 PLACES)
1 1/32" DRILL BIT




NOTE: IF THESE HOLES INTERFERE WITH THE OEM BODY, DRILL A NEW HOLE IN THE BED RAIL +/- 2" FROM THE INTERFERENCE.

NOTE: IT IS RECOMMENDED THAT YOU LOAD THE TOPPER ONTO A TRUCKBED WITH ONE OF THE FOLLOWING METHODS:


- HOIST: ATTACH TO THE ROOF RAILS OF THE TOPPER
- FORKLIFT: OPEN THE REAR DOOR AND SET FORKS ON THE ROOF BOWS
- MANUAL: HAVE 1 INDIVIDUAL AT EACH CORNER OF THE TOP AND CARRY OVER THE SIDES OF THE TRUCK. DO NOT SCRATCH THE VEHICLE.

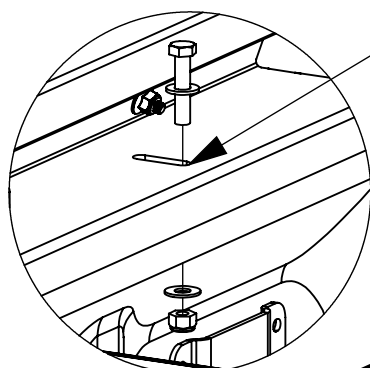

Step 10.2

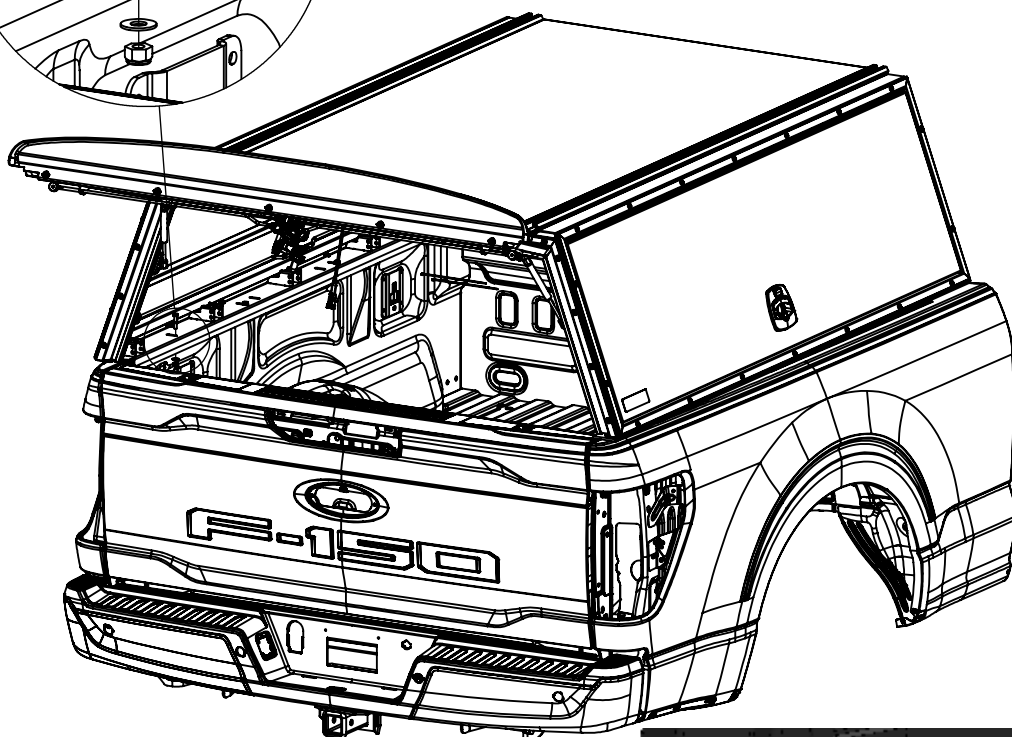

Step 10.1

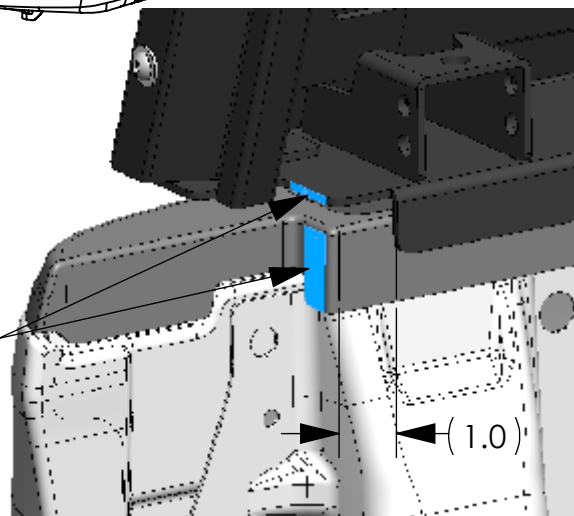

STEP 10 ALT- ATTACH TOPPER TO TRUCK BED

NOTE: (FOR 5.0' FORD RANGER ONLY) TOPPER MUST BE SOFT INSTALLED TO MARK FOR DRILLING. TOPPER TO BE REMOVED PRIOR TO DRILLING.

Step 10.1 ALT
SET TOPPER ONTO TRUCK BED.
ALIGNMENT IS BASED OFF OF THE TAILGATE CLEARANCE CUTOUT IN THE SIDE BED RAILS (FOR FORD ONLY) AND PLACE ON THE PREVIOUSLY INSTALLED FRONT BED SEAL STEP 8.1

THESE 2 FACES SHOULD BE ALIGNED.

Step 10.2 ALT
USE HOLES IN THE BED RAIL TO MARK AND DRILL MOUNTING LOCATIONS. IT IS NOT NECESSARY TO REMOVE THE TOPPER FOR THIS STEP.


(8 PLACES)
11/32" DRILL BIT



NOTE: IF THESE HOLES INTERFERE WITH THE OEM BODY, DRILL A NEW HOLE IN THE BED RAIL +/- 2" FROM THE INTERFERENCE.


NOTE: IT IS RECOMMENDED THAT YOU LOAD THE TOPPER ONTO A TRUCKBED WITH ONE OF THE FOLLOWING METHODS:

- HOIST: ATTACH TO THE ROOF RAILS OF THE TOPPER
- FORKLIFT: OPEN THE REAR DOOR AND SET FORKS ON THE ROOF BOWS
- MANUAL: HAVE 1 INDIVIDUAL AT EACH CORNER OF THE TOP AND CARRY OVER THE SIDES OF THE TRUCK. DO NOT SCRATCH THE VEHICLE.

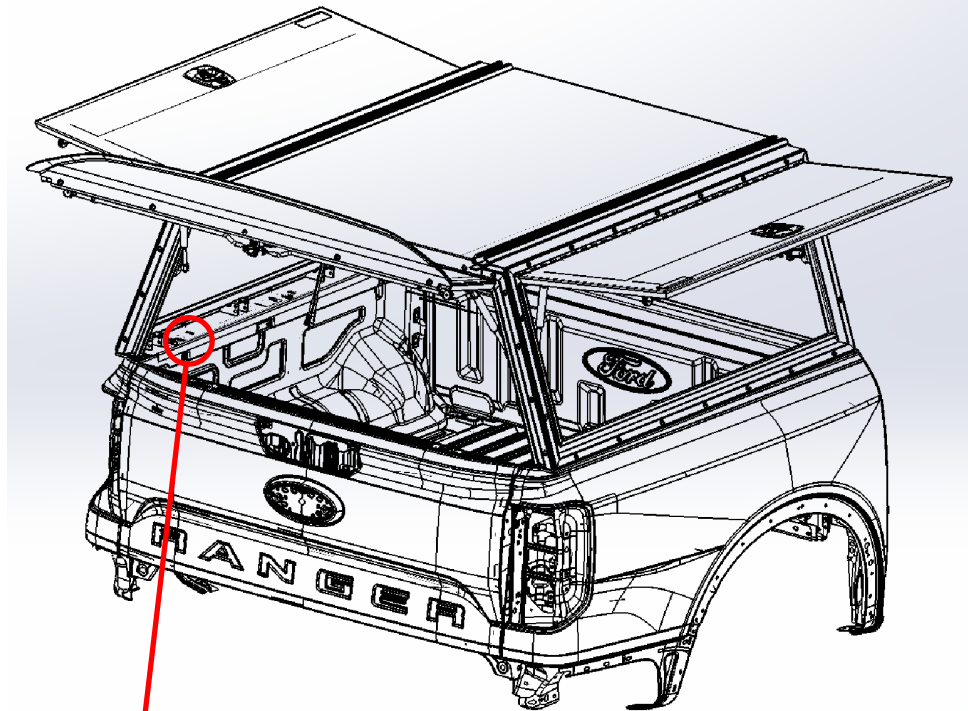


Step 10.2 ALT

NOTE:
OUTER SLOTS ARE TO BE USED WITH 2026 FORD RANGER
INNER AND SMALLER SLOTS TO BE USED WITH 2025 FORD RANGER

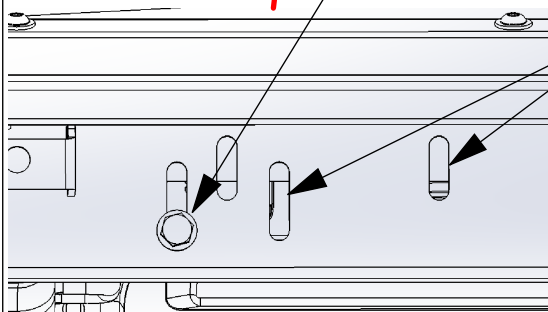

NOTE:
OVERHEAD VIEW FOR CLARITY

Step 10.1

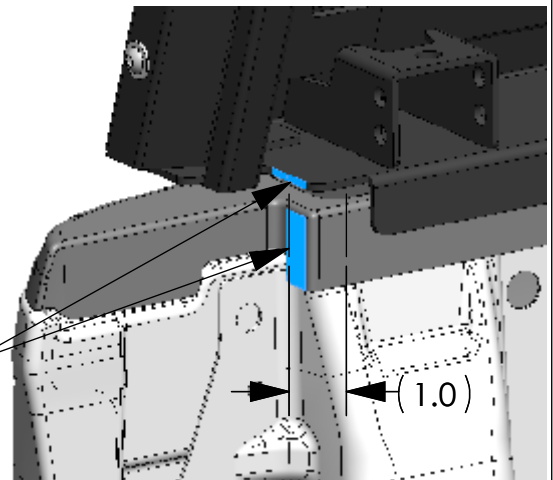


STEP 10 - ATTACH TOPPER TO TRUCK BED

NOTE: (FOR 8.0' 26" TALL RAM 1500, 2500, 3500 ONLY) TOPPER MUST BE SOFT INSTALLED TO MARK FOR DRILLING. TOPPER TO BE REMOVED PRIOR TO DRILLING.

Step 10.3
USING THE HOLES
YOU JUST DRILLED
OUT, FASTEN THE
TOPPER TO THE
TRUCK BED.
FAS0242,
FAS0552 [x2],
FAS0248

(8 PLACES)
1/2" SOCKET
1/2" WRENCH

Step 10.4
ADD TO BOTH
SIDES SILICONE
BETWEEN FRONT
PANEL GAP AND
BED RAIL, AND
REAR OF TOPPER.

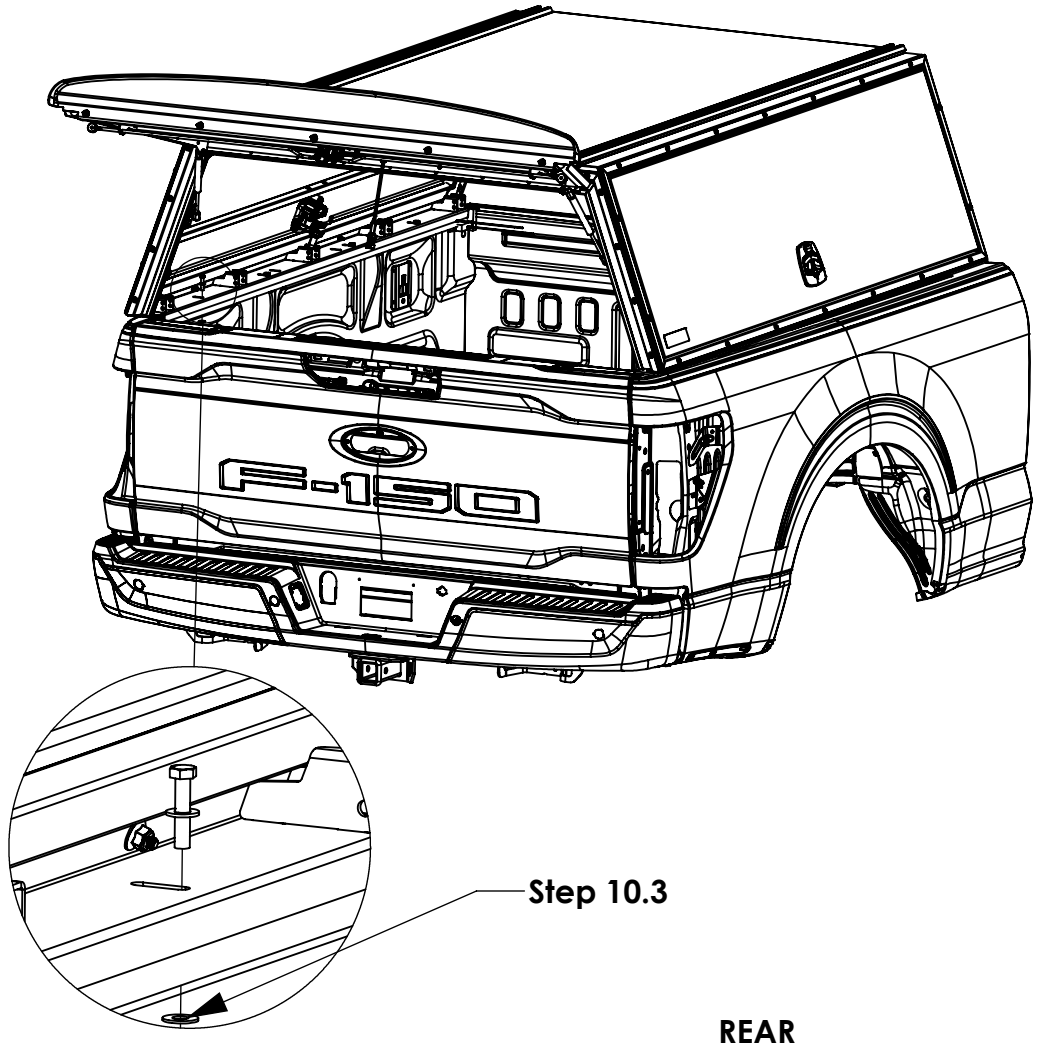


FRONT

REAR



Step 10.4

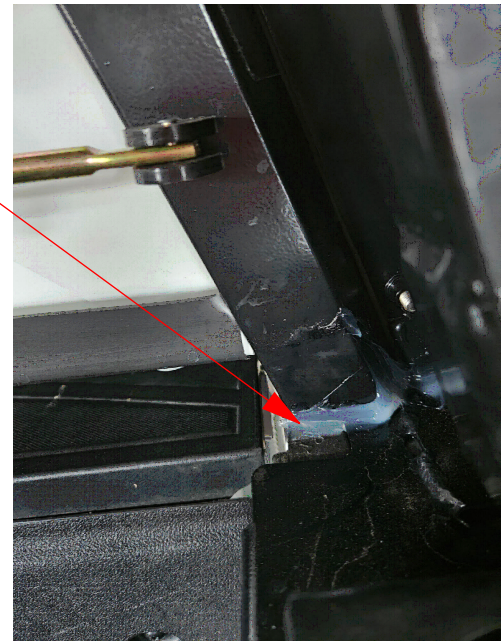

MAKE SURE ALL FASTENERS ARE TIGHTENED!! INSTALLATION IS COMPLETE

STEP 10 (CON'T) - ATTACH TOPPER TO TRUCK BED

NOTE: (FOR 8.0' 26" TALL RAM 1500, 2500, 3500 ONLY) TOPPER MUST BE SOFT INSTALLED TO MARK FOR DRILLING. TOPPER TO BE REMOVED PRIOR TO DRILLING.

Step 10.4
COLORADO
TOPPER.
ALIGNMENT IS
BASED OFF OF
THE TAILGATE
AND THE SIDE BED
RAILS.


THESE 2 FACES
SHOULD BE
ALIGNED.

Step 10.5
USING THE HOLES
YOU JUST DRILLED
OUT, FASTEN THE
TOPPER TO THE
TRUCK BED.
FAS0242,
FAS0552 [x2],
FAS0248


(6 PLACES)
1/2" SOCKET
1/2" WRENCH

NOTE: IT IS RECOMMENDED THAT YOU LOAD THE TOPPER ONTO A TRUCKBED WITH ONE OF THE FOLLOWING METHODS:

- HOIST: ATTACH TO THE ROOF RAILS OF THE TOPPER
- FORKLIFT: OPEN THE REAR DOOR AND SET FORKS ON THE ROOF BOWS
- MANUAL: HAVE 1 INDIVIDUAL AT EACH CORNER OF THE TOP AND CARRY OVER THE SIDES OF THE TRUCK. DO NOT SCRATCH THE VEHICLE.

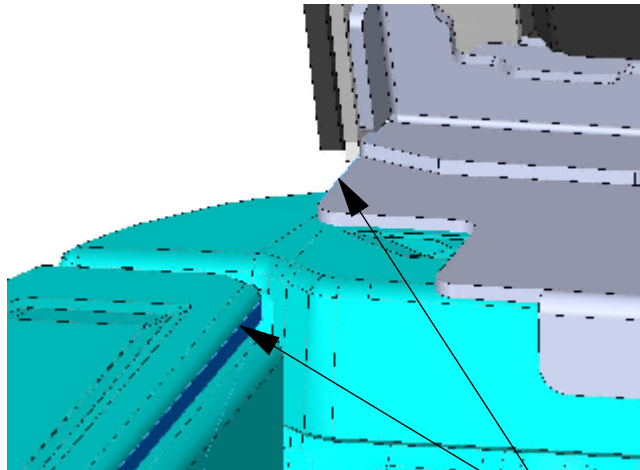

Step 10.4
IN LINE

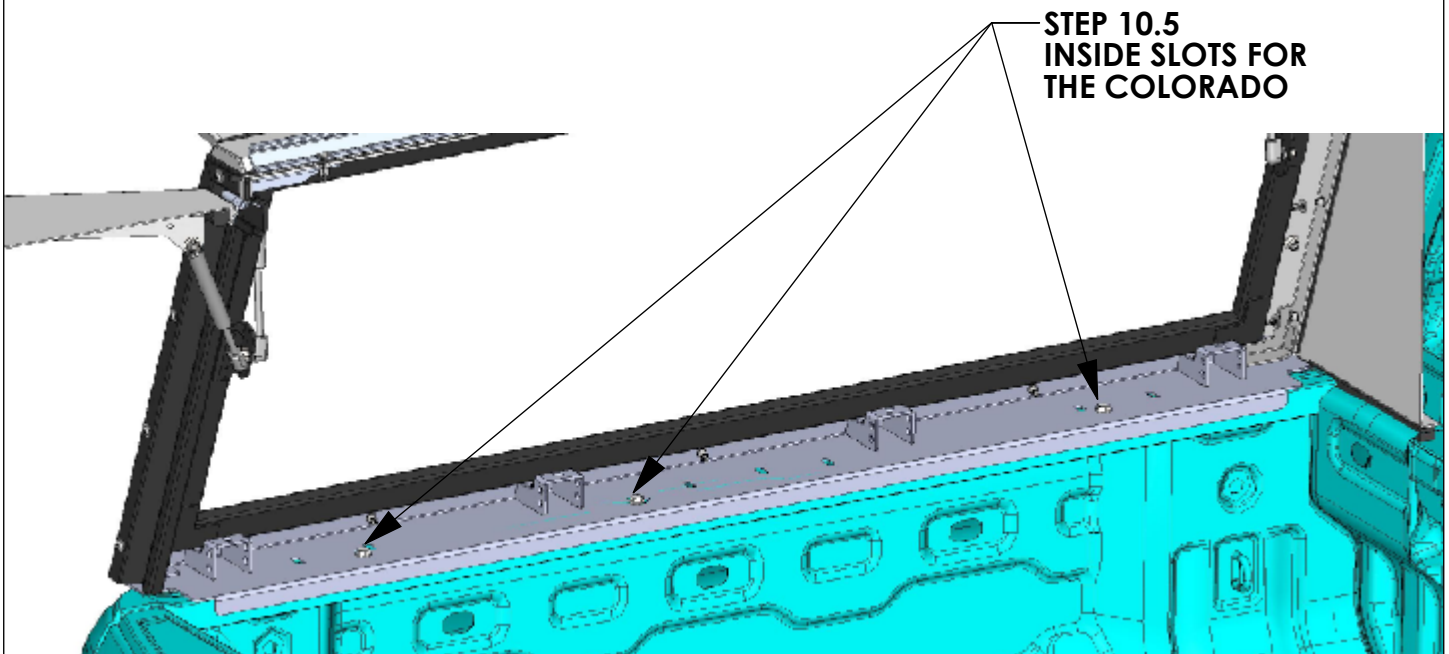

MAKE SURE ALL FASTENERS ARE TIGHTENED!! INSTALLATION IS COMPLETE

Introduction / Comments:

Install Instructions For Brake Light On Topper For RAM 1500/2500/3500 (5.6' - 8')

Note:

Read all instructions prior to installation. Review the Adrian Steel **GENERAL PRECAUTIONS PAGES (56638)** before attempting installation. Only personnel familiar with using electrical best practices should perform this install. Reference **ELECTRICAL BEST PRACTICES MANUAL (54479)** before attempting installation.



Install Instructions For Brake Light On Topper
For RAM 1500/2500/3500 (5.6'-8')

Section 1: Table of Contents

Table of Contents:

Page 1: Cover Page/Introduction.....	1
Section 1: TOC & Safety Precautions Information	2
Section 2: Cable Kit Part Identification	3
Section 3: Tools Needed & Fastener ID/Torque Table	4
Section 4: General Vehicle Layout	6
Section 5: General Wiring Diagram	7
Section 6: Vehicle Integration	8-16
Section 7: Test and Check	17

These symbols are used in the document to warn installer to make sure there is understanding beyond general precautions used when working on electrical installations.

	ANSI Z535.6-2006 refers to the use of blue when “addresses practices not related to personal injury”.
	Yellow labelling level of personal injury = could result in minor injury.
	Red labelling level of personal injury = could / will result in death.

Section 2: Cable Kit Part Identification [PART# 72914]:

Pre-Assembly Picture of All Parts



Parts Included:

- (173") Nylon Harness Loom
- (1) P-Clip, Philips self tapping screw
- (4) Self-Adhesive tie mounts
- (2) Alcohol pads
- (1) Grommet
- (7) Tree mount cable ties
- (10) Cable ties
- (1) Fastener



Section 3: Tools Needed & Fastener ID/Torque Table:




Figure 4-1: Tools Needed for Installation

Section 3: Tools Needed & Fastener ID/Torque Table:


Torque Table for KIT 67342 [HYB]: 700/1000W

ITEM NO.	ASC PN	Description	PCS	Torque Range	Use Wrench or Size
1	FAS0641	1/4" HH Self tapper	1		7/16"
2	FAS0066	1/4"Star tooth Washer Galv.	1	—	—
3	Ground Stud Fastener (Used for RAM 1500 only)	10mm Nut	1	12Nm [+/- 1.2Nm] (106 lb.in).	10mm NUT

1

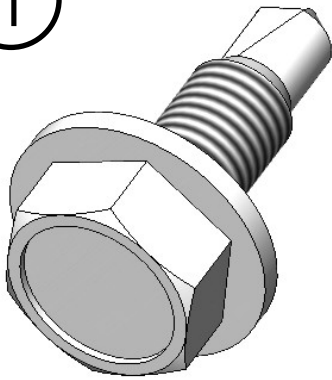

2



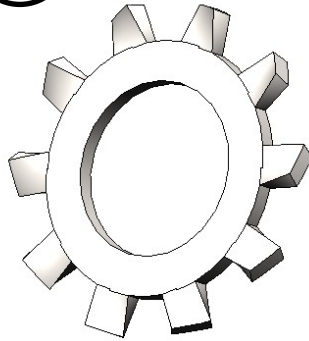


Used for 2500/3500 Only


Used for Grounding to Chassis

RAM 1500 Only


Section 4: General Vehicle Layout:

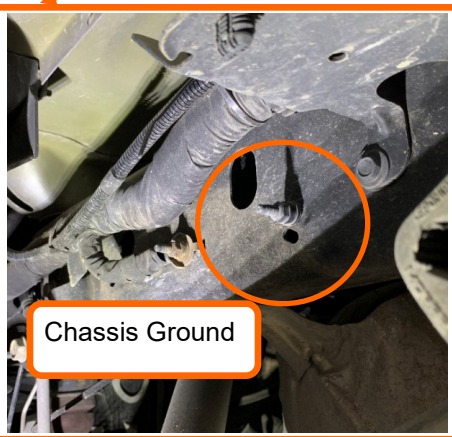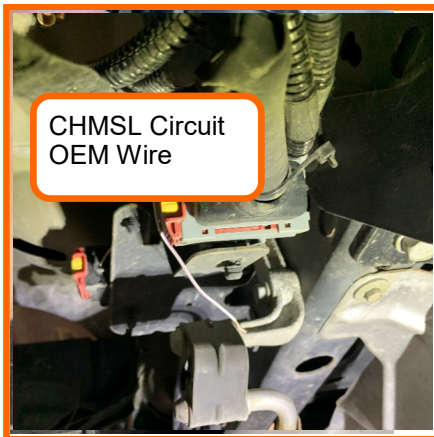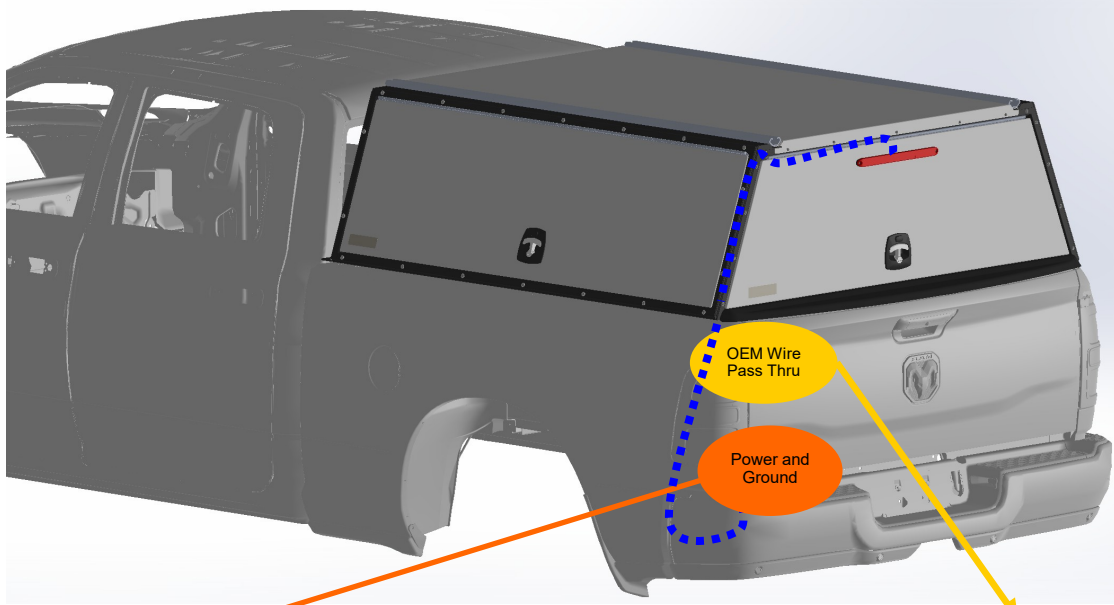

Color	Key - Items
Orange	Power and Ground Location
Blue	Harness Routing
Yellow	Bed Wire Pass Thru

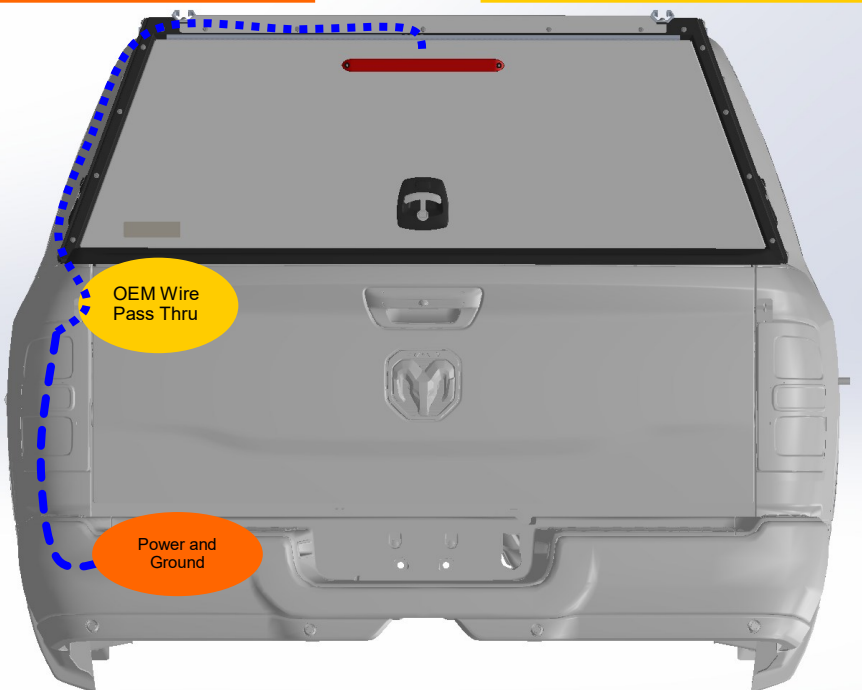


Section 5: General Wiring Diagram:

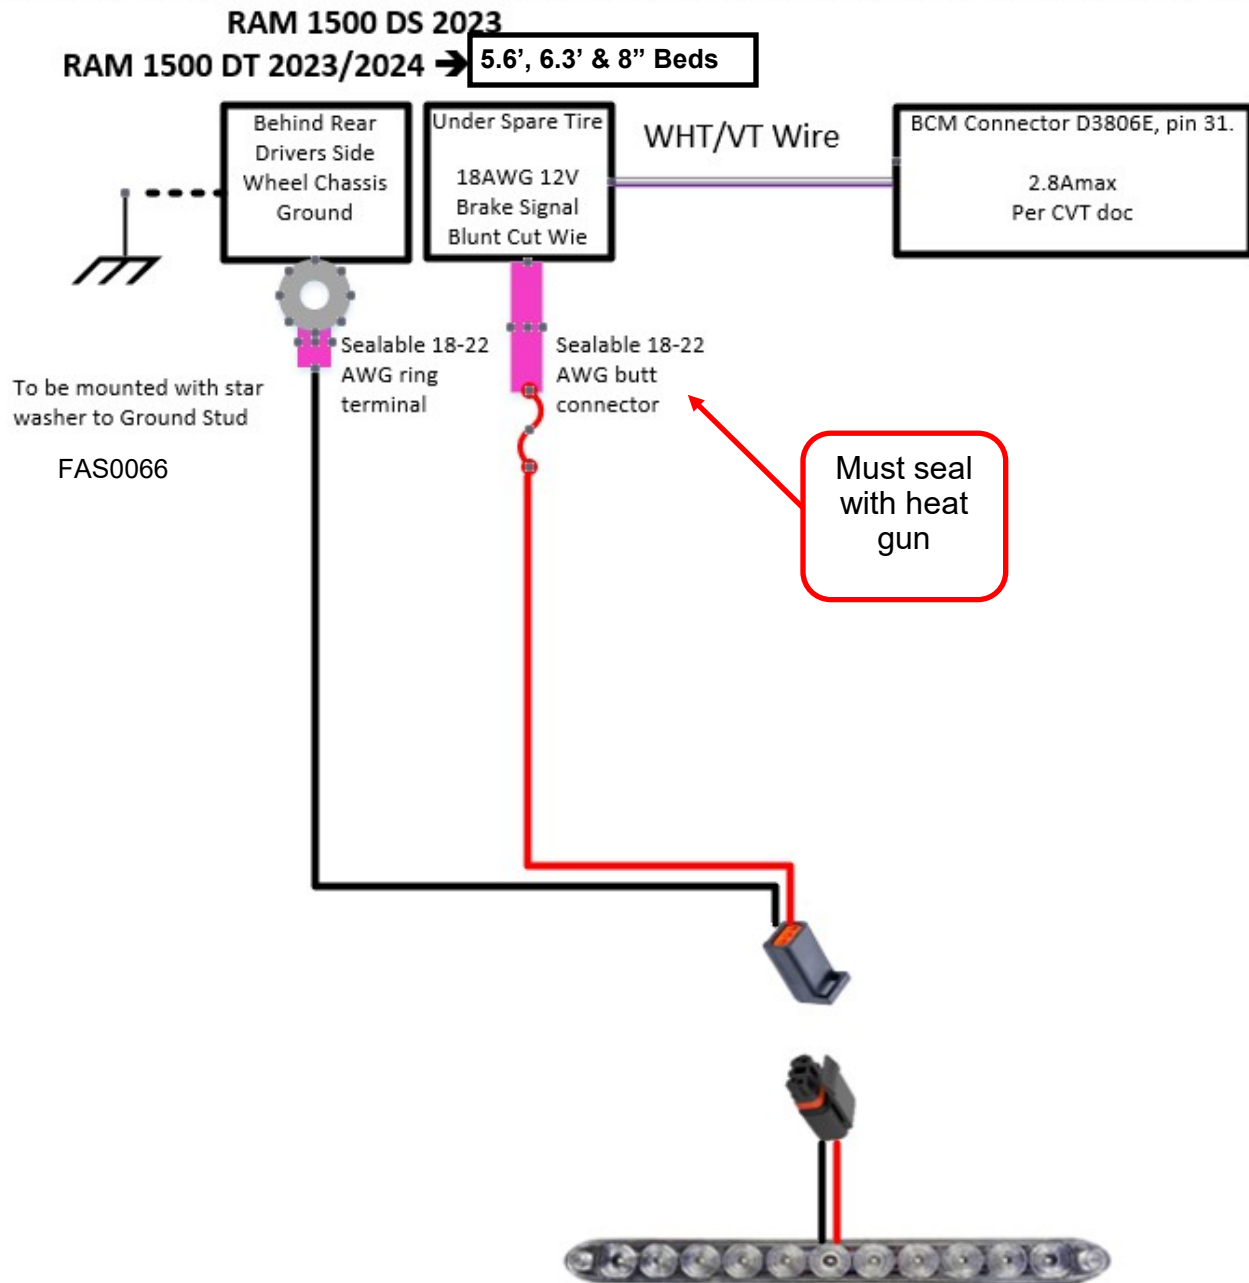

RAM 1500 DS 2023
RAM 1500 DT 2023/2024 → 5.6' 6.3 & 8' Beds
White/Violet blunt cut wire located on rear driver side frame

Figure 5-1: Wiring Diagram

Section 5: General Wiring Diagram:

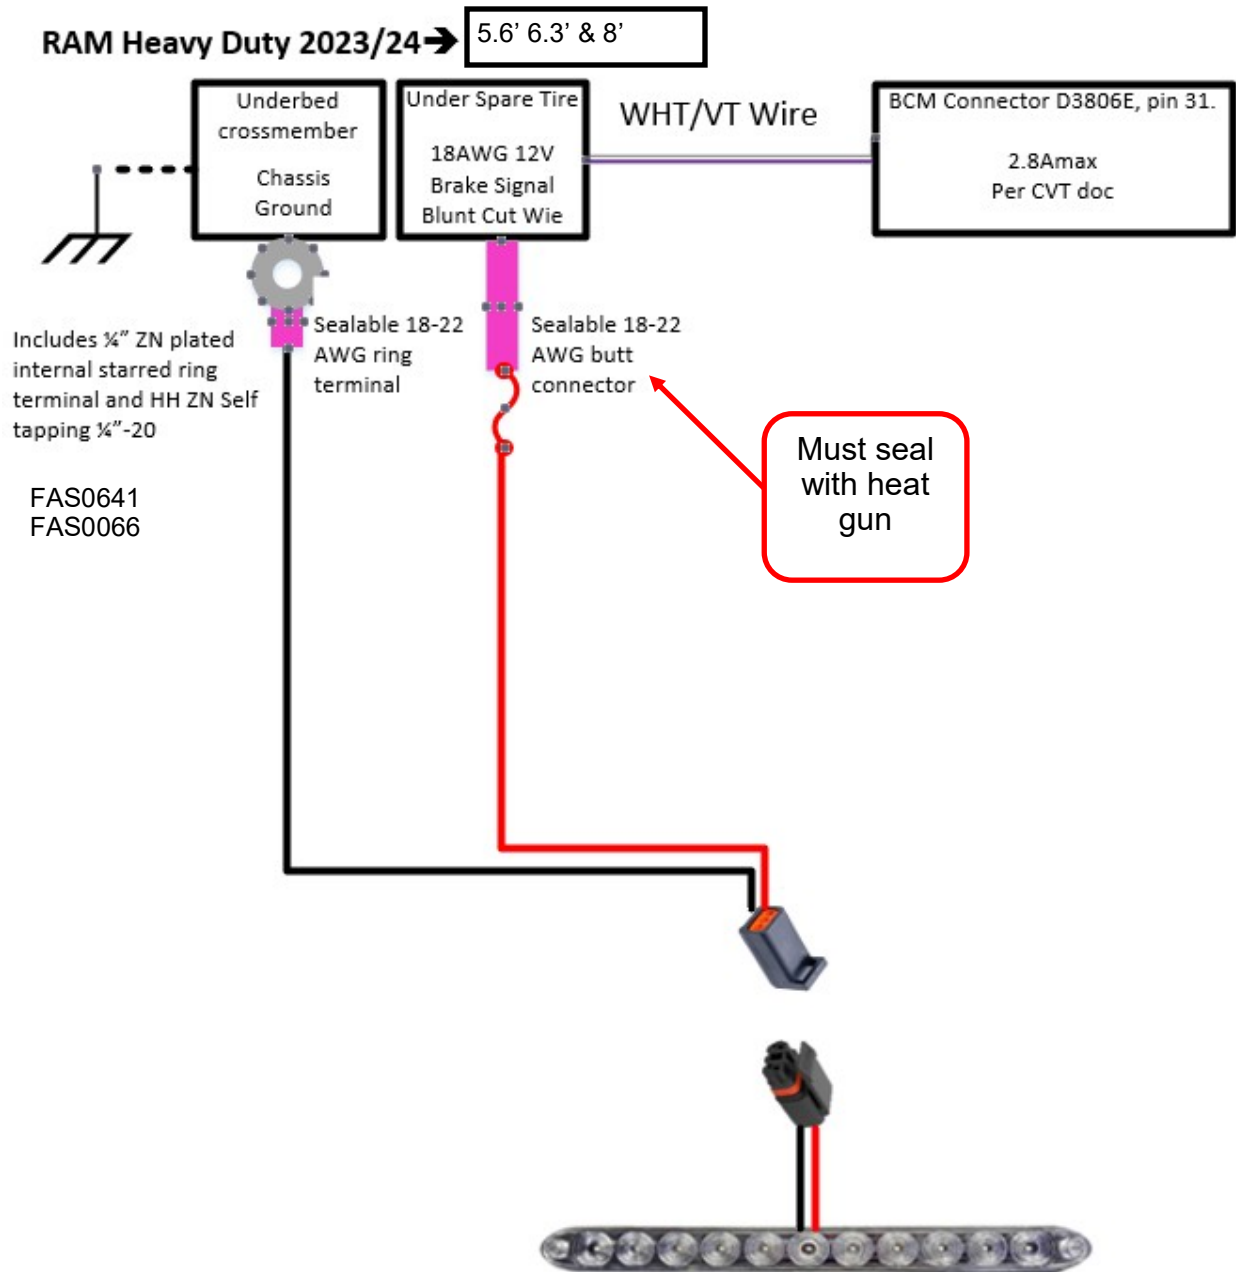

RAM 2500/3500 DS 2023

RAM 2500/3500 DT 2023/2024 → 5.6' 6.3 & 8' Beds

White/Violet blunt cut wire located on rear driver side frame


Figure 5-1: Wiring Diagram

Section 6: Vehicle Integration



Step 1: Locate the brake light harness 72914.

Remove the fuse from the inline fuse holder until the end of the install.

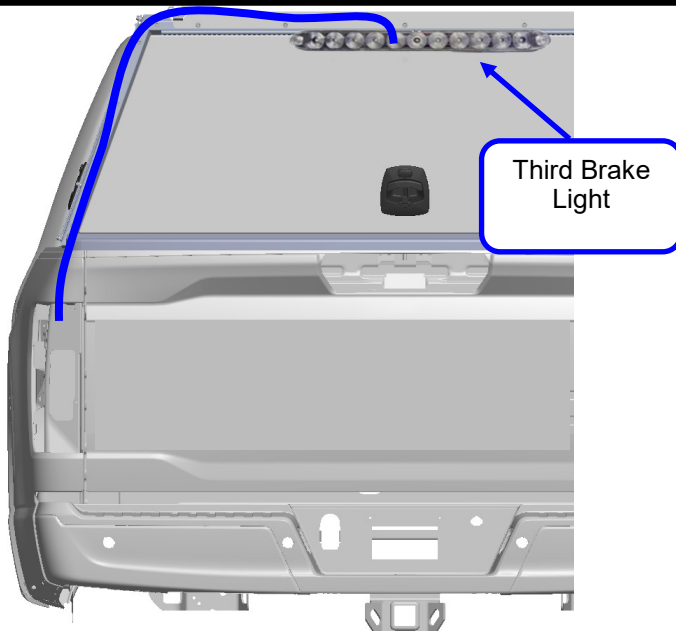

Step 2: Locate the 3rd brake light located in the middle rear of the topper. Plug mating end of brake light harness (72914) into pre-existing connector for the brake light.



RAM 1500



RAM
2500/3500

Step 3: Locate OEM grommet cover located in the truck bed wall on the driver side.

Using a drill and a 9/16" drill bit, drill a 9/16" hole in the center of the cover. Use the image to the left as reference. This hole will allow for the harness to be inserted into until. The grommet will then be in place around the harness, in the drilled hole.

The RAM 2500/3500 will route the wiring through the hole indicated in the 2nd image. The grommet on the harness will meet with the opening and fit accordingly. The existing grommet on the harness can be cut off and is not needed. However, be sure to add provided grommet in kit to harness.



Step 4: Routing (refer to routing diagram at beginning of instructions).

Once connection of the brake light and harness are made, use the push-click-pull method to ensure positive locking of the connector.

Following the images to the left, begin to route the harness towards the grommet cover. Continue routing the brake light harness inside the topper. The harness will be roughly routed from the brake light directly towards the driver side door of the topper and routed down as shown in the image.


Be sure to leave extra wire from the brake light to the topper rails before securing. This ensures the wires won't break when the topper door opens and close.

*****IMPORTANT:**

Ensure while securing wiring to avoid all sharp edges. (Shown in image 2, circled in red).



Watch for Sharp Edge

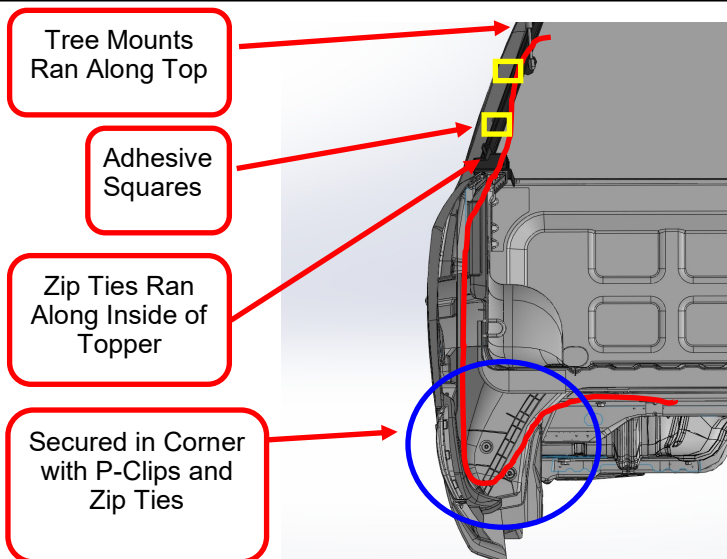


Step 5: Begin to secure the harness using provided zip ties and stud mount zip ties where necessary. Ensure the harness is taut. Once the harness is secured running along the inside of the driver side, drop the harness down the D-pillar of the vehicle, through the grommet cover.

Pull the harness and ensure the grommet on the harness is in proper position with the cover.

The harness down the D-pillar shall be tightened to the rail using p-clips to hold the harness in the corner as it goes towards the bed wire pass through cover.


*** Use image as reference only. Drill p-clip into bed crossmember and do not drill into bed floor.

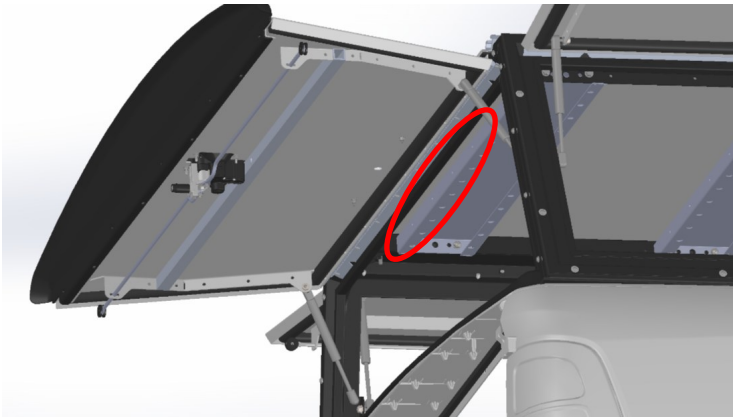


Step 5 Cont. :

***** Note: Routing explained more below.**


As shown in the first image to the left, route wire harness along first roof bow utilizing tree mounts and zip ties.

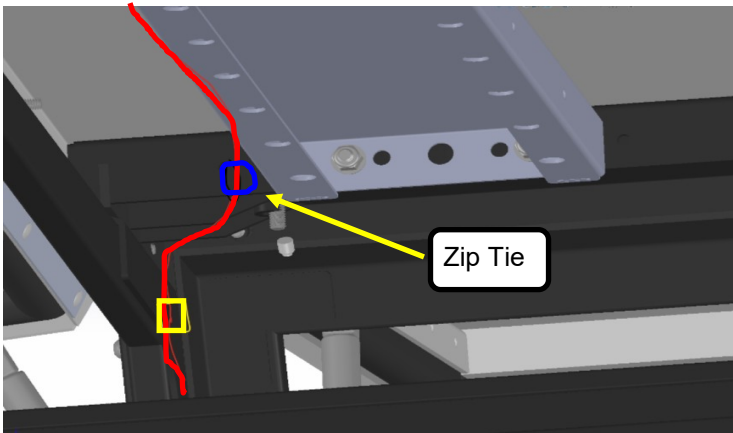


Once harness is secured along first roof bow, locate the first hole running along the driver's side wall, indicated in the 2nd image. Using a zip tie, secure the harness in the first hole. Ensure the harness is avoiding all sharp edges, as well as not too taut to damage the harness.

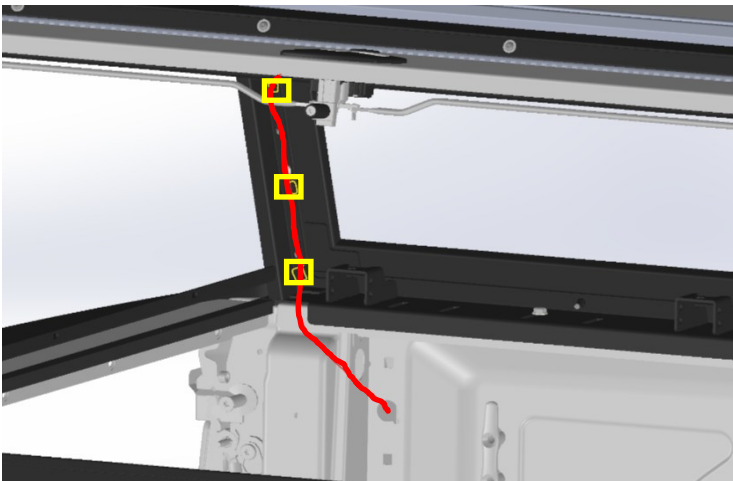

Install stud-mount zip ties along the inside edge of the topper, as shown in the third image. Route the harness along the inside edge and secure it to the stud-mount zip ties.

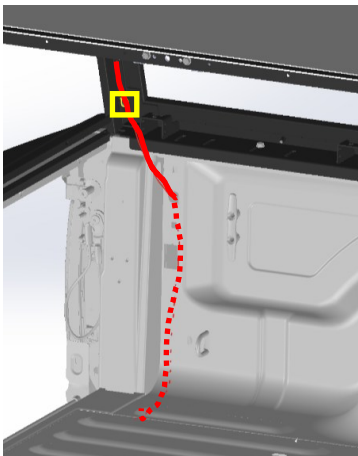

Lastly, once the harness is entirely secured, route the harness downward through the D-pillar as shown in the last image on the left.

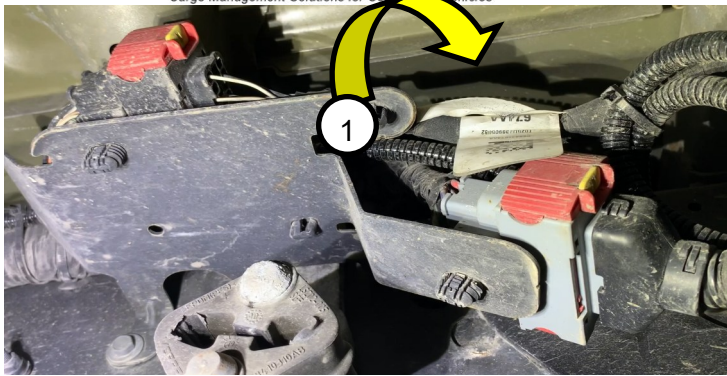

FOLLOW INSTRUCTIONS FOR RAM 1500

Step 6: MOVE TO REAR UNDERSIDE OF VEHICLE.

Locate the brake light harness 72914 that is dropped through the D-pillar and ensure that the fuse from the inline fuse holder is removed until the end of the install.

Step 7:


On the street side, rearward of the vehicle tire is access to the harnessing for the rear electrical. Locate OEM red and gray connector.



Look around the topside of the harness connections and follow the part of the harness that goes toward the center of the vehicle (towards the curb side) [See yellow arrow 1].

There will be a small tape covered wire separate from the OEM harness. It will have a black covering on the end [See yellow arrow 2].


This is the OEM CHMSL circuit wire for the brake light. Its color is White with a Violet stripe

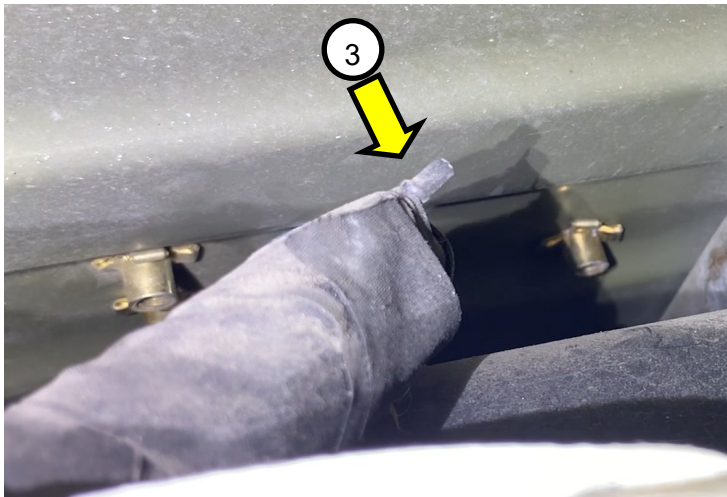

FOLLOW INSTRUCTIONS FOR RAM 1500

Step 8: On backside of the OEM harness, locate the white and violet wire. Begin to strip the wire covering and prepare it to be connected to the brake light harness.

Use the image as reference.

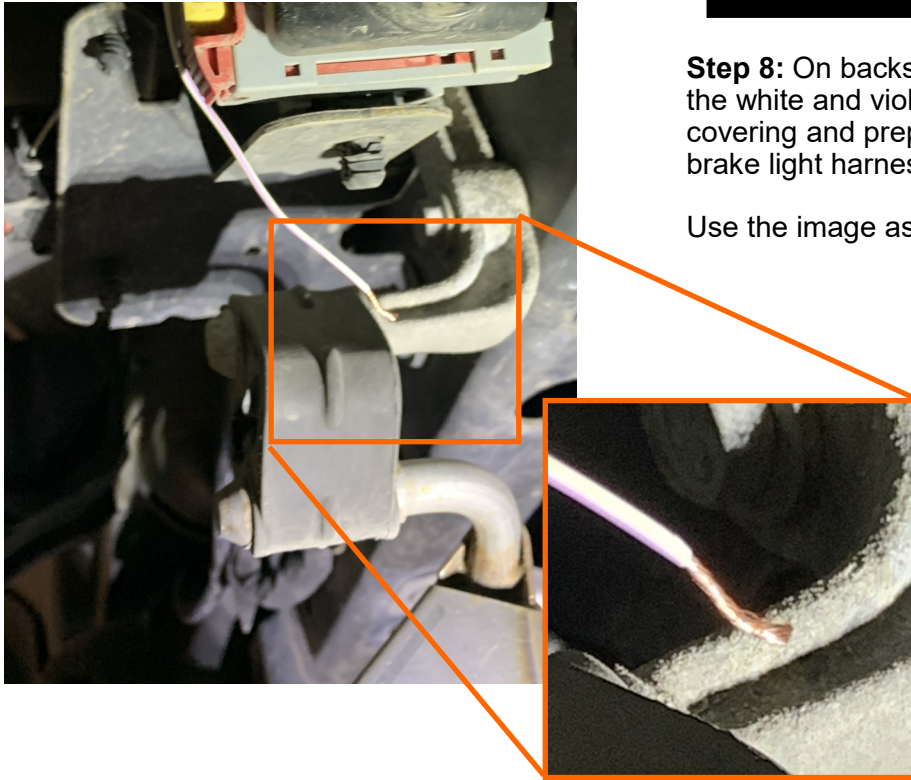

Step 9: Locate the end of the harness (PN72914) with the ring terminal and butt connector.

Use the butt connector to connect to the OEM CHMSL wire. Use a heat gun to shrink the butt connector once crimped on. **It must be completely sealed.**



FOLLOW INSTRUCTIONS FOR RAM 1500

Step 10:

Along side of the OEM harness, locate the OEM chassis ground located on the frame—forward of the CHMSL connection, but still aft of the street side rear wheel. Shown circled in red in the image to the left.

Using a 10mm socket wrench, firmly secure the ring terminal on the brake light harness to the chassis ground. Be sure to place a 1/4" star tooth washer (FAS0066) in proper position, in front of ring terminal before securing back in place.




FOLLOW INSTRUCTIONS FOR RAM 2500/3500

Step 11:

Locate the underside of the vehicle. Near the spare tire, closer to passenger side, locate OEM harness shown in the image to the left. Cut white tape wrapped around harness.

Begin to pull OEM harness out from behind truck tire until you can visually see the blunt cut wire end wrapped in black tape.

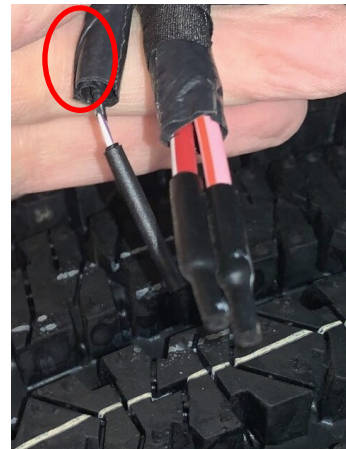


**FOLLOW INSTRUCTIONS FOR RAM
2500/3500**

Step 12:

On the OEM harness, remove tape on wire end and locate the white and violet wire. Begin to strip the wire covering and prepare it to be connected to the brake light harness.

Use the image as reference only.

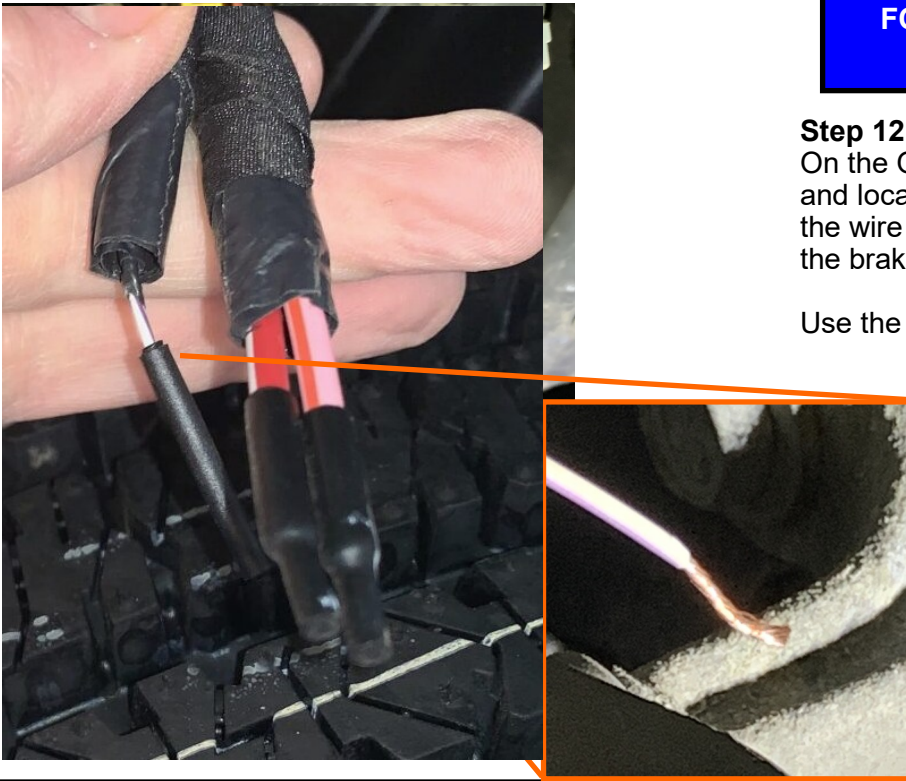

Step 13:

Locate the end of the harness (PN72914) with the ring terminal and butt connector.

Use the butt connector to connect to the OEM CHMSL wire. Use a heat gun to shrink the butt connector once crimped on. **It must be completely sealed.**

Step 14:

Route the other end over the underbody frame rail to the white underbed crossmember. Follow the image as reference.

Using a self tapping screw, begin to screw the other end wire terminal to the vehicle.


1pc - 1/4" HH Self tapper FAS0641
1 pc - 1/4" Star tooth Washer Galv. FAS0066



**FOLLOW INSTRUCTIONS FOR RAM
2500/3500**

TEST AND CHECK GROUND

Once securing ground on vehicle chassis, please use multimeter to ensure there is a good ground connection.

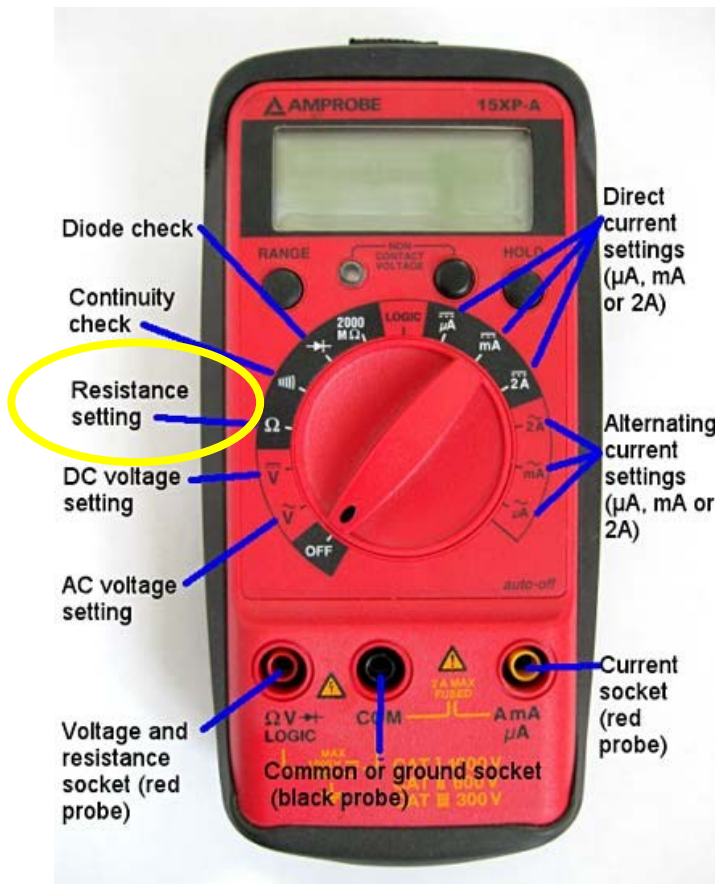

How to check for good ground:

- Put multimeter on "ohms" setting.
RESISTANCE SETTING

- Place one probe on back end of the screw that was drilled into vehicle chassis.

Place other probe on chassis body. This location must be an unpainted surface.

- Depending on the multimeter, if there is a good ground, there will be a beep sound made. Also, the screen should display any numerical amount of resistance, which will verify it is a good ground.


Step 15:

Loop and tie up any extra harness high as possible.

There can be no extra harness beneath the vehicle where snow and ice can pull down. All harness on the bottom of the vehicle should be cable tied in 6-8 " increments along the existing harness in that area.

Be sure to secure the harness using zip ties and p-clips where necessary. Be sure to mount p-clips in a proper location to not damage the vehicle.

If needed, harness can be routed and secured following existing harnesses. Be sure to secure harness directly in the area circled in red.

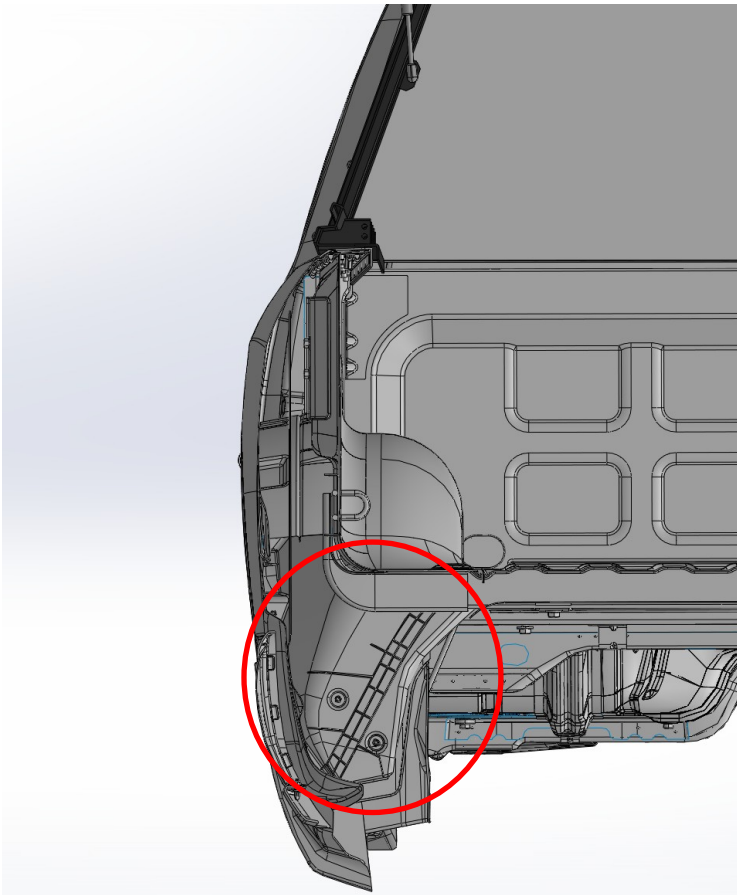

Step 16:

Place removed fuse back into proper fuse holder position.



Section 7: Test and Check

***** Once the entire install is complete, place fuse back into harness fuse holder. With the vehicle off, press brake pedal. Once brake pedal is pressed, the OEM brake lights as well as 3rd brake light shall light up.**

If the vehicle does not display brake lights when brake pedal is pushed and the vehicle is off, try again while the vehicle is on.

Ensure fuse is placed properly in fuse holder, all connections are correct, and ground has a good connection.

Lastly, ensure all harness is secured inside topper as well as under vehicle.

The install is now complete! ***