


DWG BY	ECN#	DATE	CHK	PACKAGE#	ISS.
KAS	6071	8/29/02	AW	S/L TK20	A
HORIZONTAL & VERTICAL					
PACKAGE WEIGHT- 000.00 # HCG= 00 VCG= 00					
ITEM	PART NO.	DESCRIPTION			QTY.
1	27846	TRACTION STRIP-DIE CUT, 4 X 51			4

TK 20
STOW-ALL TRACTION KIT
 APPLICATION INSTRUCTION
 "DOUBLE SA20/SAJ20"

ADRIAN STEEL CO.
 906 JAMES STREET
 ADRIAN, MI 49221
 517/265-6194

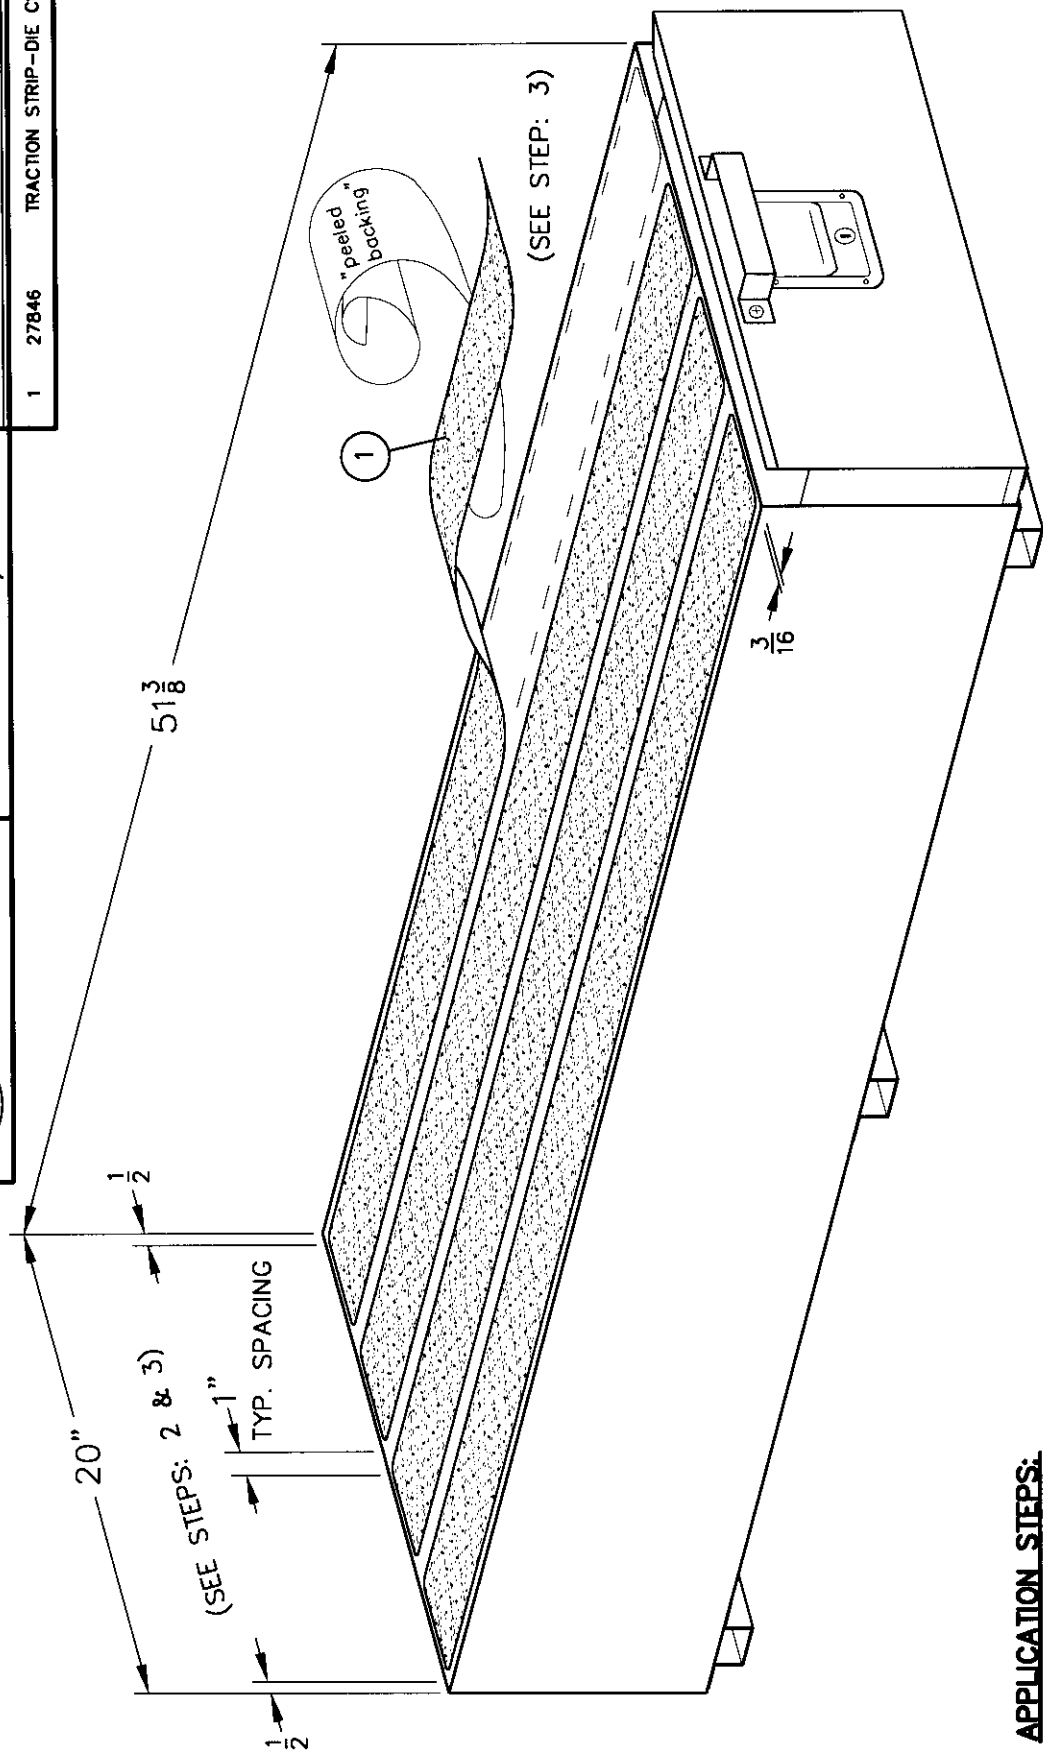

APPLICATION STEPS:

- 1) CLEAN TOP SURFACE OF STOW-ALL GETTING RID OF ANY DIRT, DEBRIS, OR FINGER PRINTS.
 (SURFACE MUST BE CLEAN FOR PROPER ADHESION OF TRACTION STRIPS.)
- 2) PARTIALLY "PEEL OFF BACKING" OF TRACTION STRIP AND APPLY STICKY END TO FRONT OR BACK EDGE OF STOW-ALL AT THE DIMENSIONS SHOWN ABOVE.
- 3) ONCE TRACTION STRIP IS SECURE AT THE FRONT OR BACK EDGE OF STOW-ALL, PEEL OFF BACKING WHILE FIRMLY TACKING DOWN REMAINDER OF TRACTION STRIP KEEPING ALIGNED WITH SIDE EDGE OF STOW-ALL AND ADJACENT TRACTION STRIP. BE SURE TO "ROLL " OR " PRESS " OUT ALL EDGE GAPS AND BUBBLES.

CAUTION:
 DRILL THRU FLOOR WITH CARE
 WATCH FOR GAS TANK, CONTROL
 LINES, & ELECTRICAL WIRING.

(SCALE: 1/8)

A- TK20