**PRODUCT WEIGHT****14 LBS.****WIDTH x DEPTH x HEIGHT****55 x 3 x 2.5****CAPACITY****N/A****COLOR****GRAY****CATALOG NUMBER****TRA-FSV****PRODUCT FEATURES**

Truss assembly designed to be mounted to full size van header rails in the cargo area (cross car). The truss assembly provides secure attachment point(s) for installing shelving units and other products in the cross car position.

**SEE PAGE 2 FOR APPLICATION NOTES AND ACCESSORIES, OTHER PRODUCTS THAT WORK WITH THIS UNIT.**

**PAGE 1 of 2**

The information contained in this document is the sole property of ADRIAN STEEL COMPANY. ADRIAN STEEL COMPANY retains the right to modify and/or change the product of its design at any time without prior notification.



**CATALOG NUMBER      TRA-FSV**

**PRODUCT APPLICATION**

This product is designed to be used in full size vans (FORD and GM)

**ACCESSORIES THAT WILL WORK WITH THIS PRODUCT**

<b>CATALOG NUMBER</b>	<b>DESCRIPTION</b>
AD44LCV	ADJUSTABLE SHELVING
OTHER AD SHELVING MAY REQUIRE ADDITIONAL MOUNTING BRACKETS.	


**SPECIAL APPLICATION NOTES**



# **ADRIAN STEEL**







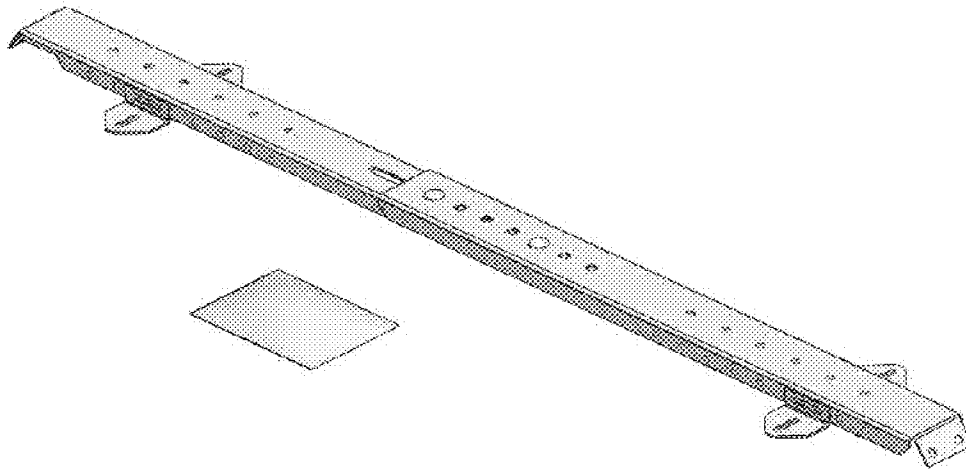

*Cargo Management Solutions for Commercial Vehicles*

## **Assembly/Installation Instructions and Owners Manual**

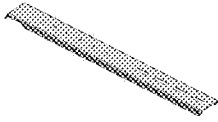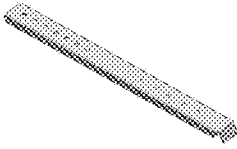


**NOTE: THIS PRODUCT IS NOT DESIGNED TO BE INSTALLED FORWARD OF THE PARTITION POSITION!**

### **TRA-FSV** **TRUSS ASSEMBLY, FULL SIZE VANS**

<b>PARTS YOU WILL USE FOR</b>  <b>STEP 01</b>	TRUSS CHANNEL, INNER 42456-G (1) EACH	TRUSS CHANNEL, OUTER 42457-G (1) EACH	TRUSS CLIP 42620-G (4) EACH	SCREW, THP 1/4-20x.75 FAS0062 (4) EACH
				
	FLANGE NUT, 1/4-20 FAS0055 (8) EACH	CARRIAGE BOLT, 3/8x1 FAS0102 (2) EACH	WASHER, 3/8 FAS0104 (2) EACH	LOCKNUT 3/8-16 FAS0110 (2) EACH
				



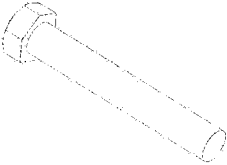


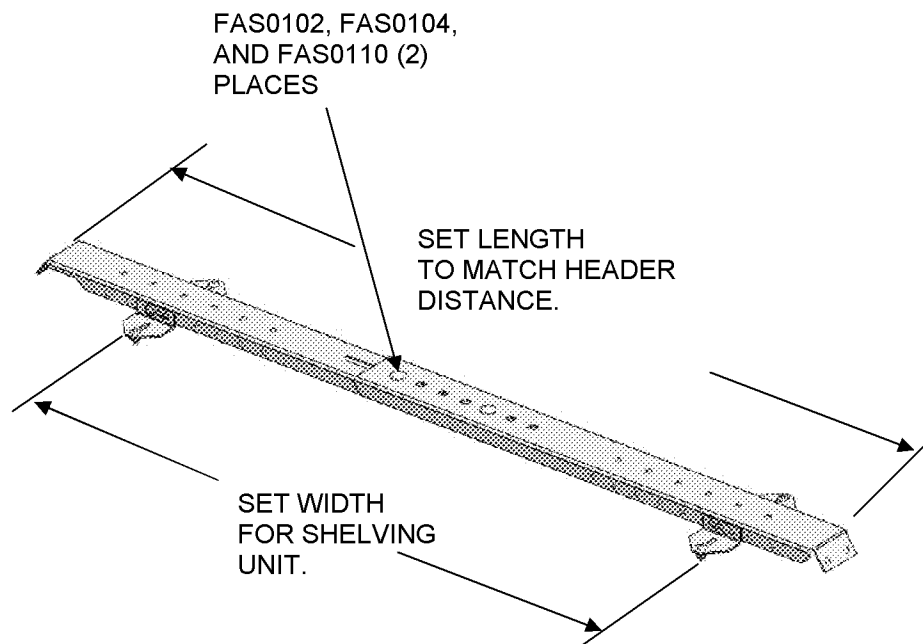
## Instructions for Step 01




IDENTIFYING WHERE THE TRUSS WILL BE INSTALLED IN THE VEHICLE. PRE-ASSEMBLE THE UNIT SETTING THE OVERALL LENGTH TO MATCH THE CROSS CAR WIDTH AT THE HEADER LOCATION.

PLACE THE TRUSS ASSEMBLY INTO THE VEHICLE AND MARK THE MOUNTING LOCATIONS FOR THE 5/16" PLUS NUTS AND SET THE PLUSNUTS.

**TORQUE FASTENERS TO 8 FT. LBS.**
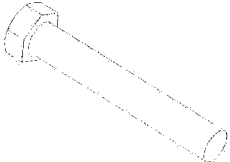
<b>PARTS YOU WILL USE FOR</b>  <b>STEP 02</b>	FAS0086 5/16 FLAT WASHER (2) EACH	FAS0091 5/16 PLUS-NUT (2) EACH	FAS0082 5/16 x 1 HEX HEAD SCREW (2) EACH	FAS0098 5/16 LOCK WASHER (2) EACH
				
	ASSEMBLY FROM PREVIOUS STEP	FAS0063 5/16 x .75 HEX HEAD SCREW (4) EACH		
				

## Instructions for Step 02

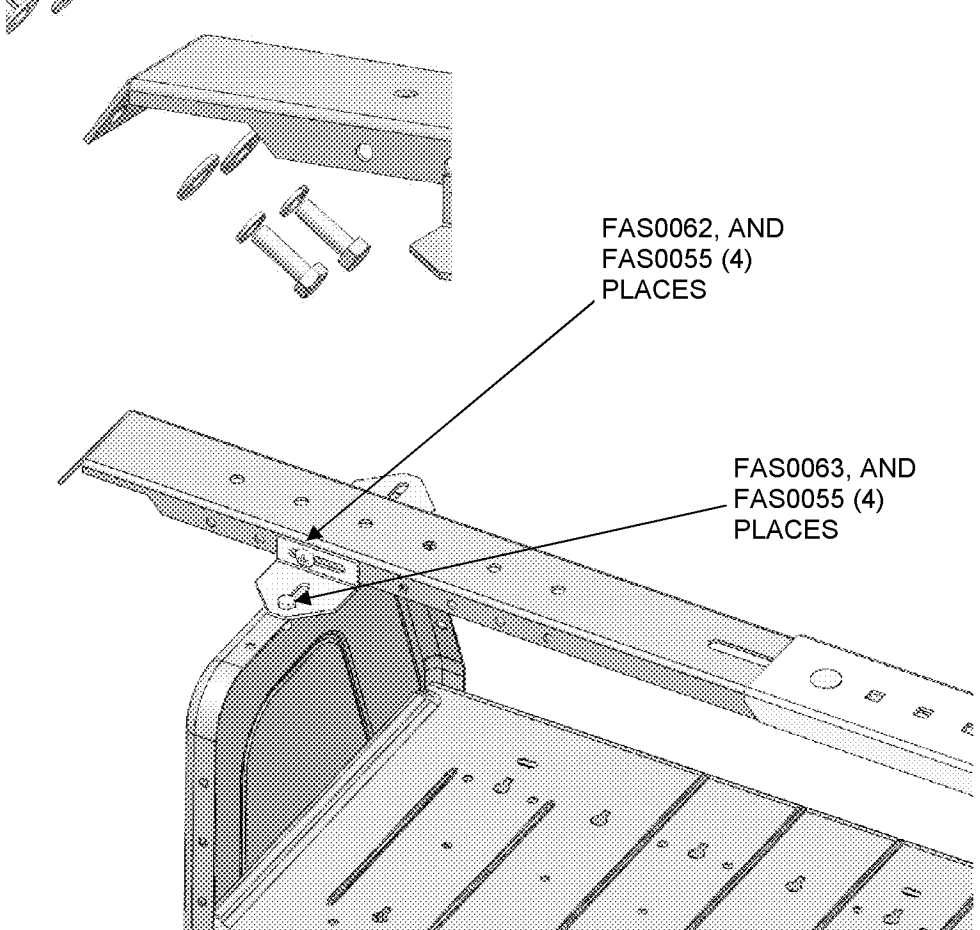

**BOLT THE TRUSS ASSEMBLY INTO PLACE IN THE VEHICLE.**

**TORQUE FASTENERS TO 12 FT. LBS.**

INSERT SHELVING UNIT INTO PLACE AND BOLT SHELVING UNIT TO THE TRUSS ASSEMBLY AS SHOWN.

**TORQUE FASTENERS TO 8 FT. LBS.**

CONTINUE THE SHELF INSTALLATION ACCORDING THE FLOOR MOUNTING METHODS CALLED OUT IN THE SHELVING INSTRUCTIONS.