

**ADRIAN STEEL®**

Cargo Management Solutions for Commercial Vehicles

30 INCH UTILITY BOX

PRODUCT WEIGHT

37.14 LBS

WIDTH X DEPTH X HEIGHT

30" X 14.2" X 11.62"


CAPACITY

N/A

COLOR

BLACK

CATALOG NUMBER

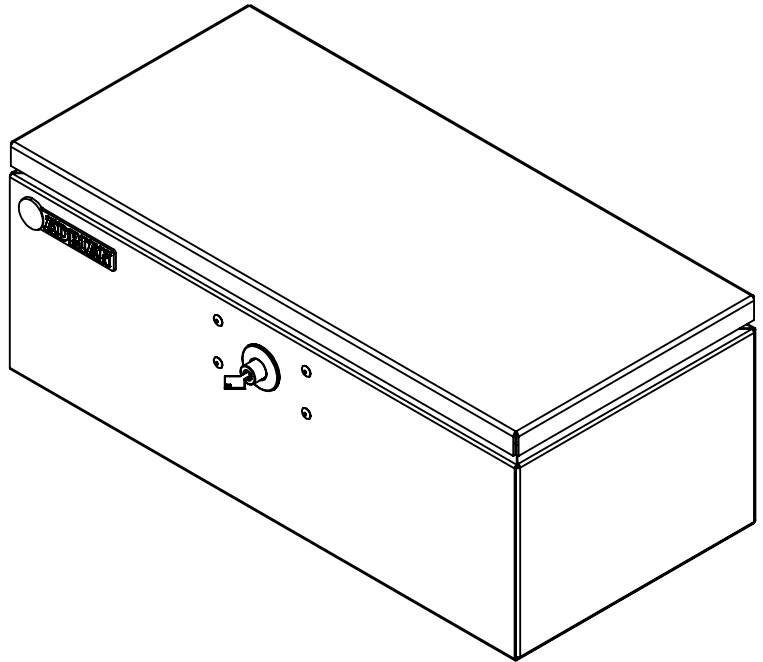UB-30

PRODUCT FEATURES

Maximize storage, protection, and versatility with our Weather-Resistant Storage Box that is mounted to our extendobed. Designed for demanding work environments, this storage box keeps your tools, equipment, and cargo secure from the elements. Constructed from durable, weather-resistant materials, the storage box helps protect valuable contents from rain, dust, and road debris.

Whether you're on a job site, managing equipment, or hauling cargo, this dual-purpose design delivers the convenience of protected storage and expanded carrying capacity in one compact, efficient package.

SEE PAGE 2 FOR APPLICATION NOTES, ACCESSORIES AND OTHER PRODUCTS THAT WORK WITH THIS UNIT.



30 INCH UTILITY BOX

CATALOG NUMBER**UB-30****PRODUCT APPLICATION**

Maximize storage, protection, and versatility with our Weather-Resistant Storage Box that is mounted to our extendobed. Designed for demanding work environments, this storage box keeps your tools, equipment, and cargo secure from the elements. Constructed from durable, weather-resistant materials, the storage box helps protect valuable contents from rain, dust, and road debris.

ACCESSORIES THAT WILL WORK WITH THIS PRODUCT

CATALOG NUMBER	DESCRIPTION (smart)
EBL1048	EXTENDOBED 1000LB 41WX48L
EBL1048-70	EXTENDOBED 1000LB 41WX48L
EBL1053	EXTENDOBED 1000LB 43WX53L
EBL1053-70	EXTENDOBED 1000LB 43WX53L
EBL1260	EXTENDOBED 1200LB 48WX60L
EBL1260-70	EXTENDOBED 1200LB 48WX60L
EBL1260ND	EBL1260 W/NO DRILL F150 5
EBL1266	EXTENDOBED 1200LB 43WX66L
EBL1266-70	EXTENDOBED 1200LB 43WX66L
EBL1270	EXTENDOBED 1200LB 48WX70L
EBL1270-70	EXTENDOBED 1200LB 48WX70L
EBMK-COL-5	EBL NO-DRILL MTG KIT COL
EBMK-150-5.5	EBL NO-DRILL MTG KIT F150
EBMK-F150-6.5	EBL NO-DRILL MTG KIT F150
EBMK-F150-8	EB NO-DRILL MTG KIT F150
EBMK-F250-8	EB NO-DRILL MTG KIT F250

The information contained in this document is the sole property of ADRIAN STEEL COMPANY. ADRIAN STEEL COMPANY retains the right to modify and/or change the product of its design at any time with prior notification.



30 INCH UTILITY BOX

CATALOG NUMBER

UB-30

ACCESSORIES THAT WILL WORK WITH THIS PRODUCT

CATALOG NUMBER	DESCRIPTION (smart)
EBMK-GMEV-6	EBL NO-DRILL MTG KIT GMEV
EBMK-GM15-6.5	EBL NO-DRILL MTG KIT GM15
EBMK-GM25-6.75	EB NO-DRILL MTG KIT GM25
EBMK-MAV-4.5	EBL NO-DRILL MTG KIT MAV
EBMK-RAM-6.3	EBL NO-DRILL MTG KIT RAM
EBMK-RNG-5	EBL NO-DRILL MTG KIT RANG
EB1575	EXTENDEBED 1500LB 48WX75L
EB1575-70	EXTENDEBED 1500LB 48WX75L
EB1590	EXTENDEBED 1500LB 48WX90L
EB1590-70	EXTENDEBED 1500LB 48WX90L


INSTR. NUMBER	:INS80958	PG: 1	REV: A
------------------	-----------	----------	-----------

PART NUMBER	: UB-30, UB-60
----------------	----------------


PART DESC.	• 30IN UTILITY BOX, • 60IN UTILITY BOX
---------------	---

NOTE:
INSTRUCTION CAN
BE USED FOR BOTH
CABINETS

UB-30

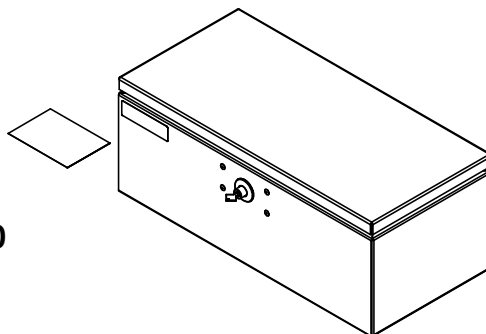

UB-60

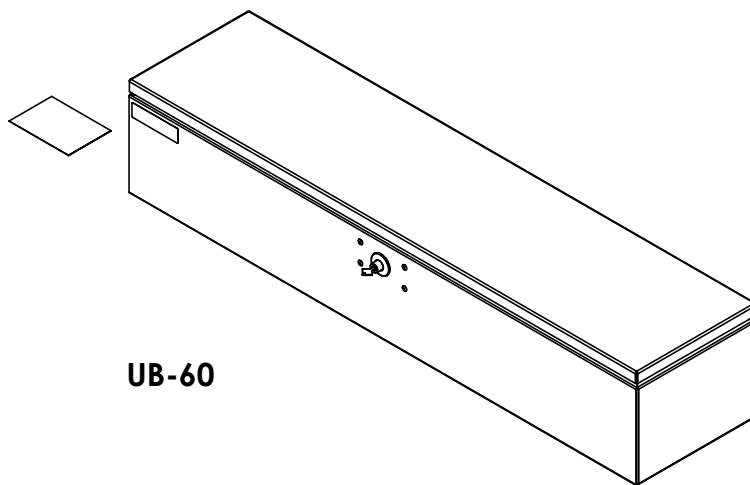

TOOLS NEEDED:

- 13/32" DILL BIT
- DRILL
- 3/16 ALLEN
- 8mm ALLEN BIT FOR TAPPING INSERT
- MARKER
- TAPE MEASURE

GET TO KNOW THE VEHICLE - AT THE BEGINNING OF ANY INSTALLATION, CHECK THE LOCATION OF THE FUEL TANK, FUEL LINES, BRAKE LINES, HIGH VOLTAGE BATTERIES AND WIRING HARNESSSES TO AVOID INJURY OR PROPERTY DAMAGE FROM TOOL CONTACT.

SEAL ALL EXTERIOR HOLES - ALL INSTALLATION HOLES SHOULD BE SEALED WITH BUTYL TAPE OR SILICON TO PREVENT WATER AND EXHAUST GASES FROM ENTERING THE VEHICLE.

CONTROL DRILL DEPTH - TO AVOID DAMAGE TO THE VEHICLE, USE A DRILL STOP OR CLEARED STEP BIT WHEN DRILLING INSTALLATION HOLES.

ALWAYS ADD PRIMER - WHEN ADDING INSTALLATION HOLES BE SURE TO USE A SELF-ETCHING PRIMER TO PREVENT CORROSION, FASTENER FAILURE AND INJURY.

MOUNTING POINTS MUST HAVE METAL-TO-METAL CONTACT - USE PROVIDED MOUNTING SPACERS TO ACCOMMODATE FOR VEHICLE FEATURES, CARPET OR SUBFLOORS.

PROVIDE CLEARANCE FOR SPACERS - IF THE INSTALLATION VEHICLE CONTAINS A CARPET OR SUBFLOOR, USE A 1-3/16" DIAMETER CARPET CUTTER (P/N: 31183-0) AT ALL MOUNTING LOCATIONS TO OPEN UP ROOM FOR SPACERS.

CHECK SPACER ORIENTATION - BE SURE THAT THE INDENT IN THE SPACER COVERS THE PLUSNUT HEAD; THIS ENSURES THE MOST METAL-TO-METAL CONTACT AND REDUCES VIBRATION.

PLUSNUT INSTALLATION - A PLUSNUT GUN IS RECOMMENDED FOR PLUSNUT INSTALLATION FOR ITS PRODUCTION SPEED. HOWEVER, A PLUSNUT SETTING TOOL CAN ALSO BE USED (P/N: 22200-0).





THRU-BOLT CLEARANCE - WHEN USING A THRU-BOLT AT ANY MOUNTING LOCATION, BE SURE THAT YOUR HOLE HAS 1/16" CLEARANCE.

BEST PRACTICE: ORGANIZE ALL FASTENERS & VERIFY THAT ALL ARE ACCOUNTED FOR

PAGE:

3**FASTENERS USED****BAG REFERENCE: BAG80181**


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	26618-0	Silicone Sealant	1
2	FAS0813	Screw, BHCS, 5/16-18X1.00, SS	6
3	FAS0086	WASHER,FLAT USS 5/16 ZP	6
4	FAS0098	Washer, Lock, Split, 5/16, Zinc Plate	6
5	FAS0921	TAPPING INSERT,5/16-18X33/64,ZINC ALLOY	6

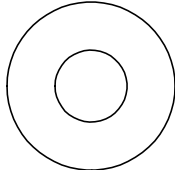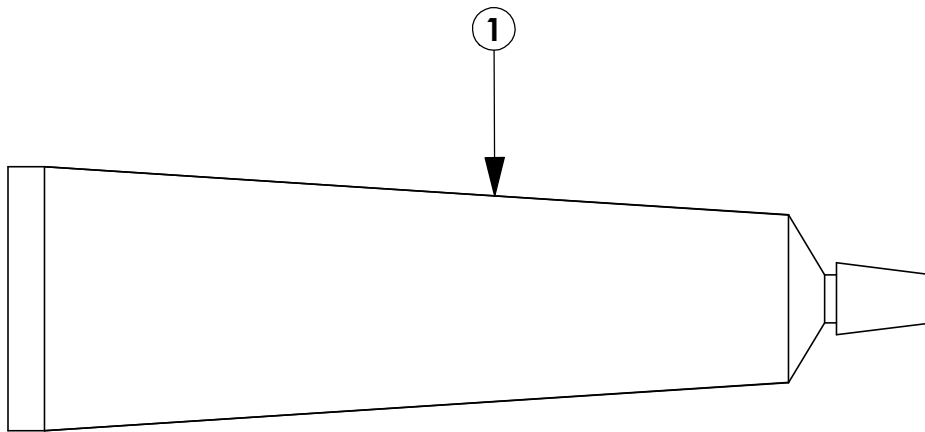


INTENTIONALLY LEFT BLANK

**STEP 1 - ATTACHING UTILITY
BOX TO EXTENDOBED**


**Step 1.1
EXTEND
EXTENDOBED
FULLY OUT OF
TRUCK BED.**

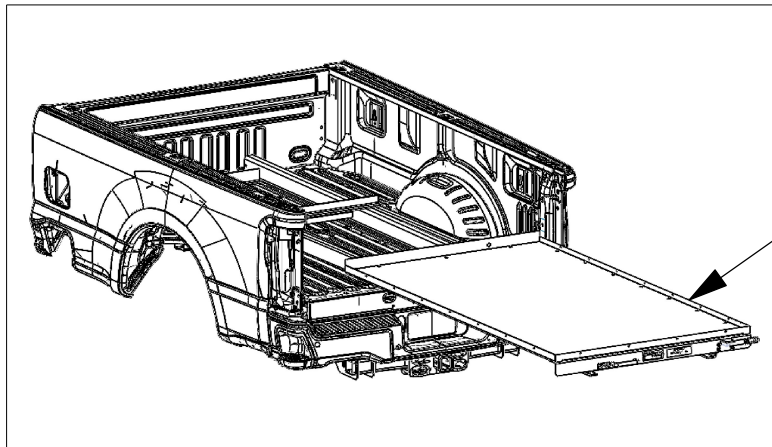

**Step 1.2
PLACE CABINET
(UB-30 SHOWN)
INTO DESIRED
LOCATION**

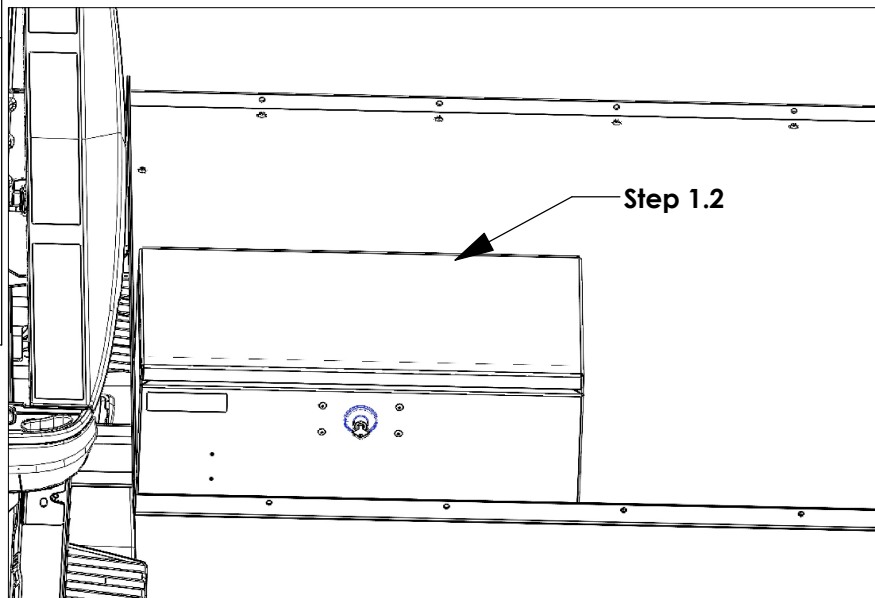


**Step 1.3
OPEN CABINET
DOOR AND
USE A MARKER
TO MARK THE
(6)HOLES AT
BOTTOM OF
CABINET**

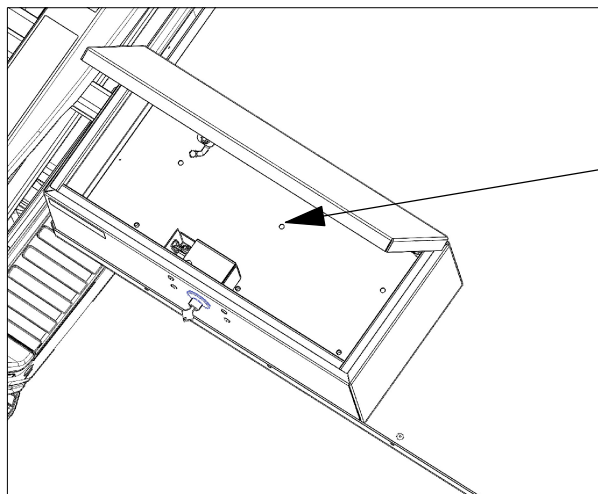

STEP 2 - DRILL HOLES

Step 2.1
REMOVE
CABINET AND
DRILL MARKED
HOLES THRU
FLOOR


13/32 DRILL BIT
DRILL

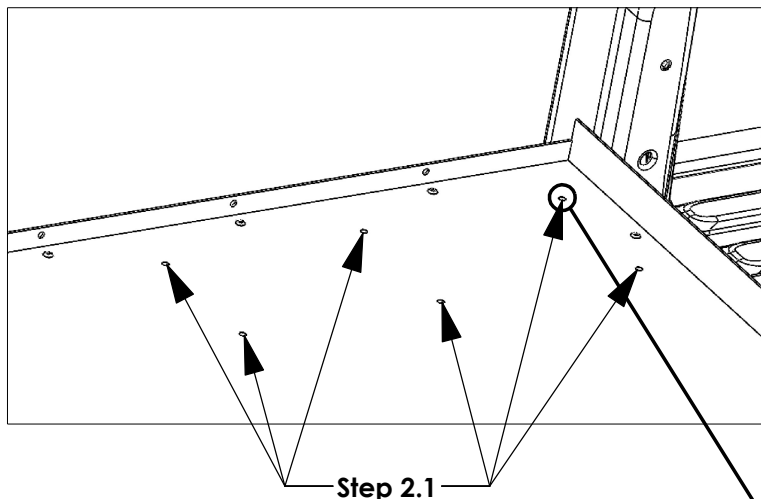


Step 2.2
PLACE
(6)FAS0921 INTO
HOLES

8MM ALLEN

Step 2.2

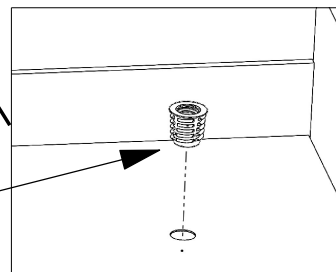
**STEP 3 - ATTACH UTILITY BOX TO EXTENDEBED**

Step 3.1
PLACE CABINET
BACK OVER
HOLES

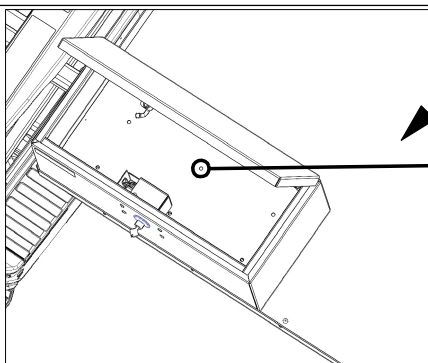


Step 3.1

NOTE:
PLACE SILICONE IN
HOLES BEFORE
ADDING FASTENERS

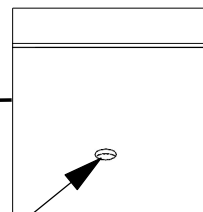

Step 3.2
FULLY TIGHTEN
(6)FAS0813,
(6)FAS0098, &
(6)FAS0086 TO
SECURE
CABINET TO
EXTENDEBED

3/16 ALLE

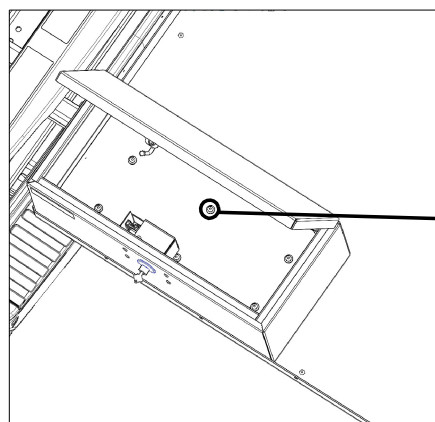

Step 3.2

