




ADRIAN STEEL
VAN AND PICKUP EQUIPMENT

Z-RAIL ACCESSORY HOOK

UH5T Z-RAIL ACCESSORY HOOK

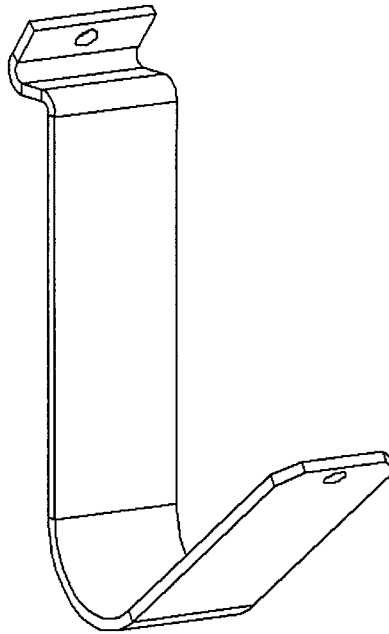

**NOTE: SUSPENDED LOAD PER Z-RAIL HOOK SHOULD
NOT EXCEED 10 LBS.**

P.N.: 33357-0

ISSUE: A

CHK.BY:

REV.BY:

DWG.BY: REED

ECN- 9322 DATE: 09-07-2006



ADRIAN STEEL

VAN AND PICKUP EQUIPMENT

Z-RAIL ACCESSORY HOOK

BEFORE YOU START!

IMPORTANT INSTALLATION STEPS ARE DENOTED USING A STOP SIGN. THESE STEPS MUST BE PERFORMED AS SPECIFIED IN ORDER TO ENSURE A PROPER INSTALLATION AND MUST BE FOLLOWED IN ORDER TO MAINTAIN YOUR PRODUCT WARRANTY!




CRITICAL INFORMATION PERTAINING TO USER AND/OR VEHICLE SAFETY IS DENOTED USING A CAUTION SIGN. SAFETY ITEMS MUST BE STRICTLY ADHERED TO IN ORDER TO ENSURE A SAFE WORKING ENVIROMENT!



ALL FASTENERS USED IN THE ASSEMBLY AND INSTALLATION OF THIS PRODUCT SHOULD BE TIGHTENED TO THE SPECIFIED TORQUE AS LISTED WITH EACH FASTENER CALLOUT BOX.



THE USE OF AIR OR ELECTRIC IMPACT TOOLS FOR THE ASSEMBLY OF FASTENERS IS NOT RECOMMENDED AND COULD CAUSE FASTENER FAILURE!

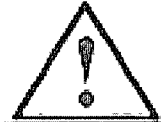

WARNING



THE USE OF DRILLS WITH INTEGRAL DRILL STOPS ALONG WITH PROPER INSPECTION FOR GAS TANK, GAS LINES, BRAKE LINES AND ELECTRICAL LINES PRIOR TO DRILLING ANY MOUNTING HOLES IS STRONGLY RECOMMENDED TO ENSURE THAT VEHICLE DAMAGE IS AVOIDED!



THE USE OF NON-STANDARD FASTENERS AND/OR DEVIATING FROM THE FASTENERS SPECIFIED IN THE INSTRUCTION (S) MAY VOID YOUR PRODUCT WARRANTY!

ALL DRILLED HOLES IN THE VEHICLE SHOULD HAVE THE RAW METAL EDGES SEALED WITH A SELF-ETCHING PRIMER TO RESIST CORROSION AND POTENTIAL FASTENER POINT FAILURE!



ADRIAN STEEL


VAN AND PICKUP EQUIPMENT

Z-RAIL ACCESSORY HOOK

STEP - 01

DETERMINE Z-RAIL HOOK HANGING LOCATION(S)

DEPENDING ON YOUR STORAGE NEEDS, THE Z-RAIL HOOKS CAN BE PLACED IN THE Z-RAIL SLOTS INDIVIDUALLY (I.E., EXTENSION CORDS) OR IN MULTIPLES CONFIGURATIONS SIDE-BY-SIDE (I.E., BROOMS), AS ILLUSTRATED BELOW.

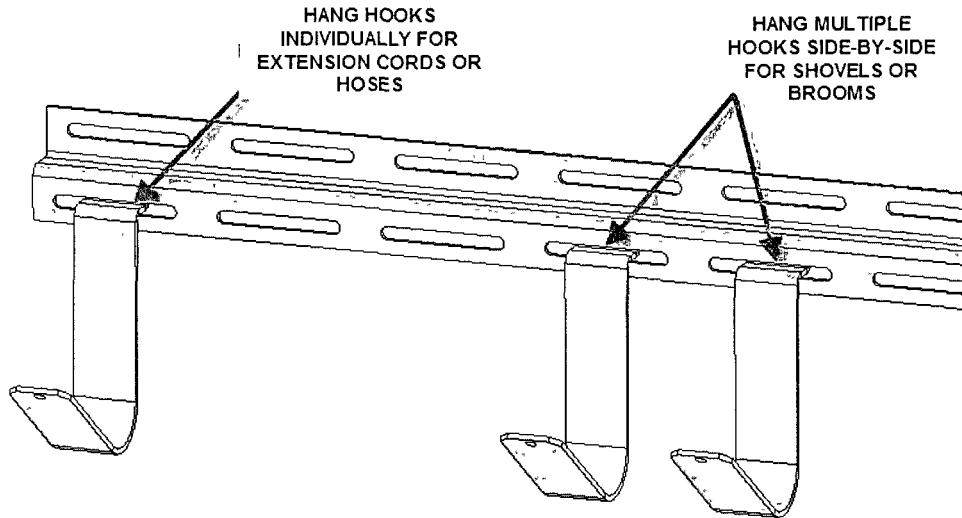

STEP - 02

HANG THE Z-RAIL HOOK

AS ILLUSTRATED BELOW, INSERT HOOK(S) THROUGH Z-RAIL SLOTS AT DESIRED LOCATIONS. AFTER INSERTING HOOK THROUGH Z-RAIL SLOT, "SWING" THE OPPOSITE HOOK END DOWNWARD TO ENGAGE.

