

**ADRIAN STEEL®**

Cargo Management Solutions for Commercial Vehicles

UTILITY HOOK BAR, 3

PRODUCT WEIGHT

0.93 LBS

WIDTH X DEPTH X HEIGHT

10" X 2" X 4"

CAPACITY


N/A

COLOR

GRAY

CATALOG NUMBER

UHB3

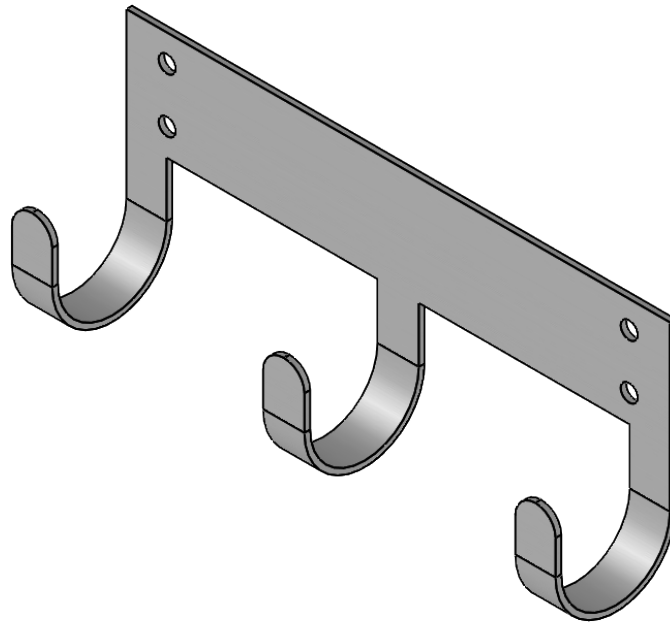


PRODUCT FEATURES

This sturdy 3-hook system attaches to any end panels with the next generation shelving for reliable storage in any vehicle. Designed for versatility, it keeps tools, gear, and essentials within easy reach. Simple to install and built to last, it's a practical solution for keeping items organized on the road.

INSTR. NUMBER : INSUHB3	PG: 1	REV: A	ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
PART NUMBER : UHB3			1	77662-G	UTILITY HOOK BAR, 3, GRAY	1
PART DESC. : UTILITY HOOK BAR, 3			2	BAGPEPACCMNT4	BAG END PANEL MOUNTING, 4	1

**NOTE: THIS INSTRUCTION IS
VALID FOR THE FOLLOWING
KITS:
- UHB3**

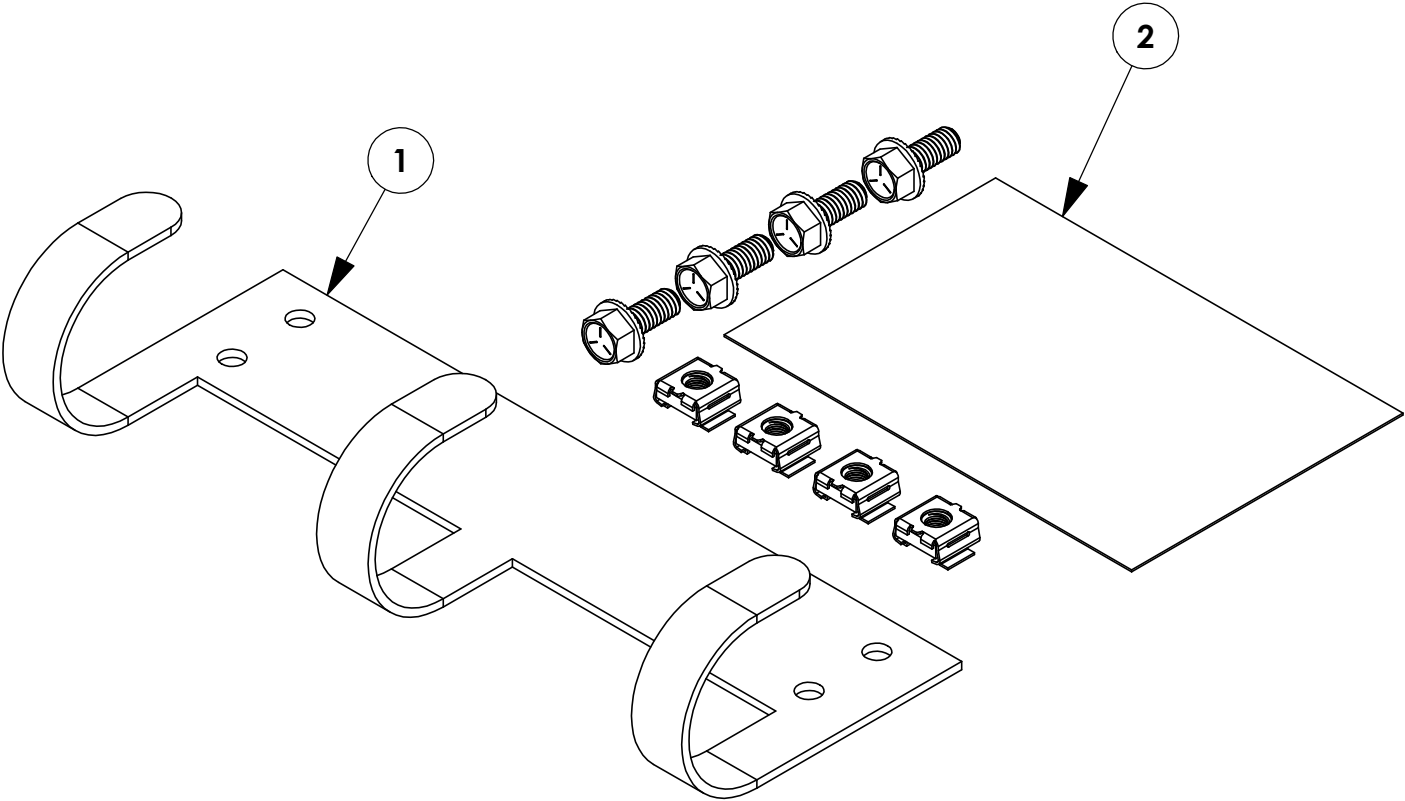

TOOLS NEEDED:
**- 1/2" SOCKET OR
WRENCH**

GET TO KNOW THE VEHICLE - AT THE BEGINNING OF ANY INSTALLATION, CHECK THE LOCATION OF THE FUEL TANK, FUEL LINES, BRAKE LINES, HIGH VOLTAGE BATTERIES AND WIRING HARNESSES TO AVOID INJURY OR PROPERTY DAMAGE FROM TOOL CONTACT.

SEAL ALL EXTERIOR HOLES - ALL INSTALLATION HOLES SHOULD BE SEALED WITH BUTYL TAPE OR SILICON TO PREVENT WATER AND EXHAUST GASES FROM ENTERING THE VEHICLE.

CONTROL DRILL DEPTH - TO AVOID DAMAGE TO THE VEHICLE, USE A DRILL STOP OR CLEARED STEP BIT WHEN DRILLING INSTALLATION HOLES.

ALWAYS ADD PRIMER - WHEN ADDING INSTALLATION HOLES BE SURE TO USE A SELF-ETCHING PRIMER TO PREVENT CORROSION, FASTENER FAILURE AND INJURY.

MOUNTING POINTS MUST HAVE METAL-TO-METAL CONTACT - USE PROVIDED MOUNTING SPACERS TO ACCOMMODATE FOR VEHICLE FEATURES, CARPET OR SUBFLOORS.

PROVIDE CLEARANCE FOR SPACERS - IF THE INSTALLATION VEHICLE CONTAINS A CARPET OR SUBFLOOR, USE A 1-3/16" DIAMETER CARPET CUTTER (P/N: 31183-0) AT ALL MOUNTING LOCATIONS TO OPEN UP ROOM FOR SPACERS.


CHECK SPACER ORIENTATION - BE SURE THAT THE INDENT IN THE SPACER COVERS THE PLUSNUT HEAD; THIS ENSURES THE MOST METAL-TO-METAL CONTACT AND REDUCES VIBRATION.

PLUSNUT INSTALLATION - A PLUSNUT GUN IS RECOMMENDED FOR PLUSNUT INSTALLATION FOR ITS PRODUCTION SPEED. HOWEVER, A PLUSNUT SETTING TOOL CAN ALSO BE USED (P/N: 22200-0).


THRU-BOLT CLEARANCE - WHEN USING A THRU-BOLT AT ANY MOUNTING LOCATION, BE SURE THAT YOUR HOLE HAS 1/16" CLEARANCE.

FASTENERS USED

BAG REFERENCE: BAGPEPACCMNT4

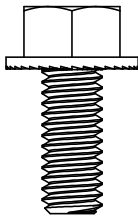

FAS0438
SCREW, HFLNG
5/16-18X.75ZP
QTY: 4

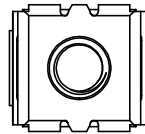

FAS0915
SNAP-IN NUT,
0.028-0.056"
QTY: 4

INTENTIONALLY LEFT BLANK


STEP 1 - INSTALLING UHB3 TO END PANEL

Step 1.1
LOCATE DESIRED
POSITION ON
END PANEL.

Step 1.2
INSERT FAS0915
(Qty: 4)
IN SQUARE CUT
OUTS THAT
ALIGN WITH
DESIRED
LOCATION

Step 1.3
ALIGN HOOK
BAR
MOUNTING
HOLES WITH
ALL FAS0915:
INSERT FAS0438
INTO SNAP IN
NUTS

Step 1.4
FULLY TIGHTEN
ALL FAS0438
(Qty: 4) WITH
1/2" SOCKET
OR WRENCH
***CHECK TO**
MAKE SURE
HOOK BAR IS
SECURE*

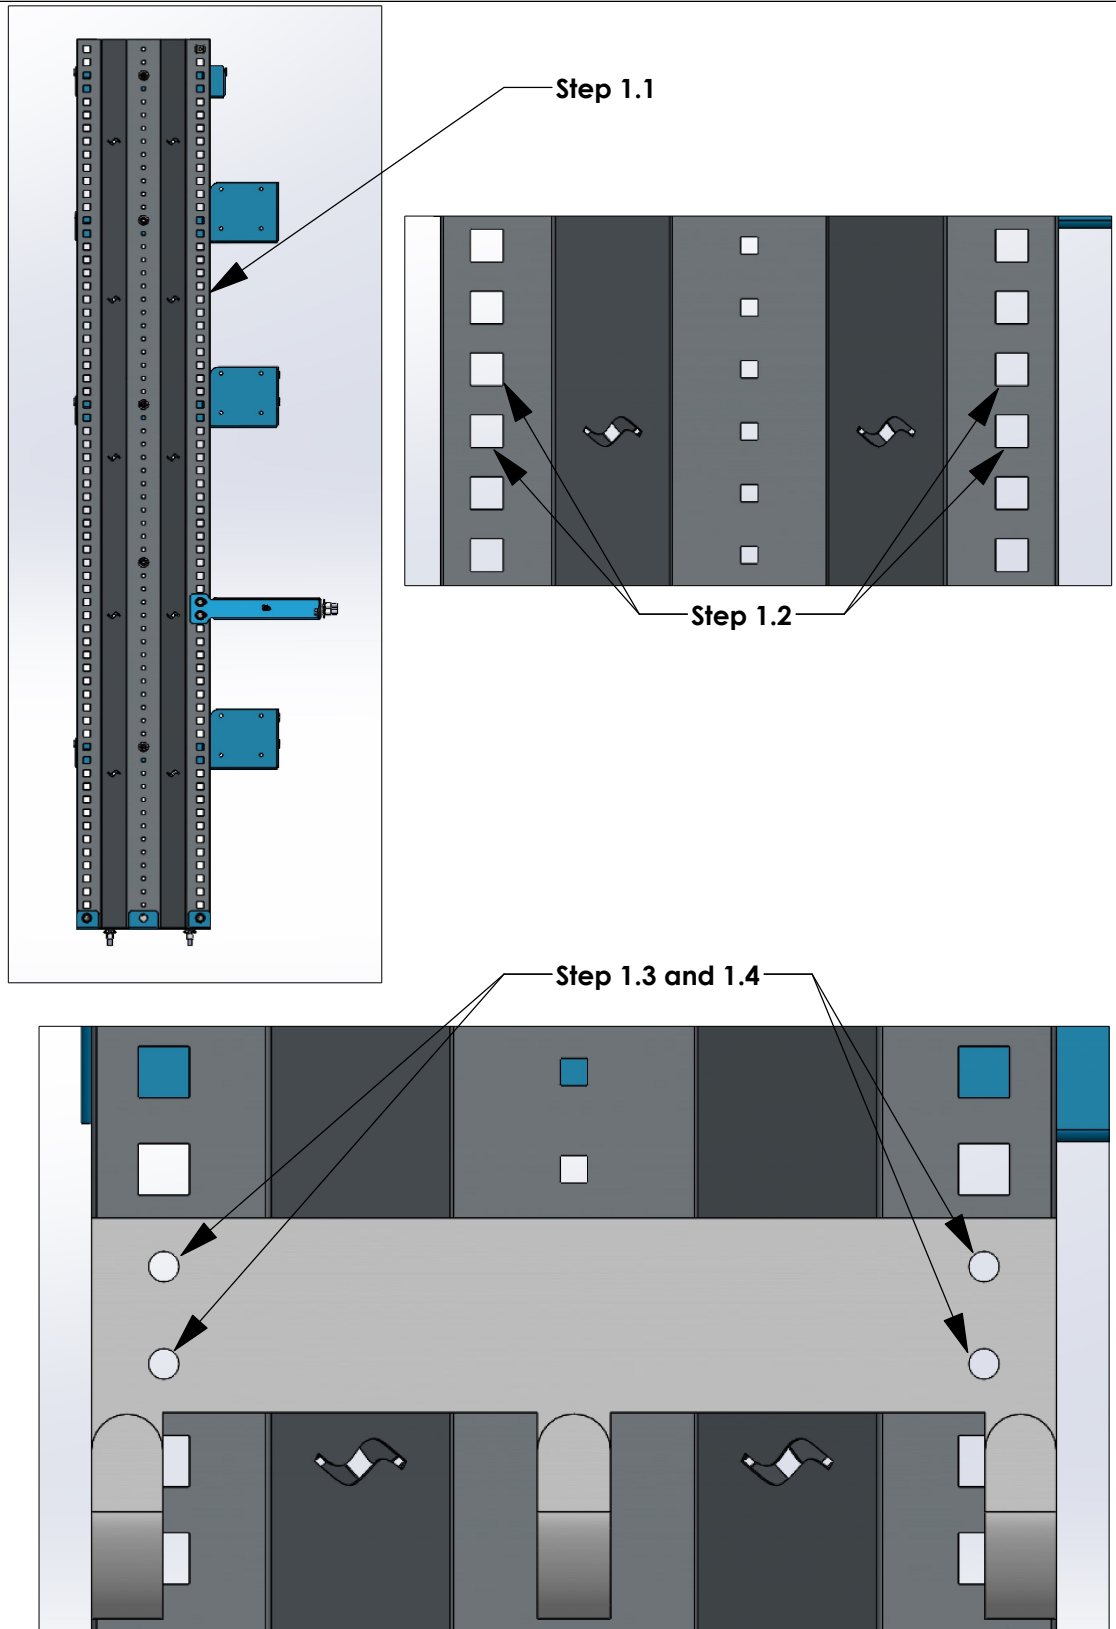

INSTALLATION IS COMPLETE