
ADRIAN STEEL
Cargo Management Solutions for Commercial Vehicles

FIXED FLOOR,P2EQUIN20

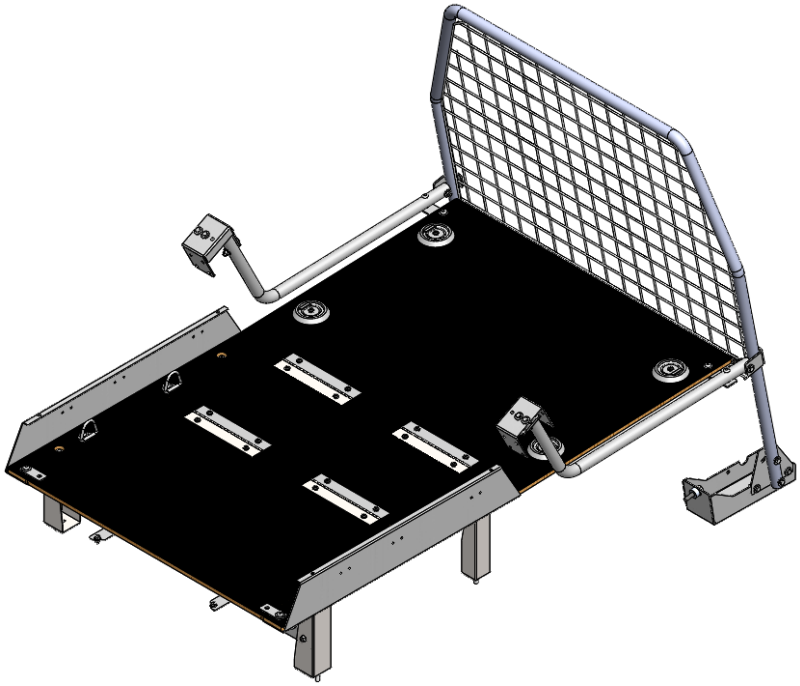

PRODUCT WEIGHT
53 LBS

COLOR

BLACK

CATALOG NUMBER

89-EQUIN20

PRODUCT FEATURES

This fixed floor is design to fit with the P2EQUIN20 for model year 2018 thru 2024 Chevy Equinox. The image above shows the floor installed to the partition. The floor allows for a flat cargo floor and full access to the spare tire.

SEE PAGE 2 FOR APPLICATION NOTES AND ACCESSORIES, OTHER PRODUCTS THAT WORK WITH THIS UNIT.

The information contained in this document is the sole property of ADRIAN STEEL COMPANY. ADRIAN STEEL COMPANY retains the right to modify and/or change the product of its design at any time without prior notification.

ADRIAN STEEL
Cargo Management Solutions for Commercial Vehicles

CATALOG NUMBER **89-EQUIN20**

PRODUCT APPLICATION

This product is designed to be in model year 2018 thru 2024 Chevy Equinox

ACCESSORIES THAT WILL WORK WITH THIS PRODUCT

CATALOG NUMBER	*DESCRIPTION*
P2EQUIN20	**PAR,FIXED,EQUINOX 18-24**

SPECIAL APPLICATION NOTES


The information contained in this document is the sole property of ADRIAN STEEL COMPANY. ADRIAN STEEL COMPANY retains the right to modify and/or change the product of its design at any time without prior notification.

ADRIAN STEEL®
Cargo Management Solutions for Commercial Vehicles

Assembly/Installation Instructions and Owners Manual
89-EQUIN20 - FIXED FLOOR FOR P2EQUIN20

ADRIAN STEEL®
Cargo Management Solutions for Commercial Vehicles

Note:
The flooring is shown installed on the fixed partition kit, P2EQUIN20 (Not Included)

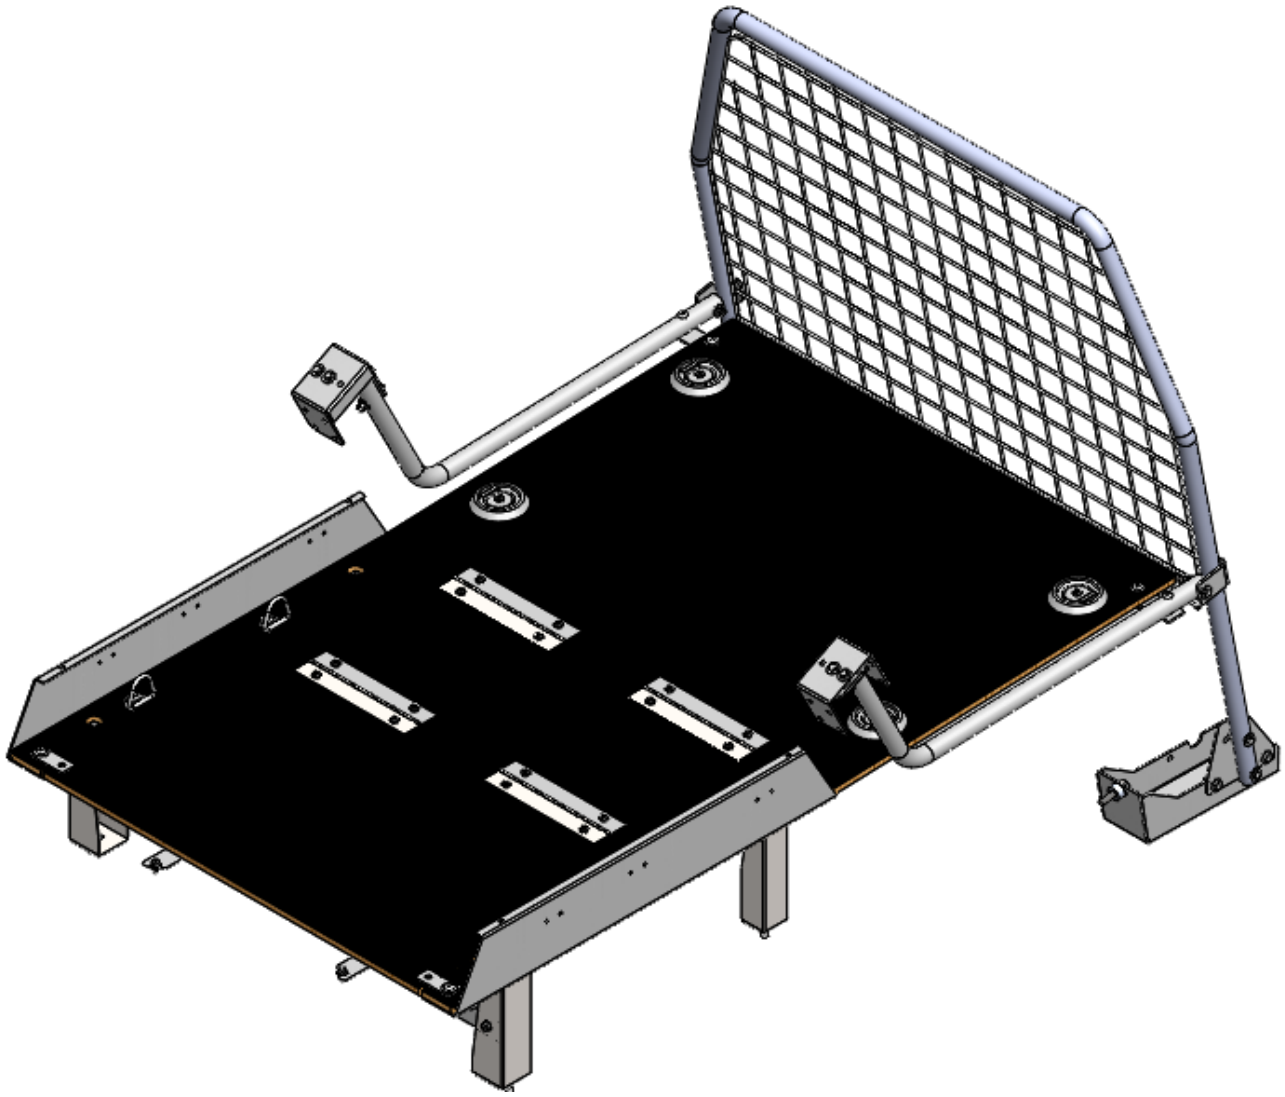

89-EQUIN20
FIXED FLOOR FOR P2EQUIN20

ADRIAN STEEL COMPANY ● WWW.ADRIANSTEEL.COM ● 906 JAMES STREET ● ADRIAN, MI 49221 ● 800-677-2726

Publication Number: INS72095 **Revision Level: B** **ECN Release: 27032**

ADRIAN STEEL
Cargo Management Solutions for Commercial Vehicles

Assembly/Installation Instructions and Owners Manual
89-EQUIN20 - FIXED FLOOR FOR P2EQUIN20

- PRECAUTIONS -



CAUTION
THE USE AIR IMPACT TOOLS CAN OVER-TORQUE FASTENERS AND CAUSE FASTENER FAILURE!





CAUTION
ALL INSTALLATION HOLES SHOULD BE SEALED WITH SILICON OR BUTYL SEALANT TO PREVENT EXHAUST FUMES FROM ENTERING THE VEHICLE!





DANGER
INSPECT FOR FUEL TANK, FUEL LINES, BRAKE LINES, HIGH VOLTAGE BATTERIES AND ELECTRICAL LINES PRIOR TO DRILLINGTO AVOID DAMAGING CRITICAL VEHICLE SYSTEMS OR INJURY TO INSTALLER DURING INSTALLATION PROCESS!





CAUTION
TO AVOID DAMAGING THE VEHICLE ALWAYS USE DRILL STOPS WHEN DRILLING ANY IN-STALLATION HOLES!



- IMPORTANT WARRANTY REQUIREMENTS -

1. **SUBSTITUTING ADRIAN STEEL SPECIFIED FASTENERS FOR ASSEMBLY AND/OR INSTALLATION WILL VOID YOUR PRODUCT WARRANTY.**
2. **ALL HOLES DRILLED INTO VEHICLE SHOULD HAVE THE RAW METAL EDGES SEALED WITH A SELF -ETCHING PRIMER TO RESIST CORROSION AND POTENTIAL FASTENER POINT FAILURE.**
3. **ALL FASTENERS USED IN THE INSTALLATION OF THIS PRODUCT SHOULD BE TIGHTENED TO THE TORQUE(S) SPECIFIED IN THESE INSTRUCTIONS.**
4. **THESE INSTRUCTIONS SHOULD BE KEPT WITH THE VEHICLE.**

THE BASIC TOOLS NEEDED FOR MOST INSTALLATIONS



DRILL



DRILL BIT WITH STOP



RATCHET, SOCKETS AND/OR WRENCHES



SCREWDRIVERS



MEASURING TAPE


ADDITIONAL TOOLS MAY BE NEEDED FOR THIS INSTALLATION AND THEY WILL BE IDENTIFIED IN THE STEPS THAT FOLLOW.

ADRIAN STEEL
Cargo Management Solutions for Commercial Vehicles

Assembly/Installation Instructions and Owners Manual
89-EQUIN20 - FIXED FLOOR FOR P2EQUIN20

HDW72095

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	CRT06987-A	SMALL CARTON	1
2	44005-B	HNG 18CR 3.00 OP X 10.000	4
3	54976	D RING, FLUSH MOUNT	4
4	54977-B	BUMPER BRACKET	2
5	71659-B	SUPPORT BRKT,89-EQUIN20, BLACK	2
6	INS72095	ASM INS FOR 89-EQUIN20	1
7	BAG72095	BAG FOR 89-EQUIN20	1

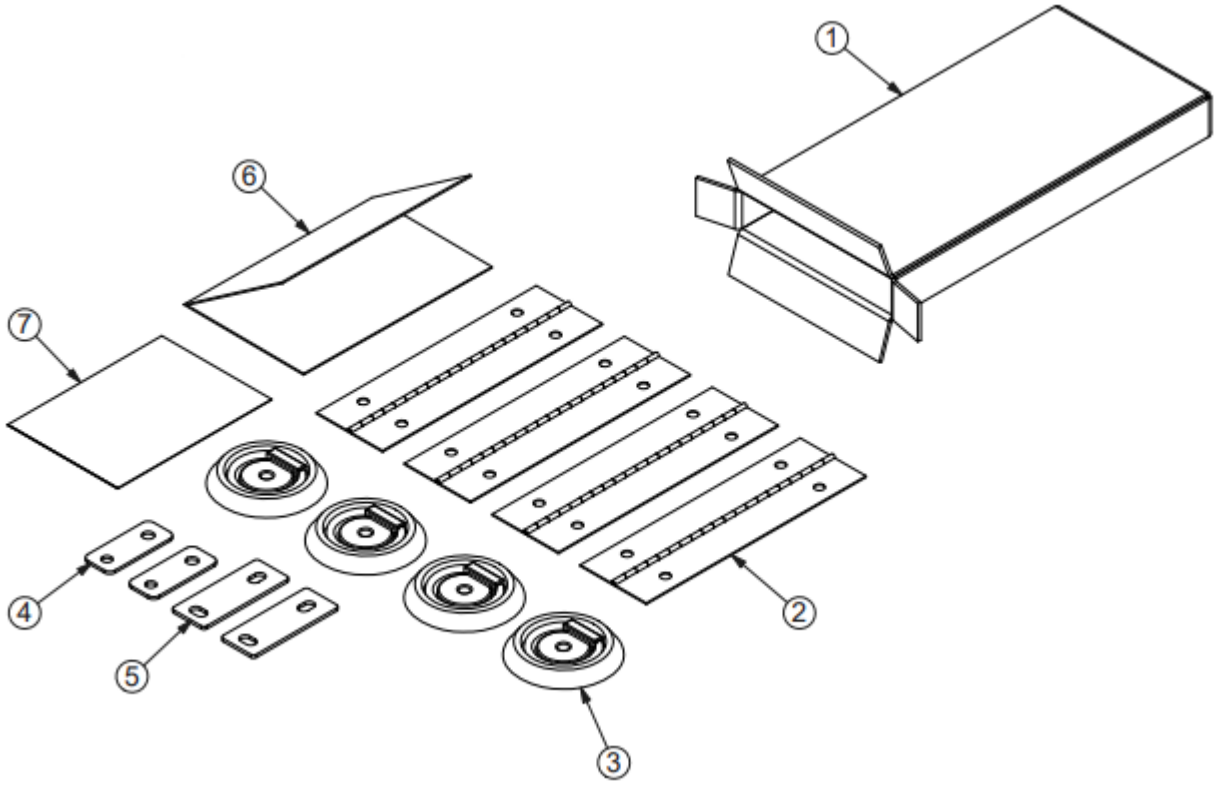


ADRIAN STEEL
Cargo Management Solutions for Commercial Vehicles

Assembly/Installation Instructions and Owners Manual
89-EQUIN20 - FIXED FLOOR FOR P2EQUIN20


BAG72095


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	BAG0507-A	5" x 7" 3MIL AUTOBAG	1
2	FAS0438	SCREW,HFLNG 5/16-18X.75 ZP	6
3	FAS0440	NUT,HEX NLK FLG 5/16-18 - ZP	6
4	FAS0091	Plusnut, 5/16	4
5	FAS0086	WASHER,FLAT USS 5/16 ZP	4
6	FAS0098	Washer, Lock, Split, 5/16, Zinc Plate	24
7	FAS0092	Screw, Hex Hd, 5/16-18x1.50 Zn Plate, G8	4
8	FAS0018	SCREW,HH SFLNG 1/4-20X.62 ZP	2
9	FAS0055	NUT,HEX NLK FLG 1/4-20 ZP	2
10	FAS0577	Screw, Button Hd Hex Soc, 3/8-16x1.50 NI-ZN	8
11	FAS0104	Washer, Flat, 3/8, NI ZN	18
12	FAS0578	Screw, Button Hd Hex Soc, 3/8-16x2.00 NI-ZN	2
13	FAS0604	NUT, NYLOCK, 3/8-16, ZINC	10
14	FAS0829	NUT,T 5/16-18X.5ZN	20
15	FAS0040	SCREW, BHCS 5/16-18 X .625"	20
16	54466	ZINC- PLATED STEEL D-RING	4

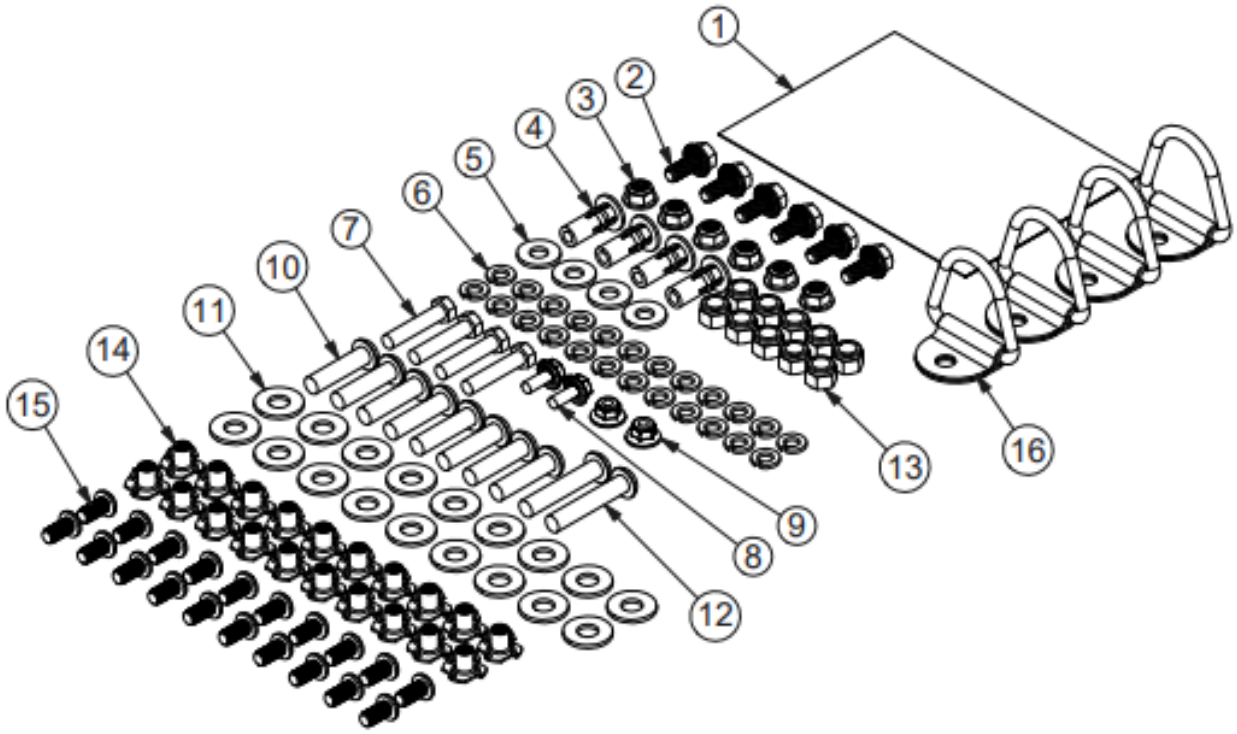


STEP 1 - Using a small sledge hammer, pound the (20) T-nuts in the locations shown below. The bottom of the T-nut head should be flush with the floor surface.


Note: The T-nuts should be installed on the bottom of the flooring. This is the wood side, not the black textured side.

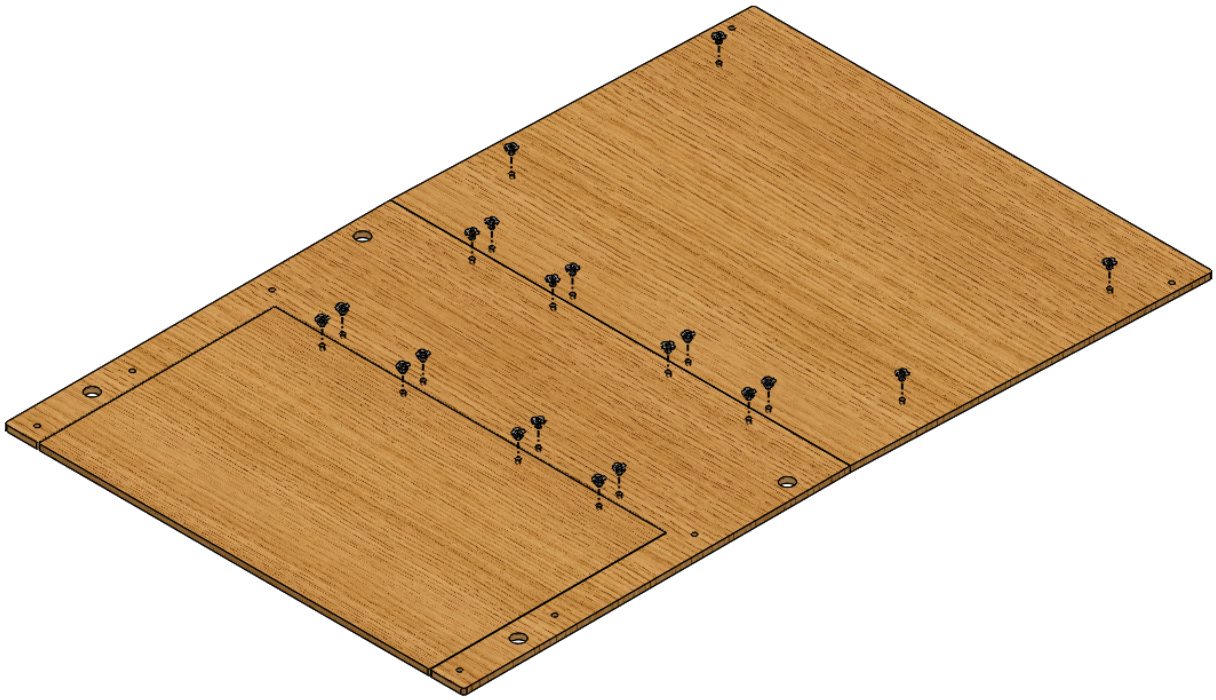

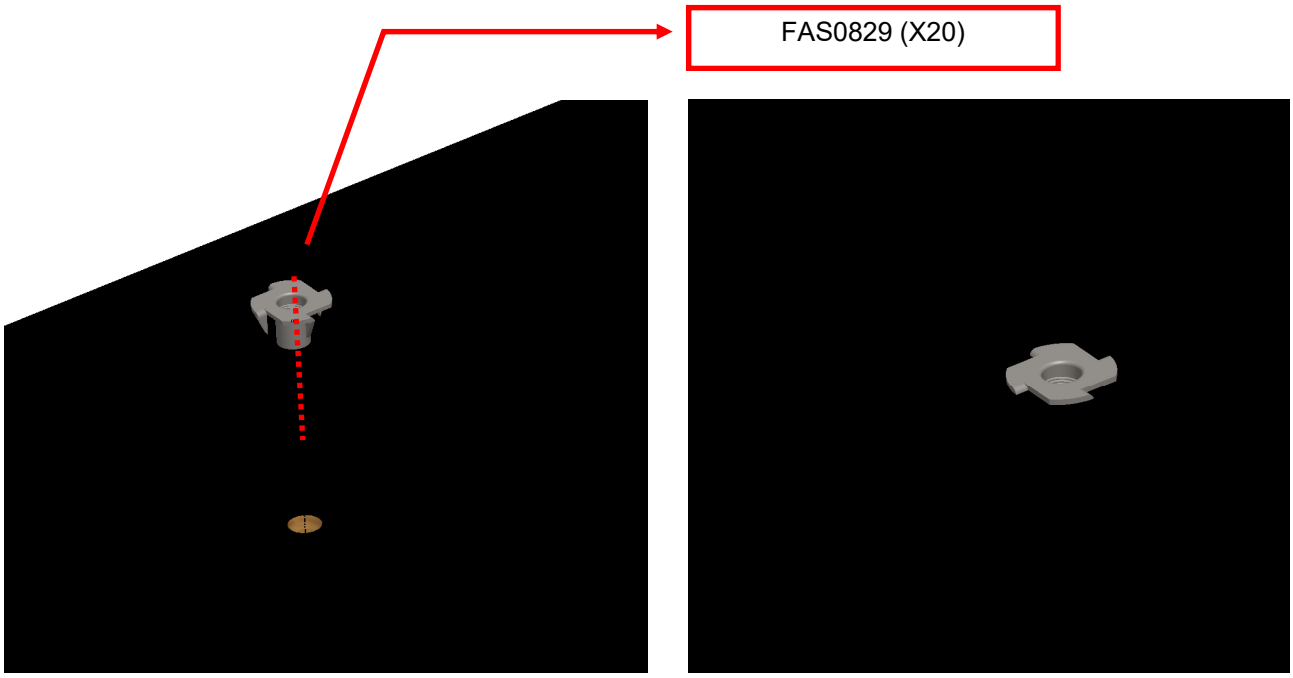


STEP 2 - Fasten the hinges to the center floor piece as shown.

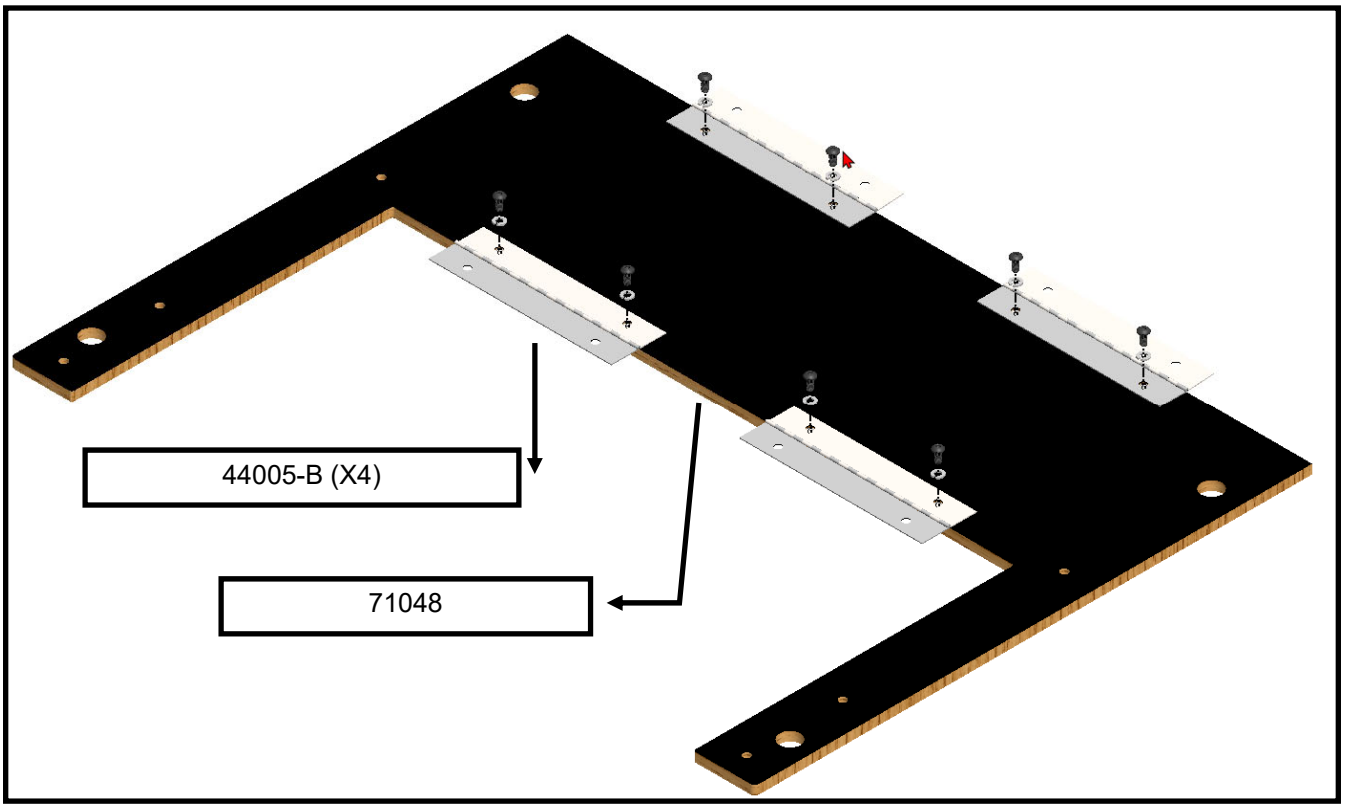

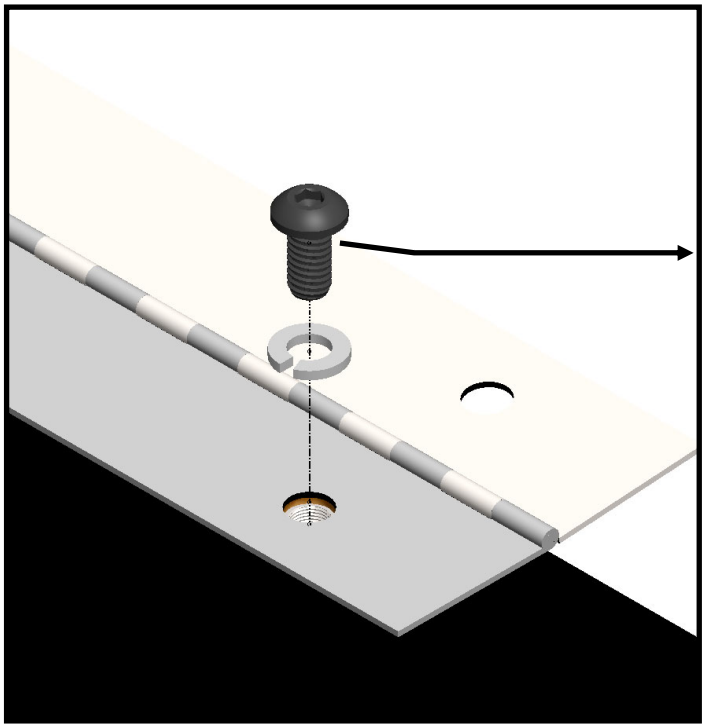



FAS0040 (X8)
FAS0098 (X8)
3/16” ALLEN SOCKET

STEP 3 - Fasten posts to bottom slides.

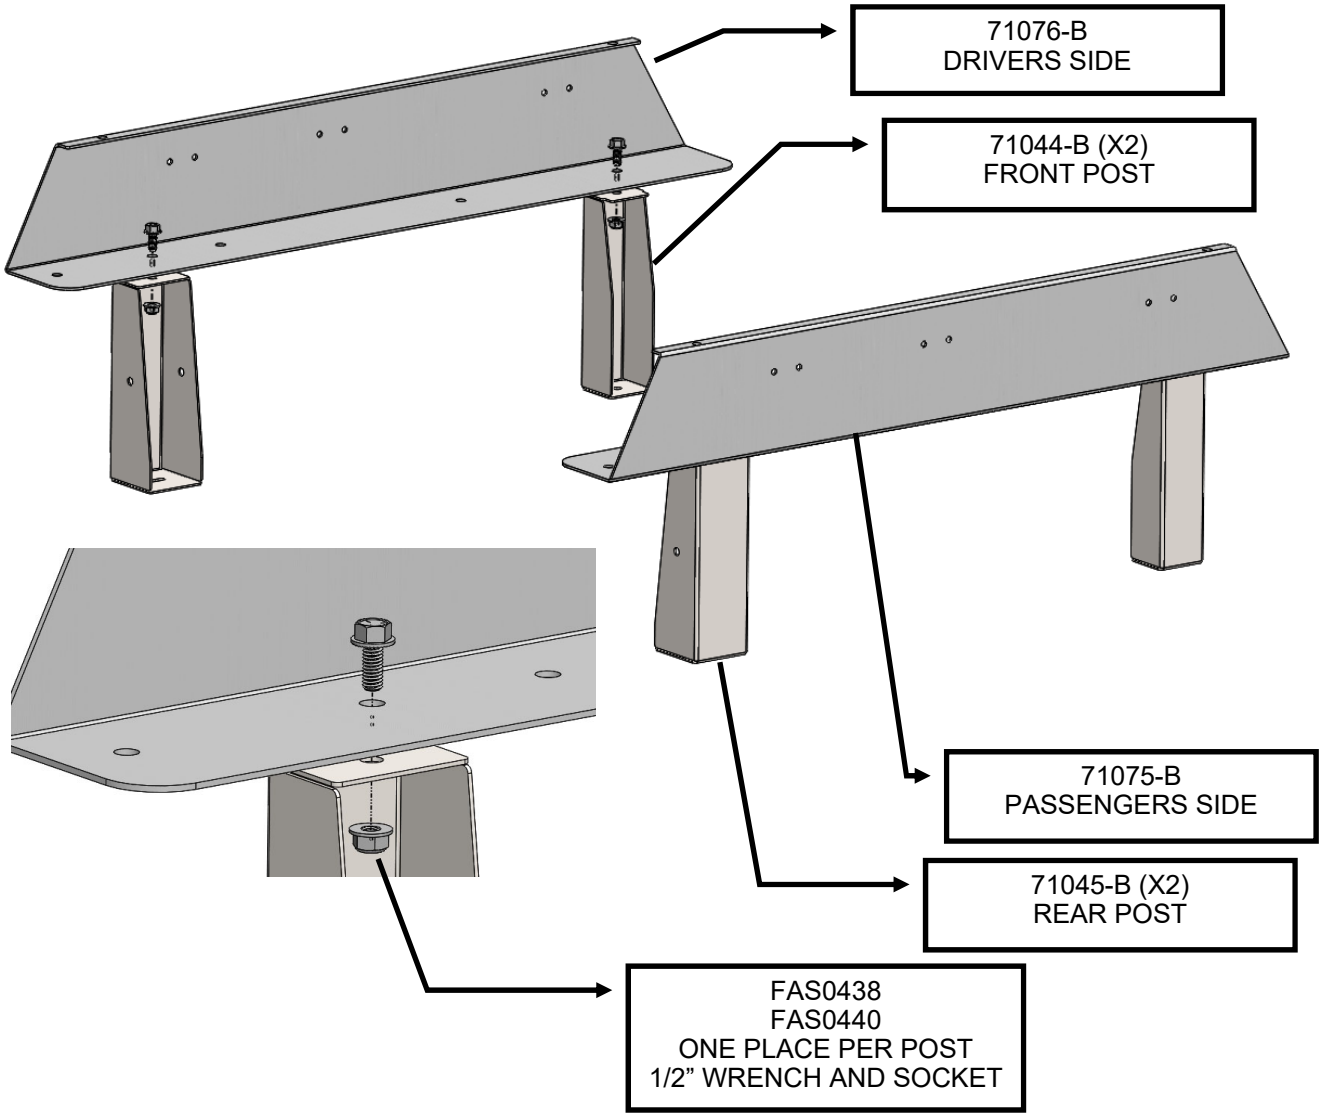


STEP 4 - Fasten cross mount to each side.

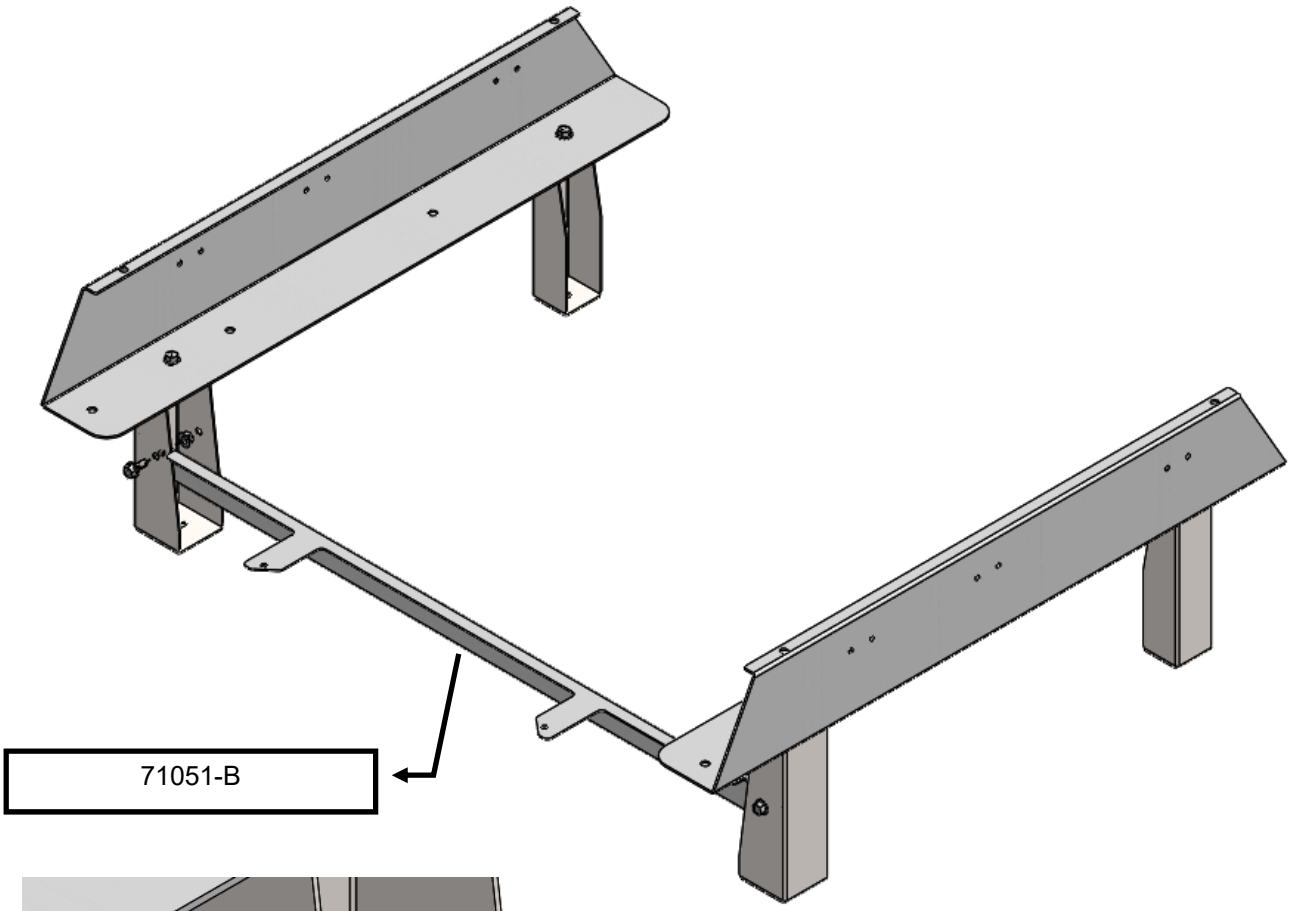

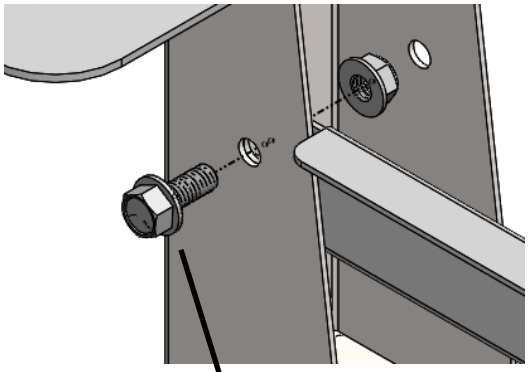


FAS0438
FAS0440
ONE PER SIDE
1/2” WRENCH AND SOCKET

STEP 5 - Bolt down (through bolt) the flooring piece 71048 using the following hardware, both sides.

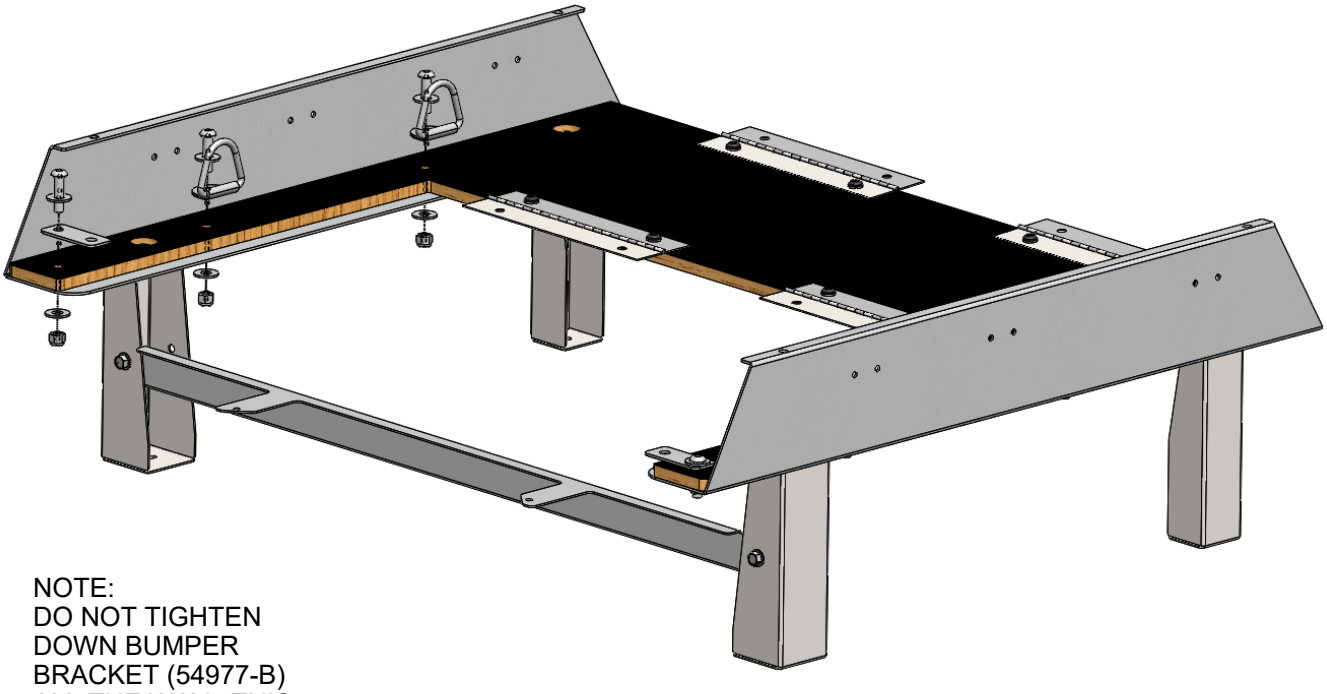

NOTE:
DO NOT TIGHTEN DOWN BUMPER BRACKET (54977-B) ALL THE WAY. THIS PART ACTS AS A LATCH TO HOLD DOWN THE FLOORING WHILE THE VEHICLE IS IN MOTION. IT SHOULD BE JUST TIGHT ENOUGH TO BE MOVED BY HAND.

54466
TWO PLACES PER SIDE

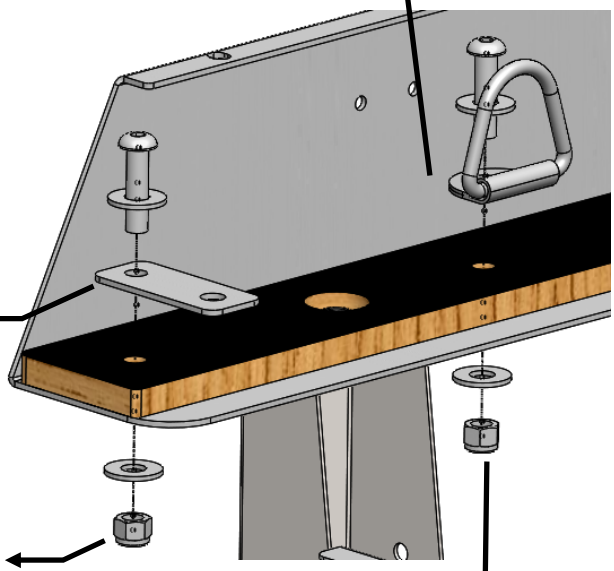


54977-B
ONE PLACE PER SIDE


FAS0577
FAS0104 (X2)
FAS0604
ONE PLACE PER SIDE
DO NOT FULLY TIGHTEN
7/32” ALLEN SOCKET & 9/16” WRENCH

FAS0577
FAS0104 (X2)
FAS0604
TWO PLACES PER SIDE
7/32” ALLEN SOCKET & 9/16” WRENCH

STEP 6A - Remove the floor covering over the spare tire to expose the plastic housing surrounding the tire.
It will **NOT** be reinstalled.

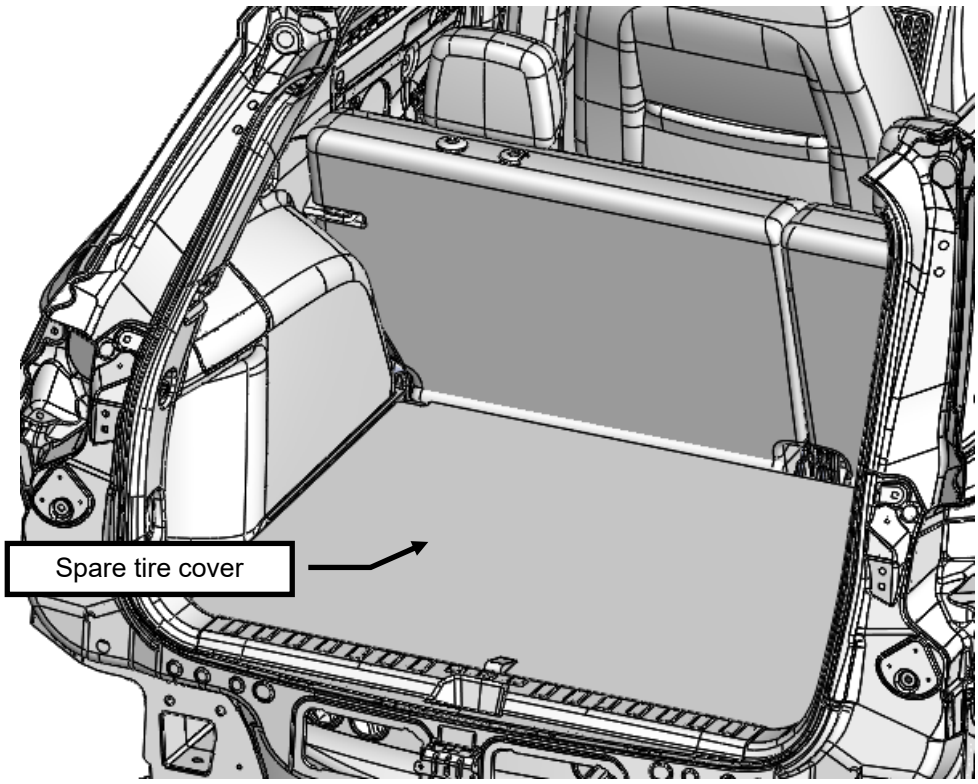


STEP 6B - Remove the plastic housing surrounding the tire.
It will **NOT** be reinstalled. Use a 10mm socket (5 places).

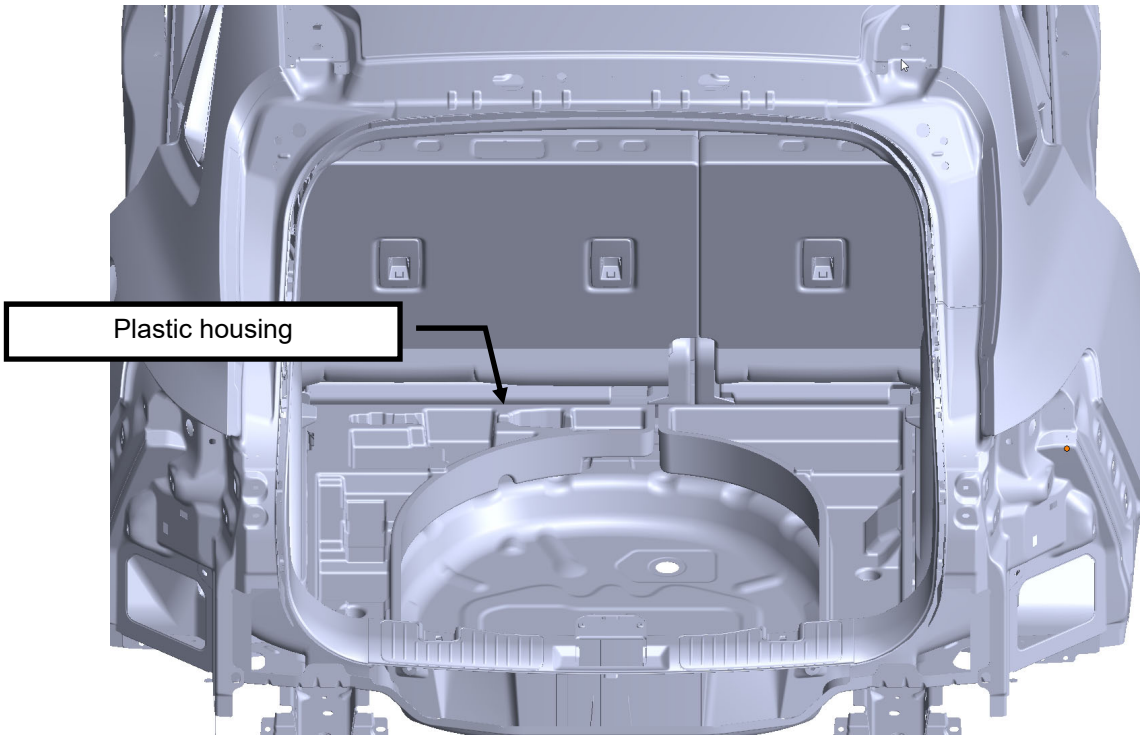


STEP 7 - Remove rear bumper trim.
It **WILL** be reinstalled.

Place the partition in the vehicle. The partition mounts in six locations. Position with the crossmount tabs **UNDER** the vehicles trim brackets on the rear bumper. The holes will line up with the inner slots. Insert FAS0018 bolts thru each cross-mount hole to help with alignment. Once partition is centered in vehicle, mark thru all four corner feet holes. Drill and set all four plusnuts FAS0091 using 1/2" drill bit.

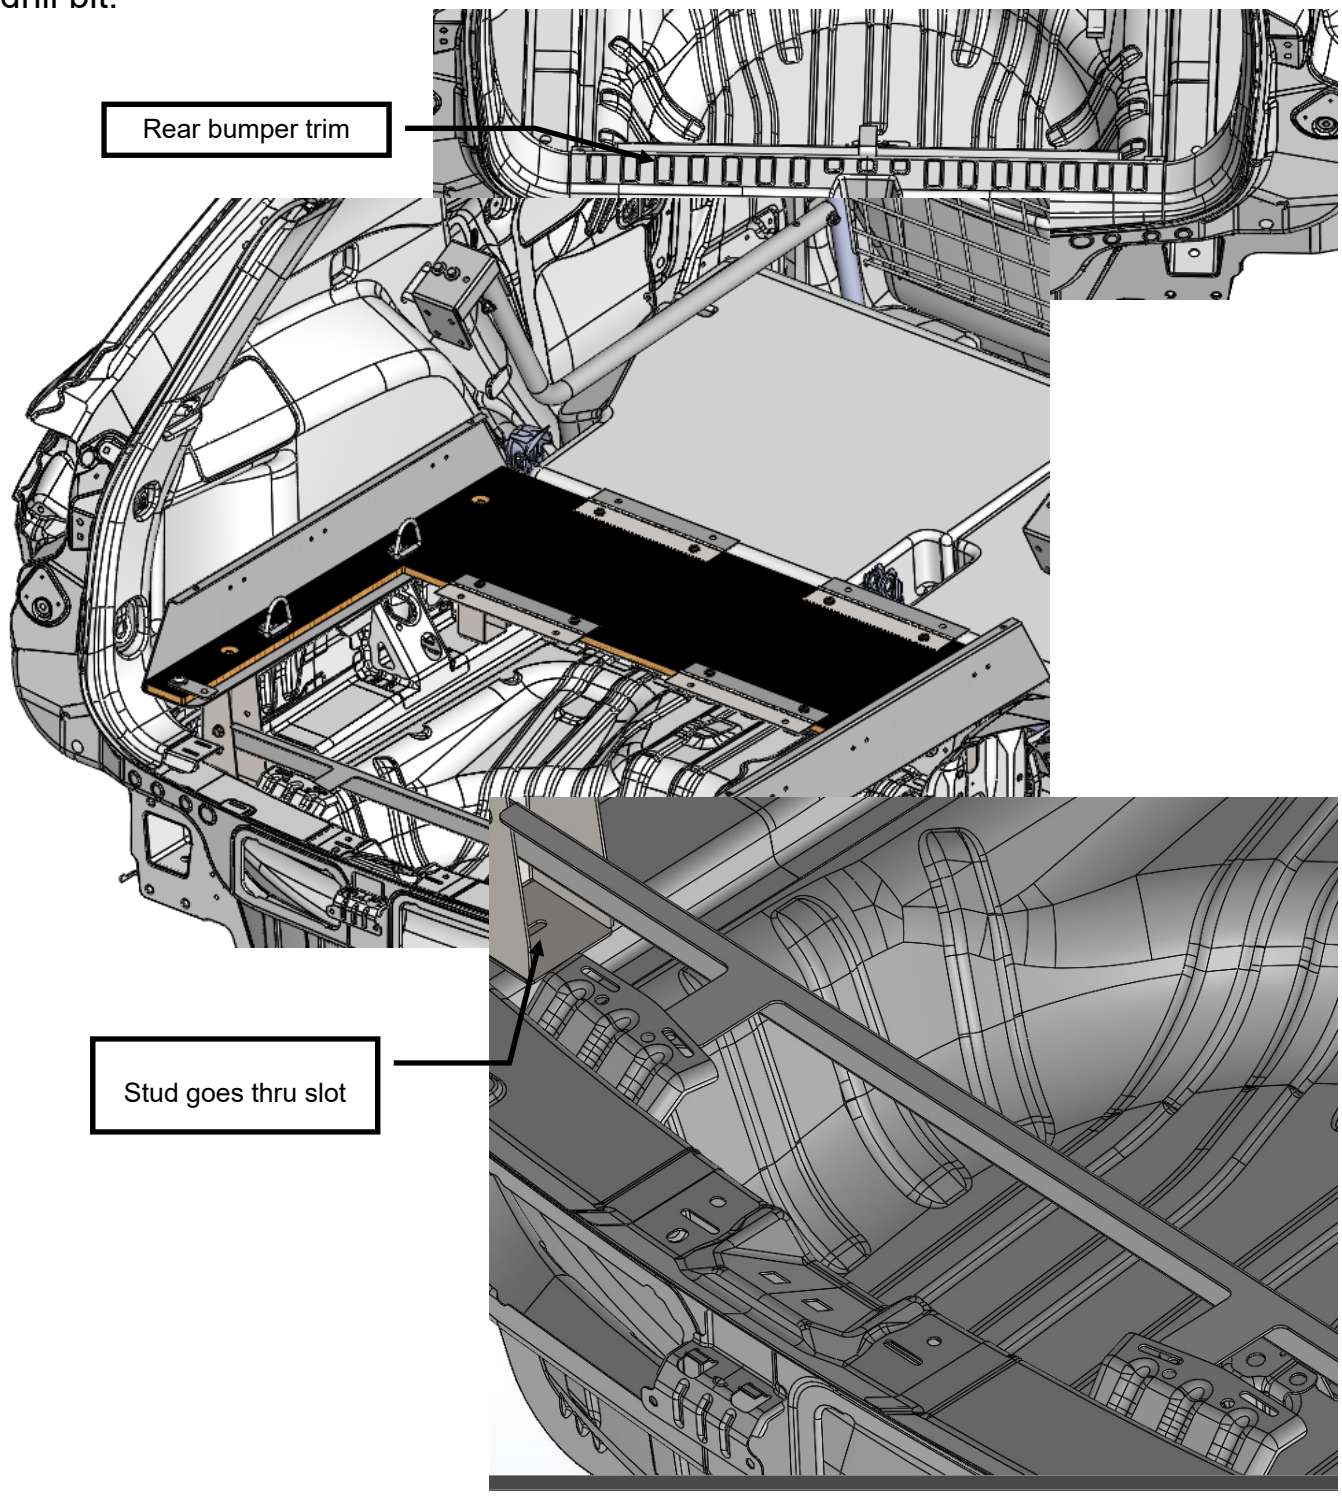


STEP 8 - Fasten the legs and crossmount to the vehicle using the fasteners below. **Reinstall the bumper trim.**

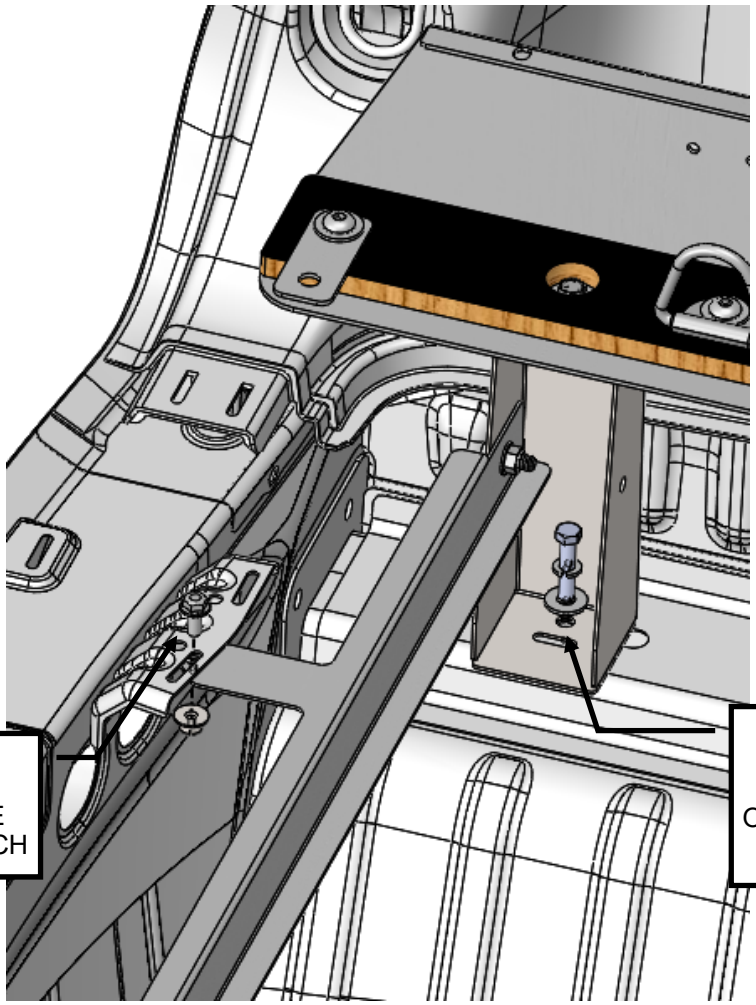


FAS0018
FAS0055
ONE PLACE PER SIDE
7/16” SOCKET & WRENCH

FAS0092
FAS0098
FAS0086
ONE PLACE PER POST
1/2” SOCKET

STEP 9 - Fasten the flooring that covers the spare tire, and the flooring that covers the seat backs as shown.

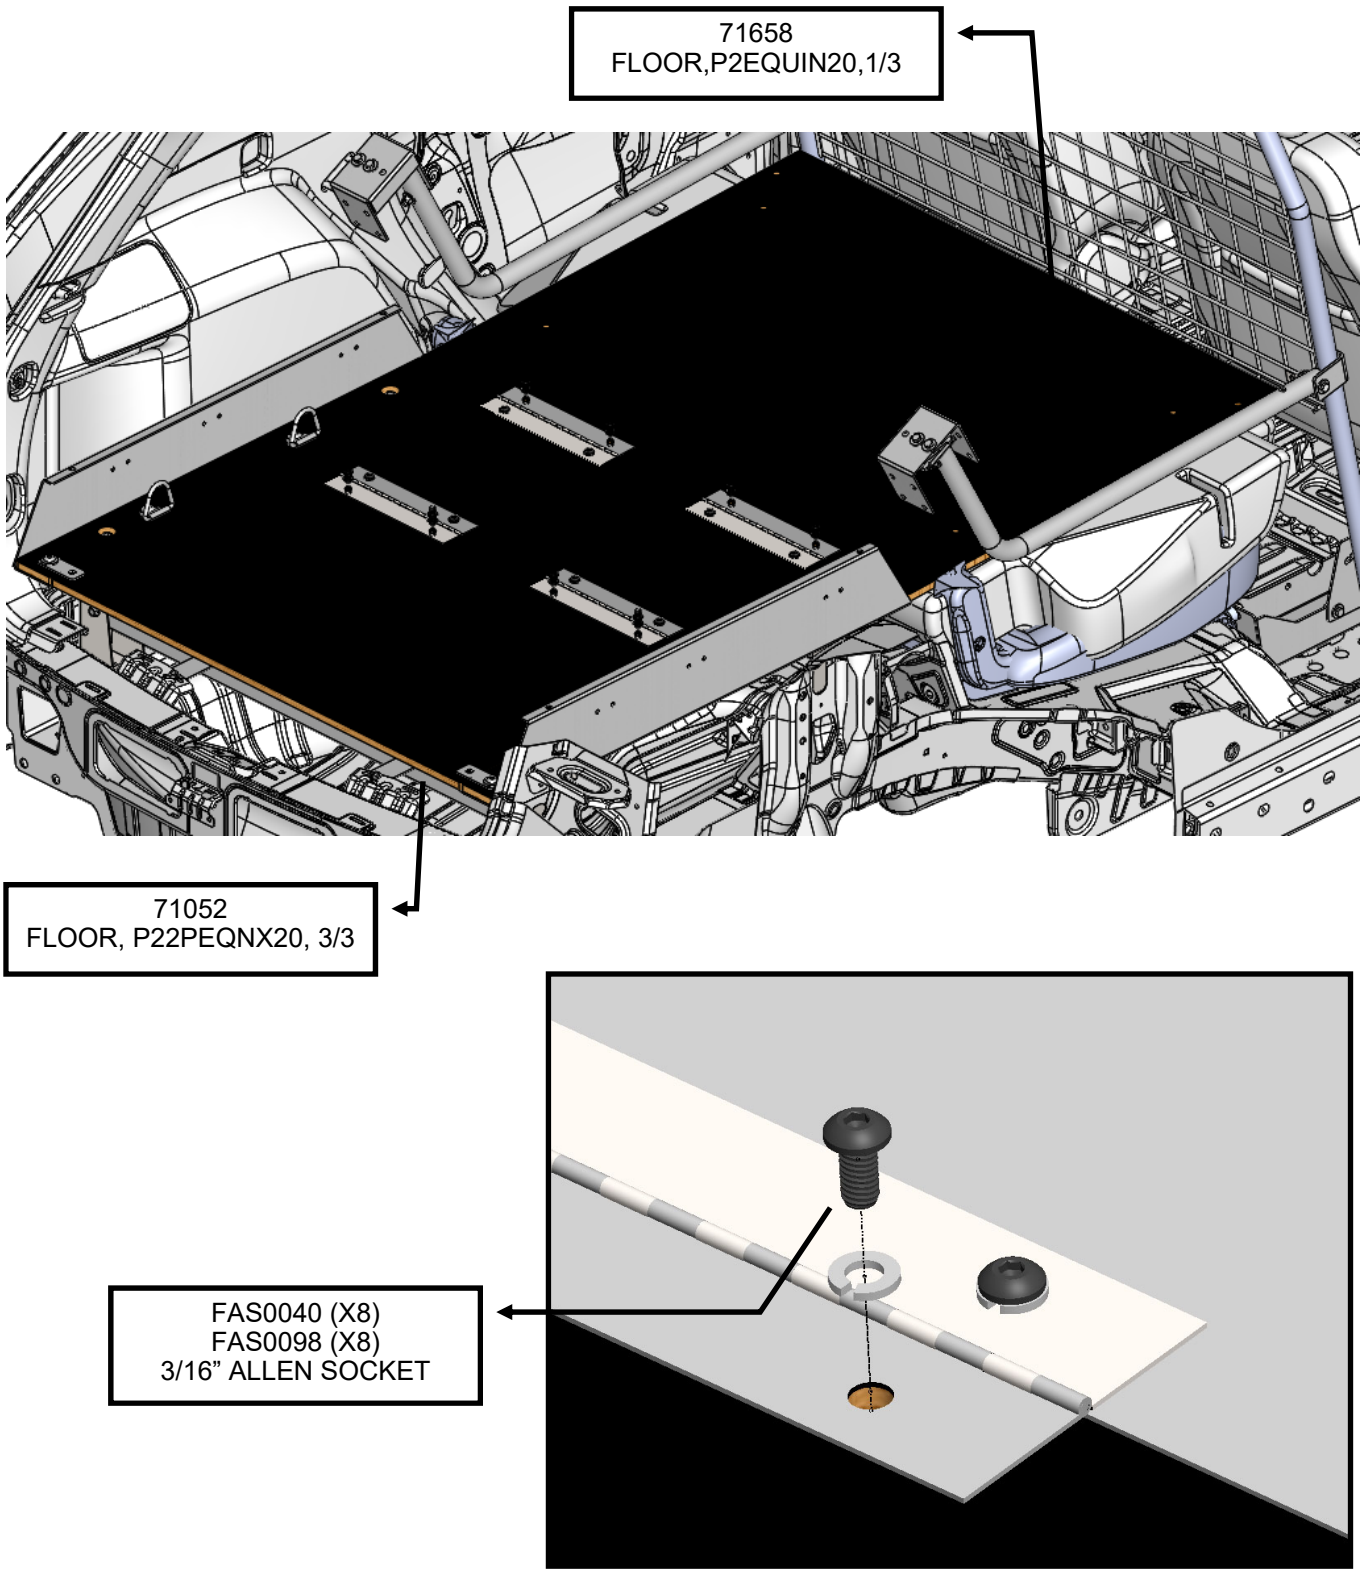


STEP 10 - Fasten D-Rings to the floor and support plates to tubes.

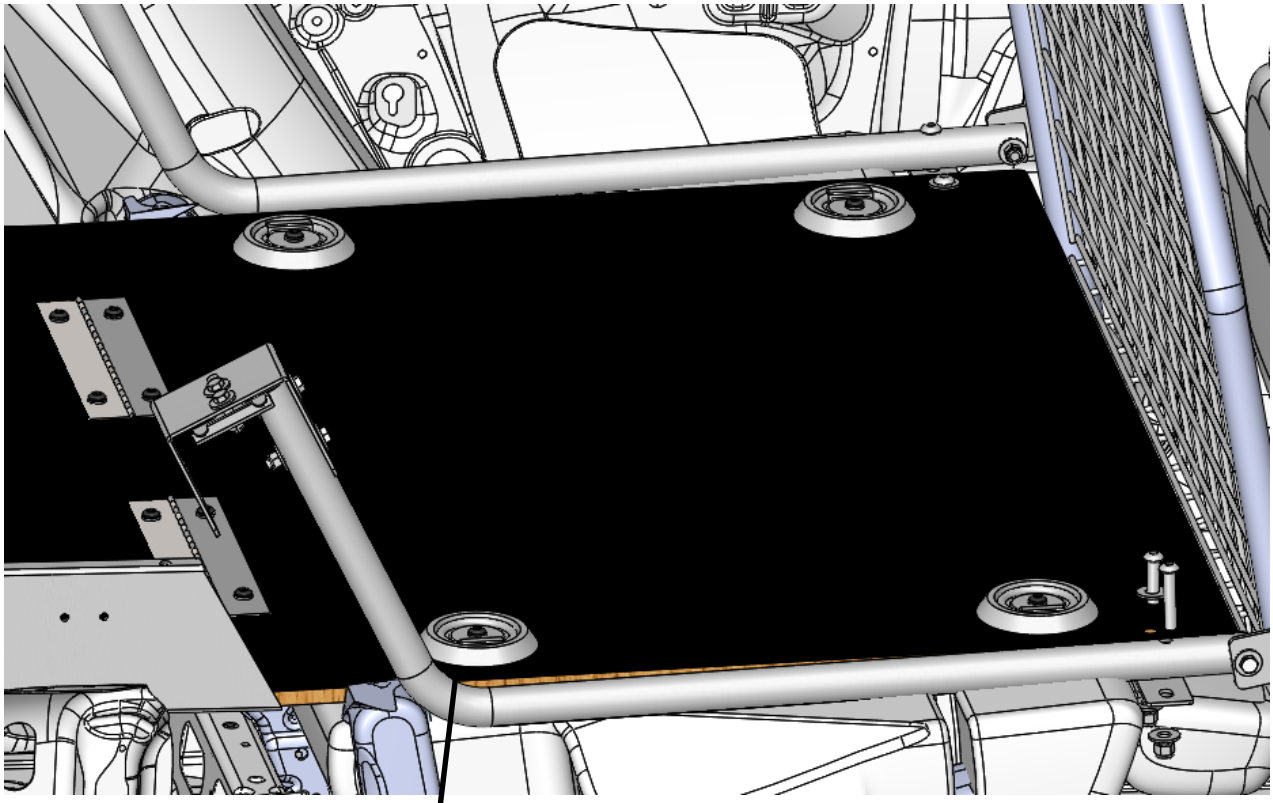


54976 (X4)

INBOARD FASTENERS
FAS0577
FAS0104 (X2)
FAS0604
ONE PLACE PER SIDE
7/32” ALLEN SOCKET & 9/16” WRENCH

FAS0040 (X4)
FAS0098 (X4)
3/16” ALLEN SOCKET

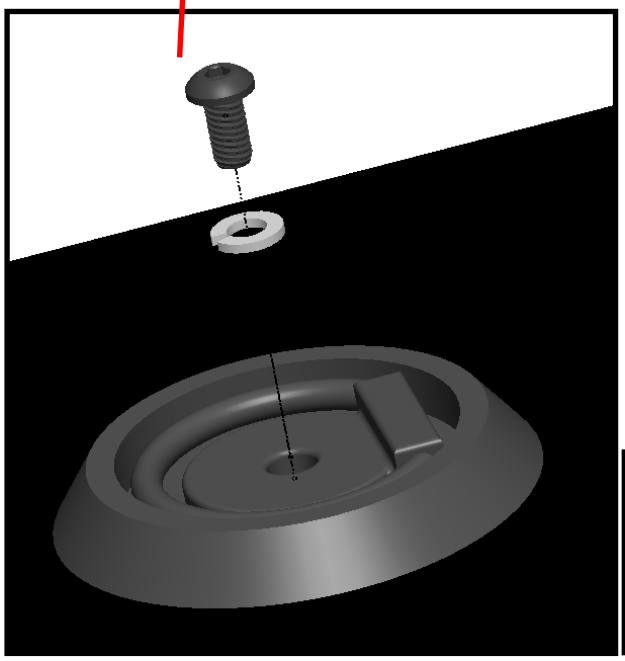


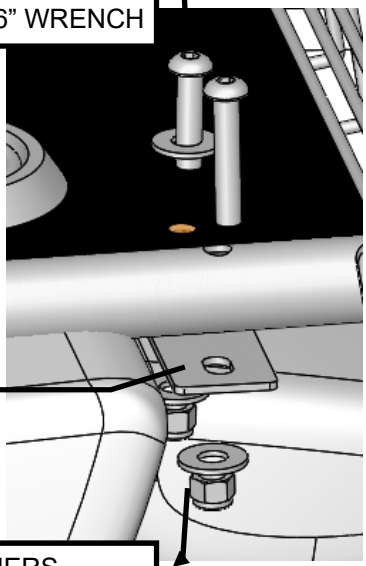

71659-B (X2)

OUTBOARD FASTENERS
FAS0578
FAS0104
FAS0604
ONE PLACE PER SIDE
7/32” ALLEN SOCKET & 9/16” WRENCH

YOUR INSTALLATION IS NOW COMPLETE!

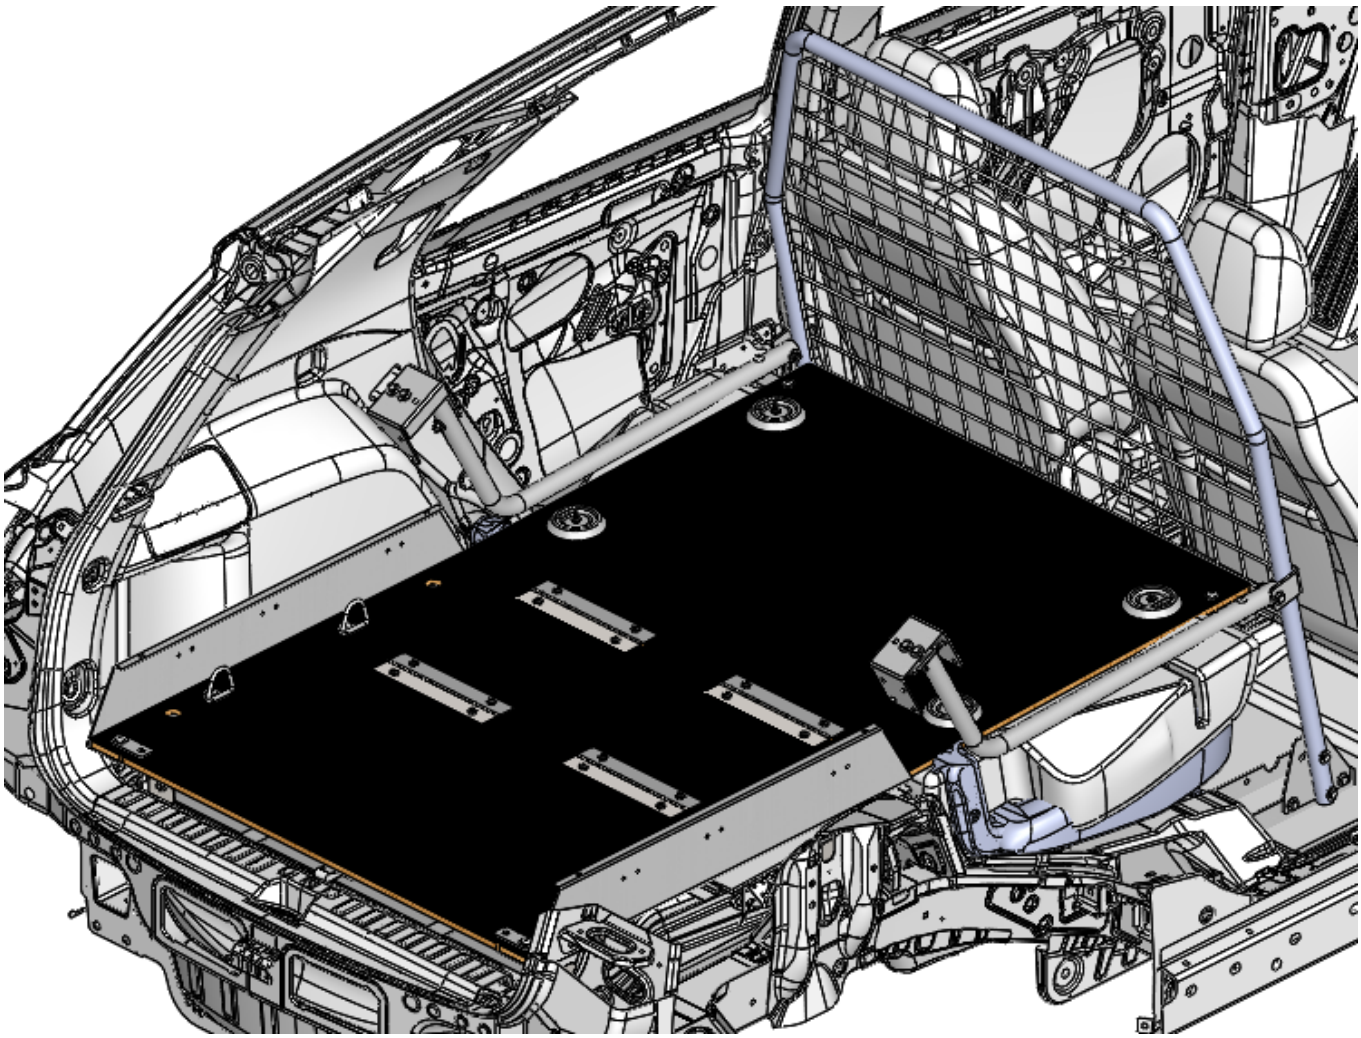

DOUBLE CHECK ALL FASTENER LOCATIONS TO BE SURE THAT ALL FASTENERS ARE TIGHTENED TO SPECIFICATION.
STOW THIS COPY IN THE VEHICLE FOR FUTURE REFERENCES